


# USER MANUAL

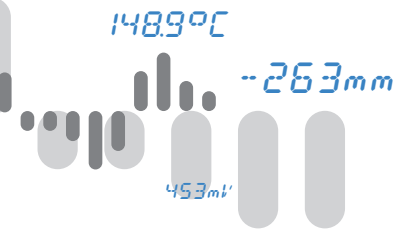

## **OMD 202UNI - B**

4/6 DIGIT PROGRAMMABLE  
LARGE DISPLAY

DC VOLTMETER/AMMETER  
PROCESS MONITOR  
OHMMETER

THERMOMETER FOR PT 100/500/1 000

THERMOMETER FOR NI 1 000

THERMOMETER FOR THERMOCOUPLES

DISPLAYS FOR LIN. POTENTIOMETERS



*Outstanding Measurement Value*

## SAFETY INSTRUCTIONS

Please read carefully the enclosed safety instructions and observe them!

Installation, all operational interventions, maintenance and service must be performed by a qualified personnel and in accordance with the attached information and safety regulations. The manufacturer is not liable for damage caused by improper installation, configuration, maintenance, and service.

The recorder must be installed according to the respective application. Incorrect installation can cause a malfunction, which can result in damage or accident.

The recorder uses dangerous voltages that can cause a fatal accident. Before you start solving problems (e.g. in TIME of failure or disassembly), the device must be disconnected from the power supply. For safety information the EN 61 010-1 + A2 standard must be observed.

When removing or inserting a card, observe the safety instructions and follow the recommended procedure. During any intervention the recorder must be disconnected from the power supply.

Do not attempt to repair or modify the device. A defective recorder must be sent for repair to the manufacturer.

These devices should be safeguarded by isolated or common fuses (breakers)!

The recorder is not designed for installation in potentially explosive surroundings (Ex). Use it only outside potentially explosive surroundings

## TECHNICAL DATA

Measuring instruments of the OMD 202 series conform to the European regulation 2014/30/EU and 2014/35/EU

The instruments are up to the following European standards

|            |   |
|------------|---|
| EN 61010-1 | Electrical safety   |
| EN 61326-1 | Electronic measuring, control and laboratory devices<br>- Requirements for EMC "Industrial use" |

The recorders are applicable for unlimited use in agricultural and industrial areas.

## ORBIT MERRET, spol. s r.o.

Vodňanská 675/30  
198 00 Praha 9  
Czech republic

Tel: +420 - 281 040 200  
Fax: +420 - 281 040 299  
orbit@merret.eu  
www.orbit.merret.eu



|  |            |
|--|------------|
| <b>1. CONTENTS</b> .....   | <b>3</b>   |
| <b>2. INSTRUMENT DESCRIPTION</b> .....   | <b>4</b>   |
| <b>3. INSTRUMENT CONNECTION</b> .....  | <b>6</b>   |
| Measuring ranges.....  | 6          |
| Termination of RS 485 communication line.....  | 6          |
| Instrument connection.....   | 7          |
| Recommended connection of sensors .....  | 8          |
| <b>4. INSTRUMENT SETTING</b> .....   | <b>10</b>  |
| Symbols used in the instructions .....   | 12         |
| Setting the DP and the (-) sign .....  | 12         |
| Control keys function .....  | 13         |
| Setting/permitting items into "USER" menu.....   | 13         |
| <b>5. SETTING "LIGHT" MENU</b> .....   | <b>14</b>  |
| 5.0 Description "LIGHT" menu .....   | 14         |
| Setting input - Type "DC" .....  | 18         |
| Setting input - Type "PM" .....  | 18         |
| Setting input - Type "OHM" .....   | 19         |
| Setting input - Type "RTD - Pt" .....  | 20         |
| Setting input - Type "RTD - Ni" .....  | 21         |
| Setting input - Type "T/C" .....   | 22         |
| Setting input - Type "DU" .....  | 36         |
| Setting input - Type "RTD - Cu" .....  | 24         |
| Setting measuring range for Channels B, C, D .....   | 24         |
| Setting display colors .....   | 38         |
| Setting projection for Channel B .....   | 40         |
| Setting projection for Channel B .....   | 42         |
| Setting projection for Channel B .....   | 44         |
| Setting Limits.....  | 46         |
| Setting analog output .....  | 48         |
| Setting the address of IR remote control .....   | 50         |
| Selection of programming menu „LIGHT"/„PROFI" .....  | 50         |
| Restoration of manufacture setting .....   | 51         |
| Calibration - input range (DU) .....   | 52         |
| Selection of instrument menu language version. ....  | 53         |
| Setting new access password .....  | 53         |
| Instrument identification .....  | 53         |
| <b>6. SETTING "PROFI" MENU</b> .....   | <b>54</b>  |
| 6.0 Description of "PROFI" menu.....   | 58         |
| 6.1 "PROFI" menu - INPUT .....   |            |
| 6.1.1 Resetting internal values .....  | 58         |
| 6.1.2 Setting measuring type, range, mode, rate, ...                                       | 59         |
| 6.1.3 Setting the Real Time .....  | 66         |
| 6.1.4 External input function selection .....  | 66         |
| 6.1.5 Optional accessory functions of the keys. ....                                       | 68         |
| 6.2 "PROFI" menu - CHANNEL .....   |            |
| 6.2.1 Setting measuring parameters (projection, filters, decimal point, description) ..... | 72         |
| 6.2.2 Setting mathematic functions .....   | 76         |
| 6.2.3 Selection of evaluation of min/max. value .....                                      | 81         |
| 6.3 "PROFI" menu - OUTPUT .....  |            |
| 6.3.1 Selection of excitation .....  | 83         |
| 6.3.2 Setting Limits .....   | 83         |
| 6.3.3 Setting data output .....  | 87         |
| 6.3.4 Setting analog output .....  | 88         |
| 6.3.5 Selection of display projection .....  | 90         |
| 6.4 "PROFI" menu - SERVICE .....   |            |
| 6.4.1 Setting the address of IR remote control .....                                       | 92         |
| 6.4.2 Selection of programming menu „LIGHT"/„PROFI" .....                                  | 93         |
| 6.4.3 Restoration manufacture setting .....  | 93         |
| 6.4.4 Calibration - input range (DU) .....   | 94         |
| 6.4.5 Selection of instr. menu language version .....                                      | 95         |
| 6.4.6 Setting new access password .....  | 95         |
| 6.4.7 Instrument identification .....  | 95         |
| <b>7. SETTING ITEMS INTO "USER" MENU</b> .....   | <b>96</b>  |
| <b>8. METHOD OF MEASURING OF THE COLD JUNCTION</b> .....                                   | <b>98</b>  |
| <b>9. DATA PROTOCOL</b> .....  | <b>99</b>  |
| <b>10. ERROR STATEMENTS</b> .....  | <b>101</b> |
| <b>11. TABLE OF SYMBOLS</b> .....  | <b>102</b> |
| <b>12. INSTRUMENT DIMENSIONS AND INSTALATION</b> ..  | <b>103</b> |
| <b>13. TECHNICAL DATA</b> .....  | <b>104</b> |
| <b>14. CERTIFICATE OF GUARANTEE</b> .....  | <b>106</b> |

## 2. INSTRUMENT DESCRIPTION

### 2.1 DESCRIPTION

The OMD 202 model series are 4/6 digit large panel programmable displays designed for maximum efficiency and user comfort while maintaining their favourable price. It comes either with a 3-colour LED display (red/green/orange) or with High Brightness LEDs (red or green with brightness of 1 300 mcd).

Type OMD 202UNI is a multifunction instrument with the option of configuration for 8 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

#### THE OMD 202 IS A MULTIFUNCTION INSTRUMENT AVAILABLE IN FOLLOWING TYPES AND RANGES

|                |   |
|----------------|---|
| <b>UNI</b>     | DC: 0...60/150/300/1200 mV<br>PM: 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V<br>OHM: 0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ<br>RTD-Pt: Pt 50/100/Pt 500/Pt 1000<br>RTD-Cu: Cu 50/Cu 100<br>RTD-Ni: Ni 1 000/Ni 10 000<br>T/C: J/K/T/E/B/S/R/N/L<br>DU: Linearn potentiometers (min. 500 Ω) |
| <b>UNI - A</b> | DC: ±0,1±0,1 A/±0,25 A/±0,5 A/±2 A/±5 A/±100 V/±250 V/±500 V  |
| <b>UNI - B</b> | PM: 3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V   |

#### PROGRAMMABLE PROJECTION

|                  |   |
|------------------|---|
| Selection:       | of type of input and measuring range  |
| Measuring range: | adjustable as fixed or with automatic change  |
| Setting:         | manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0 |
| Projection:      | -9999...9999 (-99999...999999)  |

#### COMPENSATION

|                      |  |
|----------------------|--|
| of conduct:          | in the menu it is possible to perform compensation for 2-wire connection   |
| of conduct in probe: | internal connection (conduct resistance in measuring head)   |
| of CJC (T/C):        | manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic(temperature at the brackets) |

#### LINEARIZATION

Linearization:\* by linear interpolation in 50 points (solely via OM Link)

#### DIGITAL FILTERS

|                   |   |
|-------------------|---|
| Floating average: | from 2...30 measurements                |
| Exponen.average:  | from 2...100 measurements               |
| Rounding:         | setting the projection step for display |

#### MATHEMATIC FUCTIONS

|                  |  |
|------------------|--|
| Min/max. value:  | registration of min./max. value reached during measurement |
| Tare:            | designed to reset display upon non-zero input signal       |
| Peak value:      | the display shows only max. or min. value                  |
| Mat. operations: | polynome, 1/x, logarithm, exponential, power, root, sin x  |

\* only for types DC, PM, DU

**EXTERNAL CONTROL**

|               |  |
|---------------|--|
| Lock:         | control keys blocking                  |
| Hold:         | display/instrument blocking            |
| Tare:         | tare activation/resetting tare to zero |
| Resetting MM: | resetting min/max value                |

**2.2 OPERATION**

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

|              |   |
|--------------|---|
| <b>LIGHT</b> | <b>Simple programming menu</b><br>- contains solely items necessary for instrument setting and is protected by optional number code   |
| <b>PROFI</b> | <b>Complete programming menu</b><br>- contains complete instrument menu and is protected by optional number code  |
| <b>USER</b>  | <b>User programming menu</b><br>- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)<br>- acces without password |

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

**OMLINK** Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible ([www.orbit.merret.eu](http://www.orbit.merret.eu)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

**2.3 OPTIONS**

**Excitation** is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

**Comparators** are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0..99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

**Data outputs** are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

**Analog outputs** will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

### 3. INSTRUMENT CONNECTION

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

#### MEASURING RANGES

| TYPE   | INPUT I                           | INPUT U                 |
|--------|-----------------------------------|-------------------------|
| DC     |                                   | 0...60/150/300/1 200 mV |
| PM     | 0...5/20 mA/4...20 mA             | ±2/±5/±10/±40 V         |
| OHM    | 0...100 Ω/1 kΩ/10 kΩ/100 kΩ       |                         |
| RTD-Pt | Pt 50/100/Pt 500/ Pt 1 000        |                         |
| RTD-Cu | Cu 50/100                         |                         |
| RTD-Ni | Ni 1 000/10 000                   |                         |
| T/C    | J/K/T/E/B/S/R/N/L                 |                         |
| DU     | Linear potentiometer (min. 500 Ω) |                         |

#### OPTION "A"

| TYPE | INPUT I  | INPUT U                            |
|------|--|------------------------------------|
| DC   | ±0,1 A/±0,25 A/±0,5 A proti GND (C)<br>±2 A/±5 A proti GND (B) | ±100 V/±250 V/±500 V proti GND (C) |

#### OPTION "B"


| TYPR | INPUTS 2, 3, 4/I      | INPUTS 2, 3, 4/U |
|------|-----------------------|------------------|
| PM   | 0...5/20 mA/4...20 mA | ±2/±5/±10/±40 V  |


#### Termination of RS 485 communication line

##### X3 - Termination of communication line RS 485


| Full | Significance                | Default           | Recommendation                                  |
|------|-----------------------------|-------------------|---|
| 1-2  | connect L+ to (+) source    | terminalconnected | connect at the end of line<br>do not disconnect |
| 3-4  | termination of line 120 Ohm | disconnected      |   |
| 5-6  | connect L- to (-) source    | terminalconnected |   |

RS 485 line should have a linear structure - wires (ideally shielded and twisted) should lead from one device to another.

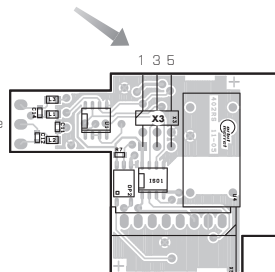

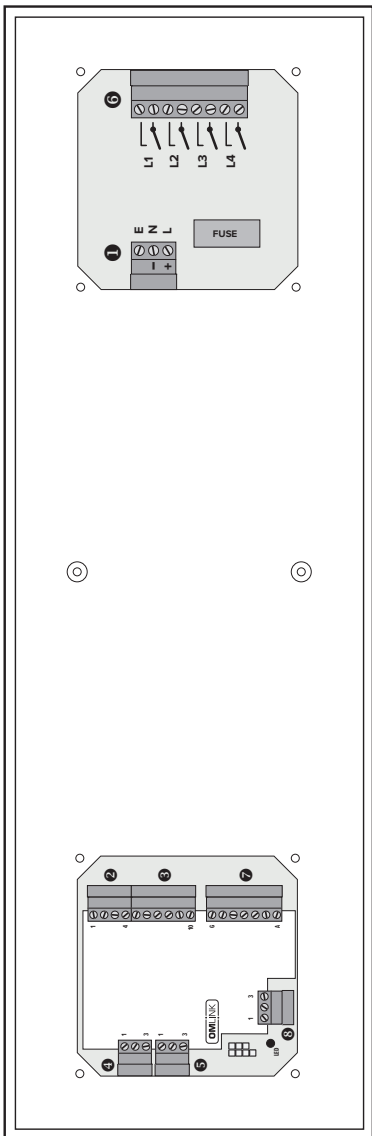


- 1** Analogue output\*
  - AO-U
  - AD-I
  - GND
- 2** Data output\*
  - B/D-L
  - T/D-L
  - GND
- 3** OMA Time\*
  - Signal
  - Signal
  - Shielding
- 4** External inputs
  - EXT.1
  - EXT.2
  - EXT.3
- 5** Input
  - DC PM
  - Excitation
  - GND
  - INPUT - I
  - INPUT - U
- 6** Relays\*
  - E
  - N
  - L
- 7** Power supply
  - E
  - N
  - L

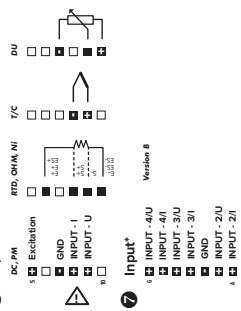


Maximum of 250 mA may be connected to "INPUT - I" (bracket no. 8), i.e. 10-times range overload.  
 Mind the correct connection/mistaking of current - voltage input.  
 Destruction of measuring resistance in current input (15R) may occur.

### 3. INSTRUMENT CONNECTION

Example connection of a 2-wire sensor with current signal output powered by instrument's excitation

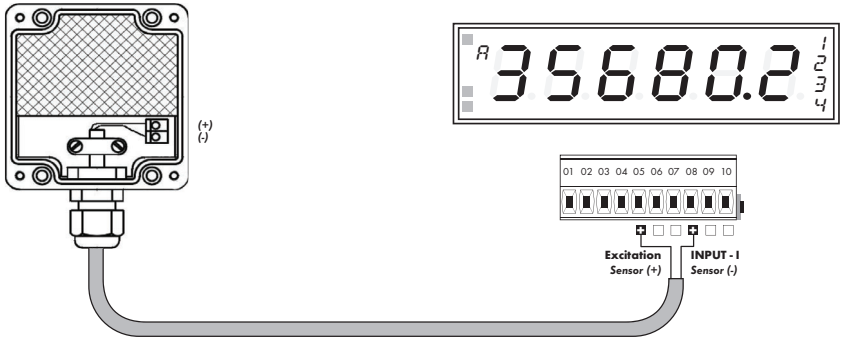


Example connection of a 3-wire sensor with current signal output powered by instrument's excitation

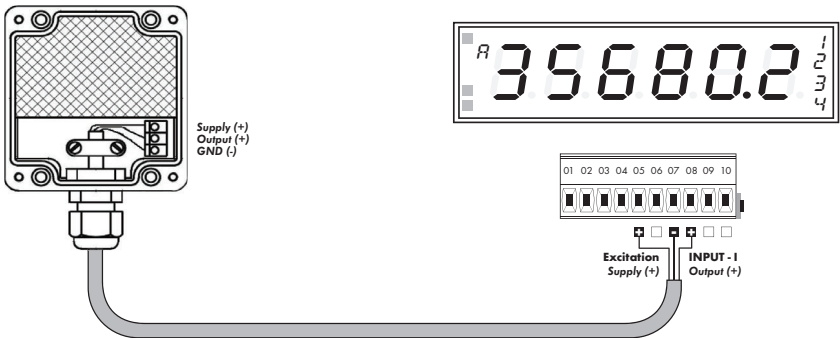




Example connection of 3-wire sensor with voltage signal output powered by instrument's excitation

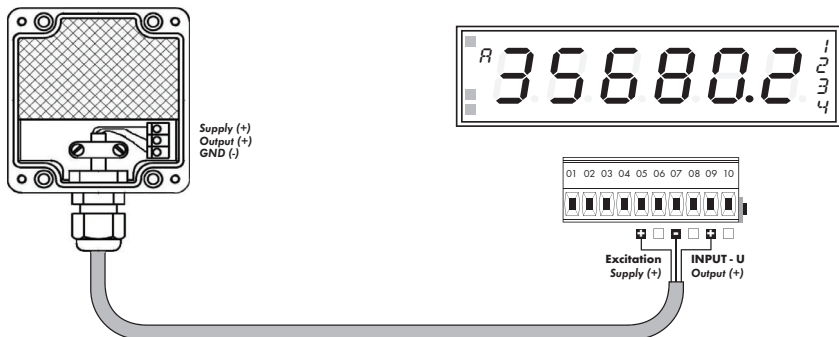

Example connection of resistance measurement using 4 wires

By connecting resistor R\* we eliminate error message E. I.O.V. (input overflow) when the measured resistance is disconnected

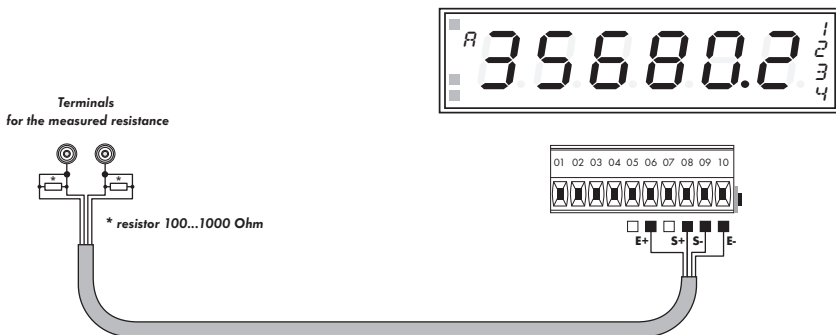

## SETTING PROFI

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

## SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

## SETTING USER

For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

## 4.1 SETTING


The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT**      **Simple programming menu**  
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI**      **Complete programming menu**  
- contains complete instrument menu and is protected by optional number code
- USER**      **User programming menu**  
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)  
- access without password

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible ([www.orbit.merret.eu](http://www.orbit.merret.eu)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

## Scheme of processing the measured signal

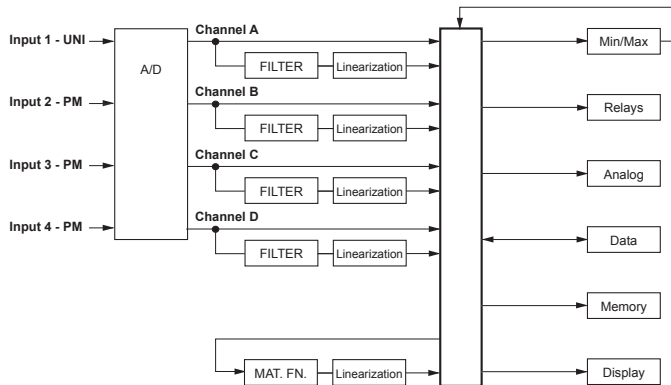

## 4. INSTRUMENT SETTING

Setting and controlling the instrument is performed by means of the Remote control. With the aid of the Remote control it is possible to browse through the operation menu and to select and set the required values.

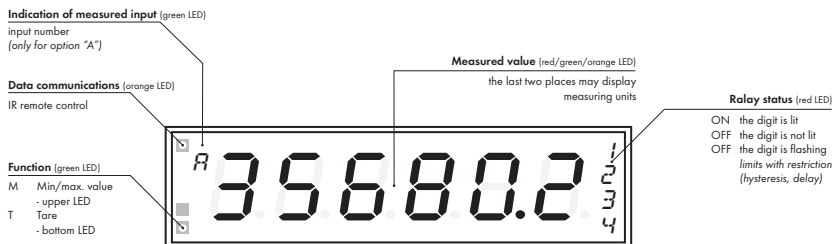

### Symbols used in the instructions



**DU OHM RTD T/C** Indicates the setting for given type of instrument

**DEF** values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

30 continues on page 30

### Setting the decimal point and the minus sign

#### DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing . Positioning is performed by .

#### THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

## Control keys functions

| KEY | MEASUREMENT   | MENU   | SETTING NUMBERS/SELECTION |
|-----|---|--|---------------------------|
|     | access into USER menu                               | exit menu  | quit editing              |
|     | programmable key function                           | back to previous level                                 | move to higher decade*    |
|     | programmable key function                           | move to previous item                                  | move down*                |
|     | programmable key function                           | move to next item                                      | move up*                  |
|     | programmable key function                           | confirm selection                                      | confirm setting/selection |
|     | access into LIGHT/PROFI menu                        |  |                           |
|     | direct access into PROFI menu                       |  |                           |
|     |   | configuration of an item for "USER" menu               |                           |
|     |   | determine the sequence of items in "USER - LIGHT" menu |                           |
|     | cancelation of address instrument/remote controller |  |                           |

\* alternatively, the setting may be done from the numeric keys of the remote control by selecting directly the number required

## Setting items into „USER“ menu

- in **LIGHT** or **PROFI** menu
- no items permitted in **USER** menu from manufacture
- on items marked by inverted triangle

## USER

legend is flashing - current setting is displayed



- item will not be displayed in USER menu
- item will be displayed in USER menu with the option of setting
- item will be solely displayed in USER menu

# SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

### Preset from manufacture

|                   |            |
|-------------------|------------|
| Password          | "0"        |
| Menu              | LIGHT      |
| USER menu         | off        |
| Setting the items | <b>DEF</b> |

### !

Upon delay exceeding 60s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

Access password  
 1428 PASS\_w 0

Active inputs  
 InPUt5 4 InP tYPE 1 Pn Measuring range - Channel A nDdE 1 4-20mA

RTD OHM  
 COndEct 2-w IrE F0-rnA 0000.0  
 T/C  
 COndEct EMt. 1tC C.U tEn 23 F0-rnA 0000.0  
*Selecting projection and connection*

Measuring range - Channel B nDdE 2 4-20mA  
 Measuring range - Channel C nDdE 3 4-20mA  
 Measuring range - Channel D nDdE 4 4-20mA

DC PA OHM DU Setting projection - Channel A  
 n In A 0 nA n A 100 F0-rn A 0000.0 Basic color COL 0 A GrEE n

First color's limit LIN 1 A 33.33 Color after fi rst limit COL 1 A 0-rnGE  
 Second color's limit LIN 2 A 66.67 Color after second limit COL 2 A rEd

Setting projection - Channel B  
 n In b 0 nA n b 100 F0-rn b 0000.0 Basic color COL 0 b GrEE n

Setting projection - Channel C  
 n In c 0 nA n c 100 F0-rn c 0000.0 Basic color COL 0 c GrEE n

Setting projection - Channel D  
 n In d 0 nA n d 100 F0-rn d 0000.0 Basic color COL 0 d GrEE n

LIN L1 20 LIN L2 40 LIN L3 60 LIN L4 80  
*Option - comparator*


TYPE R.D. 120 n In R.D. 0 nA n R.D. 100  
*Option - Analog output*

Menu type nEnU LIGHT Return to manufacture calibration rEd CAL YES Return to manufacture setting rEd SEt Fir n


DU Calibration - only for "DU"  
 C n In YES C nA n YES Language selection LAnG EnGL New password PAS L 0

Identification IdEnt YES Instrument 0nD202Un1-b SW version Input 78-001 4 InP 1428 Return to measuring mode

## 5. SETTING LIGHT

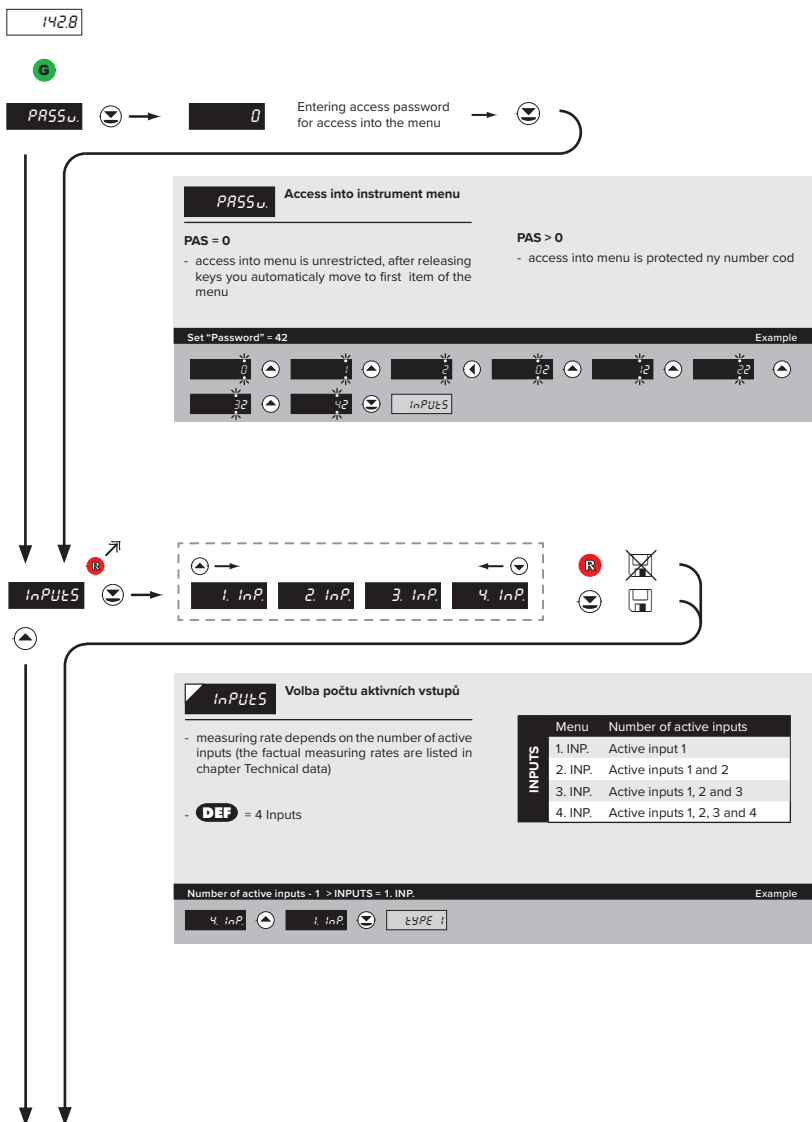



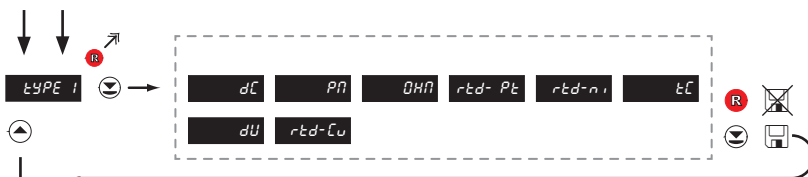

**TYPE 1** Selection of the type of instrument

- primary selection of the type of instrument
- performs default setting **DEF** of values from manufacture, incl. calibration
- **DEF** = „PM“

| TYPE 1 | Menu   | Type of instrument             |
|--------|--------|--------------------------------|
|        | DC     | DC voltmeter                   |
|        | PM     | Process monitor                |
|        | OHM    | Ohmmeter                       |
|        | RTD-Pt | Thermometer for sensors Pt     |
|        | RTD-Ni | Thermometer for sensors Ni     |
|        | TC     | Thermometer for thermocouples  |
|        | DU     | Display for lin. potentiometer |
|        | RTD-Cu | Thermometer for sensors Cu     |

Type "PM" Example

PM rtd-Cu

|             |    |
|-------------|----|
| Type DC     | 18 |
| Type PM     | 18 |
| Type OHM    | 19 |
| Type RTD-Pt | 20 |
| Type RTD-Ni | 21 |
| Type T/C    | 22 |
| Type DU     | 36 |
| Type RTD-Cu | 24 |

## 5. SETTING LIGHT

CHANNEL A > MEASURING MODE > DC

**nDdE 1**

60 nV 150 nV 300 nV 1200 nV

**nDdE 1** Selection of the instrument measuring range

**DEF** = 60 mV

| MODE 1 | Menu   | Measuring range |
|--------|--------|-----------------|
|        | 60 mV  | ±60 mV          |
|        | 150 mV | ±150 mV         |
|        | 300 mV | ±300 mV         |
|        | 1200mV | ±1.2 V          |

Range ±150 mV

Example: 60 nV 150 nV nDdE 2

26

CHANNEL A > MEASURING MODE > PM

**nDdE 1**

0-5 nA 0-20 nA 4-20 nA ... 0-10 uV 0-40 uV Er-4-20

**nDdE 1** Selection of the instrument measuring range

**DEF** = 4 - 20 mA

| MODE 1 | Menu    | Measuring range  |
|--------|---------|--|
|        | 0-5mA   | 0...5 mA   |
|        | 0-20mA  | 0...20 mA  |
|        | 4-20mA  | 4...20 mA  |
|        | 0-2 V   | ±2 V   |
|        | 0-5 V   | ±5 V   |
|        | 0-10 V  | ±10 V  |
|        | 0-40 V  | ±40 V  |
|        | Er-4-20 | 4...20 mA, with error statement of „underfl ow“ upon signal smaller than 3,36 mA |

Range 0...20 mA

Example: 4-20 nA 0-2 uV nDdE 2

26

**MODE 1** Selection of the instrument measuring range

**DEF** = 100 Ω

| Menu  | Measuring range |
|-------|-----------------|
| 100 R | 0...100 Ω       |
| 1 k   | 0...1 kΩ        |
| 10 k  | 0...10 kΩ       |
| 100 k | 0...100 kΩ      |

Range 0...10 kΩ Example

100 r 1 k 10 k 100 k

**CONNECT** Selection of the type of sensor connection

**DEF** = 2-wire

| Menu   | Connection |
|--------|------------|
| 2-WIRE | 2-wire     |
| 3-WIRE | 3-wire     |
| 4-WIRE | 4-wire     |

Type of connection - 3 wire > CONNECT = 3-WIRE Example

2-wire 3-wire 4-wire

MODE 1

CONNECT

MODE 1


CONNECT

MODE 1

CONNECT

## 5. SETTING LIGHT

CHANNEL A > MEASURING MODE > RTD - Pt

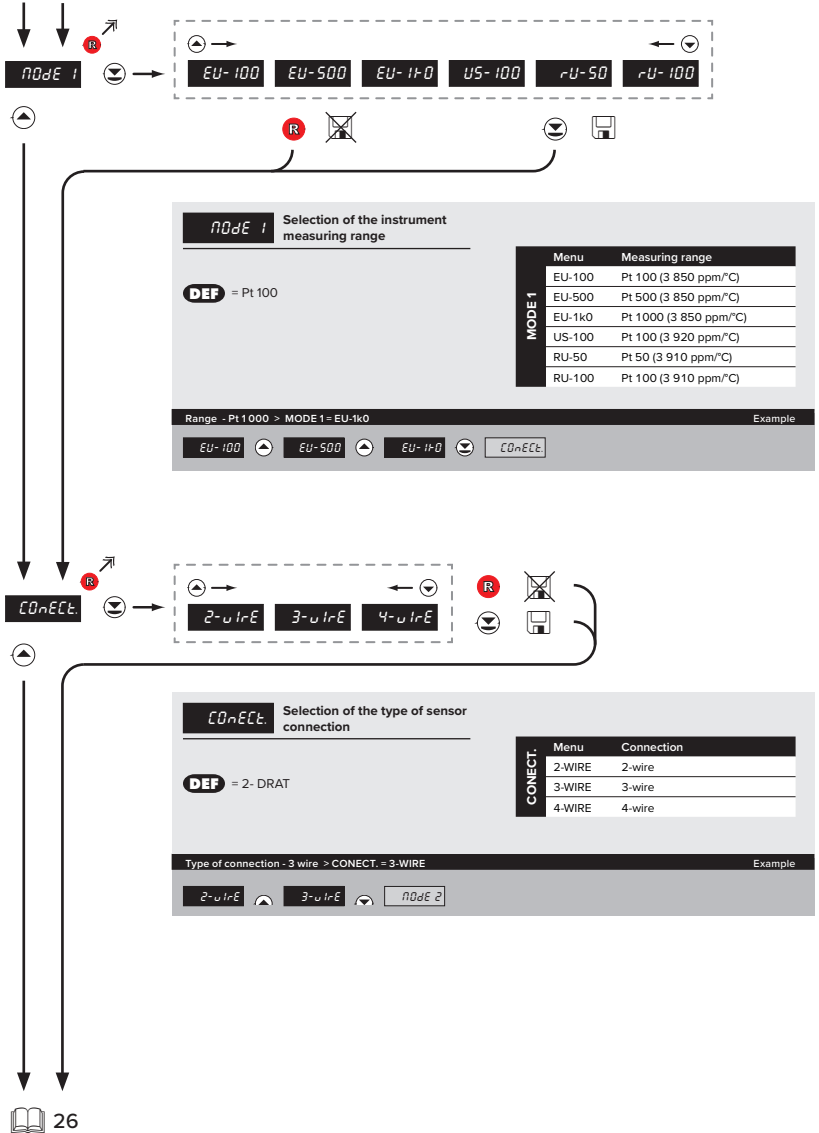




**MODE 1** Selection of the instrument measuring range

**DEF** = Ni 1 000 - 5 000 ppm/°C

| Menu    | Measuring range          |
|---------|--------------------------|
| 5.0-1k  | Ni 1 000 (5 000 ppm/°C)  |
| 6.2-1k  | Ni 1 000 (6 180 ppm/°C)  |
| 5.0-10k | Ni 10 000 (5 000 ppm/°C) |
| 6.2-10k | Ni 10 000 (6 180 ppm/°C) |

Range - Ni 10 000, 5 000 ppm > MOD = 5.0-10k Example

 5.0-1k 6.2-1k 5.0-10k CONECT

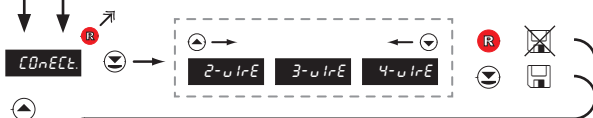

**CONNECT** Selection of the type of sensor connection

**DEF** = 2-WIRE

| Menu   | Connection |
|--------|------------|
| 2-WIRE | 2-wire     |
| 3-WIRE | 3-wire     |
| 4-WIRE | 4-wire     |

Type of connection - 3 wire > CONECT = 3-WIRE Example

2-wire 3-wire MODE 2

## 5. SETTING LIGHT

CHANNEL A > MEASURING MODE > T/C

**MODE 1** Selection of the type of thermocouple

- setting the input range depends on the measuring range ordered

**DEF** = Type "J"

| Menu  | Type of thermocouple |
|-------|----------------------|
| T/C B | B                    |
| T/C E | E                    |
| T/C J | J                    |
| T/C K | K                    |
| T/C N | N                    |
| T/C R | R                    |
| T/C S | S                    |
| T/C T | T                    |
| T/C L | L                    |

Type of thermocouple "K" Example

**CONECT.** Selection of the type of sensor connection


**DEF** = EXT. 1TC

| Menu    | Connection  | Ref. T/C |
|---------|---|----------|
| INT.1TC | measuring C.J. at instrument brackets                                       | ✗        |
| INT.2TC | measuring C. J. at instrument brackets with anti-series connected ref. TC   | ✓        |
| EXT.1TC | the entire measuring set is working under invaried and constant temperature | ✗        |
| EXT.2TC | when using compensation box   | ✓        |

Type of connection > CONECT. = EXT. 2TC Example

**!** For thermocouple type "B" the items CONECT. and C.J. TEM. are not available

**!** Method and procedure of setting the cold junctions is described in separate chapter on page 98

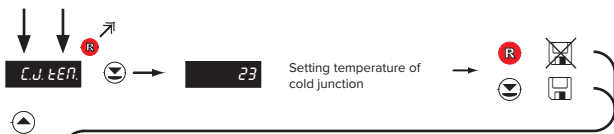

**C.J. TEM.** Nastavení teploty studeného konce

- range 0...99°C with compensation box

**DEF** = 23

---

Setting temperature of cold junction > C.J. TEM. = 35 Example

23

24

25

25


35

NOdE 2



## 5. SETTING LIGHT

CHANNEL A > MEASURING MODE > RTD-Cu

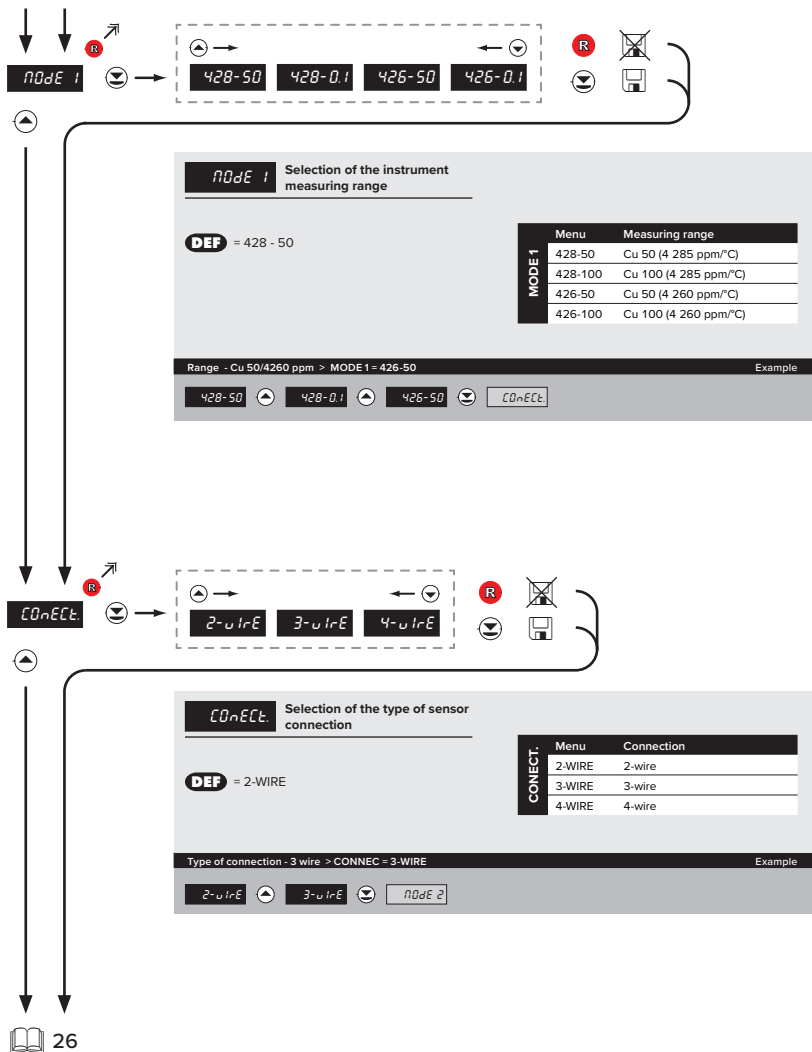





## SETTING LIGHT 5.

## 5. SETTING LIGHT

CHANNEL B/C/D > MEASURING MODE > PM

**MODE 2**

Selection of the instrument measuring range

**DEF** = 4 - 20 mA

| Menu   | Measuring range  |
|--------|--|
| 0-5mA  | 0...5 mA   |
| 0-20mA | 0...20 mA  |
| 4-20mA | 4...20 mA  |
| 0-2 V  | ±2 V   |
| 0-5 V  | ±5 V   |
| 0-10 V | ±10 V  |
| 0-40 V | ±40 V  |
| Er4-20 | 4...20 mA, with error statement of „underfl ow“ upon signal smaller than 3.36 mA |

Range 0...20 mA Example

4-20 mA 0-2 V MODE 3

**MODE 3**


Selection of the instrument measuring range

**DEF** = 4 - 20 mA

| Menu   | Measuring range  |
|--------|--|
| 0-5mA  | 0...5 mA   |
| 0-20mA | 0...20 mA  |
| 4-20mA | 4...20 mA  |
| 0-2 V  | ±2 V   |
| 0-5 V  | ±5 V   |
| 0-10 V | ±10 V  |
| 0-40 V | ±40 V  |
| Er4-20 | 4...20 mA, with error statement of „underfl ow“ upon signal smaller than 3.36 mA |

Range 0...20 mA Example

4-20 mA 0-2 V MODE 4

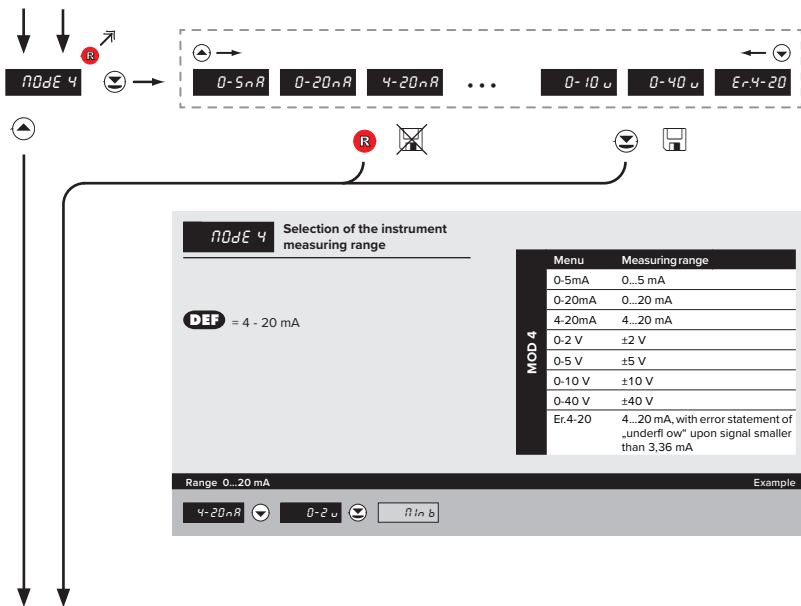

## 5. SETTING LIGHT

CHANNEL A > DC



**nIn A** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mV > MIN A = 0 Example




**nMax A** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for 150 mV > MAX A = 3500 Example

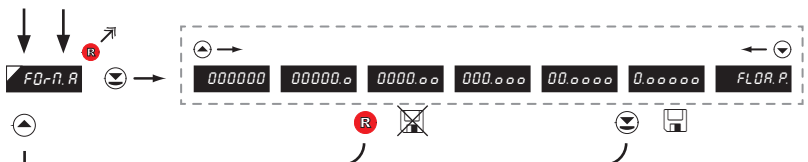

**F0-r.R** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEF** = 0000.00

---

Projection of DP on display > 00000.0 Example

0000.00 [down arrow] 00000.0 [down arrow] COLDR \*subsequent item on the menu depends on instrument equipment

38

## 5. SETTING LIGHT

CHANNEL A  $\wedge$  PM



**Min A** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mA > MIN A = -25

Example

|     |    |      |      |      |       |
|-----|----|------|------|------|-------|
| 0   | 1  | 2    | 3    | 4    | 5     |
| 0.5 | -5 | -0.5 | -1.5 | -2.5 | Min A |

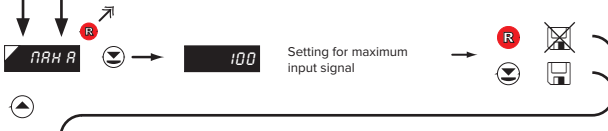

**Max A** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for 20 mA > MAX A = 2500

Example

|     |     |     |     |     |        |
|-----|-----|-----|-----|-----|--------|
| 100 | 100 | 100 | 200 | 300 | 400    |
| 500 | 500 | 500 | 500 | 500 | FD-R.A |

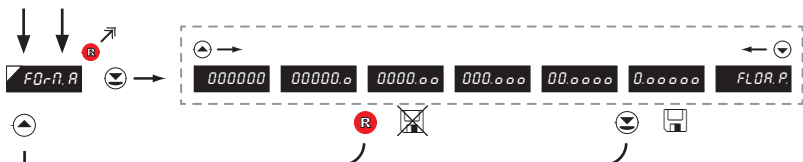

**F0-r.R** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEF** = 0000.00

---

Projection of DP on display > 0000.00 Example

0000.00  \*subsequent item on the menu depends on instrument equipment

38

## 5. SETTING LIGHT

CHANNEL A > OHM



**n In A** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 Ohm > MIN A = 0 Example



**n A H R** Setting display projection for maximum value of input signal


- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for 10 kOhm > MAX A = 10000 Example



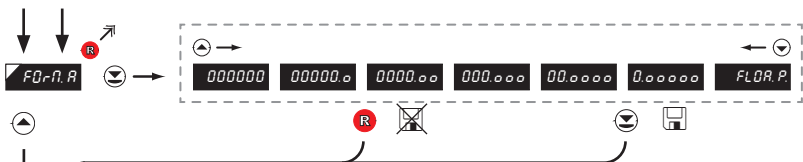

**F0-r.A** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEF** = 0000.oo

---

Projection of DP on display > 00000.o Example

0000.o.o    00000.o    0000.o.o.o    \*subsequent item on the menu depends on instrument equipment

38

## 5. SETTING LIGHT

CHANNEL A > RTD - Pt



**FD-Pt.R** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEF** = 00000.0

Projection of DP on display > 000000 Example

|         |        |        |
|---------|--------|--------|
| 00000.0 | 000000 | COLD R |
|---------|--------|--------|

\*subsequent item on the menu depends on instrument equipment

38

CHANNEL A > RTD - Ni



**FD-Pt.R** Setting projection of the decimal point


- positioning of the DP is set here in the measuring mode **DEF** = 00000.0

Projection of DP on display > 000000 Example

|         |        |        |
|---------|--------|--------|
| 00000.0 | 000000 | COLD R |
|---------|--------|--------|

\*subsequent item on the menu depends on instrument equipment

38

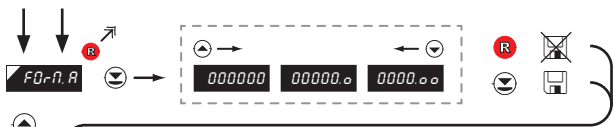


**FD-R.A** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode      **DEP** = 00000.0

---


Projection of DP on display > 000000      Example

 00000.0    000000    COLD R    \*subsequent item on the menu depends on instrument equipment



## 5. SETTING LIGHT

CHANNEL A > DU

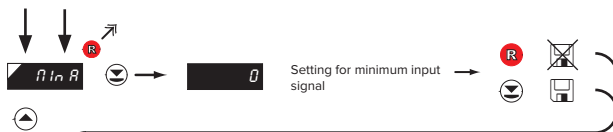

**Min A** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for beginning > MIN A = 0

Example



**Max A** Setting display projection for maximum value of input signal



- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed


**DEF** = 100


Projection for end > MAX A = 5000

Example

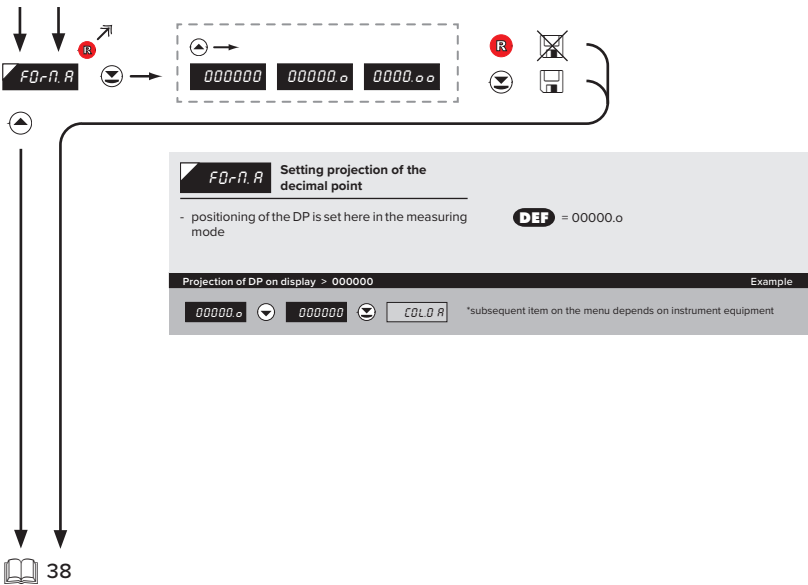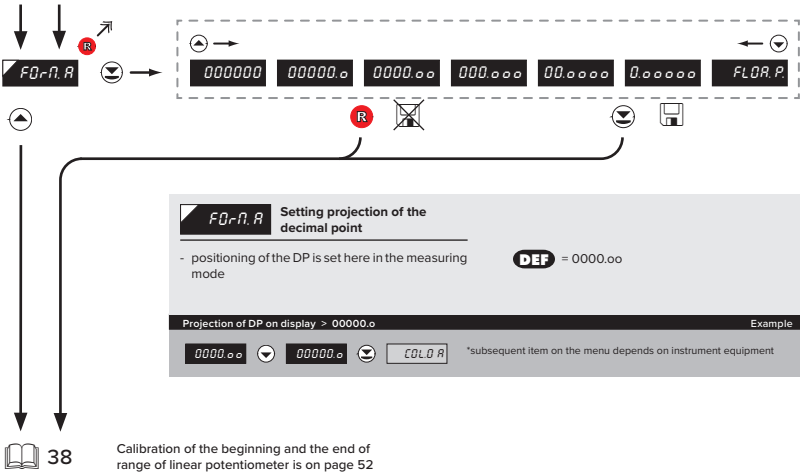

## 5. SETTING LIGHT

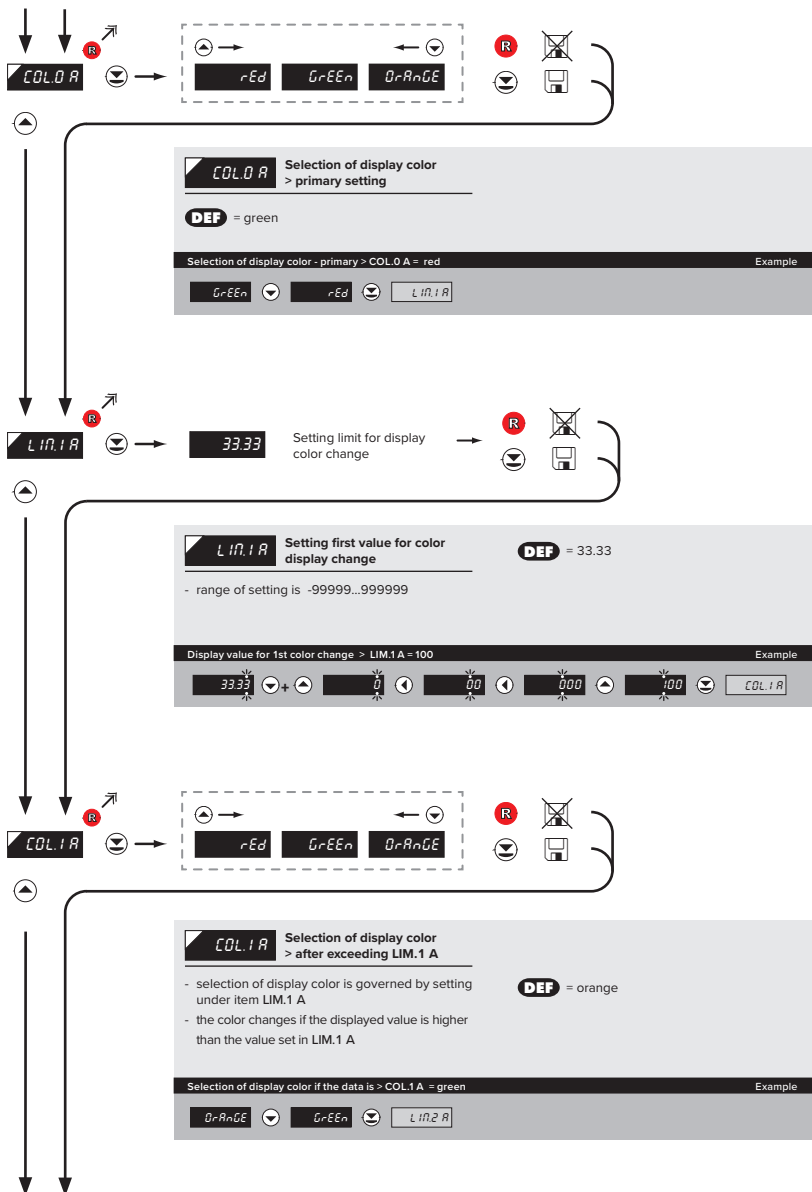

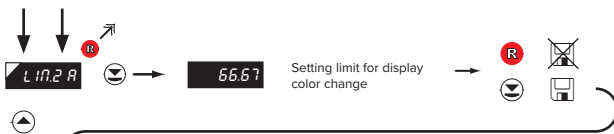

**LIM.2 A** Setting second value for display color change

- range of setting is -99999...999999 **DEF** = 66.67

Display value for 1st color change > LIM.2 A = 400 Example

|       |     |     |         |
|-------|-----|-----|---------|
| 66.67 | 0   | 00  | 000     |
| 200   | 300 | 400 | COL.2 A |



**COL.2 A** Volba barvy displeje > po překročení LIM.2 A **DEF** = červená

- selection of display color is governed by setting under item LIM.2 A

- the color changes if the displayed value is higher than the value set in LIM.2 A

Selection of display color if the data is > COL.2 A = orange Example

|     |        |       |
|-----|--------|-------|
| rEd | OrAnGE | AIn b |
|-----|--------|-------|

# 5. SETTING LIGHT

CHANNEL B ^ PM



**MIN b** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mA > MIN b = -25

Example

|     |    |      |      |      |       |
|-----|----|------|------|------|-------|
| 0   | 1  | 2    | 3    | 4    | 5     |
| 0.5 | -5 | -0.5 | -1.5 | -2.5 | MIN b |



**MAX b** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed


**DEF** = 100

Projection for 20 mA > MAX b = 2500

Example

|     |     |     |     |     |        |
|-----|-----|-----|-----|-----|--------|
| 100 | 100 | 100 | 200 | 300 | 400    |
| 500 | 500 | 500 | 500 | 500 | FO-M b |



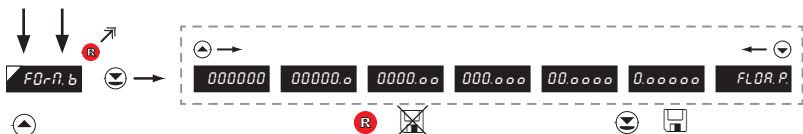

**F0-R.b** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEP** = 0000.00

Projection of DP on display > 0000.00 Example

0000.00  \*subsequent item on the menu depends on instrument equipment



**COLD.b** Selection of display color > primary setting

**DEP** = green

Selection of display color - primary > COLD.B = red Example

GrEEen

Setting is identical as for "Channel A"

## 5. SETTING LIGHT

CHANNEL C  
^  
PM



**Min C** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mA > MIN C = -25

Example

|     |    |      |      |      |      |      |      |      |      |       |
|-----|----|------|------|------|------|------|------|------|------|-------|
| 0   | 1  | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | Min C |
| 0.5 | -5 | -0.5 | -1.5 | -2.5 | -3.5 | -4.5 | -5.5 | -6.5 | -7.5 | Min C |



**Max C** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for 20 mA > MAX C = 2500

Example

|     |     |     |     |     |     |     |     |     |     |     |       |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|
| 100 | 100 | 100 | 200 | 300 | 400 | 500 | 500 | 500 | 500 | 500 | Max C |
| 500 | 500 | 500 | 500 | 500 | 500 | 500 | 500 | 500 | 500 | 500 | Max C |

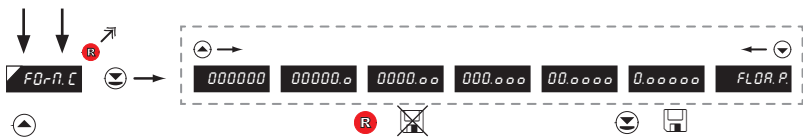

**F0-R.C** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEF** = 0000.00

Projection of DP on display > 0000.00 Example

0000.00 COLD.C \*subsequent item on the menu depends on instrument equipment



**COLD.C** Selection of display color > primary setting

**DEF** = green

Selection of display color - primary > COLD.C = red Example

GrEEen rEd LiMiT

Setting is identical as for "Channel A"

## 5. SETTING LIGHT

CHANNEL D ^ PM



**Min d** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mA > MIN D = -25

Example

|     |    |      |      |      |   |       |
|-----|----|------|------|------|---|-------|
| 0   | 1  | 2    | 3    | 4    | 5 | Min d |
| 0.5 | -5 | -0.5 | -1.5 | -2.5 |   |       |

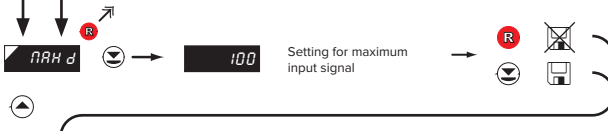

**Max d** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for 20 mA > MAX D = 2500

Example

|     |     |     |     |     |     |       |
|-----|-----|-----|-----|-----|-----|-------|
| 100 | 100 | 100 | 200 | 300 | 400 | Max d |
| 500 | 500 | 500 | 500 | 500 |     |       |

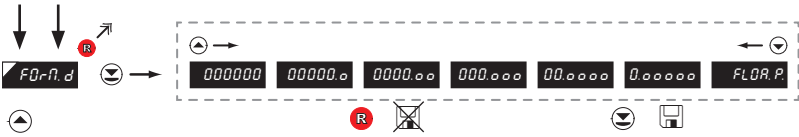

**F0-r.d** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEP** = 0000.00

Projection of DP on display > 0000.00 Example

0000.00 **COLD d** \*subsequent item on the menu depends on instrument equipment



**COLD d** Selection of display color > primary setting

**DEP** = green


Selection of display color - primary > COLD D = red Example


GrEE n **rEd** Li n i d

Setting is identical as for "Channel A"

## 5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > COMPARATORS

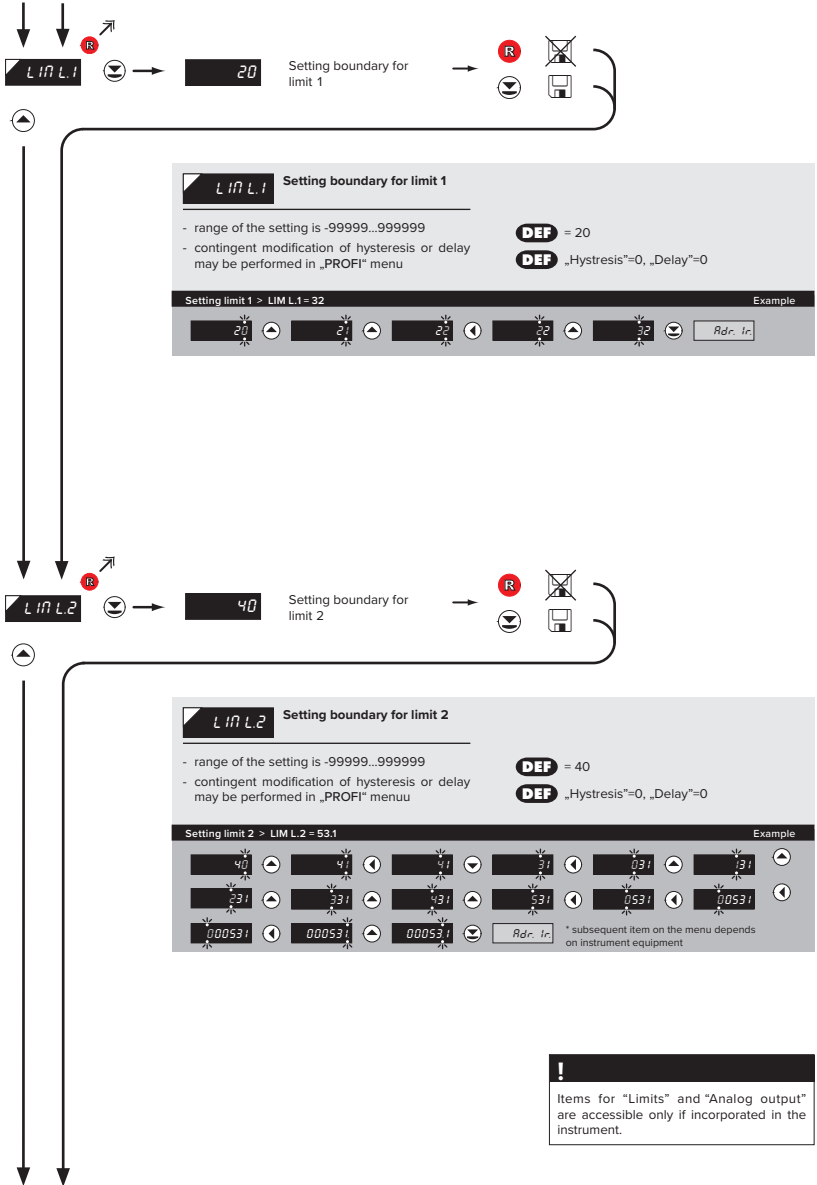

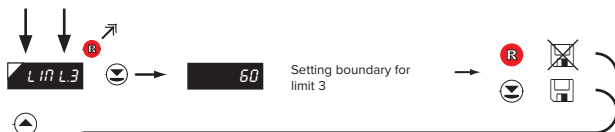

**LIM L3** Setting boundary for limit 3

- range of the setting is -99999...999999
- contingent modification of hysteresis or delay may be performed in „PROFI“ menu

**DEF** = 60  
**DEF** „Hysteresis“=0, „Delay“=0

Setting limit3 > LIM L.3 = 85 Example

|    |    |    |          |   |    |
|----|----|----|----------|---|----|
| 60 | 61 | 62 | 63       | 64  | 65 |
| 65 | 75 | 85 | Adr. Ir. | * subsequent item on the menu depends on instrument equipment |    |



**LIM L4** Setting boundary for limit 4

- range of the setting is -99999...999999
- contingent modification of hysteresis or delay may be performed in „PROFI“ menu

**DEF** = 80  
**DEF** „Hysteresis“=0, „Delay“=0

Setting limit4 > LIM L.4 = 103 Example

|    |     |     |          |   |    |
|----|-----|-----|----------|---|----|
| 80 | 81  | 82  | 83       | 84  | 85 |
| 83 | 003 | 103 | Adr. Ir. | * subsequent item on the menu depends on instrument equipment |    |

DISPLAYED ONLY WITH OPTIONS > COMPARATORS

## 5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT

The diagram illustrates the navigation path for setting analog output parameters. It starts with a menu icon 'TYP. A.O.' and 'A In A.O.', leading to a menu list, then to configuration screens for setting the type of analog output and assigning the display value to the beginning of the AO range.

**Menu List:**

| Menu     | Range     | Description  |
|----------|-----------|--|
| 0-20mA   | 0...20 mA |  |
| Er4-T    | 4...20 mA | signaling interrupted current loop and displaying an error message (<3,6 mA) |
| 4-20T    | 4...20 mA | signaling broken current loop (<3,6 mA)                                      |
| Er4-20mA | 4...20 mA | with indication of error statement (<3,6 mA)                                 |
| 4-20mA   | 4...20 mA |  |
| 0.5mA    | 0...5 mA  |  |
| 0-2 V    | 0...2 V   |  |
| 0-5 V    | 0...5 V   |  |
| 0-10 V   | 0...10 V  |  |
| +10 V    | ±10 V     |  |

**DEF = 4...20 mA**

**Typ analogového výstupu - 0...10 V > TYP A.V. = U 10** Example

4-20mA | 0-5mA | 0-2V | 0-5V | 0-10V | A In A.O.

**A In A.O.** Assigning the display value to the beginning of the AO range

0


**DEF = 0**

**Display value for the beginning of the AO range > MIN A.O. = 0** Example

0 | A In A.O.

**!** Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



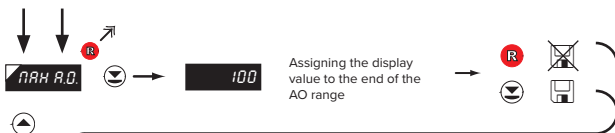

**RRH R.O.** Assigning the display value to the end of the AO range


- range of the setting is -99999...999999 **DEF** = 100


Display value for the end of the AO range > MAX A.O. = 120 Example

100 100 120 120 Rdr, Ir

DISPLAYED ONLY WITH OPTIONS &gt; ANALOG OUTPUT

## 5. SETTING LIGHT

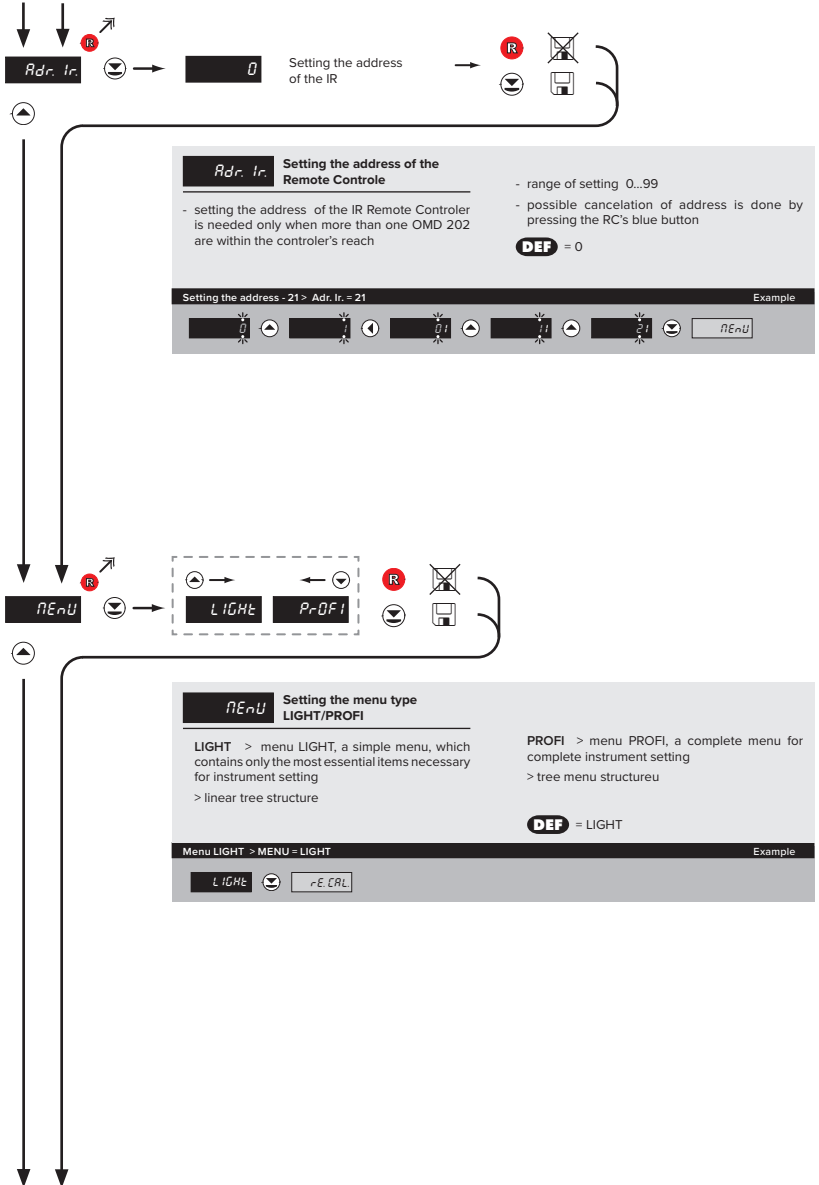

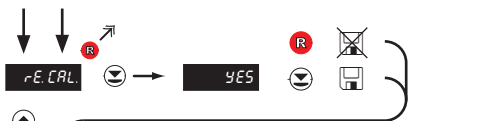


**rE.CAL.** **Návrat k výrobní CALIBraci přístroje**

- in the event of error calibration it is feasible to restore manufacture calibration.
- Prior to execution of any modifications you will be asked to confirm your selection. (YES)

Restoration of manufacture calibration > YES Example

 CAL 1b



**rE.SET.** **Návrat k výrobnímu setting přístroje**

- in the event of error setting the manufacture setting may be restored
- restoration is performed for the currently selected type of the instrument input.
- provided you stored your user setting in the PROFi menu, it may also be restored (select USER)
- loading manufacture calibration and primary setting of items on the menu (DEF)

Restoration of manufacture setting > FIREM. Example


rE.SET.

\* subsequent item on the menu depends on instrument type, for "DU" > "C. MIN"


|               |  |    |
|---------------|--|----|
| Type „DC“     |  | 53 |
| Type "PM"     |  | 53 |
| Type "OHM"    |  | 53 |
| Type "RTD-Pt" |  | 53 |
| Type "RTD-Ni" |  | 53 |
| Type "T/C"    |  | 53 |
| Type "DU"     |  | 52 |
| Type "RTD-Cu" |  | 53 |

# 5. SETTING LIGHT

DU

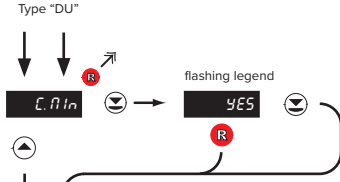

|   |  |                    |
|---|--|--------------------|
| <b>C.MIN</b>  | Calibration of input range -<br>the potentiometer traveller in<br>initial position | Only for type "DU" |
| - prior confirming the flashing "YES" sign the<br>potentiometer traveller has to be in given idle<br>position |  |                    |
| Calibration of the beginning of the range > C. MIN  |  | Example            |
| <b>YES</b>  | <b>C.MAX</b>   |                    |

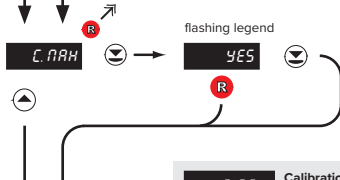

|   |  |                    |
|---|--|--------------------|
| <b>C.MAX</b>  | Calibration of input range -<br>the potentiometer traveller in<br>end position | Only for type "DU" |
| - prior confirming the flashing "YES" sign the<br>potentiometer traveller has to be in given idle<br>position |  |                    |
| Calibration of the end of the range > C. MAX  |  | Example            |
| <b>YES</b>  | <b>L.RNG</b>   |                    |



**LANG.** Selection of language in instrument menu

- selection of language version of the instrument menu

**DEF** = ENGL.

---

Language selection - ENGLISH > LANG. = ENGL. Example

CZECH EnGL PAS.L.

**PAS.L.** Setting new access password

- access password for menu LIGHT
- range of the number code 0..9999
- upon setting the password to "000" the access to menu LIGHT is free without prompt to enter it

- in the event of loss universal password "8177" may be used!

**DEF** = 0

---

New password - 341 > PAS.L. = 341 Example

0 1 2 3 4 5 6 7 8 9 \* #

41 041 141 241 341 IdEnt.

**IdEnt.** Instrument SW version

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)
- if SW version contains a letter in first position, then it is a customer SW


- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

142.8


Return to measuring mode

## 6. SETTING PROFI

Programming scher

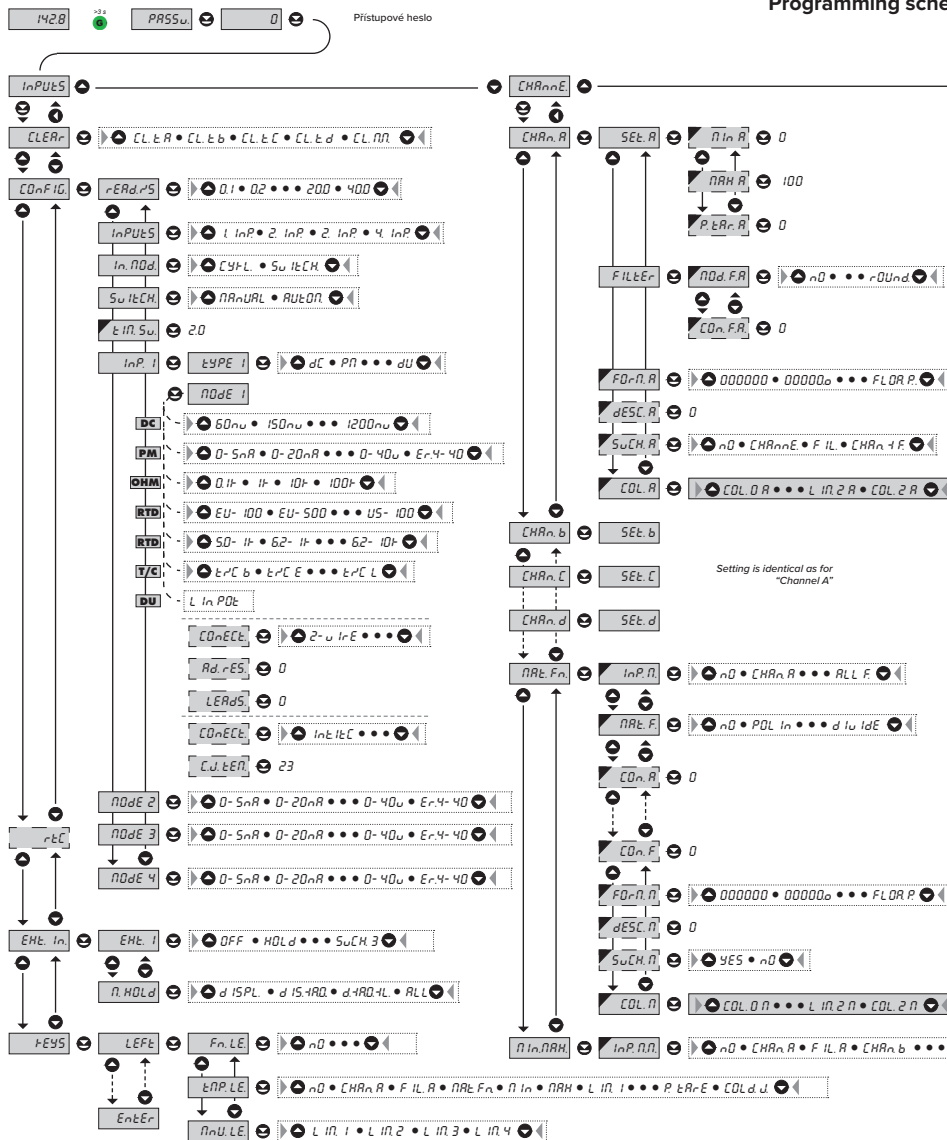

me of PROFI MENU

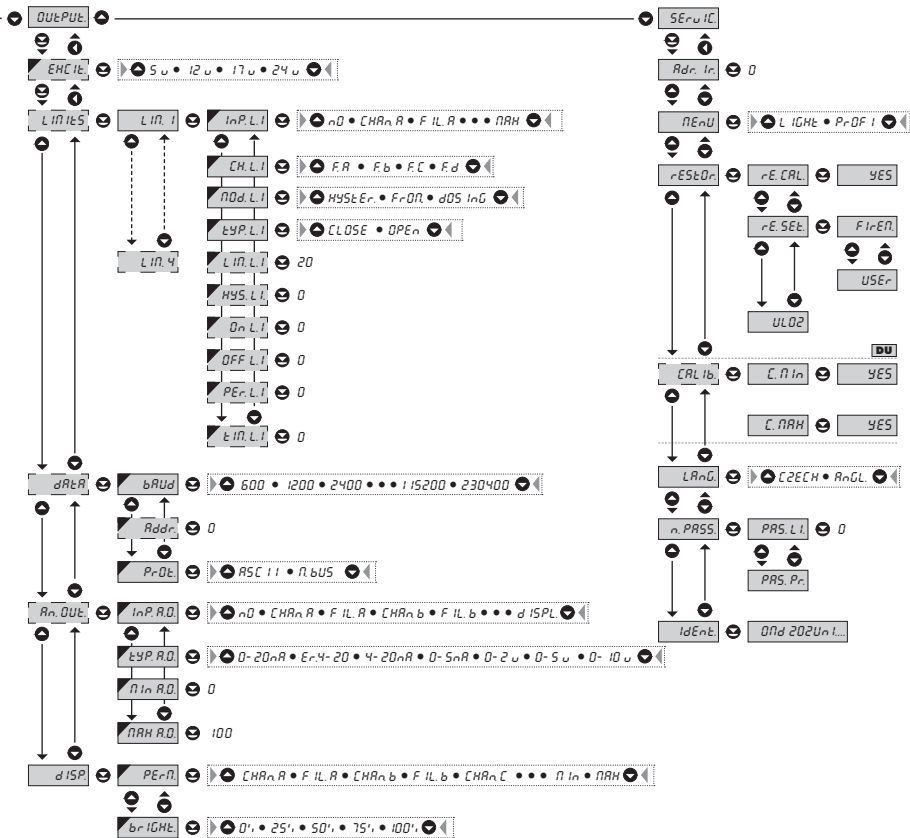

**!**  
Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

# SETTING **PROFI**

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

### 6.0 SETTING "PROFI"

#### **PROFI**

##### **Complete programming menu**

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

#### Switching over to "PROFI" menu

>3 s



- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item **SERVIC. > MENU**
- password protected access (unless set as follows under the item **SERVIC. > N. PASS. > PROFI =0**)




- access to menu selected under item **SERVIC. > MENU > LIGHT/PROFI**
- password protected access (unless set as follows under the item **SERVIC. > N. PASS. > LIGHT =0**)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used





## 6. SETTING PROFI


### 6.1 SETTING "PROFI" - INPUT

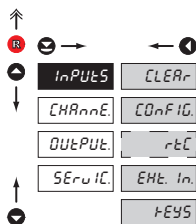

The primary instrument parameters are set in this menu

|                |   |
|----------------|---|
| <b>CLEAR</b>   | Resetting internal values                             |
| <b>CONFIG</b>  | Selection of measuring range and parameters           |
| <b>rtc</b>     | Setting date and time for option RTC                  |
| <b>EXT. In</b> | Setting external inputs functions                     |
| <b>F.EYS</b>   | Assigning further functions to keys on the instrument |

### 6.1.1 RESETTING INTERNAL VALUES

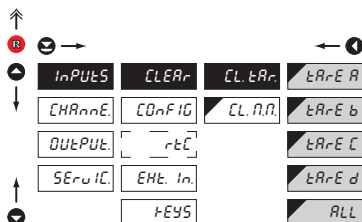

| <b>CLEAR</b>   | Resetting internal values              |
|----------------|--|
| <b>tArE A</b>  | Tare resetting - Channel A             |
| <b>tArE b</b>  | Tare resetting - Channel B             |
| <b>tArE c</b>  | Tare resetting - Channel C             |
| <b>tArE d</b>  | Tare resetting - Channel D             |
| <b>ALL</b>     | Tare resetting - Channel A, B, C and D |
| <b>CL. n.n</b> | Resetting min/max value                |

- resetting memory for the storage of minimum and maximum value achieved during measurement

## 6.1.2a SELECTION OF MEASURING RATE

↑

⊖ →

← ⊕

↑

↓

↑

↓

**DEF**

**rERd.rS** Selection of measuring rate

- measuring rate very significantly affects the number of active inputs "INPUTS" and evaluation mode "IN.MOD." (the factual measuring rates are listed in chapter Technical data)

|      |                     |
|------|---------------------|
| 40.0 | 40,0 measurements/s |
| 20.0 | 20,0 measurements/s |
| 10.0 | 10,0 measurements/s |
| 5.0  | 5,0 measurements/s  |
| 2.0  | 2,0 measurements/s  |
| 1.0  | 1,0 measurements/s  |
| 0.5  | 0,5 measurements/s  |
| 0.2  | 0,2 measurements/s  |
| 0.1  | 0,1 measurements/s  |

## 6.1.2b SELECTION OF THE NUMBER OF ACTIVE INPUTS

↑

⊖ →

← ⊕

↑

↓

↑

↓

**DEF**


**InPUtS** Selection of the number of active inputs

- measuring rate depends on the number of active inputs (the factual measuring rates are listed in chapter Technical data)

|         |                           |
|---------|---------------------------|
| 1. InP. | Active input 1            |
| 2. InP. | Active inputs 1 and 2     |
| 3. InP. | Active inputs 1, 2 and 3  |
| 4. InP. | Active inputs 1, 2, 3 a 4 |

## 6. SETTING PROFI

### 6.1.2c SELECTION OF MEASURING MODE FOR MULTICHANNEL INSTRUMENT

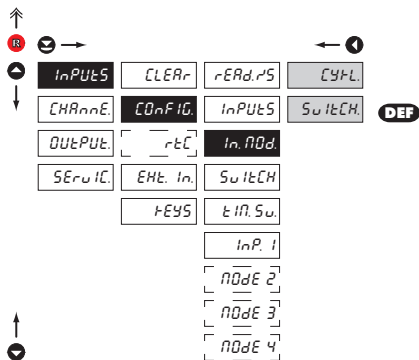

#### **In. MOD.** Selection of measuring mode in multichannel instrument


##### **CYCL.** Cyclic measuring on all channels

- instrument evaluates measured data simultaneously on all channels
- selection of cycle very significantly affects measuring rate and depends also on the number of active inputs (factual measuring rates are listed in the chapter Technical data)

##### **SWITCH.** Measuring on selected channel

- instrument evaluates measured data only on selected channel

### 6.1.2b SELECTION OF INPUTS SWITCHING

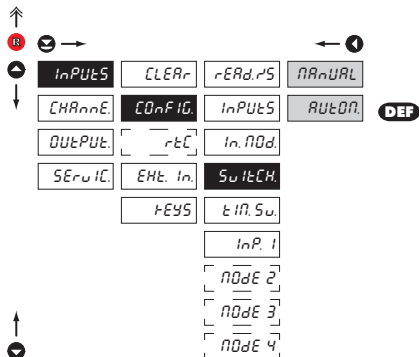

#### **SWITCH.** Selection of inputs switching


##### **MANUAL** Manual inputs switching

- inputs switching is controlled by selected key on the front panel or selected external input

##### **AUTON.** Automatic inputs switching


- inputs switching is automatic in a time period set in „TIM. SW.“

## 6.1.2e SETTING THE PERIOD FOR INPUTS SWITCHING

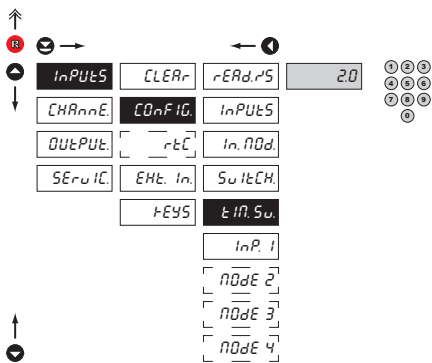**tIn. Sw.** Setting the period for inputs switching

- setting the time period for projection of channels in automatic mode ode of inputs switching „AUTOM.“
- range of the setting is 0,5...99,5 s (step 0,5 s)
- **DEF** TIM. SW. = 2,0 s

## 6.1.2f SELECTION OF „INSTRUMENT“ TYPE - CHANNEL 1

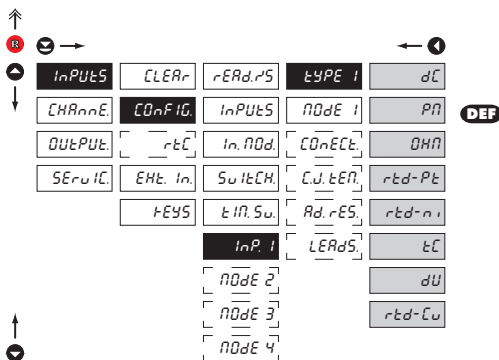**tYPE** Selection of „Instrument“ type - Channel 1

- selection of particular type of "instrument" is bound to relevant dynamic items

|        |                                   |
|--------|-----------------------------------|
| dC     | DC voltmeter                      |
| Pn     | Process monitor                   |
| OhM    | Ohmmeter                          |
| rtd-Pt | Thermometer for Pt xxx            |
| rtd-ni | Thermometer for Ni xxxx           |
| tC     | Thermometer for thermocouples     |
| dU     | Display for linear potentiometers |
| rtd-Cu | Thermometer for Cu xxx            |

## 6. SETTING PROFI

### 6.1.2g SELECTION OF MEASURING RANGE - CHANNEL 1

Navigation icons: **R** (Red), **⊖** (Down), **⊕** (Up), **↔** (Left/Right), **⬅** (Left), **➡** (Right)

**DC** ←

|          |          |                |               |                   |
|----------|----------|----------------|---------------|-------------------|
| INPUTS   | CLEAR    | READ.PS        | TYPE 1        | 60nV              |
| CHARACT. | CONFIG.  | INPUTS         | <b>NOdE 1</b> | 150nV             |
| OUTPUT   | r.t.C    | In.NOd         | CONFECT.      | 300nV             |
| SERUI.C. | EMT. In. | Subt.CH.       | C.U. t.EN.    | 1200nV            |
|          | t.EYS    | t.IN.Su.       | Ad.r.E5.      |                   |
|          |          | <b>In.P. 1</b> | LEAD5.        | 0-5nA             |
|          |          | NOdE 2         |               | 0-20nA            |
|          |          | NOdE 3         |               | 4-20nA <b>DEF</b> |
|          |          | NOdE 4         |               | 0-2u              |
|          |          |                |               | 0-5u              |
|          |          |                |               | 0-10u             |
|          |          |                |               | 0-40u             |
|          |          |                |               | Er.4-20           |

**PM**

|  |  |  |  |                   |
|--|--|--|--|-------------------|
|  |  |  |  | 0-5nA             |
|  |  |  |  | 0-20nA            |
|  |  |  |  | 4-20nA <b>DEF</b> |
|  |  |  |  | 0-2u              |
|  |  |  |  | 0-5u              |
|  |  |  |  | 0-10u             |
|  |  |  |  | 0-40u             |
|  |  |  |  | Er.4-20           |

**RTD-Pt** **DEF**

|        |                   |
|--------|-------------------|
| EU-100 | 428-50 <b>DEF</b> |
| EU-500 | 428-0.1           |
| EU-1k0 | 426-50            |
| US-100 | 426-0.1           |
| rU-50  |                   |
| rU-100 |                   |

**RTD-Cu** **DEF**

|         |            |
|---------|------------|
| 5.0-1k  | <b>DEF</b> |
| 6.2-1k  |            |
| 5.0-10k |            |
| 6.2-10k |            |

**RTD-Ni** **DEF**

|         |            |
|---------|------------|
| 5.0-1k  | <b>DEF</b> |
| 6.2-1k  |            |
| 5.0-10k |            |
| 6.2-10k |            |

**T/C**

|         |                     |
|---------|---------------------|
| t.r.C b | 5.0-10t             |
| t.r.C E | 6.2-10t             |
| t.r.C J |                     |
| t.r.C t | <b>OHM</b>          |
| t.r.C n | 1t <b>DEF</b>       |
| t.r.C r | 10t                 |
| t.r.C S | 100t                |
| t.r.C t |                     |
| t.r.C L | <b>DU</b>           |
|         | LIn.POt. <b>DEF</b> |

| NOdE 1 Selection of the instrument measuring range |  |
|--|--|
| <b>DC</b>  | Menu Measuring range   |
|  | 60 mV ±60 mV   |
|  | 150 mV ±150 mV   |
|  | 300 mV ±300 mV   |
| 1200mV ±1.2 V                                      |  |
| <b>PM</b>  | Menu Measuring range   |
|  | 0-5mA 0..5 mA  |
|  | 0-20mA 0..20 mA  |
|  | 4-20mA 4..20 mA  |
|  | 0-2 V ±2 V   |
|  | 0-5 V ±5 V   |
|  | 0-10 V ±10 V   |
| 0-40 V ±40 V                                       |  |
| Er.4-20  | 4..20 mA, with error statement of „underflow“ upon signal smaller than 3.36 mA |
| <b>OHM</b>   | Menu Measuring range   |
|  | 100 R 0..100 Ω   |
|  | 1 k 0..1 kΩ  |
|  | 10 k 0..10 kΩ  |
|  | 100 k 0..100 kΩ  |
| <b>RTD-PT</b>                                      | Menu Measuring range   |
|  | EU-100 Pt 100 (3 850 ppm/°C)   |
|  | EU-500 Pt 500 (3 850 ppm/°C)   |
|  | EU-1k0 Pt 1000 (3 850 ppm/°C)  |
|  | US-100 Pt 100 (3 920 ppm/°C)   |
|  | RU-50 Pt 50 (3 910 ppm/°C)   |
| RU-100 Pt 100 (3 910 ppm/°C)                       |  |
| <b>RTD-NI</b>                                      | Menu Measuring range   |
|  | 5.0-1k Ni 1 000 (5 000 ppm/°C)   |
|  | 6.2-1k Ni 1 000 (6 180 ppm/°C)   |
|  | 5.0-10k Ni 10 000 (5 000 ppm/°C)   |
| 6.2-10k Ni 10 000 (6 180 ppm/°C)                   |  |
| <b>RTD-CU</b>                                      | Menu Measuring range   |
|  | 428-50 Cu 50 (4 280 ppm/°C)  |
|  | 428-0.1 Cu 1 00 (4 280 ppm/°C)   |
|  | 426-50 Cu 50 (4 260 ppm/°C)  |
| 426-0.1 Cu 100 (4 260 ppm/°C)                      |  |
| <b>T/C</b>   | Menu Type of thermocouple  |
|  | T/C B B  |
|  | T/C E E  |
|  | T/C J J  |
|  | T/C K K  |
|  | T/C N N  |
|  | T/C R R  |
|  | T/C S S  |
|  | T/C T T  |
| T/C L L  |  |

## 6.1.2h SELECTION OF THE TYPE OF SENSOR CONNECTION - CHANNEL 1

RTD OHM T/C

↑

⊖

⊕

|          |          |          |           |         |     |
|----------|----------|----------|-----------|---------|-----|
| INPUTS   | CLEAR    | READ.PS  | TYPE 1    | 2-w IrE | DEF |
| CHARACT. | CONF IG. | INPUTS   | MODE 1    | 3-w IrE |     |
| OUTPUTS  | rEt      | In. MOD  | CONF Ect. | 4-w IrE |     |
| SERVICES | EMt. In. | SUBTECH. | Ad. RES.  |         |     |
|          | FYS      | tim. Su. | LEADS.    |         |     |
|          |          | InP. 1   |           |         |     |
|          |          | MODE 2   |           |         |     |
|          |          | MODE 3   |           |         |     |
|          |          | MODE 4   |           |         |     |

↓

↑

⊖

⊕

|          |          |          |             |          |     |
|----------|----------|----------|-------------|----------|-----|
| INPUTS   | CLEAR    | READ.PS  | TYPE 1      | InE. 1tE | DEF |
| CHARACT. | CONF IG. | INPUTS   | MODE 1      | InE. 2tE |     |
| OUTPUTS  | rEt      | In. MOD  | CONF Ect.   | EMt. 1tE |     |
| SERVICES | EMt. In. | SUBTECH. | C.J. t. EN. | EMt. 2tE |     |
|          | FYS      | tim. Su. |             |          |     |
|          |          | InP. 1   |             |          |     |
|          |          | MODE 2   |             |          |     |
|          |          | MODE 3   |             |          |     |
|          |          | MODE 4   |             |          |     |

↓

CONF Ect. Selection of the type of sensor connection

RTDOHM

2-w IrE 2-wire connection

3-w IrE 3-wire connection

4-w IrE 4-wire connection

T/C

InE. 1tE Measurement without reference thermocouple

- measuring cold junction at instrument brackets

InE. 2tE Measurement with reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

EMt. 1tE Measurement without reference thermocouple

- the entire measuring set is working under invaried and constant temperature

EMt. 2tE Measurement with reference thermocouple

- when using compensation box

!

Method and procedure of setting the cold junctions is described in separate chapter on page 98


!

For thermocouple type "B" the items CONECT. and C.J. TEM. are not available

## 6. SETTING PROFI

6.1.2i SETTING TEMPERATURE OF COLD JUNCTION - CHANNEL 1

T/C

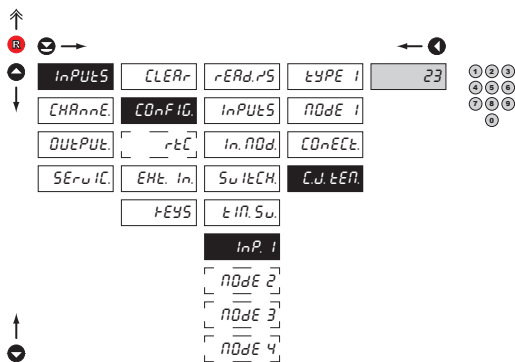


**C.J.tEN.** Setting temperature of cold junction

- range 0...99°C with compensation box

- **DEF** = 23°C

6.1.2j OFFSET OF THE BEGINNING OF THE MEASURING RANGE - CHANNEL 1

RTD OHM

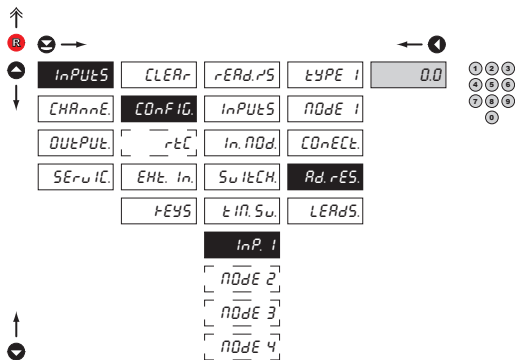

**Ad.rES.** Offset of the beginning of the measuring range

- in TIMEs when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head


- entered directly in Ohm (0...9999)

- **DEF** = 0



## 6.1.2k COMPENSATION OF 2-WIRE CONDUCT - CHANNEL 1


RTD OHM

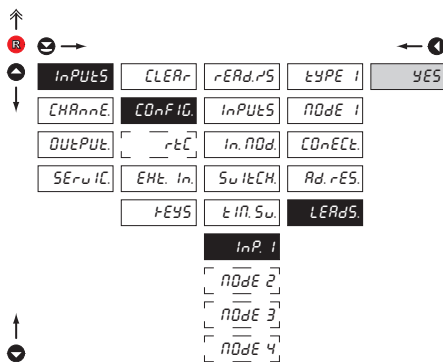

## LEAdS Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in TIME of 2-wire connection
- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- **DEF** = 0

## 6.1.2k SELECTION OF MEASURING RANGE - CHANNEL 2

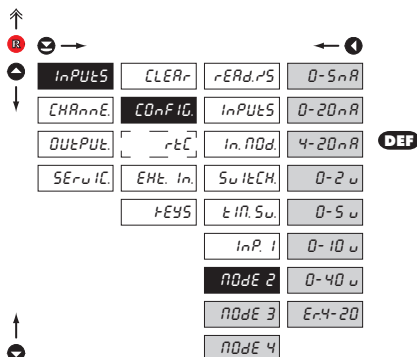

## NOdE 2 Selection of measuring range - Channel 2


| MODE 2 | Menu   | Měřicí rozsah   |
|--------|--------|---|
|        |        | 0-5mA   |
|        | 0-20mA | 0...20 mA   |
|        | 4-20mA | 4...20 mA   |
|        | 0-2 V  | ±2 V  |
|        | 0-5 V  | ±5 V  |
|        | 0-10 V | ±10 V   |
|        | 0-40 V | ±40 V   |
|        | Er4-20 | 4...20 mA, with error statement of „underflow“ upon signal smaller than 3,36 mA |

\*

Setting procedure is identical for MODE 3 and MODE 4

## 6. SETTING PROFI

### 6.1.3 SETTING THE REAL TIME CLOCK

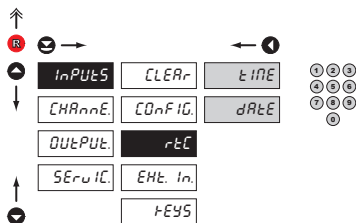


**rtc** Setting the real time clock (RTC)

**tIME** Time setting  
- format 23.59.59

**dATE** Date setting  
- format DD.MM.RR

### 6.1.4a EXTERNAL INPUT FUNCTION SELECTION

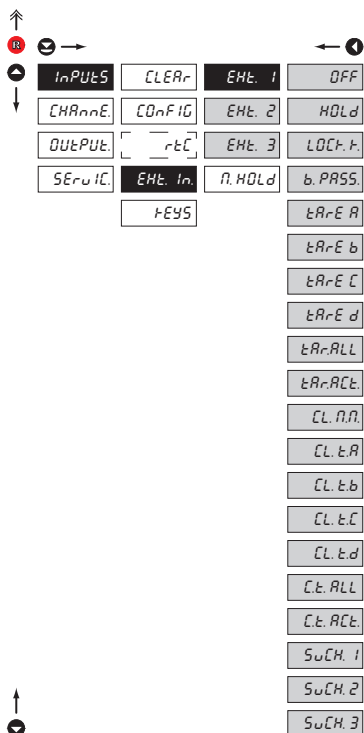

**EHE In** External input function selection

**OFF** Input is off

**HOLD** Activation of HOLD

**LOCK** Locking keys on the instrument

**b.PASS** Activation of locking access into programming menu

**LIGHT/PROFI**

**tArE -** Tare activation  
- Tare A, B, C, D, All, Active (ACT)

**CL.n.n** Resetting min/max value

**CL.t-** Tare resetting  
- Tare A, B, C, D, All, Active (ACT)

**SuCH 1** Successive switching of channel projection

**SuCH 2** BCD switching of channel projection - EXT. 1 and 2  
- for operation see the table  
- following this choice the setting for EXT. 2 is automatically restricted

**SuCH 3** BCD switching of channel projection - EXT. 1, 2 and 3  
- for operation see the table  
- following this choice the setting for EXT. 2 and EXT. 3 is automatically restricted

Table with operation of external inputs


| Channel | Ext 1 | Ext 2 | Ext 3 |
|---------|-------|-------|-------|
| FIL. A  | 0     | 0     |       |
| FIL. B  | 0     | 1     |       |
| FIL. C  | 1     | 0     |       |
| FIL. D  | 1     | 1     |       |
| MF      | 0     | 0     | 1     |
| Min     | 0     | 1     | 1     |
| Max     | 1     | 0     | 1     |
| Max     | 1     | 1     | 1     |

- **DEF** EXT. 1 > HOLD
- **DEF** EXT. 2 > LOCK K.
- **DEF** EXT. 3 > SWCH.1

\*

Setting procedure is identical for EXT. 2 and EXT. 3

## 6.1.4b SELECTION OF FUNCTION "HOLD"

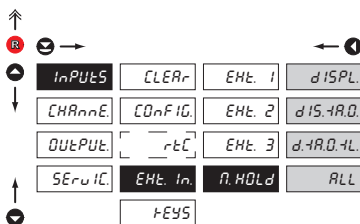

## n. HOld Selection of function "HOLD"

dISPL. "HOLD" locks only the value displayed

dIS. ARD. "HOLD" locks the value displayed and on Analogue output


d. ARD. TL. "HOLD" locks the value displayed, on Analogue output and limit evaluation

ALL "HOLD" locks the entire instrument

## 6. SETTING PROFI

6.1.5a

OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS

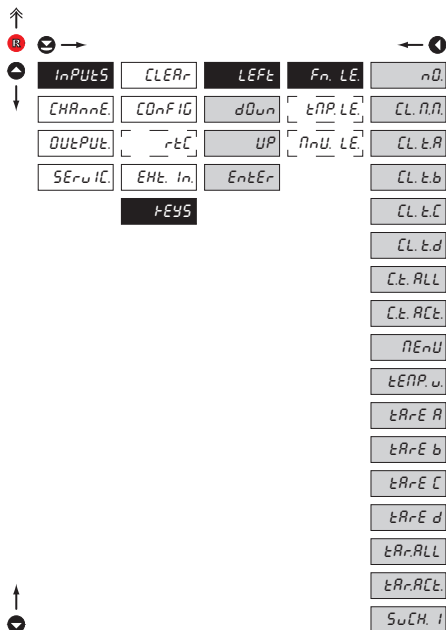

### FN LE Assigning further functions to instrument keys

- „FN. LE.“ > executive functions

**RD** Key has no further function

**CL.AA** Resetting min/max value

**CL.t.-** Tare resetting

- Tare A, B, C, D, All, Active (ACT)

**MENU** Direct access into menu on selected item

- after confirmation of this selection the "MNU.LE." item is displayed on superior menu level, where required selection is performed

**TEMP.u** Temporary projection of selected values

- after confirmation of this selection the item "TMP.LE." is displayed on superior menu level, where required selection is performed

**TRrE** Tare function activation

- Tare A, B, C, D, All, Active (ACT)

**SUCH. I** Successive switching of channel projection




Setting is identical for LEFT, DOWN, UP and ENTER



Actual channel is the one, that is projected on the display long term

## 6.1.5b OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - TEMPORARY PROJECTION

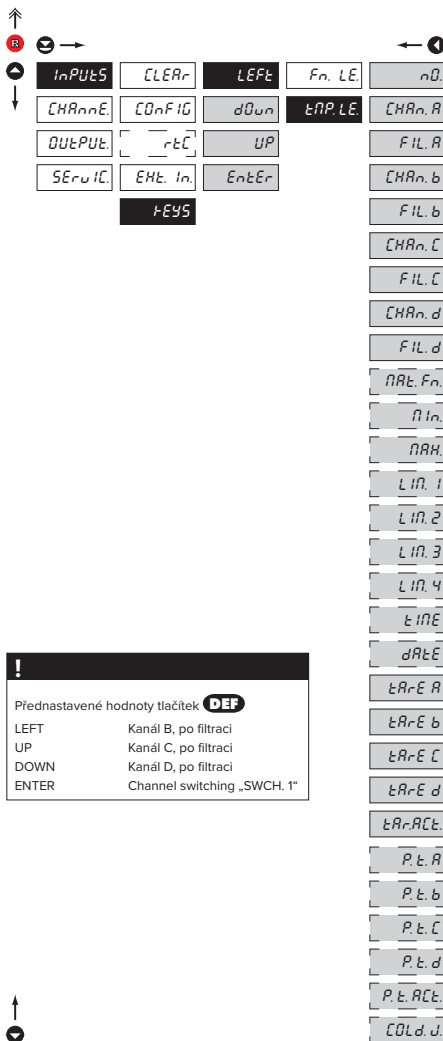**TEMP. LE** Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **Ⓡ** + "Selected key", this holds until the stroke of any key

|                                  |  |
|----------------------------------|--|
| nD                               | Temporary projection is off  |
| CHANn. -                         | Temporary projection of "Channels A, B, C or D"                                  |
| FIL. -                           | Temporary projection of "Channels A, B, C or D" after processing digital filters |
| MAT. Fn.                         | Temporary projection of "Mathematic functions" value                             |
| Min.                             | Temporary projection of "Min. value"   |
| MAX.                             | Temporary projection of "Max. value"   |
| Lim. 1                           | Temporary projection of "Limita 1" value   |
| Lim. 2                           | Temporary projection of "Limita 2" value   |
| Lim. 3                           | Temporary projection of "Limita 3" value   |
| Lim. 4                           | Temporary projection of "Limita 4" value   |
| TIME                             | Temporary projection of "TIME" value   |
| DATE                             | Temporary projection of "DATE" value   |
| TARE -                           | Temporary projection of "TARE" value   |
| P. A, B, C, D, All, Active (ACT) | Dočasné zobrazení hodnoty "P. TARA" value  |
| P. A, B, C, D, All, Active (ACT) | Temporary projection of "CJC" value  |


**!**

Setting is identical for LEFT, DOWN, UP and ENTER

## 6. SETTING PROFIL

6.1.5c

OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - DIRECT ACCESS TO ITEM

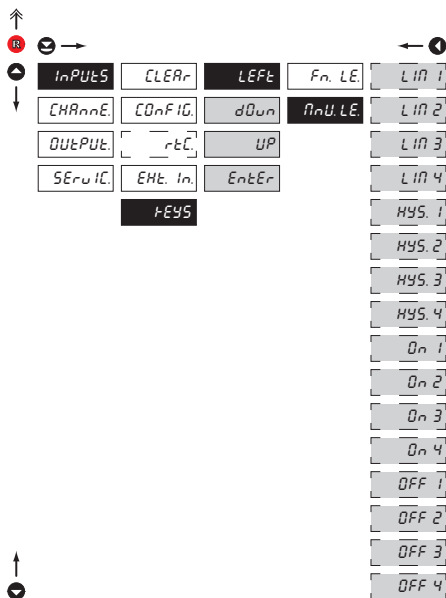

### MNU, LE

Assigning access to selected menu item

- „MNU, LE“ > direct access into menu on selected item

LIN 1 Direct access to item "LIM. L.1"

LIN 2 Direct access to item "LIM. L.2"

LIN 3 Direct access to item "LIM. L.3"

LIN 4 Direct access to item "LIM. L.4"

HYS, 1 Direct access to item "HYS. L.1"

HYS, 2 Direct access to item "HYS. L.2"

HYS, 3 Direct access to item "HYS. L.3"

HYS, 4 Direct access to item "HYS. L.4"

On 1 Direct access to item "ON L.1"

On 2 Direct access to item "ON L.2"

On 3 Direct access to item "ON L.3"

On 4 Direct access to item "ON L.4"

OFF 1 Direct access to item "OFF L.1"

OFF 2 Direct access to item "OFF L.2"

OFF 3 Direct access to item "OFF L.3"

OFF 4 Direct access to item "OFF L.4"




Setting is identical for LEFT, DOWN, UP and ENTER



## SETTING **PROFI** 6.

## 6. SETTING PROFI

### 6.2 SETTING "PROFI" - CHANNELS

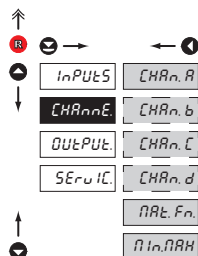


The primary instrument parameters are set in this menu

|         |  |
|---------|--|
| CHAN.A  | Setting parameters of measuring "Channel A"  |
| CHAN.B  | Setting parameters of measuring "Channel B"  |
| CHAN.C  | Setting parameters of measuring "Channel C"  |
| CHAN.D  | Setting parameters of measuring "Channel D"  |
| NRt.Fn  | Nastavení parametrů matematických funkcí     |
| NIn.NRH | Volba vstupu pro vyhodnocení Min/max hodnoty |

### 6.2.1a DISPLAY PROJECTION

**DC PM DU OHM**

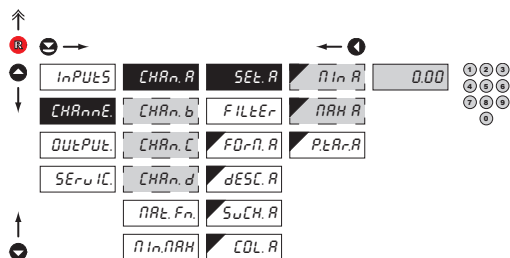

**SEt.A** Setting display projection


**NIn.A** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- **DEF** = 0

**NRH.A** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- **DEF** = 100.00

### 6.2.1b SETTING FIXED TARE


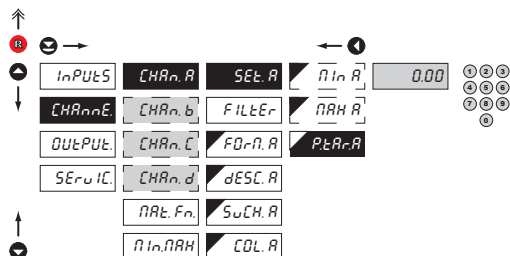


**P.TAR.A** Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. TAR. A=0) is in effect, display does not show the "T" symbol
- range of the setting is: -99999...999999
- **DEF** = 0.00



6.2.1c DIGITAL FILTERS

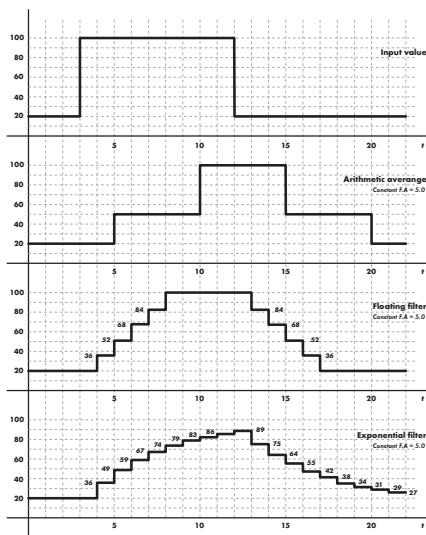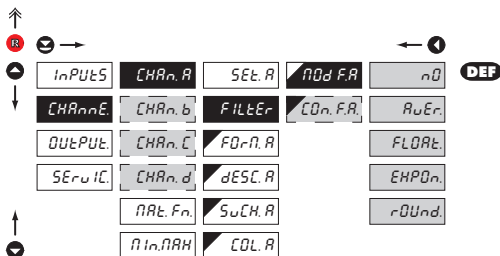

**NOd.F.A** Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

**nD** Filters are off

**RuEr** Measured data average

- arithmetic average from given number („CON.F.A.“) of measured values  
- range 2...100

**FLOrE** Selection of floating filter

- floating arithmetic average from given number („CON.F.A.“) of measured data and updates with each measured value  
- range 2...30

**EHPOn** Selection of exponential filter

- integration filter of first prvnho grade with time constant („CON.F.A.“) measurement  
- range 2...100

**rOUnd** Measured value rounding

- is entered by any number, which determines the projection step (e.g: „CON.F.A.“=2,5 > display 0, 2,5, 5,...)

**COn.F.A** Setting constants


- this menu item is always displayed after selection of particular type of filter

- **DEF** = 2

**!**  
Setting is identical for “Channel B, C and D”

## 6. SETTING PROFI

### 6.2.1d PROJECTION FORMAT - POSITIONING OF DECIMAL POINT

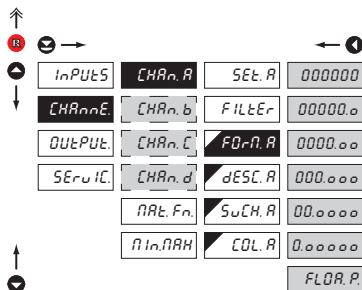

**!**  
Setting is identical for "Channel B, C and D"

#### **F0rA.A** Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA. P“

000000 Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

- **DEF** > **RTD** **T/C**

0000.00 Setting DP - XXXX.xx

- **DEF** > **DC** **PM** **DU** **OHM**


000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOr.P Floating DP

### 6.2.1e PROJECTION OF DESCRIPTION - THE MEASURING UNITS

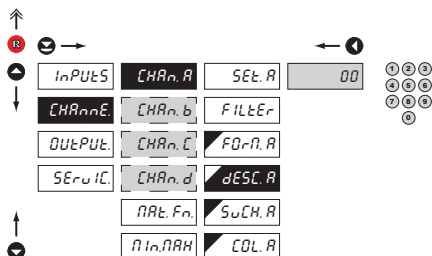

#### **dESC.A** Setting projection of descript. for "Channel A"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description

- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95

- description is cancelled by code 00


- **RTD** **T/C** **DEF** = °C

- **DC** **PM** **DU** **OHM** **DEF** = none

**!**  
Table of signs on page 102

**!**  
Setting is identical for "Channel B, C and D"

## 6.2.1f SELECTION OF CHANNEL PROJECTION UPON SWITCHING

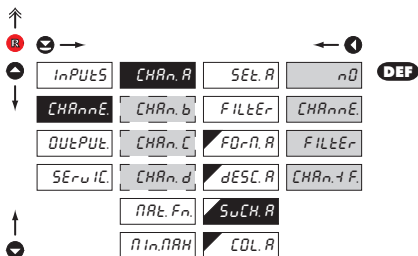**SWCH.A** Selection of channel projection upon switching

- setting in this item enables the user to select individual measuring channels which will be displayed upon switching the channel functions „SWCH. A“

nD Projection restricted

CHAnnE "Channel A" will be displayed

FILtEr "Channel A" after modification by digital filter

CHAn.1F Will be displayed "Channel A" and subsequently also "Channel A" after modification by digital filter A

Setting is identical for "Channel B, C and D"

## 6.2.1g SELECTION OF DISPLAY COLOR

**COL.A** Selection of display color

- color selection is controlled through setting under items „LIM. 1 A“ and „LIM. 2 A“

rEd Red color

GrEEn Green color

OrAnGE Orange color

- „COL. 0 A“ **DEF** = Green


- „COL. 1 A“ **DEF** = Orange

- „COL. 2 A“ **DEF** = Red

Setting is identical for "Channel B, C and D"

## 6. SETTING PROFI

### 6.2.1h SELECTION OF DISPLAY COLOR CHANGE

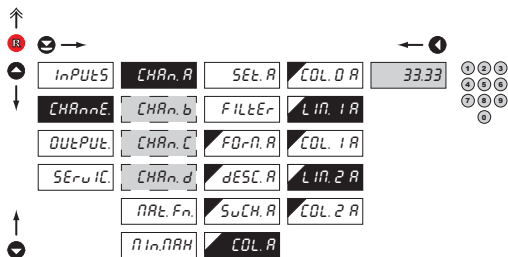

#### LIM. - A Selection of display color change

- under items "LIM.1 A" and "LIM.2 A" is set the limit when display color shall change


- „LIM. 1 A“ **DEF** = 33.33

- „LIM. 2 A“ **DEF** = 66.67



Setting is identical for "Channel B, C and D"

### 6.2.2a SELECTION OF INPUT FOR CALCULATION OF MATHEMATIC FUNCTION

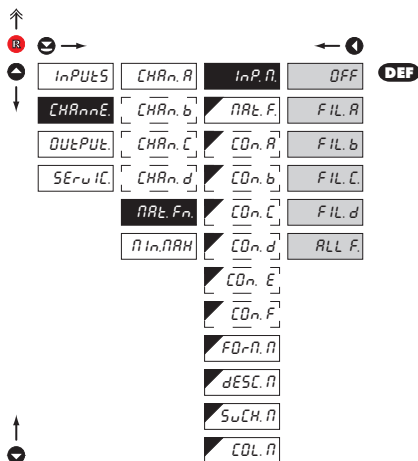

#### InP. A Selection of input for calculation of mathematic function

- selection of value from which the mathematic function will be calculated

OFF

Mathematic functions are off

FIL. A

From "Channel A" after modification by digital filter

FIL. b

From "Channel B" after modification by digital filter

FIL. C


From "Channel C" after modification by digital filter

FIL. d

From "Channel D" after modification by digital filter

6.2.2b

MATHEMATIC FUNCTIONS

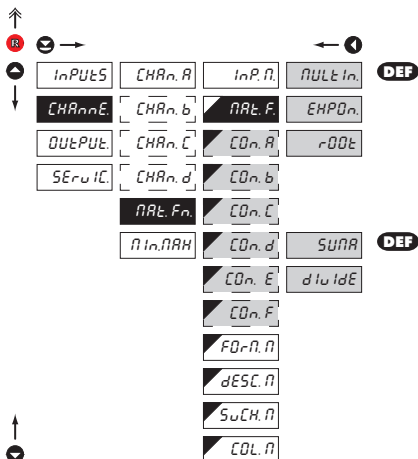**nARt.F.**

Selection of mathematic functions

On selecting „FIL.-“ in item „INP.M.“

**nULt In.**

Polynome

$$Ax^3 \square Bx^2 \square Cx^3 \square Dx^2 \square Ex \square F$$

**EHPDn.**

Exponential

$$A \square e^{\frac{Bx-C}{Dx+E}} \square F$$

**rDDE.**

Root

$$A \square \sqrt{\frac{Bx+C}{Dx+E}} \square F$$

On selecting „ALL F.“ in item „INP.M.“

**SUM.**

Sum of the values from channels (inputs)

$$(A \times KA + C \times KC) / (B \times KB + D \times KD) \times E + F$$

**dIuIdE.**

Quotient of values from channels (inputs)

$$(A \times KA + C \times KC) / (B \times KB + D \times KD) \times E + F$$

**CO.n.-**

Setting constants for calculation of matfunctions

- this menu is displayed only after selection of given mathematic function

## 6. SETTING PROFI

### 6.2.2c MATHEMATIC FUNCTIONS - DECIMAL POINT

Navigation icons: ↑, ↓, ←, →, R, M, L, K

|         |         |         |            |
|---------|---------|---------|------------|
| INPUTS  | CHAR.a  | InP.N   | 000000     |
| CHAR.nE | CHAR.b  | NRt.F   | 00000.0    |
| OUTPUT  | CHAR.c  | CO.n.R  | 0000.00    |
| SERuIC  | CHAR.d  | CO.n.b  | 000.000    |
|         | NRt.Fn  | CO.n.c  | 00.0000    |
|         | nIn.NRH | CO.n.d  | 0.00000    |
|         |         | CO.n.E  | FLOr.P DEF |
|         |         | CO.n.F  |            |
|         |         | FOr.N.N |            |
|         |         | dESC.N  |            |
|         |         | PrEP.N  |            |
|         |         | COL.N   |            |

#### FOr.N.N. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOr.P.“

|         |                      |
|---------|----------------------|
| 000000  | Setting DP - XXXXXX. |
| 00000.0 | Setting DP - XXXXX.x |
| 0000.00 | Setting DP - XXXX.xx |
| 000.000 | Setting DP - XXX.xxx |
| 00.0000 | Setting DP - XX.xxxx |
| 0.00000 | Setting DP - X.xxxxx |
| FLOr.P. | Floating DP          |

- DEF

### 6.2.2d MATHEMATIC FUNCTIONS - MEASURING UNITS

Navigation icons: ↑, ↓, ←, →, R, M, L, K

|         |         |         |    |            |
|---------|---------|---------|----|------------|
| INPUTS  | CHAR.a  | InP.N   | 00 | ①②③④⑤⑥⑦⑧⑨⑩ |
| CHAR.nE | CHAR.b  | NRt.F   |    |            |
| OUTPUT  | CHAR.c  | CO.n.R  |    |            |
| SERuIC  | CHAR.d  | CO.n.b  |    |            |
|         | NRt.Fn  | CO.n.c  |    |            |
|         | nIn.NRH | CO.n.d  |    |            |
|         |         | CO.n.E  |    |            |
|         |         | CO.n.F  |    |            |
|         |         | FOr.N.N |    |            |
|         |         | dESC.N  |    |            |
|         |         | SuCH.N  |    |            |
|         |         | COL.N   |    |            |


#### dESC.N. Setting projection of description for "MAT.FN"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00

- DEF = no description

! Table of signs on page 102

## 6.2.2e MATHEMATIC FUNCTIONS - SELECTION OF CHANNEL PROJECTION UPON SWITCHING

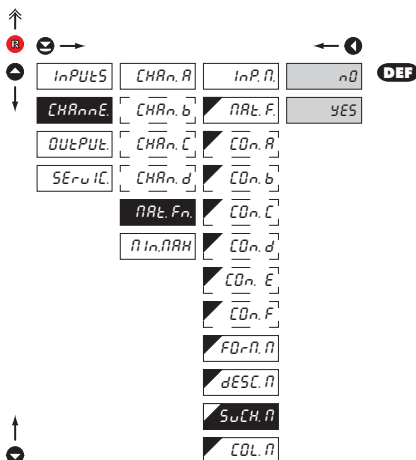
**SWCH.n** Selection of channel projection upon switching

- setting in this item enables the user to select individual measuring channels which will be displayed upon switching the channel functions „SWCH.M“

n0 Projection restricted

YES Projection permitted

## 6.2.2f MATHEMATIC FUNCTIONS - SELECTION OF DISPLAY COLOR

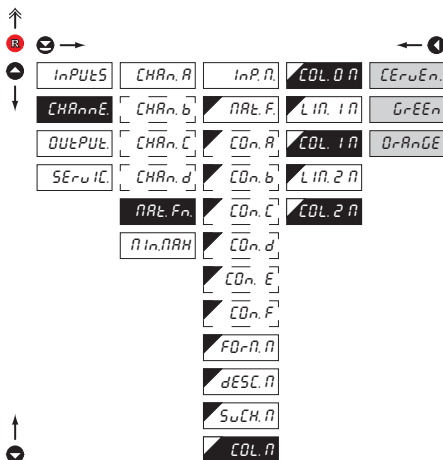**COL.n** Selection of display color

- color selection is controlled through setting under items „LiM. 1 M“ and „LiM. 2 M“

rEd Red color

GrEE.n Green color

OrARnGE Orange color

- „COL. 0 M“ DEF = Green


- „COL. 1 M“ DEF = Orange

- „COL. 2 M“ DEF = Red

## 6. SETTING PROFI

6.2.2g

MATHEMATIC FUNCTIONS - SELECTION OF DISPLAY COLOR CHANGE

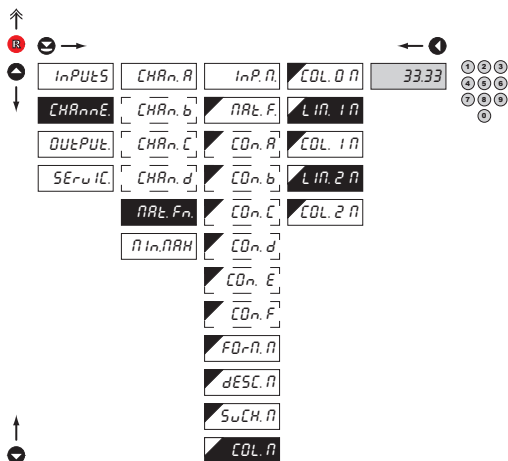

### LIM. - n Selection of display color change

- under items „LIM. 1 M“ and „LIM. 2 M“ is set the limit when display color shall change

- „LIM. 1 M“ **DEF** = 33.33


- „LIM. 2 M“ **DEF** = 66.67





## 6. SETTING PROFI


### 6.3 SETTING „PROFI“ - OUTPUTS

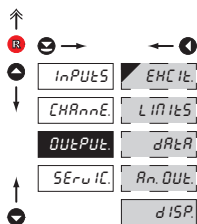

In this menu it is possible to set parameters of the instrument output signals

- EHClk** Volba výstupního napětí pomocného zdroje
- LIMITS** Setting type and parameters of limits
- dAR** Setting type and parameters of data output
- An. OUT.** Setting type and parameters of analog output
- dISP.** Setting display projection and brightness


### 6.3.1 SELECTION OF SENSOR EXCITATION VOLTAGE

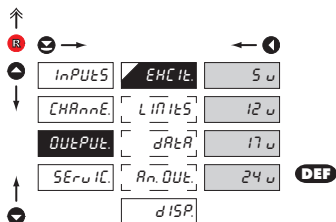

**EHClk** Selection of sensor excitation voltage (aux. power supply)

- 5 u** 5 VDC, max. 2.5 W
- 12 u** 12 VDC, max. 2.5 W
- 17 u** 17 VDC, max. 2.5 W
- 24 u** 24 VDC, max. 2.5 W

## 6.3.2a SELECTION OF INPUT FOR LIMITS EVALUATION

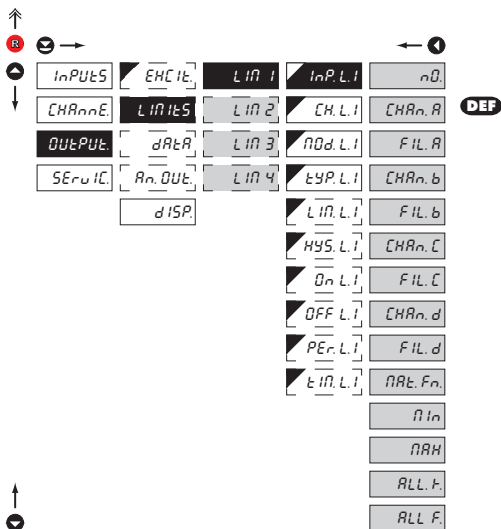**InP.L.1** Selection evaluation of limits

- selection of value from which the limit will be evaluated


- nD Limit evaluation is off
- CHANn.A Limit evaluation from "Channel A"
- FIL.A Limit evaluation from "Channel A" after digital filters processing
- CHANn.b Limit evaluation from "Channel B"
- FIL.b Limit evaluation from "Channel B" after digital filters processing
- CHANn.C Limit evaluation from "Channel C"
- FIL.C Limit evaluation from "Channel C" after digital filters processing
- CHANn.d Limit evaluation from "Channel D"
- FIL.d Limit evaluation from "Channel D" after digital filters processing
- MAE.Fn Limit evaluation from "Mathematic functions"
- nIn Limit evaluation from "Min.value"
- MAH Limit evaluation from "Max.value"
- ALL.F From "Channel A, B, C and D"
- ALL.F From "Channel A, B, C and D" after digital filters processing

**!**  
Setting is identical for LIM 2, LIM 3 and LIM 4


# 6. SETTING PROFI

MODE > HYSTER • FROM - TO • DOSING

DESCRIPTION OF RELAY FUNCTION

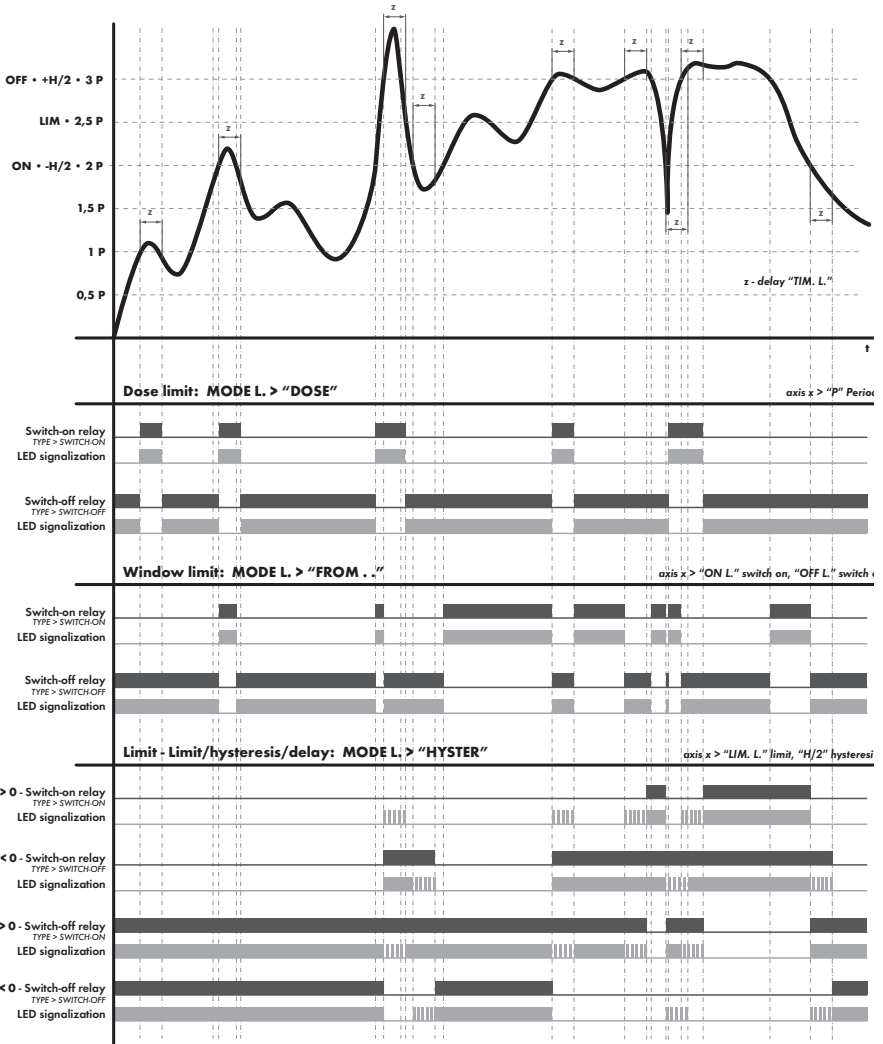

## 6.3.2b SELECTION OF MORE CHANNELS FOR LIMIT EVALUATION

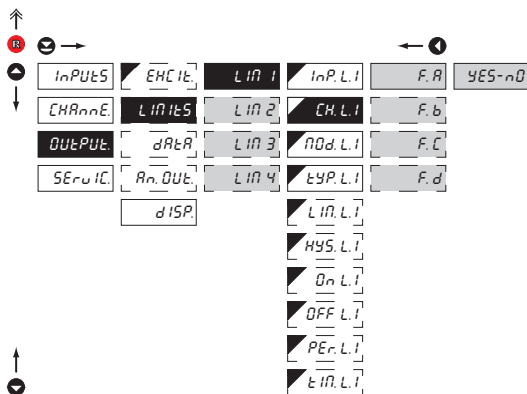
**CH.L.1** Selection of channels for limit evaluation

- the item is accessible only if items "ALL.CH" or "ALL.F." are set in *OUTPUT/LIMITS/LIM 1/INP.L.1*, when "ALL.CH." is selected descriptions "CH.A...D" are displayed, when "ALL.F." descriptions "F.A...D"
- setting allows to assign arbitrary number of measuring channels to one limit for their evaluation
- the limit is active if at least one value in arbitrary channel exceeds set limit

- **DEF** = YES

Setting is identical for LIM 2, LIM 3 and LIM 4

## 6.3.2c VOLBA TYPU LIMIT

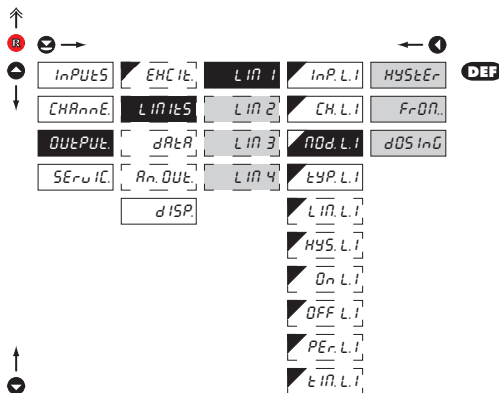**nDd.L.1** Selection of the type of limit

**HYS.tEr** Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "LIM.L." are set, at which the limit will shall react, "HYS.L." the hysteresis range around the limit (LIM  $\pm 1/2$  HYS) and time "TIM.L." determining the delay of relay switch-on

**FrOn.** Frame limit

- for this mode the parameters are set for interval "ON.L." the relay switch-on and "OFF.L." the relay switch-off

**dOS inG** Dose limit (periodic)

- for this mode the parameters are set for "PER.L." determining the limit value as well as its multiples at which the output is active and "TIM.L." indicating the time during which is the output active

Setting is identical for LIM 2, LIM 3 and LIM 4





6.3.3a SELECTION OF DATA OUTPUT BAUD RATE

**bAud** Selection of data output baud rate

|        |                     |
|--------|---------------------|
| 600    | Rate - 600 Baud     |
| 1200   | Rate - 1 200 Baud   |
| 2400   | Rate - 2 400 Baud   |
| 4800   | Rate - 4 800 Baud   |
| 9600   | Rate - 9 600 Baud   |
| 19200  | Rate - 19 200 Baud  |
| 38400  | Rate - 38 400 Baud  |
| 57600  | Rate - 57 600 Baud  |
| 115200 | Rate - 115 200 Baud |
| 230400 | Rate - 230 400 Baud |

6.3.3b SETTING INSTRUMENT ADDRESS

**Addr.** Setting instrument address

- setting in range 0...31
- **DEF** = 00


---

**Adr. P.b.** Setting instrument address - PROFIBUS

- setting in range 1..127
- **DEF** = 19

## 6. SETTING PROFI

### 6.3.3c SELECTION OF DATA OUTPUT PROTOCOL

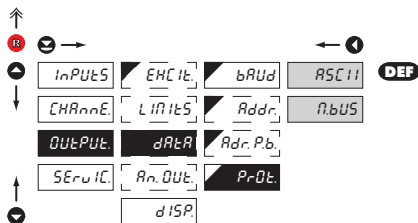


#### PrOEt. Selection of the type of analog output

ASC11 Data protocol ASCII

n.bUS Data protocol DIN MessBus

### 6.3.4a SELECTION OF INPUT FOR ANALOG OUTPUT

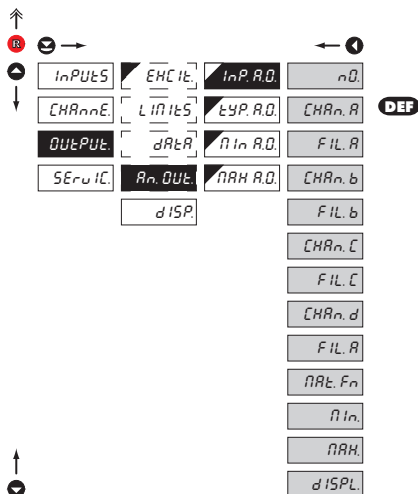

#### InP.A.D. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

nD AO evaluation is off

CHAn.A AO evaluation from "Channel A"

FiL.A AO evaluation from "Channel A" after digital filters processing

CHAn.b AO evaluation from "Channel B"

FiL.b AO evaluation from "Channel B" after digital filters processing

CHAn.C AO evaluation from "Channel C"

FiL.C AO evaluation from "Channel C" after digital filters processing

CHAn.d AO evaluation from "Channel D"

FiL.d AO evaluation from "Channel D" after digital filters processing

nRH.F.n AO evaluation from "Math.functions"

nIn AO evaluation from "Min.value"

nRH AO evaluation from "Max.value"

dISPL. From "Permanently projected display value"



6.3.4b SELECTION OF THE TYPE OF ANALOG OUTPUT

Navigation diagram for setting the analog output type. The menu structure is as follows:

- Top row: InPUtS, EHC It., InP.R.D., 0-20nA
- Second row: CHAnnE, LIttS, tYP.R.D., Er.4-t
- Third row: DUtPUt., dRtR, nIn.R.D., 4-20t
- Fourth row: SErVIC., An.DUt., nRH.R.D., Er.4-20
- Fifth row: dISP., 4-20nA
- Sixth row: 0-5nA
- Seventh row: 0-2u
- Eighth row: 0-5u
- Ninth row: 0-10u
- Tenth row: ±10u

The **tYP.R.D.** option is highlighted in the second row, third column. A **DEF** button is located to the right of the 4-20nA option.

**tYP. R.D.** Selection of the type of analog output

- 0-20nA** Type: 0...20 mA
- Er.4-t** Type: 4...20 mA, with broken loop detection and indication of error status (< 3,0 mA)
- 4-20t** Type: 4...20 mA, with broken loop detection (< 3,0 mA)
- Er.4-20** Type: 4...20 mA, with indic. of error statement (< 3,0 mA)
- 4-20nA** Type: 4...20 mA
- 0-5nA** Type: 0...5 mA
- 0-2u** Type: 0...2 V
- 0-5u** Type: 0...5 V
- 0-10u** Type: 0...10 V
- ±10u** Type: ±10 V

6.3.4c SETTING THE ANALOG OUTPUT RANGE

Navigation diagram for setting the analog output range. The menu structure is as follows:

- Top row: InPUtS, EHC It., InP.R.D., 0.0
- Second row: CHAnnE, LIttS, tYP.R.D.
- Third row: DUtPUt., dRtR, nIn.R.D.
- Fourth row: SErVIC., An.DUt., nRH.R.D.
- Fifth row: dISP.

The **An.DUt.** option is highlighted in the fourth row, second column. A numeric keypad (0-9) is shown to the right of the display.

**An. DUt.** Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

**nIn.R.D.** Assigning the display value to the beginning of the AO range


- range of the setting is -99999...999999
- **DEF** = 0

**nRH.R.D.** Assigning the display value to the end of the AO range

- range of the setting is -99999...999999
- **DEF** = 100

## 6. SETTING PROFI

### 6.3.5a SELECTION OF INPUT FOR DISPLAY PROJECTION

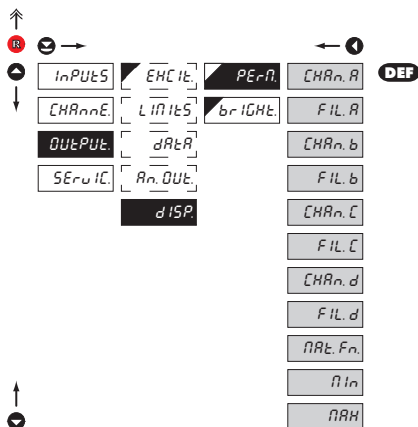


#### PERF. Selection display projection

- selection of value which will be shown on the instrument display

- CHAn. A** Projection of values from "Channel A"
- FiL. A** Projection of values from "Channel A" after digital filters processing
- CHAn. b** Projection of values from "Channel B"
- FiL. B** Projection of values from "Channel B" after digital filters processing
- CHAn. C** Projection of values from "Channel C"
- FiL. C** Projection of values from "Channel C" after digital filters processing
- CHAn. d** Projection of values from "Channel D"
- FiL. d** Projection of values from "Channel D" after digital filters processing
- nAt. Fn** Projection of values from "Math.functions"
- n In.** Projection of values from "Min.value"
- nRH** Projection of values from "Max.value"

### 6.3.5b SELECTION OF DISPLAY BRIGHTNESS

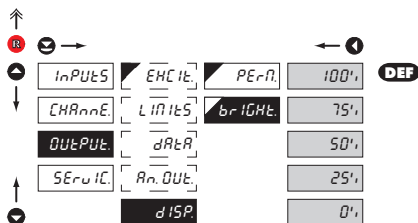

#### brIGHt Selection of display brightness


- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- 0%** Display is off
- after keystroke display turns on for 10 s
- 25%** Display brightness - 25%
- 50%** Display brightness - 50%
- 75%** Display brightness - 75%
- 100%** Display brightness - 100%



## 6. SETTING PROFI


### 6.4 SETTING "PROFI" - SERVICE

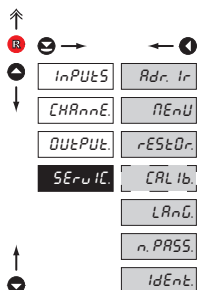

The instrument service functions are set in this menu

|                 |  |
|-----------------|--|
| <b>Adr. Ir.</b> | Nastavení adresy IR ovládání                           |
| <b>nEnU</b>     | Selection of menu type LIGHT/PROFI                     |
| <b>rEStOr.</b>  | Restore instrument manufacture setting and calibration |
| <b>CARL Ib</b>  | Input range calibration for „DU“ version               |
| <b>LAnG.</b>    | Language version of instrument menu                    |
| <b>n.PASS.</b>  | Setting new access password                            |
| <b>IdEnt.</b>   | Instrument identification                              |


#### 6.4.1 SETTING THE ADDRESS OF IR REMOTE CONTROL

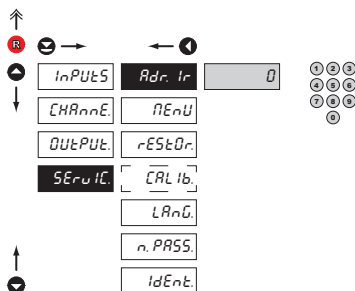

#### **Adr. Ir.** Setting the address of IR remote control

- setting the remote control address is inevitable only in case there are other large displays OMD 202 within the reach of IR remote control
- range of the setting is 0...99
- you can cancel the address by pressing the blue key on the remote control
- **DEF** = 0

## 6.4.2 RESTORATION OF MANUFACTURE SETTING

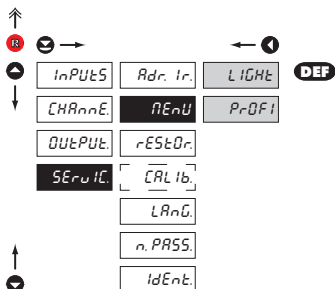**nEnU** Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills

**LIghT** Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another


**PrOFI** Active PROFI menu

- complete programming menu for expert users
- tree menu



Change of setting is valid upon next access into menu

## 6.4.3 RESTORATION OF MANUFACTURE SETTING

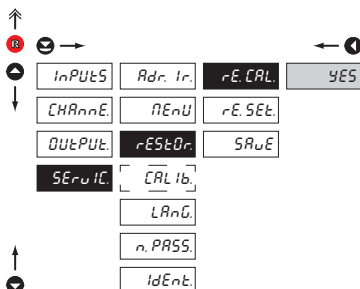
**rEStOr.** Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored

**rE.CAL.** Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm you selection „YES“

## 6. SETTING PROFI

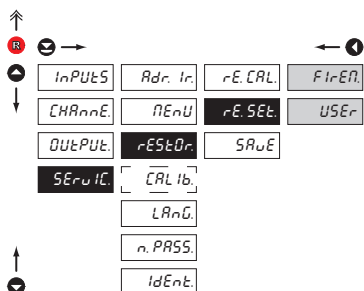

**rE.SET.** Restoration of instrument manufacture setting

**FlrEn.** Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

**USER** Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

**SAUE** Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed



After restoration the instrument switches off for couple seconds

### JOBS PERFORMED


### RESTORE

| JOBS PERFORMED                                    | RESTORE     |         |
|---|-------------|---------|
|   | CALIBRATION | SETTING |
| cancels USER menu rights                          | ✓           | ✓       |
| deletes table of items order in USER - LIGHT menu | ✓           | ✓       |
| adds items from manufacture to LIGHT menu         | ✓           | ✓       |
| deletes data stored in FLASH                      | ✓           | ✓       |
| cancels or linearization tables                   | ✓           | ✓       |
| clears tare                                       | ✓           | ✓       |
| restore manufacture calibration                   | ✓           | ✗       |
| restore manufacture setting                       | ✗           | ✓       |

### 6.4.4

### CALIBRATION - INPUT RANGE

**DU**

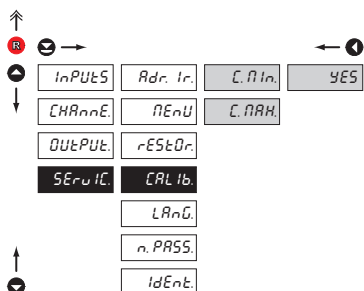


**CAL Ib.** Input range calibration

- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by „YES“

- when "C. MAX" is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by „YES“


## 6.4.5 SELECTION OF INSTRUMENT MENU LANGUAGE VERSION

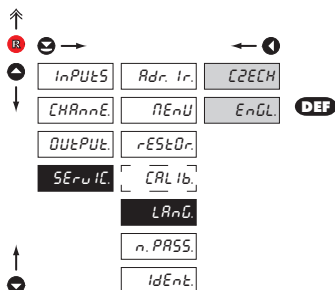**LANG.** Selection of instrument menu language version

CZECH Instrument menu is in Czech


EnGL. Instrument menu is in English

## 6.4.6 SETTING NEW ACCESS PASSWORD

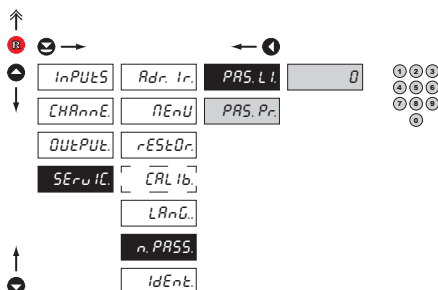**n.PASS.** Setting new password for access to LIGHT and PROFI menu

- This option allows to change the numeric code, which blocks the access into LIGHT and PROFI Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss: LIGHT Menu > „8177” PROFI Menu > „7915”

## 6.4.7 INSTRUMENT IDENTIFICATION

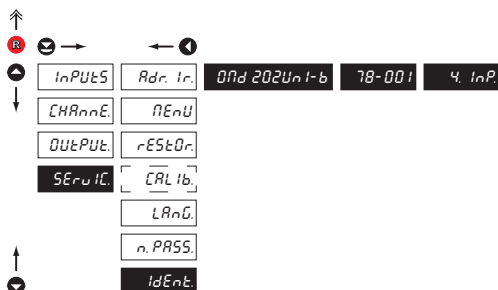**IdEnt.** Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

| IDENT. | Blok              | Description |
|--------|-------------------|-------------|
| 1.     | Instrument        |             |
| 2.     | no. of SW version |             |
| 3.     | type/input mode   |             |

# SETTING USER


For user operation

Menu items are set by the user (Profi/Light) as per request

 
Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

### 7.0 SETTING ITEMS INTO "USER" MENU

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L I
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure

#### Setting

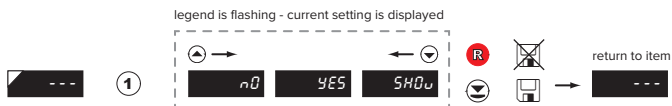

n0

item will not be displayed in USER menu

YES

item will be displayed in USER menu with the option of setting

SHOW

item will be solely displayed in USER menu






Setting items into „USER“ menu

When setting up the USER menu out of active LIGHT menu it is possible to rank the menu items (max. 10) in the order we want them to appear in the menu.



Example of setting up menu items into "USER" menu


As an example we are going to use a direct access into menu items Limit1 and Limit2 (the given example is for Light menu but can be applied also in Profi menu).

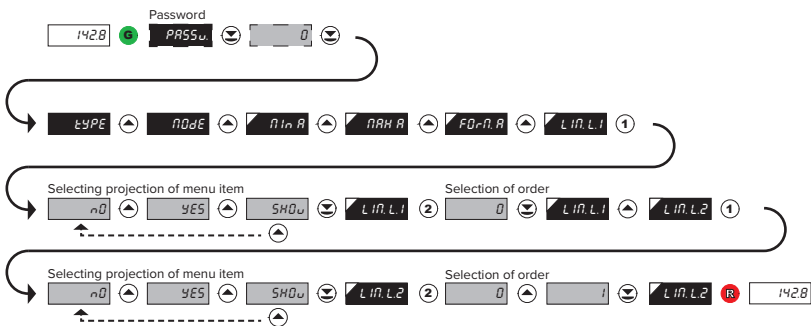

The resulting setting is as follows: After pressing button **R**, „LIM L.1“ is projected. By pressing **☺** you confirm this and you set the desired limit value, alternatively by pressing button **⬆** you can go over to setting of „LIM. L.2“ where you repeat the procedure. You can finish the setting up by pressing the **☺** button, by which you save the latest setting and by pressing the **R** you return to the operating mode.

## 8. METHOD OF MEASURING THE CJC

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

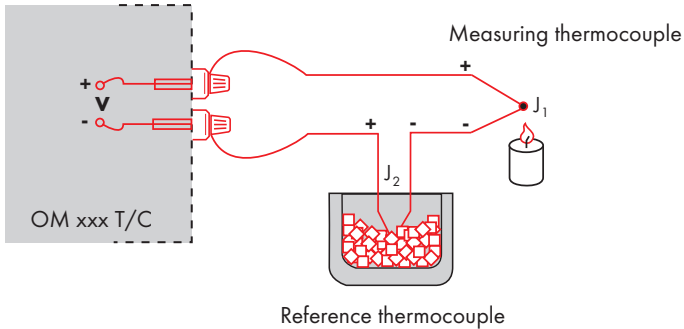

### WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set  $\text{C0nECC}$  in the instrument menu to  $\text{InE2tC}$  or  $\text{EHt2tC}$
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu  $\text{CJtEN}$ , its temperature (applies for setting  $\text{C0nECC}$  to  $\text{EHt2tC}$ )
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu  $\text{C0nECC}$  to  $\text{InE2tC}$ . Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

### WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set  $\text{C0nECC}$  in the instrument menu to  $\text{InEtEtC}$  or  $\text{EHtEtC}$
- when measuring temperature without reference thermocouple the error in measured data may be as much as  $10^{\circ}\text{C}$  (applies for setting  $\text{C0nECC}$  to  $\text{EHtEtC}$ )



The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

- ASCII: 8 bit, no parity, one stop bit
- DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

**DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE**

| EVENT                                    | TYPE                      | PROTOCOL | TRANSMITTED DATA                     |                                      |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|--|---------------------------|----------|--------------------------------------|--------------------------------------|-----|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|-------|-------|
| Data solicitation (PC)                   | 232                       | ASCII    | #                                    | A                                    | A   | <CR> |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  |                           | MessBus  | No - data is transmitted permanently |                                      |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  | 485                       | ASCII    | #                                    | A                                    | A   | <CR> |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  |                           | MessBus  | <SADR>                               | <ENQ>                                |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
| Data transmission (instrument)           | 232                       | ASCII    | >                                    | D                                    | (D) | (D)  | (D)  | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D)   | <CR>  |       |
|  |                           | MessBus  | <STX>                                | D                                    | (D) | (D)  | (D)  | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D)   | <ETX> | <BCC> |
|  | 485                       | ASCII    | >                                    | D                                    | (D) | (D)  | (D)  | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D)   | <CR>  |       |
|  |                           | MessBus  | <STX>                                | D                                    | (D) | (D)  | (D)  | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D)   | <ETX> | <BCC> |
| Confirmation of data acceptance (PC) OK  | 485                       | MessBus  | <DLE>                                | 1                                    |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
| Confirmation of data acceptance (PC) Bad |                           |          | <NAK>                                |                                      |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
| Sending address (PC) prior command       |                           |          | <EADR>                               | <ENQ>                                |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
| Confirmation of address (instrument)     |                           |          | <SADR>                               | <ENQ>                                |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
| Command transmission (PC)                | 232                       | ASCII    | #                                    | A                                    | A   | N    | P    | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D)   | <CR>  |       |
|  |                           | MessBus  | <STX>                                | \$                                   | N   | P    | (D)  | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | <ETX> | <BCC> |       |
|  | 485                       | ASCII    | #                                    | A                                    | A   | N    | P    | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | <CR>  |       |       |
|  |                           | MessBus  | <STX>                                | \$                                   | N   | P    | (D)  | (D)  | (D)  | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | (D) | <ETX> | <BCC> |       |
| Command confirmation (instrument)        | 232                       | ASCII    | OK                                   | !                                    | A   | A    | <CR> |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  |                           |          | Bad                                  | ?                                    | A   | A    | <CR> |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  |                           | Messbus  |                                      | No - data is transmitted permanently |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  |                           | 485      | ASCII                                | OK                                   | !   | A    | A    | <CR> |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  | Bad                       |          |                                      | ?                                    | A   | A    | <CR> |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  | Mess-Bus                  |          | OK                                   | <DLE>                                | 1   |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  |                           |          | Bad                                  | <NAK>                                |     |      |      |      |      |     |     |     |     |     |     |     |     |     |       |       |       |
|  | Instrument identification |          |                                      | #                                    | A   | A    | 1    | Y    | <CR> |     |     |     |     |     |     |     |     |     |       |       |       |
| HW identification                        |                           |          | #                                    | A                                    | A   | 1    | Z    | <CR> |      |     |     |     |     |     |     |     |     |     |       |       |       |
| One-time transmission                    |                           |          | #                                    | A                                    | A   | 7    | X    | <CR> |      |     |     |     |     |     |     |     |     |     |       |       |       |
| Repeated transmission                    |                           |          | #                                    | A                                    | A   | 8    | X    | <CR> |      |     |     |     |     |     |     |     |     |     |       |       |       |



| ERROR                      | CAUSE  | ELIMINATION  |
|----------------------------|--|--|
| <i>E. d. U<sub>n</sub></i> | Number is too small (large negative) to be displayed         | change DP setting, channel constant setting  |
| <i>E. d. U<sub>u</sub></i> | Number is too large to be displayed                          | change DP setting, channel constant setting  |
| <i>E. t. U<sub>n</sub></i> | Number is outside the table range                            | increase table values, change input setting (channel constant setting)                               |
| <i>E. t. U<sub>u</sub></i> | Number is outside the table range                            | increase table values, change input setting (channel constant setting)                               |
| <i>E. l. U<sub>n</sub></i> | Input quantity is larger than permitted input quantity range | change input signal value or input (range) setting   |
| <i>E. l. U<sub>u</sub></i> | Input quantity is larger than permitted input quantity range | change input signal value or input (range) setting   |
| <i>E. H<sub>u</sub></i>    | A part of the instrument does not work properly              | send the instrument for repair   |
| <i>E. EE</i>               | Data in EEPROM corrupted                                     | perform restoration of manufacture setting, upon repeated error statement send instrument for repair |
| <i>E. SEt</i>              | Data in EEPROM outside the range                             | perform restoration of manufacture setting, upon repeated error statement send instrument for repair |
| <i>E. CLr.</i>             | Memory was empty (presetting carried out)                    | upon repeated error statement send instrument for repair, possible failure in calibration            |
| <i>E. OUT</i>              | Analogue output current loop disconnected                    | check wire connection  |

## 11. TABLE OF SIGNS


The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00


|    |   |   |    |    |    |   |   |   |    |   |   |    |    |   |   |   |   |
|----|---|---|----|----|----|---|---|---|----|---|---|----|----|---|---|---|---|
|    | 0 | 1 | 2  | 3  | 4  | 5 | 6 | 7 |    | 0 | 1 | 2  | 3  | 4 | 5 | 6 | 7 |
| 0  |   | Q | "  | #  | \$ | % | & | ' | 0  | ! | " | #  | \$ | % | & | ' |   |
| 8  | : | ; | #  | +  | ,  | - | . | / | 8  | ( | ) | *  | +  | , | - | . | / |
| 16 | 0 | 1 | 2  | 3  | 4  | 5 | 6 | 7 | 16 | 0 | 1 | 2  | 3  | 4 | 5 | 6 | 7 |
| 24 | 8 | 9 | VA | Vr | <  | = | > | ? | 24 | 8 | 9 | VA | Vr | < | = | > | ? |
| 32 | P | A | B  | C  | D  | E | F | G | 32 | @ | A | B  | C  | D | E | F | G |
| 40 | H | I | J  | K  | L  | M | N | O | 40 | H | I | J  | K  | L | M | N | O |
| 48 | P | Q | R  | S  | T  | U | V | W | 48 | P | Q | R  | S  | T | U | V | W |
| 56 | X | Y | Z  | [  | \  | ] | ^ | _ | 56 | X | Y | Z  | [  | \ | ] | ^ | _ |
| 64 | ` | a | b  | c  | d  | e | f | g | 64 | ` | a | b  | c  | d | e | f | g |
| 72 | h | i | j  | k  | l  | m | n | o | 72 | h | i | j  | k  | l | m | n | o |
| 80 | p | q | r  | s  | t  | u | v | w | 80 | p | q | r  | s  | t | u | v | w |
| 88 | x | y | z  | {  |    | } | ~ |   | 88 | x | y | z  | {  |   | } | ~ |   |




**Front view**

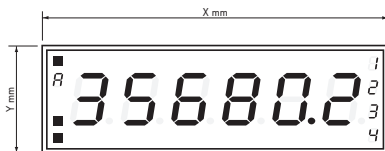

**Side view**

 

**Panel cutout**

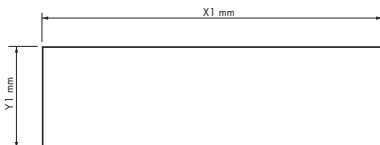


Panel thickness: 0,5 ... 50 mm

| Height       | X   | Y   | X1  | Y1  |
|--------------|-----|-----|-----|-----|
| <b>57-6</b>  | 375 | 119 | 367 | 111 |
| <b>100-4</b> | 465 | 181 | 457 | 173 |
| <b>100-6</b> | 651 | 181 | 643 | 173 |
| <b>125-4</b> | 539 | 237 | 531 | 228 |
| <b>125-6</b> | 754 | 237 | 746 | 228 |

**Wall mounting**

Our large displays are supplied along with a wall mount holder as shown in the the drawing.

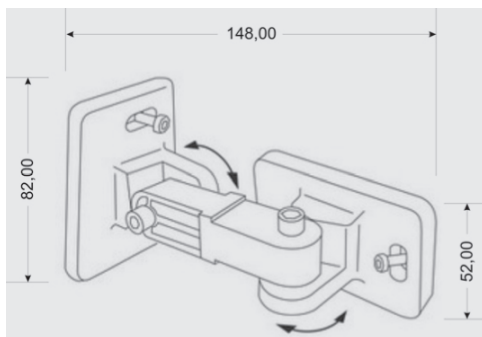

# 13. TECHNICAL DATA



|                     |         |           |
|---------------------|---------|-----------|
| <b>INPUT</b>        |         |           |
| range is adjustable |         | <b>DC</b> |
| ±60 mV              | >100 MΩ | Input U   |
| ±150 mV             | >100 MΩ | Input U   |
| ±300 mV             | >100 MΩ | Input U   |
| ±1200 mV            | >100 MΩ | Input U   |

|                     |          |           |
|---------------------|----------|-----------|
| range is adjustable |          | <b>PM</b> |
| 0/4...20 mA         | < 400 mV | Input I   |
| ±2 V                | 1 MΩ     | Input U   |
| ±5 V                | 1 MΩ     | Input U   |
| ±10 V               | 1 MΩ     | Input U   |
| ±40 V               | 1 MΩ     | Input U   |

|                     |  |            |
|---------------------|--|------------|
| range is adjustable |  | <b>OHM</b> |
| 0...100 Ω           |  |            |
| 0...1 kΩ            |  |            |
| 0...10 kΩ           |  |            |
| 0...100 kΩ          |  |            |

|                  |   |            |
|------------------|---|------------|
| Connection:      | 2, 3 or 4 wire                              |            |
| Pt xxxx          | -200°...850°C                               |            |
| Pt xxxx/3910 ppm | -200°...1 100°C                             | <b>RTD</b> |
| Ni xxxx          | -50°...250°C                                |            |
| Cu/4260 ppm      | -50°...200°C                                |            |
| Cu/4280 ppm      | -200°...200°C                               |            |
| Type Pt:         | EU > 100/500/1 000 Ω, with 3 850 ppm/°C     |            |
|                  | US > 100 Ω, with 3 920 ppm/°C               |            |
|                  | RU > 50/100 Ω, with 3 910 ppm/°C            |            |
| Type Ni:         | Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C |            |
| Type Cu:         | Cu 500/Cu 100 with 4 260/4 280 ppm/°C       |            |
| Connection:      | 2, 3 or 4 wire                              |            |

|   |                                 |            |
|---|---------------------------------|------------|
| range is adjustable in configuration menu |                                 | <b>T/C</b> |
| Type:                                     | J (Fe-CuNi) -200°...900°C       |            |
|   | K (NiCr-Ni) -200°...1 300°C     |            |
|   | T (Cu-CuNi) -200°...400°C       |            |
|   | E (NiCr-CuNi) -200°...690°C     |            |
|   | B (PtRh30-PtRh6) 300°...1 820°C |            |
|   | S (PtRh10-Pt) -50°...1 760°C    |            |
|   | R (Pt13Rh-Pt) -50°...1 740°C    |            |
|   | N (Omega alloy) -200°...1 300°C |            |
|   | L (Fe-CuNi) -200°...900°C       |            |

Voltage of lin. pot. 2,5 VDC/6 mA  
min. potentiometer resistance is 500 Ω

|                          |                      |           |
|--------------------------|----------------------|-----------|
| <b>INPUT - CHANNEL B</b> |                      | <b>PM</b> |
| Range:                   | 0/4...20 mA < 400 mV | Input I   |
|                          | ±2 V 1 MΩ            | Input U   |
|                          | ±5 V 1 MΩ            | Input U   |
|                          | ±10 V 1 MΩ           | Input U   |
|                          | ±40 V 1 MΩ           | Input U   |

|                          |                      |           |
|--------------------------|----------------------|-----------|
| <b>INPUT - CHANNEL C</b> |                      | <b>PM</b> |
| Range:                   | 0/4...20 mA < 400 mV | Input I   |
|                          | ±2 V 1 MΩ            | Input U   |
|                          | ±5 V 1 MΩ            | Input U   |
|                          | ±10 V 1 MΩ           | Input U   |
|                          | ±40 V 1 MΩ           | Input U   |

|                          |                      |           |
|--------------------------|----------------------|-----------|
| <b>INPUT - CHANNEL D</b> |                      | <b>PM</b> |
| Range:                   | 0/4...20 mA < 400 mV | Input I   |
|                          | ±2 V 1 MΩ            | Input U   |
|                          | ±5 V 1 MΩ            | Input U   |
|                          | ±10 V 1 MΩ           | Input U   |
|                          | ±40 V 1 MΩ           | Input U   |

|                   |  |
|-------------------|--|
| <b>PROJECTION</b> |  |
| Display:          | 999999,<br>4 (100/125 mm) or 6 digit (57/100/125 mm)<br>Three-color 7 segment LED - red/green/orange<br>High bright singles LED - red or green<br>(1300 mcd) |
| Projection:       | -999...9999 or -99999...999999   |
| Decimal point:    | adjustable - in menu   |
| Brightness:       | adjustable - in menu   |

|                            |   |
|----------------------------|---|
| <b>INSTRUMENT ACCURACY</b> |   |
| TC:                        | 50 ppm/°C   |
| Accuracy:                  | ±0,1 % of range + 1 digit<br>±0,15 % of range + 1 digit<br>Above accuracies apply for projection 9999 |
| Resolution:                | 0,01°/0,1°/1°   |
| Rate:                      | 0,1...40 measurements/s**   |
| Overload capacity:         | 10x (t < 100 ms) not for 500 V and 5 A,<br>2x (long-term)   |
| Linearisation:             | by linear interpolation in 50 points<br>- solely via OM Link  |
| Digital filters:           | Averaging, Floating average, Exponential filter, Rounding   |
| Comp. of conduct:          | max. 40 Ω/100 Ω <b>RTD</b>  |
| Comp. of cold junct.:      | adjustable <b>T/C</b>   |

|              |  |
|--------------|--|
| Functions:   | 0°...99°C or automatic<br>Tare - display resetting<br>Hold - stop measuring (at contact)<br>Lock - control key locking<br>MM - min/max value<br>Mathematic functions |
| OM Link:     | company communication interface for setting, operation and update of instrument SW   |
| Watch-dog:   | reset after 400 ms   |
| Calibration: | at 25°C and 40% of r.h.  |

|                   |   |
|-------------------|---|
| <b>COMPARATOR</b> |   |
| Type:             | digital, adjustable in menu   |
| Mode:             | Hysteresis, From, Dosing  |
| Limita:           | -99999...999999   |
| Hysteresis:       | 0...999999  |
| Delay:            | 0...99,9 s  |
| Outputs:          | 4x relays with switch-on contact (Form A)<br>(230 VAC/30 VDC, 3 A)*<br>4x open collectors (30 VDC/100 mA) |
| Relay:            | 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300  |



**DATA OUTPUTS**

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS  
 Data format: 8 bit + no parity + 1 stop bit (ASCII)  
 7 bit + even parity + 1 stop bit (MessBus)  
 Rate: 600...230 400 Baud  
 9 600 Baud...12 Mbaud (PROFIBUS)  
 RS 232: isolated, two-way communication  
 RS 485: isolated, two-way communication,  
 addressing (max. 31 instruments)  
 PROFIBUS Data protocol SIEMENS

**ANALOG OUTPUT**

Type: isolated, programmable with 12 bits D/A converter, analogoutput corresponds with displayed data, type and range are adjustable  
 Non-linearity: 0,1% of range  
 TC: 15 ppm/°C  
 Rate: response to change of value < 1 ms  
 Voltage: 0...2 V/5 V/10 V/±10 V  
 Current: 0...5/20 mA/4...20 mA  
 - compensation of conduct to 500 Ω /12 V or 1 000 Ω/24 V

**EXCITATION**

Adjustable: 5...24 VDC/max. 2,5 W, isolated

**POWER SUPPLY**

Options: 10...30 V AC/DC, max. 27 VA, isolated  
 PF ≥ 0,4, I<sub>gr</sub> > 75 A/2 ms fuse inside (T 4A)  
 80...250 V AC/DC, max. 27 VA, isolated  
 PF ≥ 0,4, I<sub>gr</sub> > 475 A/2 ms fuse inside (T 4A)

**MECHANIC PROPERTIES**

Material: anodized aluminum, black  
 Dimensions: see chapter 13  
 Panel cut-out: see chapter 13

**OPERATING CONDITIONS**

Connection: through cable bushings to terminal boards inside the instrument, conductor section up to < 1,5 mm<sup>2</sup> /< 2,5 mm<sup>2</sup>  
 Stabilisation period: within 15 minutes after switch-on  
 Working temp.: -20° ...60°C  
 Storage temp.: -20° ...85°C  
 Cover: IP64  
 Construction: safety class I  
 Overvoltage cat.: EN 61010-1, A2  
 Dielectric strength: 4 kVAC after 1 min between supply and input  
 4 kVAC after 1 min between supply and analog output  
 4 kVAC after 1 min between supply and relay output  
 2,5 kVAC after 1 min between supply and analog output for pollution degree II, measurement cat. III  
 Insulation resist.: instrum. power supply > 670 V (PI), 300 V (DI)  
 Input/output > 300 V (PI), 150 (DI)  
 EMC: EN 61326-1

PI - Primary insulation, DI - Double insulation

\*\*Table of rate of measurement in relation to number of inputs

| Channels/Rate                              | 40    | 20    | 10    | 5    | 2    | 1    | 0,5  | 0,2  | 0,1  |
|--|-------|-------|-------|------|------|------|------|------|------|
| No.of channels: 1<br>(Type: DC, PM, DU)    | 40,00 | 20,00 | 10,00 | 5,00 | 2,00 | 1,00 | 0,50 | 0,20 | 0,10 |
| No.of channels: 2                          | 5,00  | 2,50  | 1,25  | 1,00 | 0,62 | 0,38 | 0,22 | 0,09 | 0,05 |
| No.of channels: 3                          | 3,33  | 1,66  | 0,83  | 0,66 | 0,42 | 0,26 | 0,14 | 0,06 | 0,03 |
| No.of channels: 4                          | 2,50  | 1,25  | 0,62  | 0,50 | 0,31 | 0,19 | 0,11 | 0,05 | 0,02 |
| No.of channels: 1<br>(Type: OHM, RTD, T/C) | 5,00  | 2,50  | 1,25  | 1,00 | 0,62 | 0,38 | 0,22 | 0,09 | 0,05 |
| No.of channels: 2                          | 3,33  | 1,066 | 0,83  | 0,66 | 0,42 | 0,26 | 0,14 | 0,06 | 0,03 |
| No.of channels: 3                          | 2,50  | 1,25  | 0,62  | 0,50 | 0,31 | 0,19 | 0,11 | 0,05 | 0,02 |
| No.of channels: 4                          | 2,00  | 1,00  | 0,50  | 0,40 | 0,25 | 0,15 | 0,08 | 0,04 | 0,02 |

\* values apply for resistance load

# 14. CERTIFICATE OF GUARANTEE



Product                    **OMD 202UNI**                    **B**  
Type                        .....  
Manufacturing No.       .....  
Date of sale               .....

# WARRANTY

A guarantee period of 60 months from the date of sale to the user applies to this instrument.  
Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.



# Y E

Stamp, signature



# ES DECLARATION OF CONFORMITY

**Company** ORBIT MERRET, spol. s r.o.  
Klánova 81/141, 142 00 Prague 4, Czech Republic, IDNo.: 00551309

**Manufactured** ORBIT MERRET, spol. s r.o.  
Vodňánská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

**Product** 4/6-digit programmable large display

**Type** OMD 202

**Version** UNI, PWR, UQC, RS

**This has been designed and manufactured in line with requirements of**

Low-voltage electrical equipment (directive no. 2014/35/EU)  
Electromagnetic compatibility (directive no. 2014/30/EU)

**The product qualities are in conformity with harmonized standard**

El. safety: EN 61010-1  
EMC: EN 61326-1  
Electronic measuring, control and laboratory devices – Requirements for EMC “Industrial use”  
EN 50131-1, cap. 14 and cap. 15, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-8, EN 61000-4-11, EN 61000-3-2, EN 61000-3-3, EN 55022, cap. 5 and cap. 6

The product is furnished with CE label issued in 2001.

**As documentation serve the protocols of authorized and accredited organizations**

EMC MoD, Testing institute of technical devices, protocol no. 164/11-142/2012 of 24/08/2012  
MoD, Testing institute of technical devices, protocol no. 164/11-145/2012 of 24/08/2012

Place and date of issue: Prague, 19. Juli 2009

Miroslav Hackl  
Company representative





**ORBIT MERRET, spol. s r. o.**  
Vodňanská 675/30  
198 00 Praha 9  
Czech Republic

tel.: +420 281 040 200  
fax.: +420 281 040 299  
orbit@merret.eu

[www.orbitmerret.eu](http://www.orbitmerret.eu)

