
OMC 8000-8DI.4A0

4x ANALOGUE OUTPUTS + 8x DIGITAL INPUTS



CONNECTING THE MODULE

Prior to wiring the module to the power supply, always make sure the power supply is switched off

- 1. Connect module OMC 8000-8DI.4AO to the main module using an included connector cable (female connectors are located at the top of the module housing and protected by a circular rubber plug)
- 2. Switch on the power supply of the whole system
- 3. Assign an address to the newly connected module (see Edit Modules setting below)
- 4. Switch off the power supply of the whole system

ENTERING THE MENU OF OMC 8000

Instrument's menu can be entered in two different ways:

- 1. By pressing the **OK** key while the screen which lists the connected modules is displayed and hold it for the entire duration of its projection. Alternatively the **OK** key can be kept pressed already from the moment of Power-on.
- 2. By pressing the **UP** and **DOWN** keys simultaneously for 3 seconds (Arrow Up and Arrow Down) provided the PLC program is not running (LED **RUN** is not on). Only in this way the menu item Start can be accessed.

orbit merret	OMC 8000 192. 168. 1. 48 12. 04. 16 14:22:45
Language	English
Password	****
Quick start	No
Block debug	No
Autorecovery	Yes
RTC	
Display	
Edit modules	
Reread modules	
Ethernet	

EDIT MODULES SETTING

This menu item allows assigning addresses to connected modules. In case there is no module connected, the screen is empty.

Changes realized in this setting are executed immediately. Pressing the ESC key does not ean the setting has not been already saved.

Keys **UP/DOWN** are used to select the module which is to be assigned. LED RUN flashes on the momentarily selected module.

Pressing the OK key activates the module to be assigned. The module's details are shown in inverse colors on the display.

UP/DOWN keys rank the module into the desired position in the list.

The **OK** button Unhighlights the module.

ESC key terminates the process of assigning addresses.

RE-READ MODULES SETTING


Resets the table of modules and reads it again.

The rest is as described above.

ERROR MESSAGE

Information about a broken loop is transmitted in the STATUS word, which is accessible through ReadModuleStatus

0x0001 Error AO10 0x0002 Frror A∩11 0x0004 Error A012 0x0008 Error A013

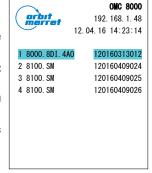















OMC 8000-8DI.4A0 **TECHNICAL DATA**

DIGITAL INPUTS

Number	8
Range	1230 V AC/DC or 80250 V AC/DC (the range is identical with the instrument's power supply)
Level - Log. 0	< 1,5 V
Level - Log. 1	> 12 V
Max. current	2,5 mA
Response time	typically 4 ms
LED signalisation	yes

TECHNICAL SPECIFICATION

TC	50 ppm/°C
Task	1 ms
Communication	CANBUS with speed of 1 Mbit/at 40 meters
Watch-dog	reset after 500 ms
Calibration	at 25°C and 40 % r.h.

ANALOGOUE OUTPUT

Number	4
Туре	analogue - universal
Range	02/5/10/±10 V 05 mA, 0/420 mA
Galvanic isolated	yes
Resolution	16 bits
Compensation	> 500 Ω
TC	15 ppm/°C
Accuracy	0,1 % of range
Response time	1 ms
LED signalisation	activation of AO - green
LED signalisation*	disconnection of current loop AO - green, flashing

^{*} if output current is bigger than 0.1 mA

Power supply leads should not be in the vicinity of the low level input signal leads. Contactors, electrical motors and other power devices are

not allowed near the input signal leads.
Input signal leads (measured value) should be at a safe distance from all power lines and appliances. Even though this device has been successfully tested in accordance with international standards for use in industrial areas, we still recommend to adhere to the afore mentioned simple rules.

If the manufacturer is to assume the warranty conditions provided for the device's proper functionality it is essential that the shielding of the input signal wires is connected to the metal frame of the electrical switchboard!

POWER SUPPLY

Power supply	1030 VDC/24 VAC, ±10 %, 5 VA, PF≥ 0.4, 80250 VDC/VAC, ±10 %, 5 VA, PF≥ 0.4, I _{STP} < 40 A/1 ms, isolated
Current via bus	max. 100 mA

MECHANICAL PROPERTIES

Material	PA 66, incombustible UL 94 V-0, blue
Dimensions	72 x 91 x 60 mm
Mechanical fixation	on DIN rail 35 mm wide

OPEARTING CONDITIONS

Connection	screw terminals, cross section < 2,5 mm ²
Operating temperature	-20°60°C
Storage temperature	-20°85°C
IP rating	IP20
Execution	Safety class I
El. safety	EN 61010-1, A2
Dielectric strength	4 kVAC for 1 min. between power and inputs/outputs 2,5 kVAC for 1 min. between bus and inputs/outputs
Isolation resistance	for pollution degree II, measuring cat III 300 V (PI), 150 (DI)
EMC	EN 61326-1 (Industrial environment)
Seismic canacity	IEC 980: 1993, art.6

^{*} PI - Primary isolation, DI - Double isolation

OMC 8000-8DI.4A0 CONNECTION

