



OMB 451 UNI

OMB 452 UNI

4 DIGIT PROGRAMMABLE UNIVERSAL INSTRUMENT

DC VOLTMETER / AMMETER

PROCESS MONITOR

OHMMETER

THERMOMETER FOR PT 100/500/1 000

THERMOMETER FOR NI 1 000

THERMOMETER FOR THERMOCOUPLES

DISPLAYS FOR LIN. POTENTIOMETERS

SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OMB 450 series conform to the European regulation 89/336/EWG.

The instruments are up to the following European standards:

EN 55 022, class B

EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

Seismic capacity:

IEC 980: 1993, chapter 6

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanska 675/30

198 00 Prague 9

Czech Republic

Tel: +420 - 281 040 200

Fax: +420 - 281 040 299

e-mail: orbit@merret.cz

www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	8
	Symbols used in the instructions	10
	Setting the DP and the (-) sign	10
	Control keys function	11
	Setting/permitting items into "USER" menu	11
5.	Setting "LIGHT" menu	12
5.0	Description "LIGHT" menu	12
	Setting input	16
	Setting Limits	32
	Setting analog output	34
	Nastavení rozsahu bargrafu	35
	Nastavení LCD stupnice	36
	Setting of bargraph	38
	Selection of programming menu „LIGHT"/„PROFI"	38
	Restoration of manufacture setting	39
	Calibration - input range (DU)	40
	Selection of instrument menu language version	41
	Setting new access password	41
	Instrument identification	42
6.	Setting "PROFI" menu	44
6.0	Description of "PROFI" menu	44
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	46
6.1.2	Setting measuring type, range, mode, rate, ...	47
6.1.3	Setting the Real Time	53
6.1.4	External input function selection	53
6.1.5	Optional accessory functions of the keys	54
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	58
6.2.2	Setting mathematic functions	62
6.2.3	Selection of evaluation of min/max. value	64
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting data logging	66
6.3.2	Setting Limits	68
6.3.3	Setting data output	71
6.3.4	Setting analog output	72
6.3.5	Selection of display projection	74
6.3.6	Selection of bargraph projection	75
6.4	"PROFI" menu - SERVICE	
6.4.1	Selection of programming menu „LIGHT"/„PROFI"	82
6.4.2	Restoration manufacture setting	83
6.4.3	Calibration - input range (DU)	84
6.4.4	Selection of instrument menu language version	84
6.4.5	Setting new access password	85
6.4.6	Instrument identification	85
7.	Setting items into "USER" menu	86
8.	Method of measuring of the cold junction	88
9.	Data protocol	89
10.	Error statements	90
11.	Table of symbols	91
12.	Technical data	92
13.	Instrument dimensions and installation	94
14.	Certificate of guarantee	95
	Declaration of conformity	96

2.1 DESCRIPTION

The OMB 451/452 model series are programmable, three-color panel bargraphs with auxiliary display and adjustable LCD scale. The instruments are designed as dimensional replacement of the ZEPAKOMP instruments. Available are types UNI, PWR and UQC.

Type OM 402UNI is a multifunction instrument with the option of configuration for 8 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

The OMB 451/452 is a multifunction instrument available in following types and ranges

type UNI

DC:	0...60/150/300/1 200 mV
PM:	0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
OHM:	0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ/Auto
RTD-Pt:	Pt 50/100/Pt 500/Pt 1 000
RTD-Cu:	Cu 50/Cu 100
RTD-Ni:	Ni 1 000/Ni 10 000
T/C:	J/K/T/E/B/S/R/N/L
DU:	Linear potentiometer (min. 500 Ω)

type UNI, option A

DC: 0...1 A/0...5 A/120 V/±250 V/±500 V

type UNI, option B (expansion by 3 more inputs)

PM: 3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V

PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
LCD scale:	illuminated and freely programmable
Projection:	-9999...9999 (-99999...999999)

COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

LINEARIZATION

Linearization:* by linear interpolation in 50 points (solely via OM Link)

DIGITAL FILTERS

Floating average:	from 2...30 measurements
Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUNCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal

* only for types DC, PM, DU

Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

EXTERNAL CONTROL


Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

2.2 OPERATION

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

 Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.
The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 OPTIONS

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals. Contactors, motors with larger input power should not be in proximity of the instrument. The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).


The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING RANGES

Type	Input I	Input U
DC		0...60/150/300/1 200 mV
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V
OHM	0...0,1/1/10/100 k Ω /Autorange	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N/L	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "A"

Type	Input I	Input U
DC	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A to GND (C) ± 2 A/ ± 5 A to GND (B)	± 100 V/ ± 250 V/ ± 500 V to GND (C)

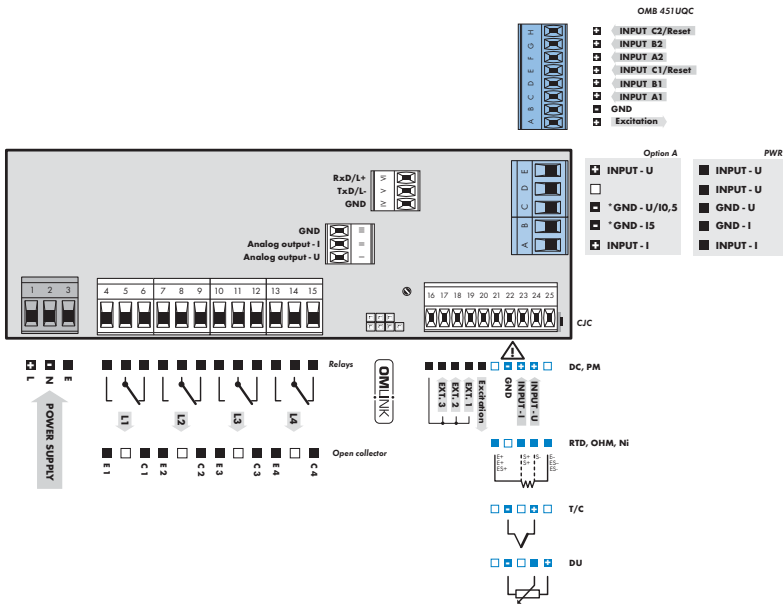

!

Excitation has the minus pole common with the input - the bracket no. 22 - GND and you may set its value by trimmer above the bracket no. 16



Maximum of 250 mA may be connected to "INPUT - I" (bracket no. 23), i.e. 10-times range overload. Mind the correct connection/mistaking of current - voltage input. Destruction of measuring resistance in current input (15R) may occur.

PROFI

Setting

profi

- ▶ • For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

LIGHT

Setting

light

- ▶ • For trained users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

USER

Setting

*profi light**user*

- ▶ • For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected
- Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 SETTING

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - acces without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.

Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Scheme of processing the measured signal

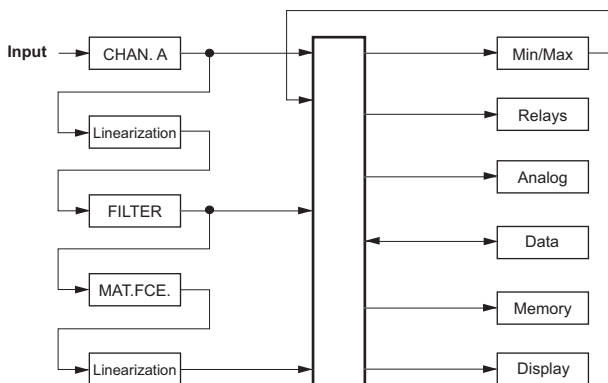

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

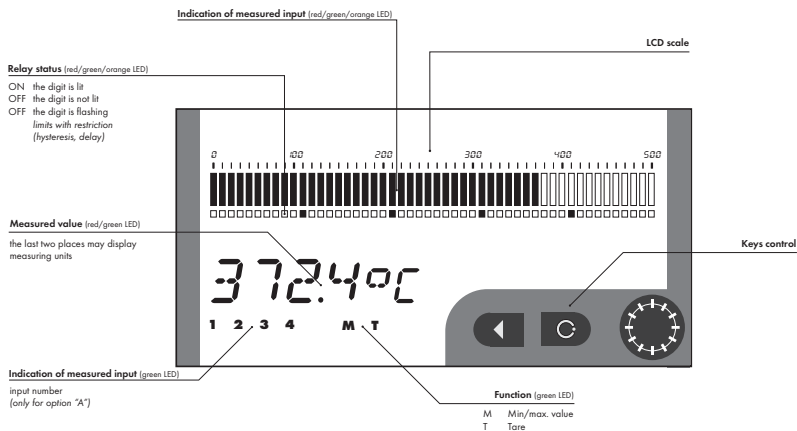

Symbols used in the instructions

DC PM DU OHM RTD T/C Indicates the setting for given type of instrument

DEF values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

increasing the value by rotating the ke to the right (UP)

decreasing the value by rotating the ke to the left (DOWN)

pressing the key shortly

pressing the key for longer than 2 seconds (> 2 s.),




after pressing the key the set value will not be stored

after pressing the key the set value will be stored



30 continues on page 30

Setting the decimal point and the minus sign


















DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the short push key  with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by / .

THE MINUS SIGN

Setting the minus sign is performed by the key  on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
	programmable key function	move to next item	move up
 			confirm setting after selection numeric value
 + 			numeric value is set to zero
	programmable key function	move to next level	confirm setting/selection
 + 	direct access into PROFI menu		
 + 	access into LIGHT/PROFI menu		
 		configuration of an item for "USER" menu	
 		determine the sequence of items in "USER - LIGHT" menu	

Setting items into „USER“ menu

- in LIGHT or PROFI menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle

legend is flashing - current setting is displayed



user

5.0

SETTING "LIGHT"

LIGHT

Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code

Setting

*Light*


- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF

!

Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

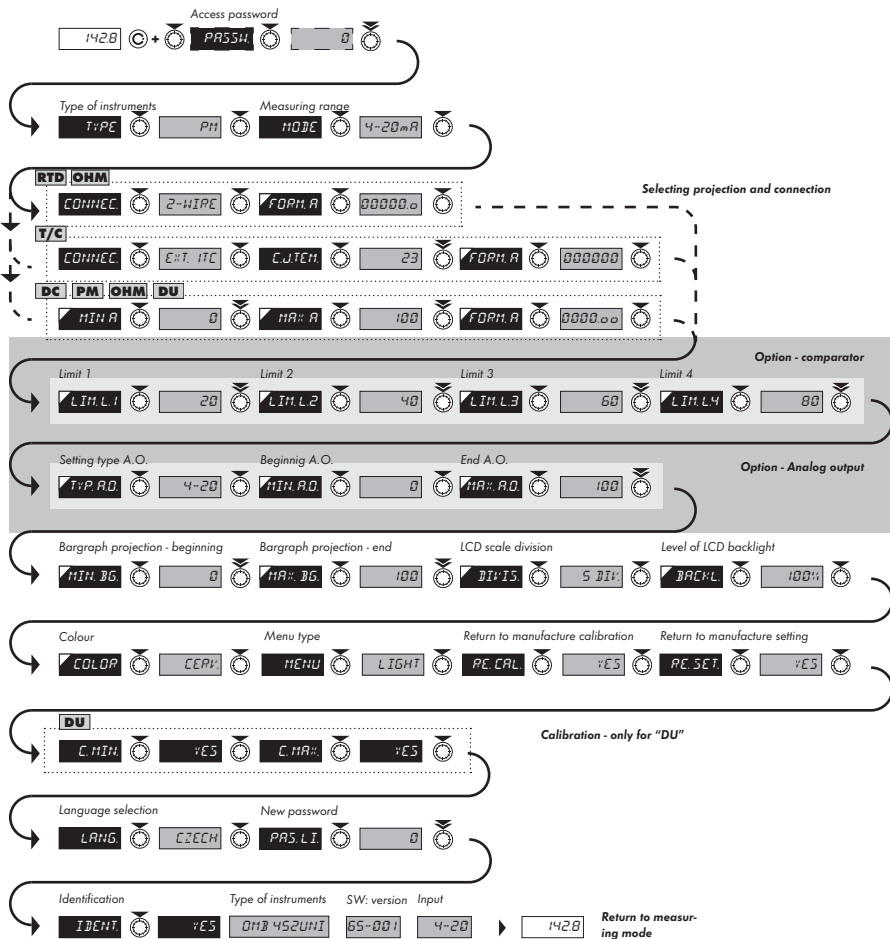

1428



PASSH



0

Entering access password
for access into the menu

PASSH

Access into instrument
menu

PAS = 0

- access into menu is unrestricted, after releasing keys you automatically move to first item of the menu

PAS > 0

- access into menu is protected by number code

Sel „Password“ = 42

Example



T:PE



DC

Pt1

OHM

RTD-Pt

RTD-Ni

TC

DU

RTD-Cu

T:PE



T:PE

Selection of the type of
instrument

- primary selection of the type of instrument
- performs default setting **DEF** of values from manufacture, incl. calibration

DEF = "PM"

Menu	Type of instrument
DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
RTD-Pt	Thermometer for sensors Pt
RTD-Ni	Thermometer for sensors Ni
TC	Thermometer for thermocouples
DU	Display for lin. potentiometer
RTD-Cu	Thermometer for sensors Cu

Type "PM"

Example



Type „DC“	16
Type "PM"	18
Type "OHM"	20
Type "RTD-Pt"	22
Type "RTD-Ni"	24
Type "T/C"	26
Type "DU"	28
Type "RTD-Cu"	30

Type "DC"



MODE Selection of the instrument measuring range

DEF = 60 mV

DEF = 500 V*

* only for option "A"

MODE	Measuring range
60 mV	±60 mV
150 mV	±150 mV
300 mV	±300 mV
1200mV	±1,2 V
100 V	±100 V
250 V	±250 V
500 V	±500 V
0.10 A	±0,1 A
0.25 A	±0,25 A
0.50 A	±0,5 A
1.00 A	±1 A
5.00 A	±5 A

Range ±150 mV Example

60 mV 150 mV MIN R



MIN R Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 0

Projection for 0 mV > MIN A = 0 Example

0 MIN R



MAX: R Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for 150 mV > MAXA = 3500 Example

100	100	100	200	300	400
500	500	500	500	500	FORM: R

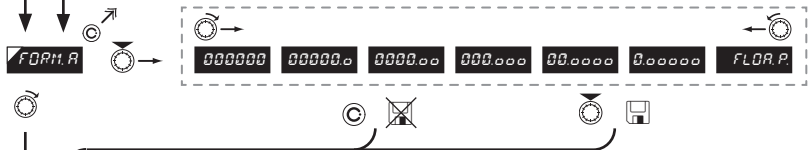

FORM: R Setting projection of the decimal point


DEF = 0000.00

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00	00000.0	HEMU
---------	---------	------

* subsequent item on the menu depends on instrument equipment

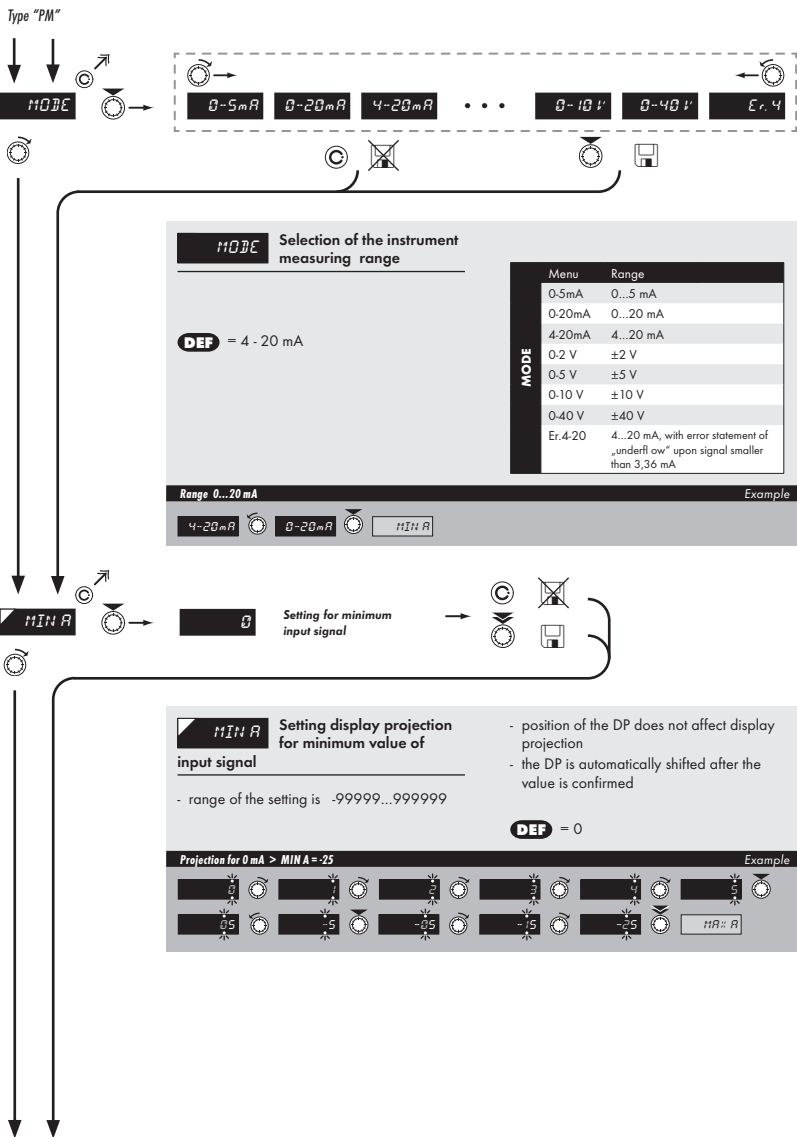




MAX: R Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	100	100	100	100	100
500	500	500	500	500	500	500	FORM: R

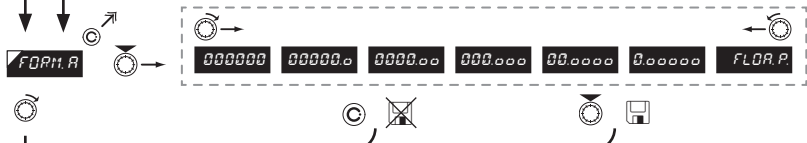

FORM: R Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 0000.00

Projection of DP on display > 00000.0 Example

0000.00	00000.0	00000.0	00000.0	00000.0	00000.0	00000.0	FLDR: P
---------	---------	---------	---------	---------	---------	---------	---------

* subsequent item on the menu depends on instrument equipment



MODE Selection of instrument measuring range

DEF = Pt 100

Menu	Measuring range
EU-100	Pt 100 (3 850 ppm/°C)
EU-500	Pt 500 (3 850 ppm/°C)
EU-1k0	Pt 1000 (3 850 ppm/°C)
US-100	Pt 100 (3 920 ppm/°C)
RU-50	Pt 50 (3 910 ppm/°C)
RU-100	Pt 100 (3 910 ppm/°C)

Range - Pt 1 000 > MODE = EU-1k0 Example

EU-100 EU-500 EU-1k0 **CONN.EC**



CONN.EC Selection of the type of sensor connection

DEF = 2-WIRE

Menu	Connection
2-WIRE	2-wire
3-WIRE	3-wire
4-WIRE	4-wire

Type of connection - 3 wire > CONN.EC. = 3-WIRE Example

2-WIRE 3-WIRE 4-WIRE **FORM.A**



FORM.R Setting projection of the decimal point **DEF** = 00000.0


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 Example

00000.0 000000 MENU * subsequent item on the menu depends on instrument equipment

32

RTD-Pt RTD-Pt RTD-Pt RTD-Pt RTD-Pt RTD-Pt

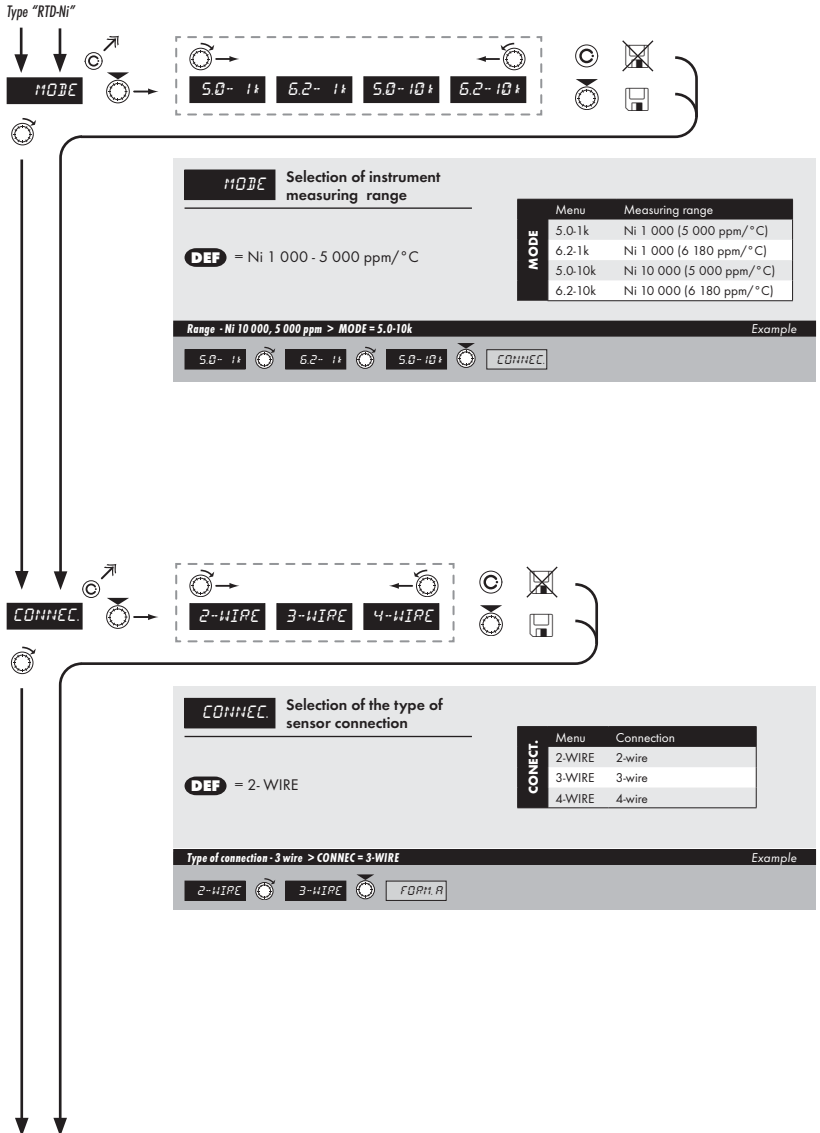



FORM.A Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 *Example*

00000.0 000000 0000.00 **HEXU** * subsequent item on the menu depends on instrument equipment

Type "T/C"

T/C B T/C E T/C J T/C K >

> T/C N T/C R T/C S T/C T T/C L

MODE Selection of the type of thermocouple

- setting the input range depends on the measuring range ordered

DEF = Type "J"

Menu	Type of thermocouple
T/C B	B
T/C E	E
T/C J	J
T/C K	K
T/C N	N
T/C R	R
T/C S	S
T/C T	T
T/C L	L

Type of thermocouple "K" Example

T/C J T/C K CONN.

INT.1TC INT.2TC EXT.1TC EXT.2TC

CONN. Selection of the type of sensor connection

DEF = EXT. 1TC

Menu	Connection	Ref. T/C
INT.1TC	measuring C.J. at instrument brackets	×
INT.2TC	measuring C. J. at instrument brackets with anti-series connected ref. TC	✓
EXT.1TC	the entire measuring set is working under invaried and constant temperature	×
EXT.2TC	when using compensation box	✓

Type of connection > CONN. = EXT. 2TC Example

EXT.1TC EXT.2TC CONN.



C.J. TEM Setting temperature of cold junction **DEF** = 23

- range 0...99 °C with compensation box

Setting temperature of cold junction > C.J. TEM. = 35 Example

The example sequence shows a series of screens: 23, 24, 25, 25, 35, and 35, with the **FORM.A** label appearing on the final screen.



FORM.A Setting projection of the decimal point **DEF** = 000000

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 Example

The example sequence shows a screen with **000000** and **FORM.A**, followed by a screen with **000000** and **FORM.A**.

* subsequent item on the menu depends on instrument equipment


!

For thermocouple type "B" the items **CONNECT.** and **C.J. TEM.** are not available

!

Method and procedure of setting the cold junctions is described in separate chapter on page 88

Type "DU"

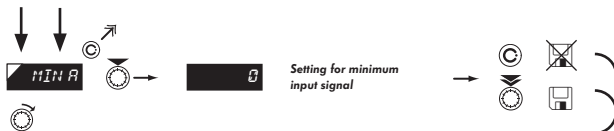

MIN A Setting display projection for minimum value of input signal

- range of the setting is -99999...999999

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for the beginning > MIN A = 0

Example



MAX A Setting display projection for maximum value of input signal

- range of the setting is -99999...999999


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 100

Projection for the end > MAX A = 5000

Example



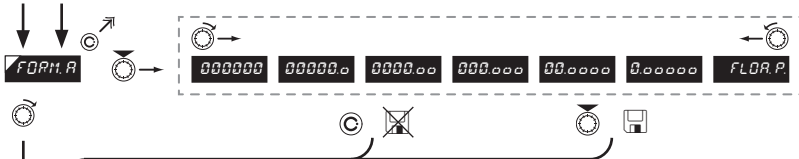

FORM.R Setting projection of the decimal point **DEF** = 0000.00

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00 00000.0 11E11U * subsequent item on the menu depends on instrument equipment

32

Calibration of the beginning and the end of range of linear potentiometer is on page 40





MODE Selection of instrument measuring range

DEF = Cu 50/4 280 ppm

MODE	Menu	Measuring range
	5.0-1k	Ni 1 000 (5 000 ppm/°C)
	6.2-1k	Ni 1 000 (6 180 ppm/°C)
	5.0-10k	Ni 10 000 (5 000 ppm/°C)
	6.2-10k	Ni 10 000 (6 180 ppm/°C)

Range - Cu 50/4 280 ppm > **MODE = 426-50** Example

428-50 428-01 426-50 **CONNECT**

CONNECT Selection of the type of sensor connection

DEF = 2-WIRE

CONNECT	Menu	Connection
	2-WIRE	2-wire
	3-WIRE	3-wire
	4-WIRE	4-wire

Type of connection - 3 wire > **CONNECT = 3-WIRE** Example

2-WIRE 3-WIRE **FDPM.A**



F00Pr.t.R Setting projection of the decimal point **DEF** = 00000.0


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000.00 *Example*

00000.0 0000.00 * subsequent item on the menu depends on instrument equipment

32

RTD-Cu RTD-Cu RTD-Cu RTD-Cu RTD-Cu RTD-Cu

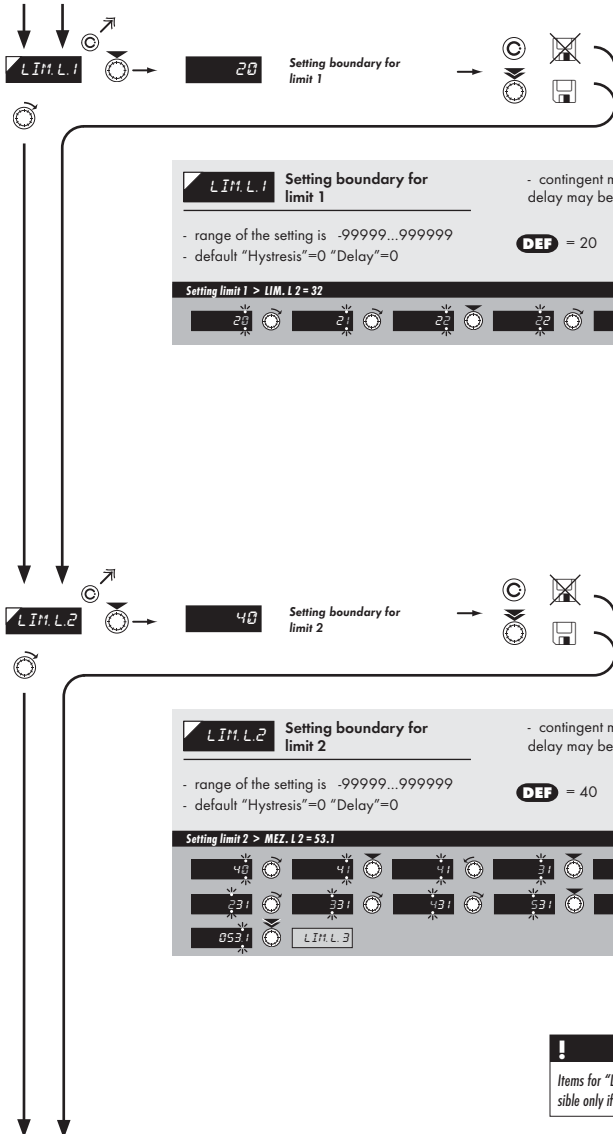



LIM.L3 Setting boundary for limit 3

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > LIM.L3 = 85 Example

60	61	62	63	64	65
65	75	85	LIM.L4		



LIM.L4 Setting boundary for limit 4

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > LIM.L4 = 104 Example

80	81	82	83	83	83
83	803	103	T.P.A.D.		

TYP.A.O. Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
E. 4-20mA	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0.5mA	0...5 mA	
0.2 V	0...2 V	
0.5 V	0...5 V	
0-10 V	0...10 V	

DEF = 4...20 mA

Type of analog output - 0...10 V > TYP. A.O. = 0-10 V Example

4-20mA 0-5mA 0-2V 0-5V 0-10V MIN.A.O.

MIN.A.O. Assigning the display value to the beginning of the AO range


DEF = 0

- range of the setting is -99999...999999

Display value for the beginning of the AO range > MIN. A.O. = 0 Example

0 MIN.A.O.


! Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

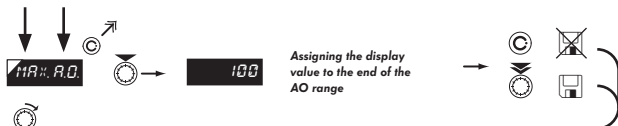

MIN. A.O. Assigning the display value to the end of the AO range **DEF = 100**

- range of the setting is -99999...999999

Display value for the end of the AO range > MAX. A.O. = 120 *Example*

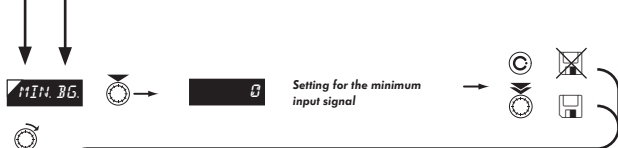

MIN. B.G. Bargraph projection setting for the minimum value of the input signal **DEF = 0**

- range of the setting is -99999...999999

Bargraph value at min. input > MIN. B.G. = 0 *Example*

Setting for the maximum input signal

MAX. BG. Bargraph projection setting for the maximum value of the input signal **DEF = 100**

- range of the setting is -99999...999999

Bargraph value of max. input > MAX. BG. = 120 Example

100 100 120 120 **DIV. IS**

DIV. IS Selection of LCD scale division


- LCD scale division can be emphasized as shown on the right


DEF = 5 Div.

Menu	Range
None	bez rozdělení
1 DIV.	1 section/2 emphasized lines
2 DIV.	2 section/3 emphasized lines
3 DIV.	3 section/4 emphasized lines
4 DIV.	4 section/5 emphasized lines
5 DIV.	5 section/6 emphasized lines
6 DIV.	6 section/7 emphasized lines

Selection of LCD scale division > DIVIS. = 4 DIV. Example

5 DIV. 4 DIV. VALUES

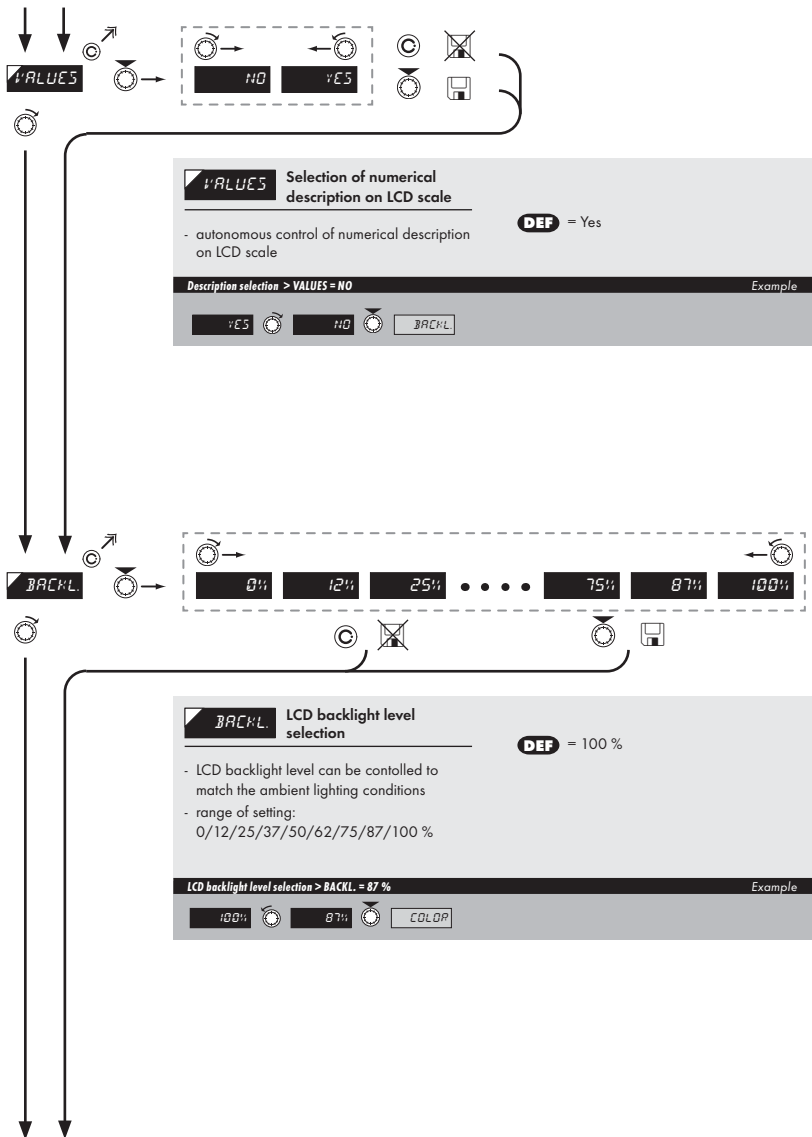

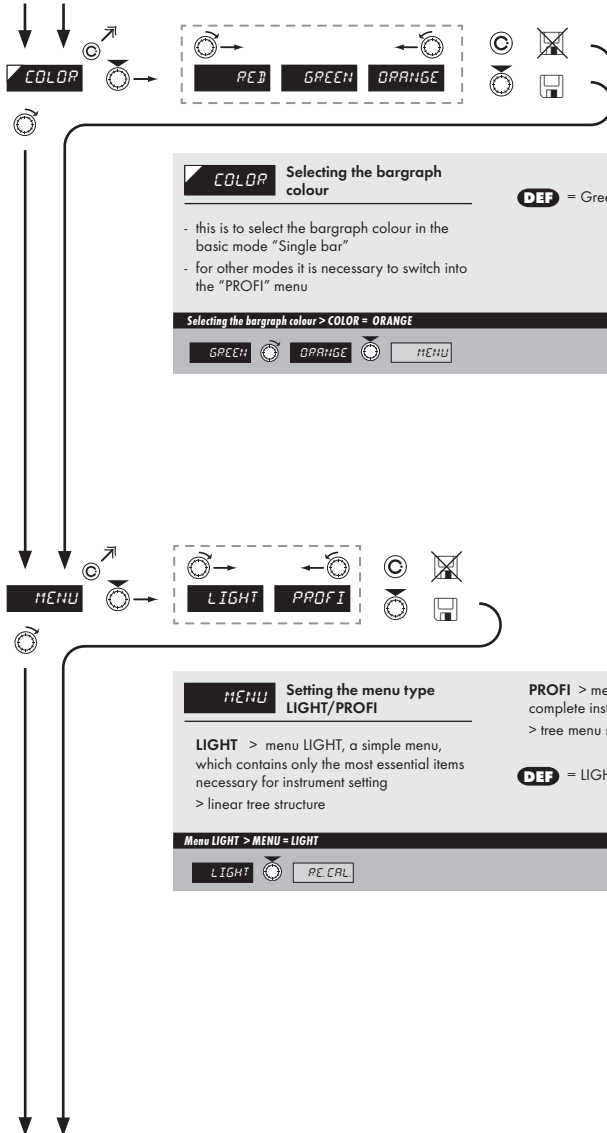**COLOR**

Selecting the bargraph colour

DEF = Green

- this is to select the bargraph colour in the basic mode "Single bar"
- for other modes it is necessary to switch into the "PROFI" menu

Selecting the bargraph colour > COLOR = ORANGE

Example

GREEN ORANGE MENU

MENUSetting the menu type
LIGHT/PROFI

PROFI > menu PROF I, a complete menu for complete instrument setting
> tree menu structure


LIGHT > menu LIGHT, a simple menu, which contains only the most essential items necessary for instrument setting
> linear tree structure

DEF = LIGHT

Menu LIGHT > MENU = LIGHT

Example

LIGHT PE CAL

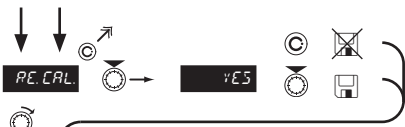

RE.CAL. Restoration of manufacture calibration

Prior to execution of any modifications you will be asked to confirm your selection. (YES)

Restoration of manufacture setting > RE. CAL.

Example



RE.SET. Restoration of manufacture instrument setting

- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")
- loading manufacture calibration and primary setting of items on the menu (DEF)


Restoration of manufacture setting > RE. SET.

Example



* subsequent item on the menu depends on instrument type, for "DU" > "C.MIN"

Type „DC“	41
Type "PM"	41
Type "OHM"	41
Type "RTD-Pt"	41
Type "RTD-Ni"	41
Type "T/C"	41
Type "DU"	40
Type "RTD-Cu"	41

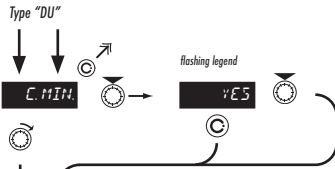

C.MIN. Calibration of input range -
the potentiometer traveller
in initial position


Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

Calibration of the beginning of the range > C. MIN

Example

YES C.MAX

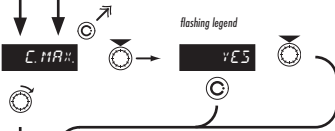

C.MAX. Calibration of input range -
the potentiometer traveller
in end position


Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

Calibration of the end of the range > C. MAX

Example

YES LANG

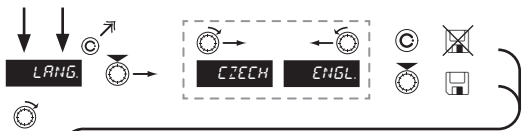

LANG. Selection of language in instrument menu

- selection of language version of the instrument menu

DEF = ENGL.

Language selection - ENGLISH > LANG. = ENGL.

ENGL. **PAS.LI**




PAS.LI. Setting new access password

- access password for menu LIGHT
- range of the number code 0...9999

DEF = 0

New password - 341 > PAS.LI. = 341 Example

0	1	2	3	4	5	6	7	8	9	IBCH?
1	2	3	4	5	6	7	8	9		
2	3	4	5	6	7	8	9			
3	4	5	6	7	8	9				
4	5	6	7	8	9					
5	6	7	8	9						
6	7	8	9							
7	8	9								
8	9									
9										

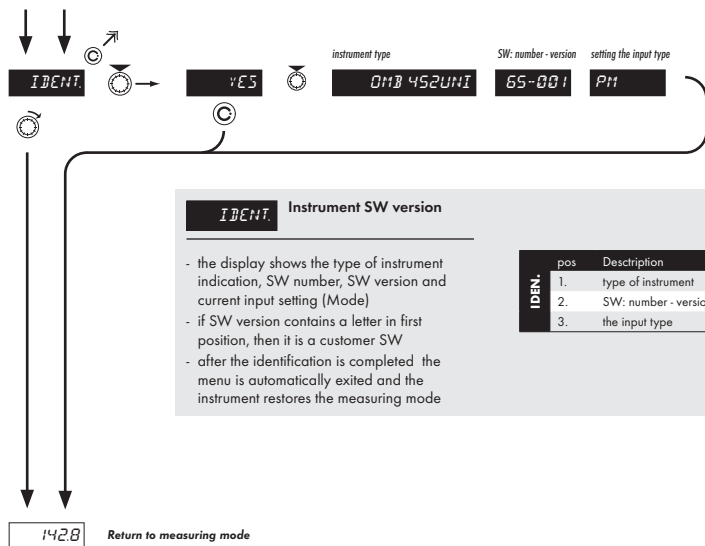

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

Setting




- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu




- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item **SERVIC. > MENU**
- password protected access (unless set as follows under the item **SERVIC. > N. PASS. > PROFI =0**)



- access to menu selected under item **SERVIC. > MENU > LIGHT/PROFI**
- password protected access (unless set as follows under the item **SERVIC. > N. PASS. > LIGHT =0**)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used


6.1 SETTING "PROFI" - INPUT

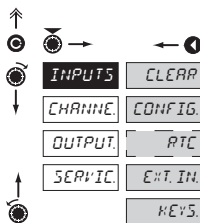

The primary instrument parameters are set in this menu


CLEAR	Resetting internal values
CONFIG.	Selection of measuring range and parameters
RTC	Setting date and time for option with RTC
EXT. IN.	Setting external inputs functions
KEYS	Assigning further functions to keys on the instrument

6.1.1 Resetting internal values

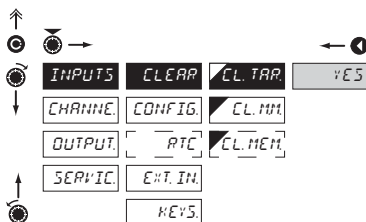

CLEAR	Resetting internal values
CL.TAR	Tare resetting
CL.MM	Resetting min/max value
	- resetting memory for the storage of minimum and maximum value achieved during measurement
CL.MEM	Resetting the instrument memory
	- resetting memory with data measured in the "FAST" or "RTC" modes
	- not in standard equipment


6.1.2a Selection of measuring rate

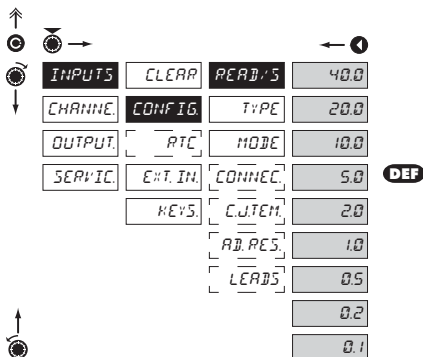

READ/S Selection of measuring rate

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s

6.1.2b Selection of „instrument“ type

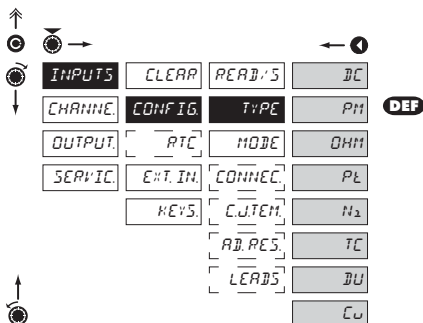

TYPE Selection of „instrument“ type

- selection of particular type of "instrument" is bound to relevant dynamic items

DC	DC voltmeter
Pt	Process monitor
Ohm	Ohmmeter
RTD-Pt	Thermometer for Pt xxx
RTD-N ₂	Thermometer for Ni xxxx
TC	Thermometer pro thermocouples
DU	Display for linear potentiometers
RTD-Cu	Thermometer for Cu xxx

1428 PASSW 0 Access password

INPUTS

CLEAR CL.TAR • CL.HH • CL.HEN

CONFIG READS 0.1 • 0.2 • 200 • 400

TYPE DC • PM • DU • CU

MODE

Setting input, range and projection

DC 60mi • 150mi • 300mi • 1200mi

PM 0-5mA • 0-20mA • 0-40V • E, 4-20

CHM 100P • 11 • 101 • 1001

RTD EU-100 • EU-500 • CU110 • RU-100

RTD 50-11 • 62-11 • 50-101 • 62-101

T/C T.CB • T.CE • T.CT • T.CL

DU LINPOT

RTD 420-50 • 420-0.1 • 426-50 • 426-0.1

CONNEX 2-WIRE • 3-WIRE • 4-WIRE

AD.RES 0

LEADS 0

CONNEX INTITC • E+TTC

CJTEM 0

RTC TIME 0

DATE 0

E+T.H OFF • HOL • CL.HH

H.HOL DISPL • DIS+AD • B+AD+L • ALL

RES LEFT FH.LE NO

THP.LE NO • CHAN.A • FIL.A • MAT.FH • MIN.HA • LIM 1 • P.TAPA • COL.D

MNU.LU LIM 1 • LIM 2 • LIM 3 • LIM 4

CHANNE

CHAN.A SET.A MIN.A 0

MAX.A 100

P.TAPA 0

FILTER MOD.FA NO • ROUND

COH.FA 0

FORM.A 000000 • 000000 • FLORP

DESC.A 0

LOG.A SAVE.A FROM.A TO.A

MAT.FH MAT.F NO • MULT.H • ROOT

COH.A 0

COH.F 0

FORM.H 000000 • 000000 • FLORP

DESC.H 0

LOG.H SAVE.H FROM.H TO.H

MIN.HA: IMP.HH NO • CHAN.A • FIL.A • MAT.FH

name PROFi MENU

OUTPUT

MEMOR? **REWRIT** **NO • YES**

START 00.0000

STOP 00.0000

PERIOD 000.000

LIMITS

LIM 1 **INPL 1** **NO • CHAN A • FIL A • • • MA :**

MOD L 1 **HYSTER • 0.1 30 • BAR KA**

TRPL 1 **SPIHAC • POZPIN**

LIM L 1 20

HYS L 1 0

OH L 1 0

OFF L 1 0

PER L 1 0

TIM L 1 0

LIM 4

DATA **BAUD** **600 • 1200 • 2400 • • • 115200 • 230400**

ADDR 0

PROT **ASCII • N BUS**

INPOD **INP AD** **NO • CHAN A • FIL A • MAT FN • MIN • MA :**

TRPAD **0-20mA • E r 4-20 • 4-20mA • 0-5mA • 0-2V • 0-5V • 0-10V**

MIN AD 0

MA: AD 100

DISP **PERM** **CHAN A • FIL A • MAT FN • MIN • MA :**

BRIGHT **0 % • 25 % • 50 % • 75 % • 100 %**

BAPGR **INP BG** **NO • CHAN A • FIL A • MAT FN • MIN • MA :**

MOD BG **SLOUP • 30 DOV • 3 BAR • 3 PAS**

MIN BG 0

MA: BG 100

SCALE **DI-15** **VALUES** **FORM 5** **BACKL**

COLOR **RED • GREEN • ORANGE**

COLORS **BRND 0** **6 LIM 1** **7 MOD 1** **BRND 1** **8 LIM 2** **BRND 2**

BRI BG **RED** **GREEN** **LIM PE** **LIM GR**

SEPIC

MENU **LIGHT • PROFi**

RESTOR **RE CAL** **YES**

RE SET **TYPE**

USER

SAVE

DU

CALIB **C MIN** **YES**

C MA : **YES**

LANG **CZECH • ENGL**

N PASS **PAS LI** 0

PAS PP

IDEN **OMB 452UNI**

! Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

6.1.2c Selection of measuring range

DC **OHM** ← 4
DEF

INPUTS	CLEAR	READ'S	60mV	100 P
CHANNEL	CONFIG	TYPE	150mV	1 k
OUTPUT	PTC	MODE	300mV	10 k
SERVIC	EXT. IN	CONNEX	1200mV	100 k
	KEYS	C.U.TEM		
		AD. RES		
		LEADS		

PM
DEF

RTD-Pt	0-5mA
0-20mA	
DEF	4-20mA
EU-100	0-2 V
EU-500	0-5 V
EU-1k0	0-10 V
US-100	0-40 V
RU-50	Er. 4-20
RU-100	

RTD-Ni **T/C**
DEF

5.0-1k	T/C B
6.2-1k	T/C E
5.0-10k	T/C J
6.2-10k	T/C K
	T/C N
	T/C R
DEF	428-50
428-0.1	T/C S
426-50	T/C T
426-0.1	T/C L

RTD-Cu
DEF

428-50	T/C R
428-0.1	T/C S
426-50	T/C T
426-0.1	T/C L

DU
DEF

LIHPOT

MODE Selection of instrument measuring range

Menu	Measuring range
60mV	±60 mV
150mV	±150 mV
300mV	±300 mV
1200mV	±1,2 V

Menu	Measuring range
0.5mA	0...5 mA
0.20mA	0...20 mA
4.20mA	4...20 mA
0.2 V	±2 V
0.5 V	±5 V
0.10 V	±10 V
0.40 V	±40 V
Er. 4.20	4...20 mA, with error statement of „underflow“ upon signal smaller than 3.36 mA

Menu	Measuring range
100 R	0...100 Ω
1k	0...1 kΩ
10k	0...10 kΩ
100k	0...100 kΩ

Menu	Measuring range
EU-100	Pt 100 (3 850 ppm/°C)
EU-500	Pt 500 (3 850 ppm/°C)
EU-1k0	Pt 1000 (3 850 ppm/°C)
US-100	Pt 100 (3 920 ppm/°C)
RU-50	Pt 50 (3 910 ppm/°C)
RU-100	Pt 100 (3 910 ppm/°C)

Menu	Measuring range
5.0-1k	Ni 1 000 (5 000 ppm/°C)
6.2-1k	Ni 1 000 (6 180 ppm/°C)
5.0-10k	Ni 10 000 (5 000 ppm/°C)
6.2-10k	Ni 10 000 (6 180 ppm/°C)



Menu	Measuring range
428-50	Cu 50 (4 280 ppm/°C)
428-0.1	Cu 1 00 (4 280 ppm/°C)
426-50	Cu 50 (4 260 ppm/°C)
426-0.1	Cu 100 (4 260 ppm/°C)

Menu	Type of thermocouple
T/C B	B
T/C E	E
T/C J	J
T/C K	K
T/C N	N
T/C R	R
T/C S	S
T/C T	T
T/C L	L



6.1.2.d Selection of type of sensor connection

RTD **OHM** **T/C**

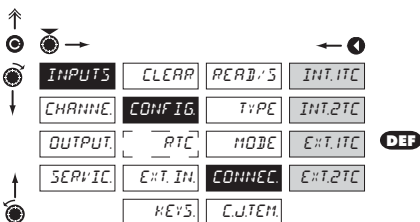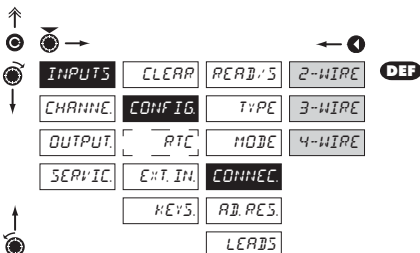

CONNEX. Selection of type of sensor connection

RTD **OHM**

2-WIRE 2-wire connection

3-WIRE 3-wire connection

4-WIRE 4-wire connection

T/C

INT. ITC Measurement without reference thermocouple

- measuring cold junction at instrument brackets

INT. 2TC Measurement with reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

EXT. ITC Measurement without reference thermocouple

- the entire measuring set is working under invaried and constant temperature

EXT. 2TC Measurement with reference thermocouple

- when using compensation box




Method and procedure of setting the cold junctions is described in separate chapter on page 88



For thermocouple type "B" the items CONNEX. and C. J. TEM. are not available

6.1.2e Setting temperature of cold junction

T/C

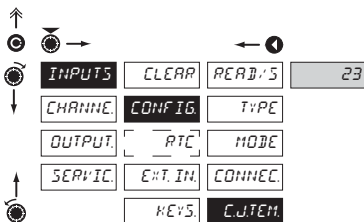


C.J.TEM. Setting temperature of cold junction

- range 0...99 °C with compensation box

- **DEF** = 23 °C

6.1.2f Compensation of 2-wire conduct

RTD OHM

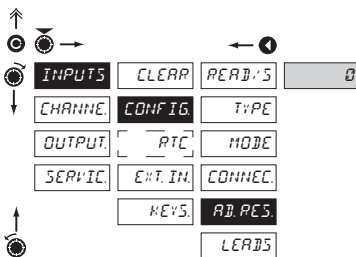

A.D.RES. Offset of the beginning of the measuring range


- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head

- entered directly in Ohm (0...9999)

- **DEF** = 0

6.1.2g Compensation of 2-wire conduct

RTD OHM

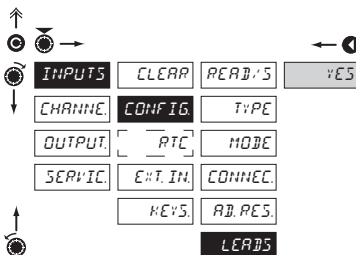


LEADS Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection

- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit

- **DEF** = 0

6.1.3 Setting the real time clock

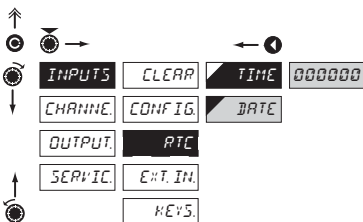

RTC Setting the real time clock (RTC)


TIME Time setting

- format 23.59.59

DATE Date setting

- format DD.MM.YY

6.1.4a External input function selection

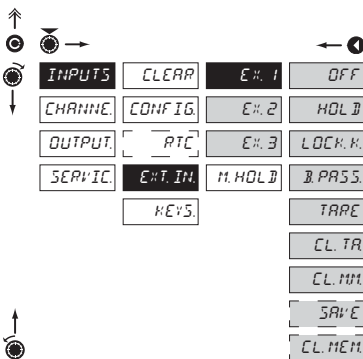

EXT. IN. External input function selection

OFF Input is off

HOLD Activation of HOLD

LOCK K. Locking keys on the instrument

B.PASS. Activation of locking access into programming menu LIGHT/PROFI

TARE Tare activation

CL.TAR. Tare resetting

CL.MH. Resetting min/max value

SAVE Activation of measured data record in instrument memory (not in standard equipment)

CL.MEM. Clearing memory


- clearing memory with data measured in modes "FAST" or "RTC"

- **DEF** EXT. 1 > HOLD
- **DEF** EXT. 2 > LOCK K.
- **DEF** EXT. 3 > TARE

*

Setting procedure is identical for EXT. 2 and EXT. 3


6.1.4b Selection of function "HOLD"

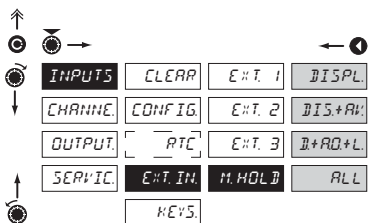

H.HOLD Selection of function "HOLD"

DISPL.	"HOLD" locks only the value displayed
DIS+RD.	"HOLD" locks the value displayed and on AO
D+RD+L.	"HOLD" locks the value displayed, on AO and limit evaluation
ALL	"HOLD" locks the entire instrument

6.1.5a Optional accessory functions of the keys

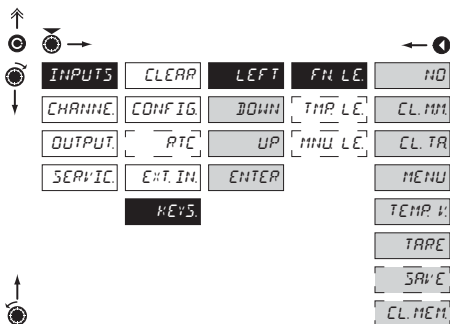

FN.LE. Assigning further functions to instrument keys

- „FN. LE.“ > executive functions
- „TMP. LE.“ > temporary projection of selected values
- „MNU. LE.“ > direct access into menu on selected item

NO	Key has no further function
CL.MM.	Resetting min/max value
CL.TAR.	Tare resetting
MENU	Direct access into menu on selected item
TEMP.V.	Temporary projection of selected values
TARE	Tare function activation
CL.MEM.	Clearing memory


- clearing memory with data measured in modes "FAST" or "RTC"

! Preset values of the control keys DEF:

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o function

! Setting is identical for LEFT, DOWN, UP and ENTER

6.1.5b Optional accessory functions of the keys - Temporary projection

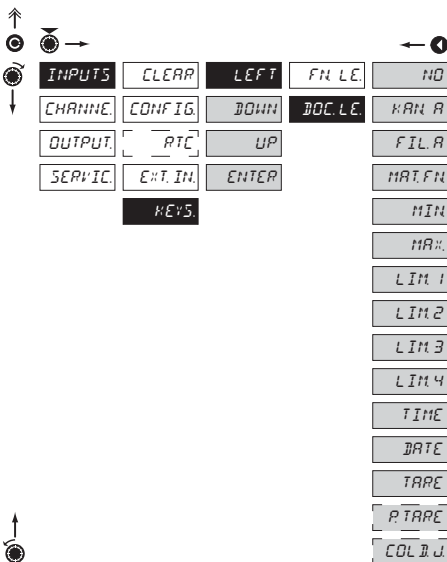

!
 During temporary projection the following text flashes on the descriptive display:

Minimum	MIN
Maximum	MAX
Tare	TARA
Set tare	P. TAR. A


DOC. LE. Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **⊕** + "Selected key", this holds until the stroke of any key

- | | |
|----------------|--|
| NO | Temporary projection is off |
| CHAN. A | Temporary projection of "Channel A" value |
| FIL. A | Temporary projection of "Channel A" value after processing digital filters |
| MAT. FN | Temporary projection of "Mathematic functions" value |
| MIN | Temporary projection of "Min. value" |
| MAX | Temporary projection of "Max. value" |
| LIM 1 | Temporary projection of "Limit 1" value |
| LIM 2 | Temporary projection of "Limit 2" value |
| LIM 3 | Temporary projection of "Limit 3" value |
| LIM 4 | Temporary projection of "Limit 4" value |
| TIME | Temporary projection of "TIME" value |
| DATE | Temporary projection of "DATE" value |
| TARE | Temporary projection of "TARE" value |
| P. TARE | Temporary projection of "P. TARE" value |
| COL. J. | Temporary projection of "CJC" value |

!
 Setting is identical for **LEFT, DOWN, UP** and **ENTER**


6.1.5c Optional accessory functions of the keys - Direct access to item

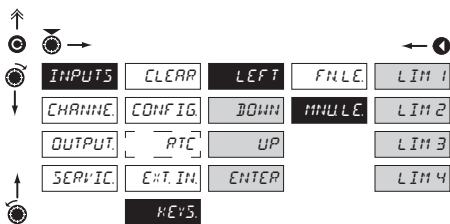**MNU.LE:** Assigning access to selected menu item

- LIM 1** Direct access to item "LIM 1"
- LIM 2** Direct access to item "LIM 2"
- LIM 3** Direct access to item "LIM 3"
- LIM 4** Direct access to item "LIM 4"

!
Setting is identical for LEFT, DOWN, UP and ENTER

6.2 SETTING "PROFI" - CHANNELS

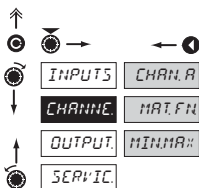


The primary instrument parameters are set in this menu

- CHAN. A** Setting parameters of measuring "Channel"
- MAT. FN** Setting parameters of mathematic functions
- MINMA:** Selection of access and evaluation of Min/ max value

6.2.1a Display projection

DC PM DU OHM

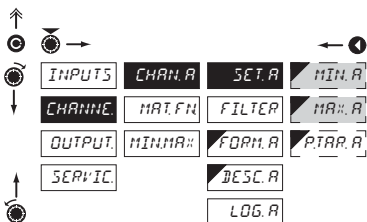**SET. A** Setting display projection

MIN. A Setting display projection for minimum value of


- input signal
- range of the setting is -99999...999999
- **DEF** = 0

MA: A Setting display projection for maximum value of

- input signal
- range of the setting is -99999...999999
- **DEF** = 100


6.2.1b Setting fixed tare

DC PM DU OHM

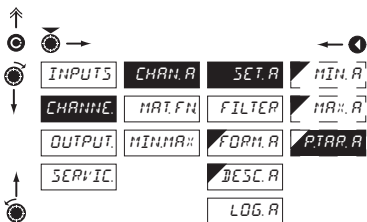**P. TAR. A** Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. TAR. A > 0) display shows "T" symbol
- range of the setting is 0...999999
- **DEF** = 0

6.2.1c Digital filters

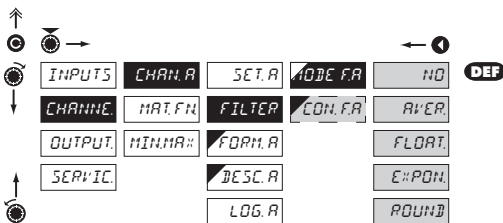

NOBE.FA Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

NO Filters are off

AVER. Measured data average

- arithmetic average from given number („CON.F.A.“) of measured values
- range 2...100

FLOAT. Selection of floating filter

- floating arithmetic average from given number („CON.F.A.“) of measured data and updates with each measured value
- range 2...30

E#PON. Selection of exponential filter

- integration filter of first prvniho grade with time constant („CON.F.A.“) measurement
- range 2...100


ROUND. Measured value rounding

- is entered by any number, which determines the projection step (e.g.: "CON.F.A."="2,5 > display 0, 2,5, 5,...)

CON.F.A. Setting constants

- this menu item is always displayed after selection of particular type of filter
- **DEF** = 2

6.2.1d Projection format - positioning of decimal point

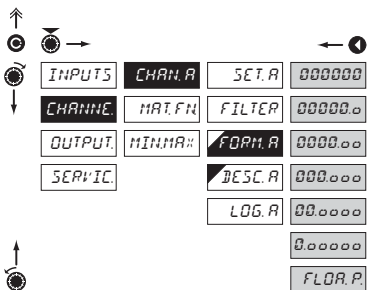

FORM.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOAT.P.“

000000 Setting DP - XXXXXX.

00000.0 Setting DP - XXXX.x

DEF > **RTD** **T/C**

0000.00 Setting DP - XXXX.xx

DEF > **DC** **PM** **DU** **OHM**


000.0000 Setting DP - XXX.xxx

00.00000 Setting DP - XX.xxxx

0.000000 Setting DP - X.xxxxx

FLOOR.P Floating DP

6.2.1e Projection of description - the measuring units

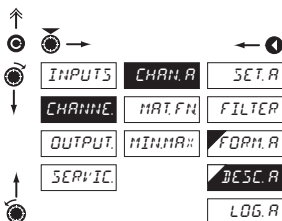


DESC.A Setting projection of descrpt. for "Channel A"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- **RTD** **T/C** **DEF** = °C
- **DC** **PM** **DU** **OHM** **DEF** = none

!
Table of signs on page 91

6.2.1f Selection of storing data into instrument memory

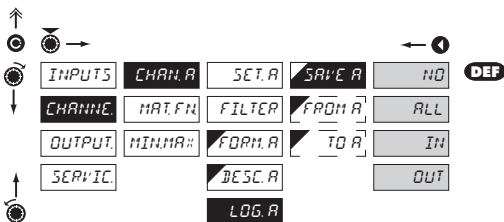


LOG.A Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

- NO** Measured data is not stored
- ALL** Measured data is stored in memory
- IN** Only data measured within the set interval is stored in memory
- OUT** Only data measured outside the set interval is stored in memory
- FROM.A** Setting the initial interval value
 - setting range: -99999...999999
- TO.A** Setting the final interval value
 - setting range: -99999...999999

6.2.2a Mathematic functions

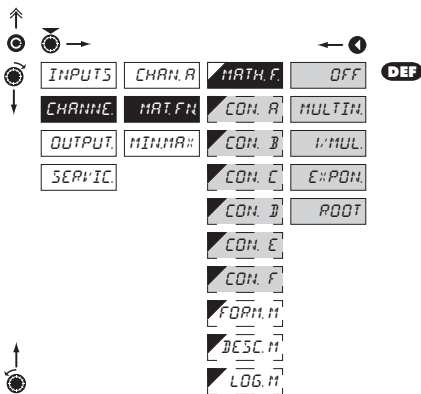
MATH.F Selection of mathematic functions

OFF

Mathematic functions are off

MULTIN

Multinomial

$$Ax^3 + Bx^4 + Cx^3 + Dx^2 + Ex + F$$

I/MUL

1/x

$$\frac{A}{x^3} + \frac{B}{x^4} + \frac{C}{x^3} + \frac{D}{x^2} + \frac{E}{x} + F$$

E:POW

Exponential

$$A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$$

ROOT

Odmocnina

$$A \times \sqrt{\frac{Bx+C}{Dx+E}} + F$$


CON. --

Setting constants for calculation of mat.

functions

- this menu is displayed only after selection of given mathematic function

6.2.2b Mathematic functions - decimal point

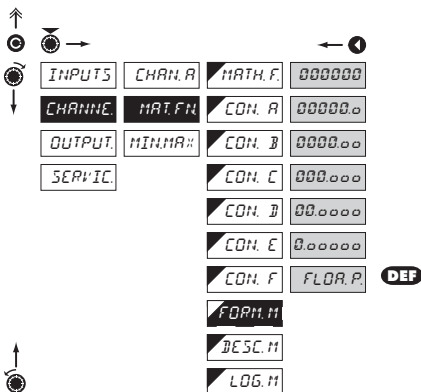

FORM.M. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000 Setting DP - XXXXXX.

000000 Setting DP - XXXXX.x

0000.00 Setting DP - XXXX.xx

000.000 Setting DP - XXX.xxx


00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOA.P. Floating DP

DEF

6.2.2c Mathematic functions - measuring units

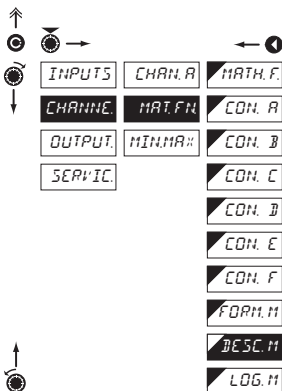


DESC.M. Setting projection of description for "MAT.FN"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00

DEF = no description

! Table of signs on page 91

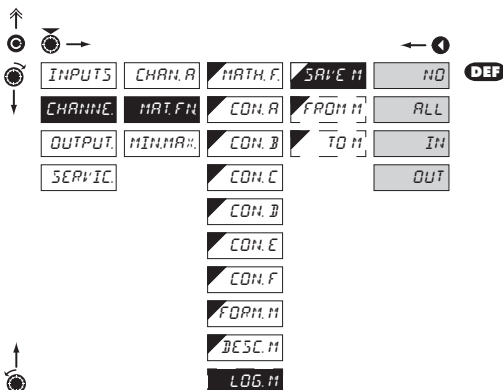6.2.2d Mathematics functions - selection of storing data into instrument memory

LOG.M Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)


- NO** Measured data is not stored
- ALL** Measured data is stored in memory
- IN** Only data measured within the set interval is stored in memory
- OUT** Only data measured outside the set interval is stored in memory

FROM.M Setting the initial interval value

- setting range: -99999...999999

TO.M Setting the final interval value


- setting range: -99999...999999

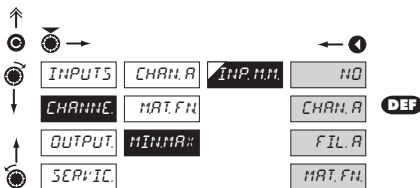6.2.3 Selection of evaluation of min/max value

INP.M.M. Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated

- NO** Evaluation of min/max value is off
- CHAN.A** From "Channel A"
- FIL.A** From "Channel A" after digital filters processing
- MATH.FN** From "Mathematic functions"

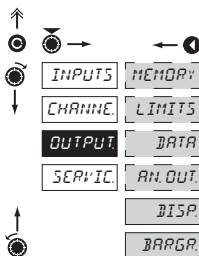
6.3 SETTING „PROFI“ - OUTPUTS



In this menu it is possible to set parameters of the instrument output signals

- MEMORY** Setting data logging into memory
- LIMITS** Setting type and parameters of limits
- DATA** Setting type and parameters of data output
- AN. OUT.** Setting type and parameters of analog output
- DISP.** Setting display projection and brightness
- BARGR.** Setting bargraph projection and brightness


6.3.1 a Selection of mode of data logging into instrument memory

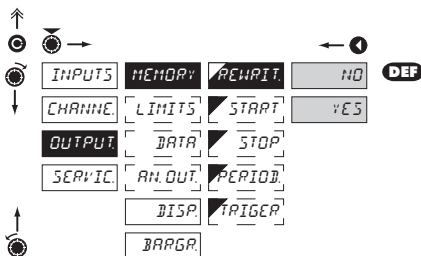
REWRIT. Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

- NO** Rewriting values prohibited
- YES** Rewriting values permitted, the oldest get rewritten by the latest

6.3.1b Setting data logging into instrument memory - RTC

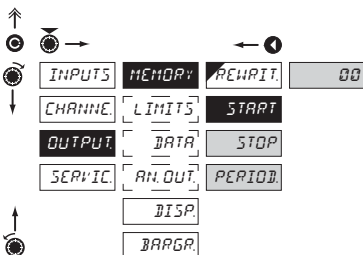

START Start of data logging into instrument memory

- time format HH.MM.SS

STOP Stop data logging into instrument memory

- time format HH.MM.SS

PERIOD Period of data logging into instrument memory


- determines the period in which values will be logged in an interval delimited by the time set under items START and STOP

- time format HH.MM.SS

- records are made on a daily basis in selected interval and period

- item not displayed if "SAVE" is selected in menu (INPUT > EXT. IN.)

6.3.1c Setting data logging into instrument memory - FAST

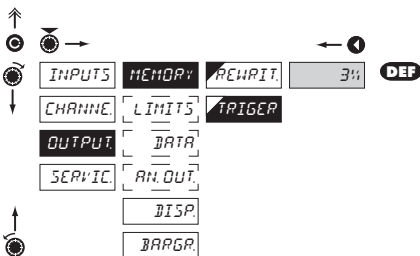

TRIGGER Setting logging data into inst. memory

- logging data into inst. memory is governed by the following selection, which determines how many percent of the memory is reserved for data logging prior to initiation of trigger impulse

- initialization is on ext. input or button

- setting in range 1...100 %

- when setting 100 %, datalogging works in the mode ROLL > data keep getting rewritten in cycles

1. Memory initialization

- clear memory (ext.input, button)

- LED "M" flashes, after reading TRIGGER (% memory is permanently shining. In ROLL flashes constantly.

2. Triggering


- external input, button

- after the memory LED is full "M" turns off


- in the ROLL mode the trigger ends datalogging and LED turns off

3. Termination

- ext. input, button or reading data via RS

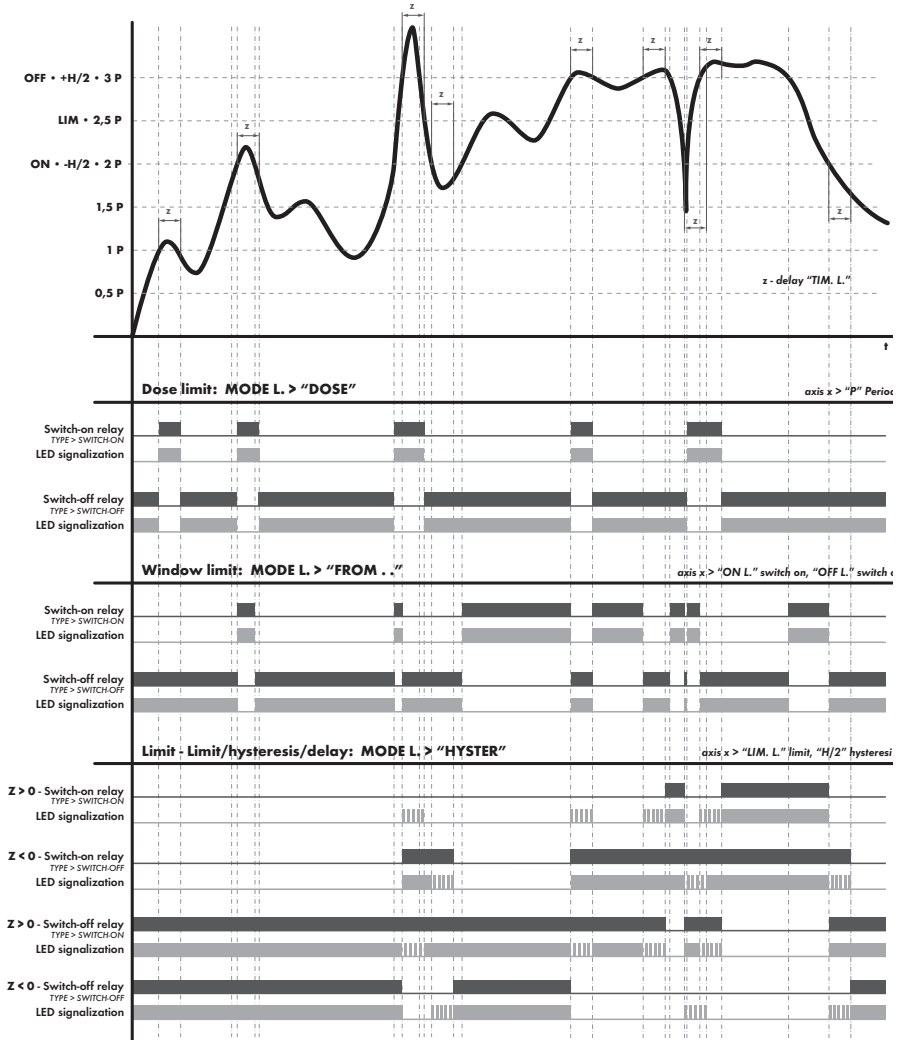

6.3.2a Selection of input for limits evaluation

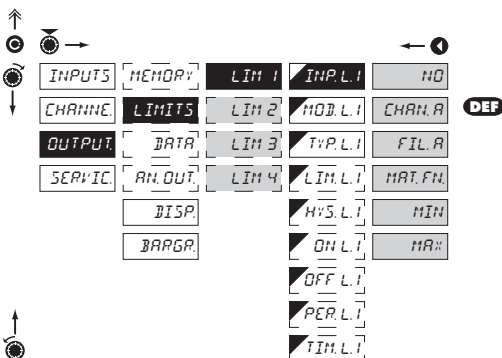


!
Setting is identical for LIM 2, LIM 3 and LIM 4

INPL.L. Selection evaluation of limits

- selection of value from which the limit will be evaluated

- NO** Limit evaluation is off
- CHAN.A** Limit evaluation from "Channel A"
- FIL.A** Limit evaluation from "Channel A" after digital filters processing
- MAT.FN.** Limit evaluation from "Mathematic functions"
- MIN** Limit evaluation from "Min.value"
- MAX** Limit evaluation from "Max.value"

6.3.2b Volba typu limit

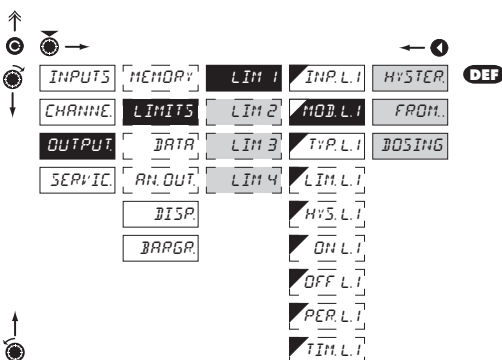


!
Setting is identical for LIM 2, LIM 3 and LIM 4

MOD.L. Selection the type of limit

- HYS.TER.** Limit is in mode "Limit, hysteresis, delay"
 - for this mode the parameters of "LIM. L." are set, at which the limit will shall react, "HYS. L." the hysteresis range around the limit (LIM $\pm 1/2$ HYS) and time "TIM. L." determining the delay of relay switch-on
- FROM.** Frame limit
 - for this mode the parameters are set for interval "ON. L." the relay switch-on and "OFF. L." the relay switch-off
- DOSING** Dose limit (periodic)
 - for this mode the parameters are set for "PER. L." determining the limit value as well as its multiples at which the output is active and "TIM. L." indicating the time during which is the output active

6.3.2c Selection of type of output

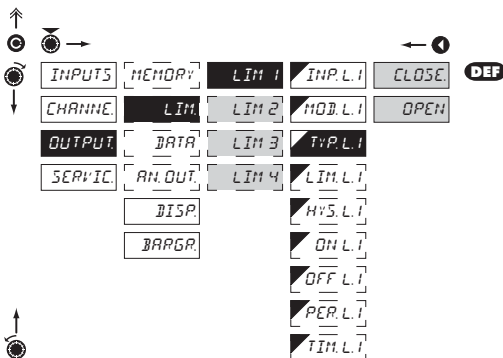

TYP.L1 Selection of type of output

CLOSE Output switches on when condition is met

OPEN Output switches off when condition is met

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.2d Setting values for limits evaluation

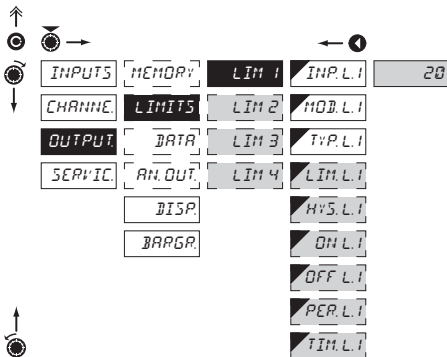

LIM.L1 Setting limit for switch-on

- for type "HYSTER"

HY5.L1 Setting hysteresis

- for type "HYSTER"
- indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)

ON.L1 Setting the outset of the interval of limit switch-on

- for type "FROM"

OFF.L1 Setting the end of the interval of limit switch-on

- for type "FROM"

PER.L1 Setting the period of limit switch-on


- for type "DOSE"

TIM.L1 Setting the time switch-on of the limit

- for type "HYSTER" and "DOSE"
- setting within the range: $\pm 0..99,9$ s
- positive time > relay switches on after crossing the limit (LIM. L1) and the set time (TIM. L1)
- negative time > relay switches off after crossing the limit (LIM. L1) and the set negative time (TIM. L1)

Setting is identical for LIM 2, LIM 3 and LIM 4


6.3.3a Selection of data output baud rate

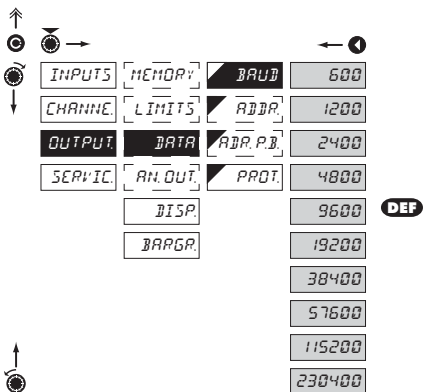

BAUD Selection of data output baud rate

600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud

6.3.3b Setting instrument address

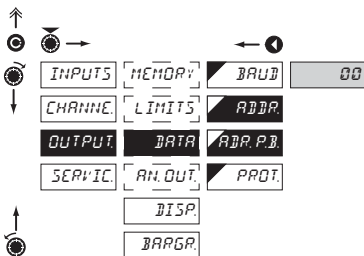


ADDR Setting instrument address

- setting in range 0...31
- **DEF** = 00

ADR.P.B. Setting instrument address - PROFIBUS


- setting in range 1...127
- **DEF** = 1

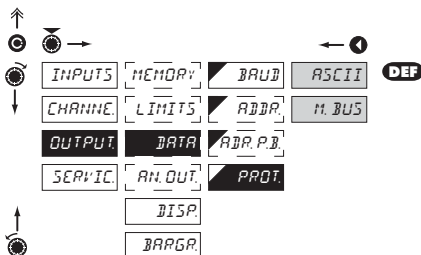6.3.3c Selection of data output protocol


PROT. Selection of the type of analog output

ASCII Data protocol ASCII

M.BUS Data protocol DIN MessBus

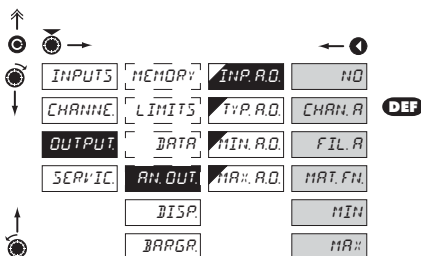6.3.4a Selection of input for analog output


INP.A.O. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

NO AO evaluation is off

CHAN.A AO evaluation from "Channel A"


FIL.A AO evaluation from "Channel A" after digital filters processing

MAT.FN. AO evaluation from "Math.functions"

MIN AO evaluation from "Min.value"

MAX AO evaluation from "Max.value"

6.3.4b Selection of the type of analog output

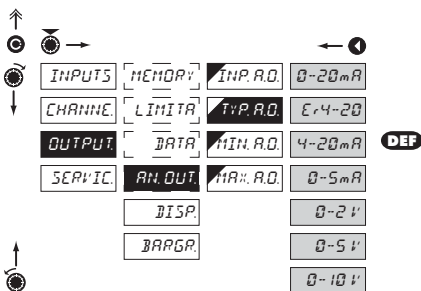

TYP.A.O. Selection of the type of analog output

0-20mA Type - 0...20 mA

0-4-20 Type - 4...20 mA

- with indication of error statement (< 3,0 mA)

4-20mA Type - 4...20 mA


0-5mA Type - 0...5 mA

0-2V Type - 0...2 V

0-5V Type - 0...5 V

0-10V Type - 0...10 V

6.3.4c Setting the analog output range

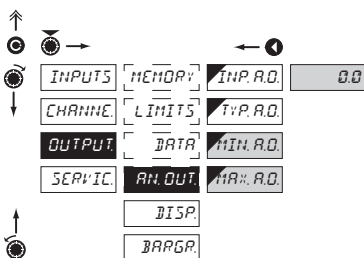

AN.OUT. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

MIN.A.O. Assigning the display value to the beginning of the AO range

- range of the setting is -99999...999999


- **DEF** = 0

MAX.A.O. Assigning the display value to the end of the AO range

- range of the setting is -99999...999999

- **DEF** = 100


6.3.5a Selection of input for display projection

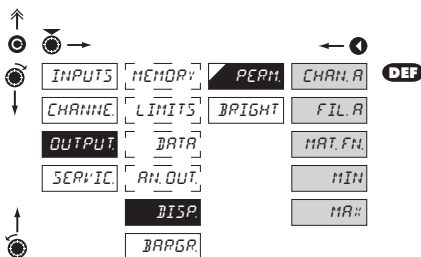**PERM.** Selection display projection

- selection of value which will be shown on the instrument display

- CHAN. A** Projection of values from "Channel A"
- FIL. A** Projection of values from "Channel A" after digital filters processing
- MAT. FN.** Projection of values from "Math.functions"
- MIN** Projection of values from "Min.value"
- MAX** Projection of values from "Max.value"


6.3.5d Selection of display brightness

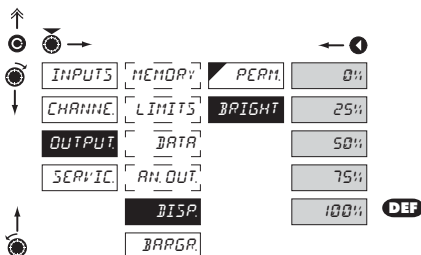**BRIGHT** Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- 0%** Display is off
- 25%** Display brightness - 25%
- 50%** Display brightness - 50%
- 75%** Display brightness - 75%
- 100%** Display brightness - 100%

6.3.6a Bargraph - Selection of input to be displayed

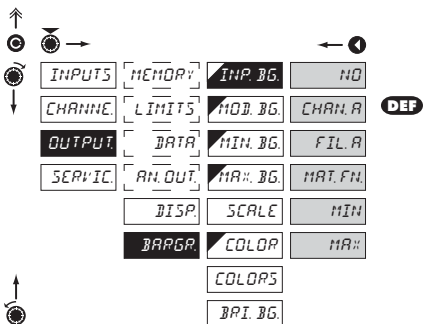


INP. BG. Selection of value - bargraph

- selecting the value which is displayed by the bargraph

- NO** Bargraph is OFF
- CHAN. A** From "Channel A"
- FIL. A** From "Channel A" after digital filters processing
- MAT. FN.** From "Math.functions"
- MIN** From "Min. value"
- MA::** From "Max. value"


6.3.6b Bargraph - Selection of display mode

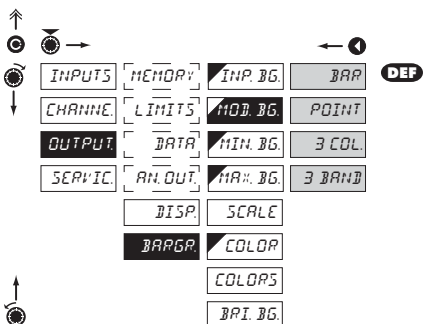

MOD. BG. Selection of bargraph display mode

- BARGR** Bar mode
- Mono-colored bar
- POINT** Point mode
- Single mono-coloured point
- 3 COL.** Mono-colored bar which changes colours depending on the signal value relative to the limit setting (COLOURS > BAND)
- When set value is exceeded, the colour of the entire bar changes, which means the bar is always mono-coloured
- 3 BAND** Tri-colour mode, "cascade"
- The colour changes within the set sections (COLOURS > BAND)
- When a set value is exceeded, the colour of the bar changes only within the set section which means that 3 colours can be projected simultaneously

6.3.6c Bargraph - Setting of projection range

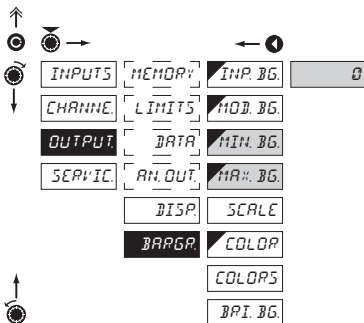
BARGR Setting of the bargraph projection range


MIN. BG. Setting of the bargraph projection range for the minimum input signal

- Setting range is -99999...999999
- **DEF** = 0

MAX. BG. Setting of the bargraph projection range for the maximum input signal

- Setting range is -99999...999999
- **DEF** = 0

6.3.6d Bargraph - setting of LCD scale

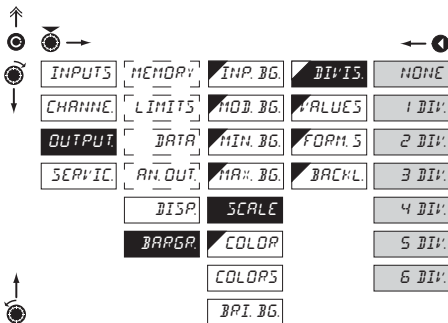
DIVIS Selecting the division of the LCD scale

- It enables emphasized division of the LCD scale

NONE Scale is off

1 DIV. Single division

- beginning and end of the scale are emphasized

2 DIV. Two divisions

- 3 segments are emphasized

3 DIV. Three divisions

- 4 segments are emphasized

4 DIV. Four divisions


- 5 segments are emphasized

5 DIV. Five divisions

- 6 segments are emphasized

6 DIV. Six divisions

- 7 segments are emphasized

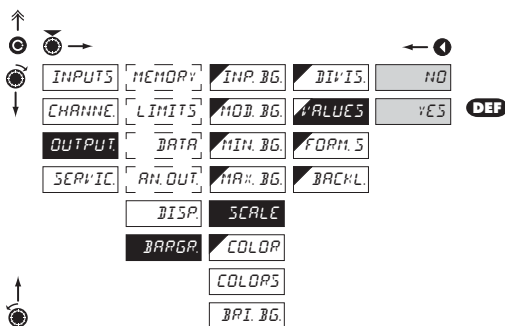

VALUES

Selecting numeric description on LCD scale


- autonomous control of numeric description on the LCD scale

NO

Numbers are disabled

YES

Numbers are enabled

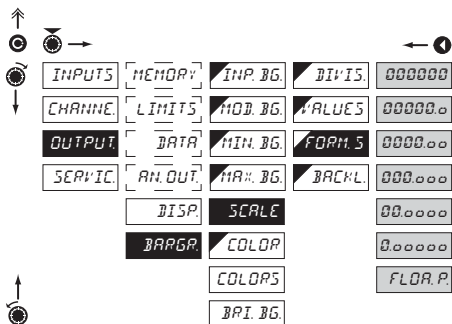

FORM. S

Selecting the position of the decimal point (DP) on LCD scale

- in respect to the size of the numeric description we recommend using the preset value

000000

DP setting - XXXXX

00000.0

DP setting - XXXXX.x

0000.00

DP setting - XXXX.xx

000.000

DP setting - XXX.xxx

00.0000


DP setting - XX.xxxxx

0.00000

DP setting - X.xxxxx


FLOR. P.

Floating DP

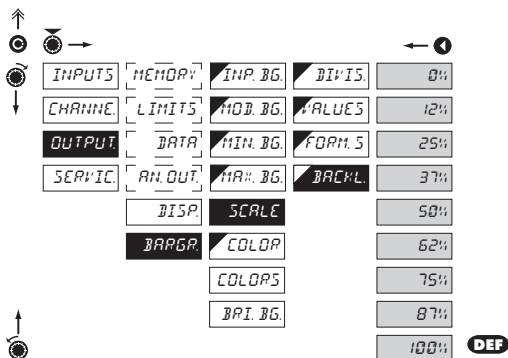
BAKWL Selecting the LCD backlight brightness


- by adjusting the LCD backlight brightness we can match the ambient lighting conditions

0%	Backlight is off
12%	Backlight level is set to 12 %
25%	Backlight level is set to 25 %
37%	Backlight level is set to 37 %
50%	Backlight level is set to 50 %
62%	Backlight level is set to 62 %
75%	Backlight level is set to 75 %
87%	Backlight level is set to 87 %
100%	Backlight level is set to 100 %

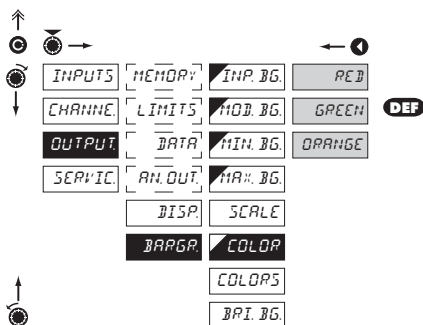6.3.6e Bargraph - Setting the colour

COLOR Setting the bargraph colour

- item "COLOR" is displayed only in selected mode ("BARGR. > MOD. BG.") "BAR" or "POINT"

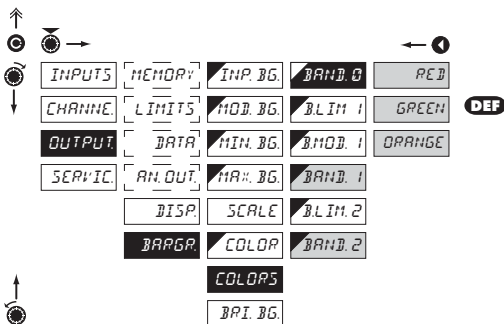RED	Red colour
GREEN	Green colour
ORANGE	Orange colour

6.3.6f Bargraph - Bargraph colour selection

BAND. 0 Selecting bargraph colour

- item "COLORS" is displayed only in selected mode ("BARGR. > MOD. BG.") "3 COL." or "3 BAND"

CEPVEN Red colour


GREEN Green colour

ORANGE Orange colour

- **DEF** = Green (Band 0)
- **DEF** = Orange (Band 1)
- **DEF** = Red (Band 2)



Setting for BAND. 1 and BAND. 2 is identical

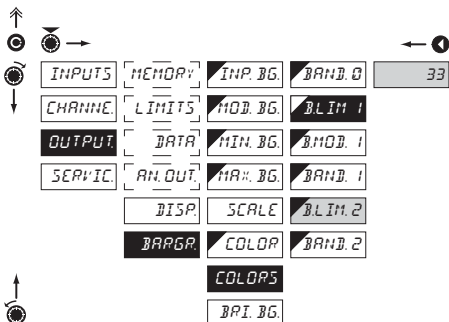6.3.6g Bargraf - Setting the bands for colour change

B.LIM. 1 Setting the bands for colour change

- item "COLORS" is displayed only in selected mode ("BARGR. > MOD. BG.") "3 COL." or "3 BAND"
- items „B.LIM. 1" and „B.LIM. 2" set the borderlines of the colour bands

B.LIM. 1 Borderline between band 0 - 1


B.LIM. 2 Borderline between band 1 - 2

- **DEF** = 33 (b. LIM 1)
- **DEF** = 66 (b. LIM 2)



Setting for B. LIM 2 is identical

6.3.6h Bargraph - Selection of inverted projection

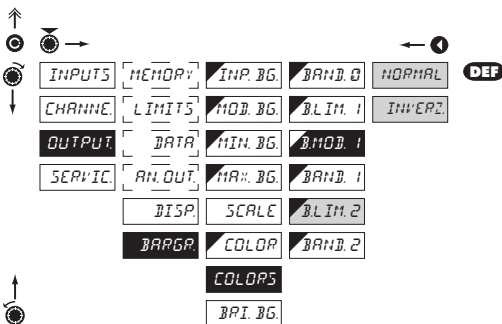


B. MOD. 1 Selection of inverted projection "Band 0"

- item "COLORS" is displayed only in selected mode ("BARGR. > MOD. BG.") "3 COL." or "3 BAND"
- setting „B. MOD 1" is intended for projection where indication of the "central" zero point is required

NORMAL Bar in "Band 0" moves from left to right

INVERZ. Bar in "Band 0" moves from right to left

6.3.6i Bargraph - Setting the bargraph brightness

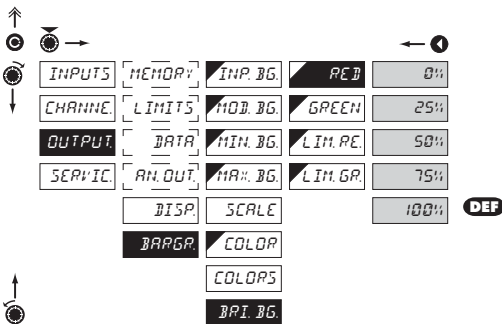

BPI. BG. Setting the bargraph brightness

0% Display is off

- upon a keystroke it comes on for the duration of 10 seconds


25% Display brightness - 25%

50% Display brightness - 50%

75% Display brightness - 75%

100% Display brightness - 100%


6.4 SETTING "PROFI" - SERVIS

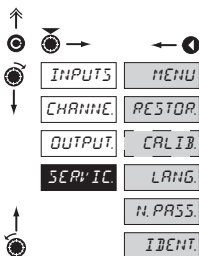

The instrument service functions are set in this menu

MENU	Selection of menu type LIGHT/PROFI
RESTOR	Restore instrument manufacture setting and calibration
CALIB	Input range calibration for „DU“ version
LANG	Language version of instrument menu
N.PASS	Setting new access password
IDENT	Instrument identification

6.4.1 Selection of type of programming menu

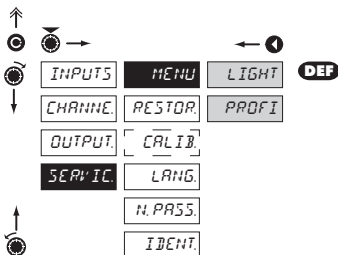
MENU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills

LIGHT Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another


PROFI Active PROFI menu

- complete programming menu for expert users
- tree menu



Change of setting is valid upon next access into menu

6.4.2 Restoration of manufacture setting

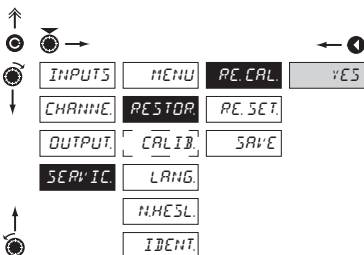


RESTOR. Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

RE.CAL. Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm your selection „YES“

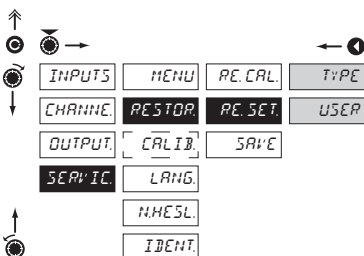

RE.SET. Restoration of instrument manufacture setting

TYPE Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (Items marked DEF)

USER Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

SAVE Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed


Jobs performed	Restore	
	Calibration	Setting
cancel USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancel or linearization tables	✓	✓
clears tare	✓	✓
clears conduct resistances	✓	✓
restore manufacture calibration	✓	✗
restore manufacture setting	✗	✓



After restoration the instrument switches off for couple seconds


6.4.3 Calibration - Input range

DU

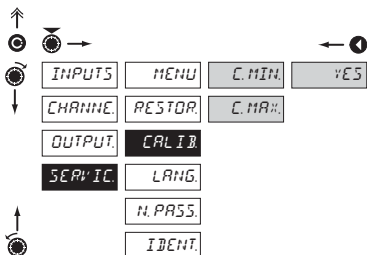**CALIB.** Input range calibration


- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MAX" is displayed, move the potentiometer traveller to the required maximum position and confirm by „Enter“, calibration is confirmed by „YES"

6.4.4 Selection of instrument menu language version

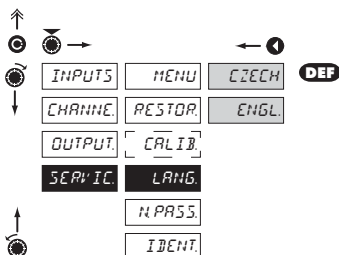**LANG.** Selection of instrument menu language version

- CZECH** Instrument menu is in Czech
- ENGL.** Instrument menu is in English


6.4.5 Setting new access password

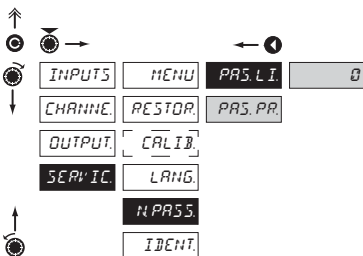

N.PASS. Setting new password for access to LIGHT and PROFi menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFi Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss:
LIGHT Menu > „8177“
PROFI Menu > „7915“

6.4.6 Instrument identification

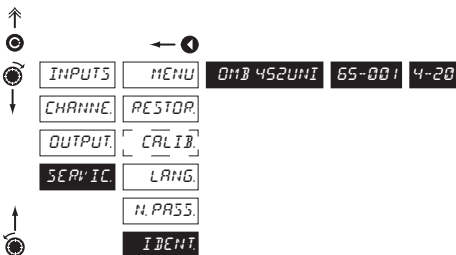


IDEN. Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

IDEN.	pos	Description
	1.	type of instrument
	2.	SW: number - version
	3.	the input type

7.0 SETTING ITEMS INTO "USER" MENU

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L I
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

Setting

flashing legend - current setting is displayed



NO item will not be displayed in USER menu

YES item will be displayed in USER menu with editing option

SHOW item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu

setting projection sequence



Example:

Into USER menu were selected these items:

(keys +) > N. TARE, LIM. 1, LIM. 2, LIM. 3, for which we have preset this sequence:


(keys +):

N. TARE	5
LIM 1	0 (sequence not determined)
LIM. 2	2
LIM. 3	1

Upon entering USER menu

(key) items will be projected in the following sequence: LIM 3 > LIM 2 > CL.TAR. > LIM 1

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

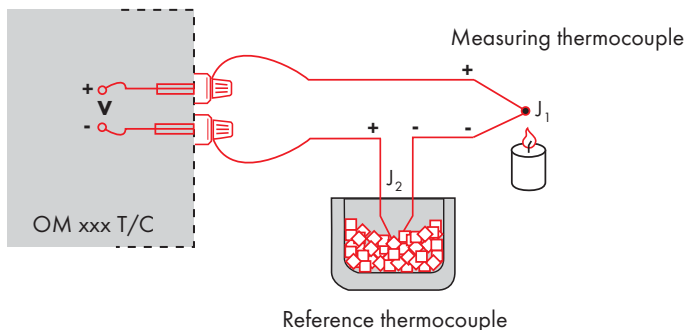

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set *CONNECT* in the instrument menu to *INT2TC* or *E#T2TC*
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu *CJCTEM*, its temperature (applies for setting *CONNECT* to *E#T2TC*)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu *CONNECT* to *INT2TC*. Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set *CONNECT* in the instrument menu to *INT1TC* or *E#T1TC*
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting *CONNECT* to *E#T1TC*)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of $0 \div 31$. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at na.www.orbit.merret.cz/rs or in the OM Link program.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Activity	Data transferred										
Data solicitation (PC)	#	A	A	<CR>							
Data transmission (Instrument)	>	R	<SP>	D	D	D	D	D	(D)	(D)	<CR>
Command confirm. (Instr.) - OK	!	A	A	<CR>							
Command confirm. (Instr.) - Bad	?	A	A	<CR>							
Instrument identification	#	A	A	1Y	<CR>						
HW identification	#	A	A	1Z	<CR>						
One-time measurement	#	A	A	7X	<CR>						
Repeated measurement	#	A	A	8X	<CR>						

LEGEND

#	35	23 _H	Command beginning
A	A	0...31	Two signs of instrument address (sent in ASCII - tens and ones, e.g. "01", "99" universal)
<CR>	13	0D _H	Carriage return
<SP>	32	20 _H	Space
D			Data - usually signs "0"... "9", ".", "-", ";", (D) - DP, and (-) may prolong data
R	50 _H ...	57 _H	Relay and Tare status
!	33	21 _H	Positive command confirmation (ok)
?	63	3F _H	Negative command confirmation (bad)
>	62	3E _H	Beginning of the data transmitted

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

ERROR	CAUSE	ELIMINATION
<i>E. D. U n</i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>E. D. D.</i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>E. T. U n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. T. D.</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. I. U n</i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>E. I. D.</i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. H H</i>	A part of the instrument does not work properly	send the instrument for repair
<i>E. E E</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. S E T</i>	Change of a linked item in the menu, Data in EEPROM outside the range	change of contiguous items, perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. C L P.</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

0		Q	"	£	\$	¥	€	'	0		!	"	#	\$	%	&	'
8	:	:	*	+	,	-	.	/	8	()	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	VA	Vr	<	=	>	?	24	8	9	VA	Vr	<	=	>	?
32	Q	R	B	C	D	E	F	G	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[\]	^	_	56	X	Y	Z	[\]	^	_
64	`	a	b	c	d	e	f	g	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w	80	p	q	r	s	t	u	v	w
88	X	Y	Z	{		}	~		88	x	y	z	{		}	~	

INPUT

range is adjustable		DC
	±60 mV	Input U
	±150 mV	Input U
	±300 mV	Input U
	±1200 mV	Input U
	>100 MOhm	Input U
	>100 MOhm	Input U
	>100 MOhm	Input U

range is adjustable		DC - option "A"
	±0,1 A	Input I
	±0,25 A	Input I
	±0,5 A	Input I
	±1 A	Input I
	±5 A	Input I
	±100 V	Input U
	±250 V	Input U
	±500 V	Input U
	< 300 mV	Input I
	< 300 mV	Input I
	< 300 mV	Input I
	< 30 mV	Input I
	< 150 mV	Input I
	20 MOhm	Input U
	20 MOhm	Input U
	20 MOhm	Input U

range is adjustable		PM
	0/4...20 mA	Input I
	±2 V	Input U
	±5 V	Input U
	±10 V	Input U
	±40 V	Input U
	< 400 mV	Input I
	1 MOhm	Input U
	1 MOhm	Input U
	1 MOhm	Input U

range is adjustable		OHM
	0...100 Ohm	Input U
	0...1 kOhm	Input U
	0...10 kOhm	Input U
	0...100 kOhm	Input U
Connection:	2, 3 or 4 wire	Input U

Pt xxxxx	-200°...850°C	RTD
Pt xxxxx/3910 ppm	-200°...1 100°C	
Ni xxxxx	-50°...250°C	
Cu/4260 ppm	-50°...200°C	
Cu/4280 ppm	-200°...200°C	
Type Pt:	EU > 100/500/1 000 Ohm, with 3 850 ppm/°C	
	US > 100 Ohm, with 3 920 ppm/°C	
	RU > 50/100 Ohm, with 3 910 ppm/°C	
Type Ni:	Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C	
Type Cu:	Cu 50/Cu 100 with 4 260/4 280 ppm/°C	
Connection:	2, 3 or 4 wire	

range is adjustable in configuration menu		T/C
Type:	J (Fe-CuNi)	-200°...900°C
	K (NiCr-Ni)	-200°...1 300°C
	T (Cu-CuNi)	-200°...400°C
	E (NiCr-CuNi)	-200°...690°C
	B (PtRh30-PtRh6)	300°...1 820°C
	S (PtRh10-Pt)	-50°...1 760°C
	R (Pt13Rh-Pt)	-50°...1 740°C
	N (OmegaIloy)	-200°...1 300°C
	L (Fe-CuNi)	-200°...900°C

Voltage of lin. pot.	2,5 VDC/6 mA	DU
	min. potentiometer resistance is 500 Ohm	

PROJECTION

Display:	999999, intensive red or green
	7-segment LED, digit height 9,1 mm (OMB 451)
	14-segment LED, digit height 14 mm (OMB 452)
Bargraph projection:	50 segments
	intensive red/green/orange LED
	including independant signaling of set limits
Decimal point:	adjustable - in menu
Brightness:	selectable - in menu, independently for individual displays

INSTRUMENT ACCURACY

TC:	50 ppm/°C	
Accuracy:	±0,1 % of range + 1 digit	
	±0,15 % of range + 1 digit	RTD, T/C
	Above accuracies apply for projection 9999	
Resolution:	0,01°/0,1%/1°	RTD
Rate:	0,1...40 measurements/s**	
Overload capacity:	10x (t < 100 ms) not for 400 V and 5 A,	
	2x (long-term)	
Linearisation:	by linear interpolation in 50 points	
	- solely via OM Link	
Digital filters:	Averaging, Floating average, Exponential filter, Rounding	
Comp. of conduct:	max. 40 Ohm/100 Ohm	RTD
Comp. of cold junct.:	adjustable	T/C
Functions:	0°...99°C or automatic	
	Tare - display resetting	
	Hold - stop measuring (at contact)	
	Lock - control key locking	
	MM - min/max value	
	Mathematic functions	
OM Link:	company communication interface for setting, operation and update of instrument SW	
Watch-dog:	reset after 400 ms	
Calibration:	at 25°C and 40 % of r.h.	

COMPARATOR

Type:	digital, adjustable in menu
Mode:	Hysteresis, From, Dosing
Limits:	-99999...999999
Hysteresis:	0...999999
Delay:	0...99,9 s
Output:	4x relays with switch-off contact (Form C) (230 VAC/50 VDC, 3 A)*

* values apply for resistance load

DATA OUTPUTS

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS
 Data format: 8 bit + no parity + 1 stop bit (ASCII)
 7 bit + even parity + 1 stop bit (MessBus)
 Rate: 600...230 400 Baud
 9 600 Baud...12 Mbaud (PROFIBUS)
 RS 232: isolated, two-way communication
 RS 485: isolated, two-way communication,
 addressing (max. 31 instruments)
 PROFIBUS Data protocol SIEMENS

ANALOGO OUTPUTS

Type: isolated, programmable with resolution of max.10 000 points, analog output corresponds with displayed data, type and range are adjustable
 Non-linearity: 0,2 % of range
 TC: 50 ppm/°C
 Rate: response to change of value < 150 ms
 Voltage: 0...2 V/5 V/10 V
 Current: 0...5/20 mA/4...20 mA
 - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

MEASURED DATA RECORD

Type RTC: time-controlled logging of measured data into instrument memory, allows to log up to 250 000 values
 Type FAST: fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s
 Transmission: via data output RS 232/485 or via OM Link

EXCITATION

Adjustable: 5...24 VDC/max. 1,2 W, isolated

POWER SUPPLY

Options: 10...30 V AC/DC, 13,5 VA, isolated,
 - fuse inside (T 4000 mA)
 80...250 V AC/DC, 13,5 VA, isolated
 - fuse inside (T 630 mA)

MECHANICAL PROPERTIES

Material: PA 66, incombustible UL 94 V-I
 Dimensions: 160 x 60 x 107 mm (OMB 451)
 160 x 80 x 107 mm (OMB 452)
 Panel cut-out: 150 x 50 mm (OMB 451)
 150 x 70 mm (OMB 452)

OPERATING CONDITIONS




Connection: connector terminal board, conductor cross-section <1,5 mm² /<2,5 mm²
 Stabilisation period: within 15 minutes after switch-on
 Working temp.: 0°...60°C
 Storage temp.: -10°...85°C
 Cover: IP65 (front panel only)
 Construction: safety class I
 Dielectric strength: 4 kVAC after 1 min between supply and input
 4 kVAC after 1 min between supply and data/analog output
 4 kVAC after 1 min between supply and relay output
 2,5 kVAC after 1 min between supply and data/analog output
 Overvoltage cat.: EN 61010-1, A2
 Insulation resistance: for pollution degree II, measurement category III
 instrum.power supply > 670 V (PI), 300 V (DI)
 Input/output > 300 V (PI), 150 (DI)
 EMC: EN 61326-1
 Seismic resistance: IEC 980: 1993, par. 6

**Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02




PI - Primary insulation, DI - Double insulation

OMB 451

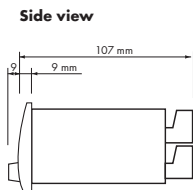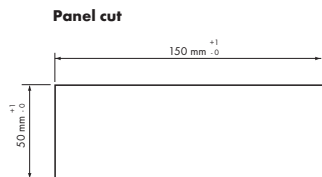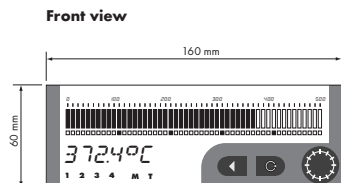


Panel thickness: 0,5...20 mm

OMB 452

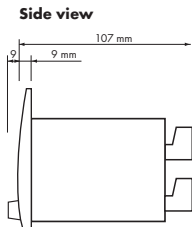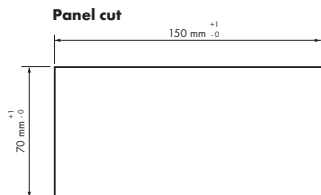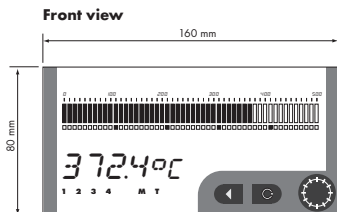

Panel thickness: 0,5...20 mm

Product **OMB 451UNI** **OMB 452UNI**
 Type
 Manufacturing No.
 Date of sale

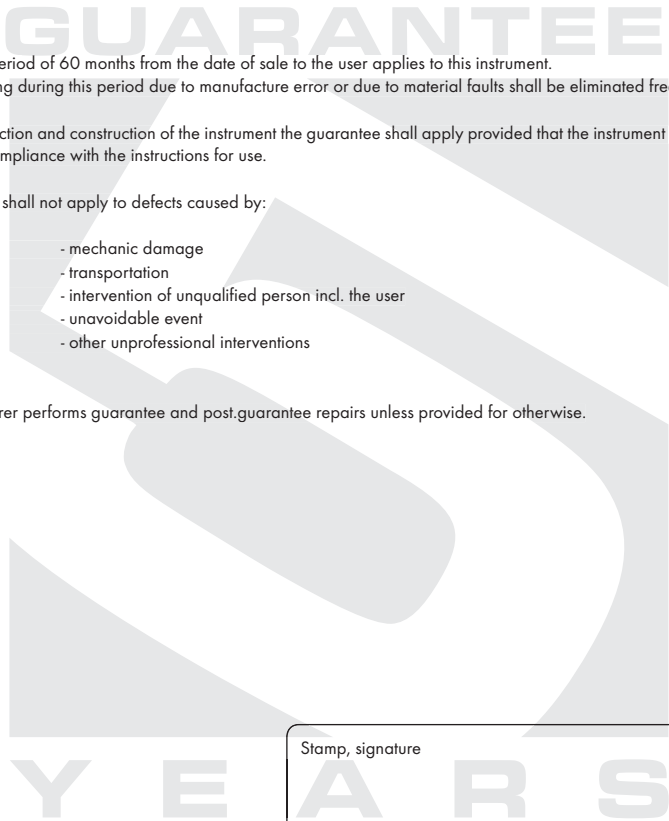

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Stamp, signature

DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

Product: 4-digit programmable panel instrument

Type: **OMB 451/452**

Version: UNI, PWR, UQC

It has been designed and manufactured in line with requirements of:

Statutory order no. 17/2003 Coll., on low-voltage electrical equipment (directive no. 73/23/EHS)

Statutory order no. 18/2003 Coll., on electromagnetic compatibility (directive no. 89/336/EHS)

The product qualities are in conformity with harmonized standard:

El. safety:	EN 61010-1	
EMC:	EN 50131-1, chapter 14 and chapter 15	
	EN 50130-4, chapter 7	
	EN 50130-4, chapter 8	EN 61000-4-11
	EN 50130-4, chapter 9	EN 61000-4-2
	EN 50130-4, chapter 10	EN 61000-4-3
	EN 50130-4, chapter 11	EN 61000-4-6
	EN 50130-4, chapter 12	EN 61000-4-4
	EN 50130-4, chapter 13	EN 61000-4-5
	EN 61000-4-8	
	EN 61000-4-9	
	EN 61000-6-1	
	EN 61000-6-2	
	EN 55022, chapter 5 and chapter 6	

The product is furnished with CE label issued in 2008.

As documentation serve the protocols of authorized and accredited organizations:

MO ČR, Agency for development of informatics, testing lab no.1558, accredited ČIA, in compliance with EN ISO/EIC 17025

Place and date of issue: Prague, 15. November 2008
Miroslav Hackl

Company representative

Assessment of conformity pursuant to §22 of Act no. 22/1997 Coll. and changes as amended by Act no.71/2000 Coll. and 205/2002 Coll