



OMD 201RS

4/6 DIGIT PROGRAMMABLE
LAGRE DISPLAY

4 digit
DATA DISPLAY
PROTOCOL - MODBUS



SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA


Measuring instruments of the OMD 201 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:
EN 55 022, class B
EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanská 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.cz
www.orbit.merret.cz



| | | |
|-------|--|----|
| 1. | Contents | 3 |
| 2. | Instrument description | 4 |
| 3. | Instrument connection | 6 |
| 4. | Instrument setting | 8 |
| | Symbols used in the instructions | 10 |
| | Setting the DP and the (-) sign | 10 |
| | Control keys function | 11 |
| | Setting/permitting items into "USER" menu | 11 |
| 5. | Setting "LIGHT" menu | 12 |
| 5.0 | Description "LIGHT" menu | 12 |
| | Setting input value | 14 |
| | Setting projection | 26 |
| | Setting Limits | 28 |
| | Setting analog output | 30 |
| | Setting display colors | 32 |
| | Selection of programming menu „LIGHT"/„PROFI" | 34 |
| | Restoration of manufacture setting | 35 |
| | Selection of instrument menu language version | 35 |
| | Setting new access password | 36 |
| | Instrument identification | 36 |
| 6. | Setting "PROFI" menu | 38 |
| 6.0 | Description of "PROFI" menu | 38 |
| 6.1 | "PROFI" menu - INPUT | |
| 6.1.1 | Resetting internal values | 40 |
| 6.1.2 | Setting measuring range | 41 |
| 6.1.3 | External input function selection | 49 |
| 6.1.4 | Optional accessory functions of the keys | 50 |
| 6.2 | "PROFI" menu - CHANNEL | |
| 6.2.1 | Setting measuring parameters (projection, filters, decimal point, description) | 54 |
| 6.2.2 | Setting mathematic functions | 57 |
| 6.2.3 | Selection of evaluation of min/max. value | 59 |
| 6.3 | "PROFI" menu - OUTPUT | |
| 6.3.1 | Setting Limits | 60 |
| 6.3.2 | Setting analog output | 64 |
| 6.3.3 | Selection of display projection | 65 |
| 6.4 | "PROFI" menu - SERVICE | |
| 6.4.1 | Setting the address of IR remote control | 68 |
| 6.4.2 | Selection of programming menu „LIGHT"/„PROFI" | 69 |
| 6.4.3 | Restoration manufacture setting | 69 |
| 6.4.4 | Selection of instrument menu language version | 70 |
| 6.4.5 | Setting new access password | 70 |
| 6.4.6 | Instrument identification | 70 |
| 7. | Setting items into "USER" menu | 72 |
| 7.0 | Configuration "USER" menu | 72 |
| 8. | Data protocol | 74 |
| 9. | Error statements | 76 |
| 10. | Table of symbols | 77 |
| 11. | Technical data | 78 |
| 12. | Instrument dimensions and installation | 80 |
| 13. | Certificate of guarantee | 81 |
| | Declaration of conformity | 84 |

2.1

Description

The OM 602RS - Modbus type is a 6 digit panel display device for data from serial lines of RS 232 and RS 485 standard.

Communication with Modbus protocol. All ASCII symbols may be displayed which are usable for 7-segment display.

The instrument is based on an 8-bit microcontroller, which secures high accuracy, stability and easy operation of the instrument.

PROGRAMMABLE PROJECTION

| | |
|-------------|--|
| Setting: | Selection of integer/float input range manual, optional projection on the display may be set in the menu for both limit values of the input signal , e.g. input $2^{31}...2^{31} > 0...850,0$ |
| Protocol: | ASCII/MESSBUS* MODBUS - RTU PROFIBUS DP* |
| Projection: | -9999...9999 |

DIGITAL FILTERS

| | |
|------------------|---|
| Exponen.average: | from 2...100 measurements |
| Rounding: | setting the projection step for display |

MATHEMATIC FUCTIONS

| | |
|------------------|---|
| Min/max. value: | registration of min./max. value reached during measurement |
| Tare: | designed to reset display upon non-zero input signal |
| Peak value: | the display shows only max. or min. value |
| Mat. operations: | polynome, $1/x$, logarithm, exponential, power, root, $\sin x$ |

EXTERNAL CONTROL

| | |
|---------------|--|
| Lock: | control keys blocking |
| Hold: | display/instrument blocking |
| Tare: | tare activation/resetting tare to zero |
| Resetting MM: | resetting min/max value |
| Memory: | data storage into instrument memory |

2.2 Operation

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT** **Simple programming menu**
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
 - contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
 - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.


Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 130 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

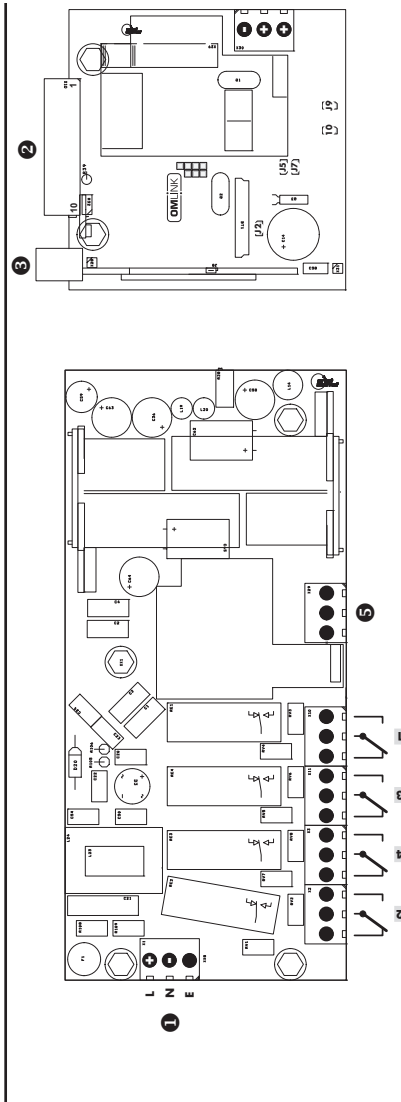

1 Power supply


4 Analog output

5 Data output


6 Relays



2 Input - horizontal



3 Input - vertical



1 Power supply

4 Analog output

5 Data output

6 Relays

PROFI

Setting

profi

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

light

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT** **Simple programming menu**
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
- contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
- access without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.







The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.

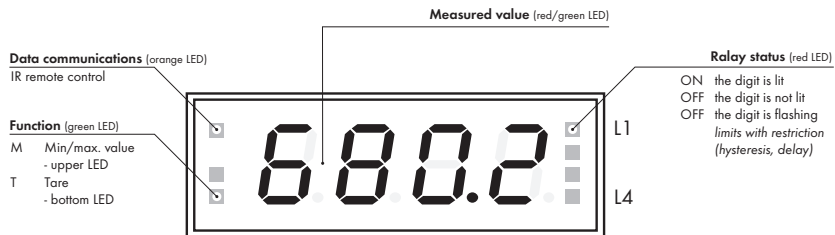Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Setting and controlling the instrument is performed by means of the Remote control. With the aid of the Remote control it is possible to browse through the operation menu and to select and set the required values.






Symbols used in the instructions



- DEF** values preset from manufacture
-  symbol indicates a flashing light (symbol)
-  inverted triangle indicates the item that can be placed in USER menu
-  broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version
-  after pressing the key the set value will not be stored
-  after pressing the key the set value will be stored
-  **30** continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key  with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by / .

THE MINUS SIGN

Setting the minus sign is performed by the key  on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

| Key | Measurement | Menu | Setting numbers/selection |
|----------|-------------------------------|--|---------------------------|
| | access into USER menu | exit menu | quit editing |
| | programmable key function | back to previous level | move to higher decade * |
| | programmable key function | move to previous item | move down * |
| | programmable key function | move to next item | move up * |
| | programmable key function | confirm selection | confirm setting/selection |
| | access into LIGHT/PROFI menu | | |
| >3 s | direct access into PROFi menu | | |
| | | configuration of an item for "USER" menu | |
| | | determine the sequence of items in "USER - LIGHT" menu | |

* alternatively, the setting may be done from the numeric keys of the remote control by selecting directly the number required

Setting items into „USER“ menu

- in LIGHT or PROFi menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle



Legend is flashing - current setting is displayed



- item will not be displayed in USER menu
- item will be displayed in USER menu with the option of setting
- item will be solely displayed in USER menu

5.0

Setting "LIGHT"

LIGHT**Simple programming menu**

- contains only items necessary for instrument setting and is protected by optional number code

SETTING LIGHT

Light

- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

Preset from manufacture

| | |
|-------------------|------------|
| Password | "0" |
| Menu | LIGHT |
| USER menu | off |
| Setting the items | DEF |

!

Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

Access password

1428 **G** PASS

Baud rate: bR0d 9.6 Instrument address: Rdr 1 Data protocol: P-R0E SLR0 Commaand: C00n C004

Setting - Integer: rEG 1 Setting - Communi. failure: n0E0 dR5H Setting - Timeout: E n0 10 Setting - Format: F0-R U.16

Setting - Order: 0-r-d L0H1

Setting - minimum input value: n1.0 0 Setting - minimum input value: n1.1 0 Setting - maximum input value: nR.0 255 Setting - maximum input value: nR.1 255

FORMAT > U. INT. 16 / I. INT. 16

Setting - minimum input value: n1.0 0 Setting - minimum input value: n1.1 0 Setting - minimum input value: n1.2 0 Setting - minimum input value: n1.3 0

FORMAT > U. INT. 32 / I. INT. 32

Setting - maximum input value: nR.0 255 Setting - maximum input value: nR.1 255 Setting - maximum input value: nR.2 255 Setting - maximum input value: nR.3 255

Setting - minimum input value: n1n 0 Setting - maximum input value: nRn 100

FORMAT > FLOAT

Selection input range - min: n1nR 0 Selection input range - max: nRnR 100 Projection: F0-R 000.0

Option - comparator

L.L.1 20 L.L.2 40 L.L.3 60 L.L.4 80


Option - Analog output

EY.R.0 120 n1.R.0 0 nR.R.0 100

Primary color: C0L.0 Grn First color limit: d.L.1 3333 Color beyond first limit: C0L.1 0-rAn Second color limit: d.L.2 6667

Color beyond second limit: C0L.2 rEd Menu type: nEnU L10H Return to manufacture setting: rESE Firn Language selection: LRn0 EnDL

New password: PRL1 0 Identification: IdEn YES Instrument type: 0nD201r5 SW number: 66 1428 Return to measuring mode

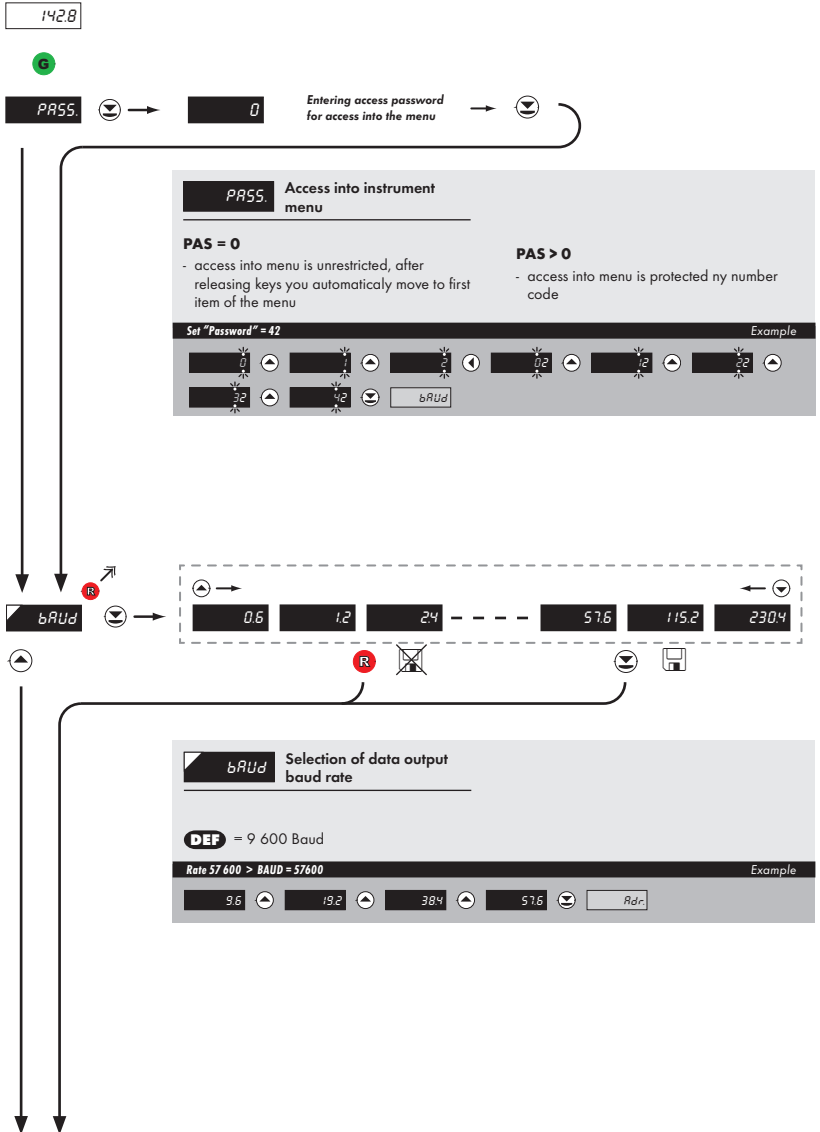




Adr. Setting instrument address

DEF = 0

Address 10 > ADDR. = 10 Example

0 00 10 Prt.



Prt. Selection of data protocol


DEF = SLAVE

SLAVE > display shows data entered through commands 0x06 nebo 0x10

MASTER > instrument solicits data by selected command from given register

Protocol SLAVE > PROT. = SLAV. Example

SLAV COM

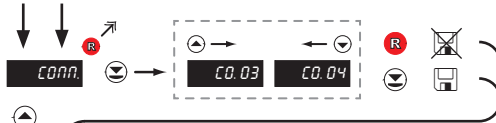

COMM. Selection of register

DEF = CO.04

CO.03 > reading setup (holding) registers at address 4xxxx

CO.04 > reading input (input) registers at address 3xxxx

- applies only for option "MASTER"

Register at address 4xxxx > COMM. = CO.04 Example

CO.04



r-EG. Setting register address

DEF = 1

- range of setting 0...9999
- the address usually entered is 0...9999 (without highest digit)
- defines address of the register to be read

Register address 3 > REG. = 1 Example



NO.t.O. Selecting display mode in case of communication failure

DEF = DASHES

| Menu | Description |
|-------|--------------------------------------|
| NO | No reaction |
| BLAN. | Display goes off |
| FLAS. | Last displayed value starts flashing |
| DASH. | Dash symbols displayed |
| DOT | Decimal point is displayed |

Selecton mode > Dashes Example

dRSH.

!
Item will not appear in "MASTER" protocol



t.O. Setting the time constant for Timeout


- range: 0...99,9 s

- **DEF** = 1.0 s

Setting - Constant > t.O. = 1 Example

t.O.


!
Item will not appear in "MASTER" protocol and when "MO. t.O." is disabled

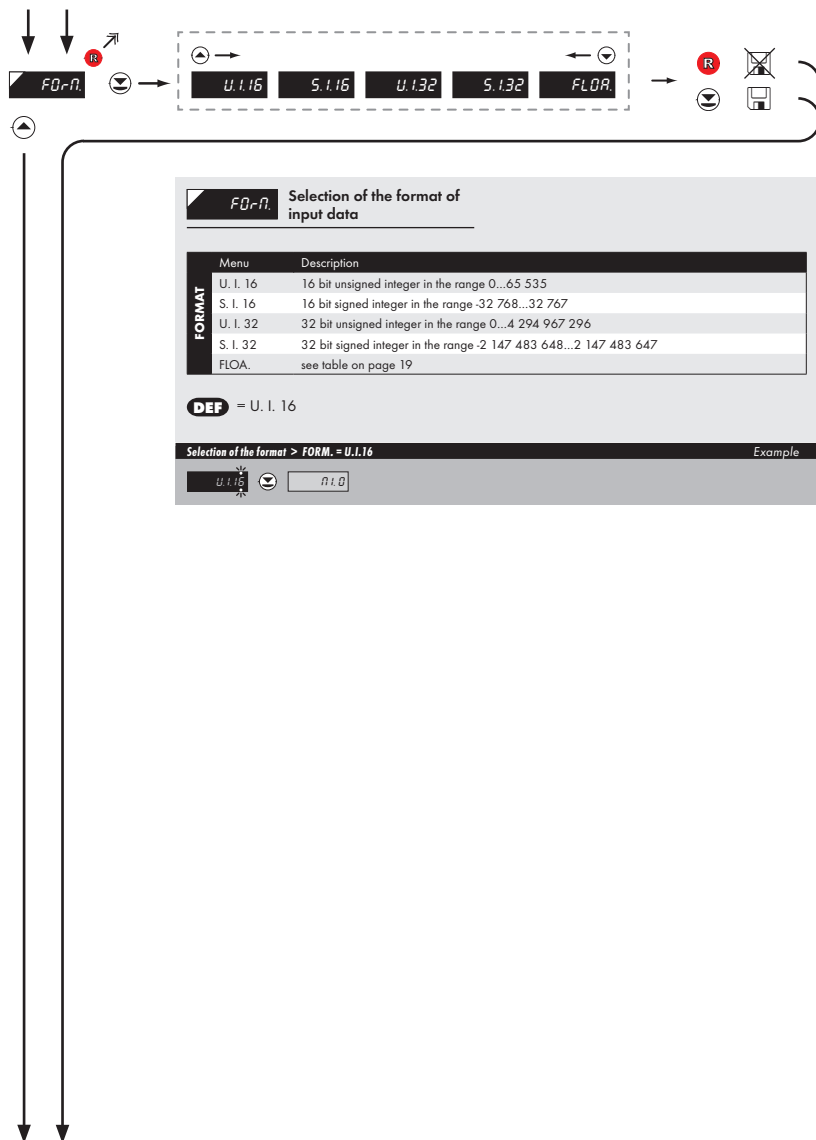

| FORMAT | ORDER | COMMAND | DATA |
|------------|---------|---------|--|
| U. INT. 16 | n/a | 0x06 | <AA> 06 00 00 <Word Hi> <Word Lo> <CRC Lo> <CRC Hi> |
| S. INT. 16 | n/a | 0x06 | <AA> 06 00 00 <Word Hi> <Word Lo> <CRC Lo> <CRC Hi> |
| U. INT. 32 | LO - HI | 0x10 | <AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi> |
| S. INT. 32 | LO - HI | 0x10 | <AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi> |
| FLOAT | LO - HI | 0x10 | <AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi> |
| U. INT. 32 | HI - LO | 0x10 | <AA> 10 00 00 00 02 04 <Hi Word Hi> <Hi Word Lo> <Lo Word Hi> <Lo Word Lo> <CRC Lo> <CRC Hi> |
| S. INT. 32 | HI - LO | 0x10 | <AA> 10 00 00 00 02 04 <Hi Word Hi> <Hi Word Lo> <Lo Word Hi> <Lo Word Lo> <CRC Lo> <CRC Hi> |
| FLOAT | HI - LO | 0x10 | <AA> 10 00 00 00 02 04 <Hi Word Hi> <Hi Word Lo> <Lo Word Hi> <Lo Word Lo> <CRC Lo> <CRC Hi> |

LEGEND

| | |
|--------------|------------------------------|
| # | Beginning of command |
| <AA> | Instrument address (1...247) |
| <Word xx> | 16-bit data |
| <Lo Word xx> | 32 bit data (lower part) |
| <Hi Word xx> | 32 bit data (higher part) |

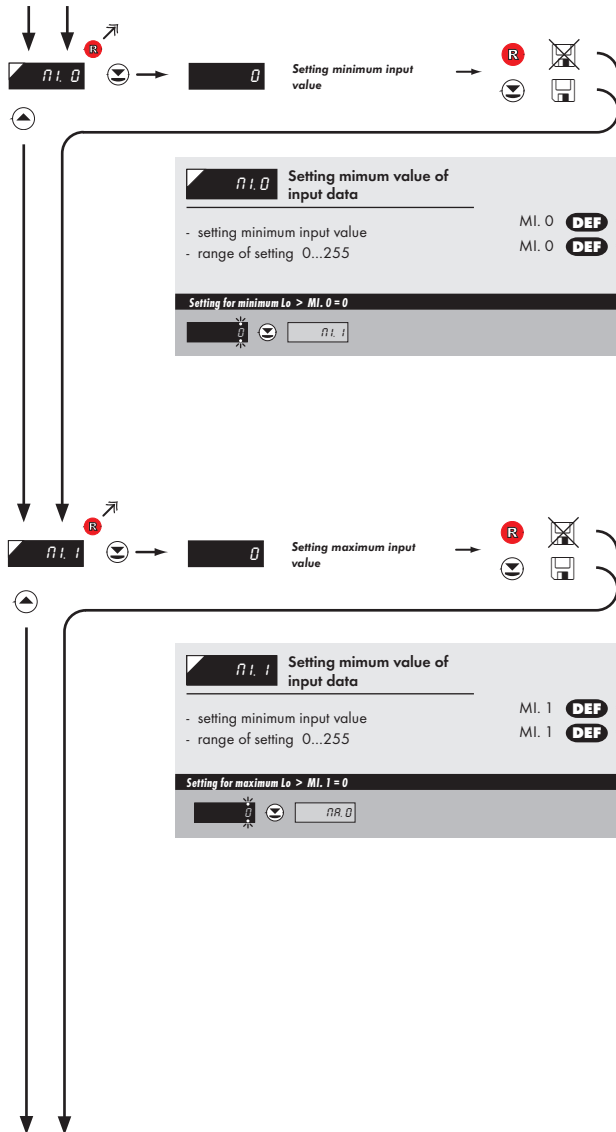



NR. 0 Setting maximum value of input data

- setting maximum input value
- range of setting 0...255

MA. 0 **DEF** = 255 (U.I.16)
MA. 0 **DEF** = 255 (S.I.16)

Setting for maximum Lo > MA. 0 = 255 Example





NR. 1 Setting minimum value of input data

- setting maximum input value
- range of setting 0...255

MA. 1 **DEF** = 255 (U.I.16)
MA. 1 **DEF** = 127 (S.I.16)

Setting for maximum Lo > MA. 1 = 231 Example

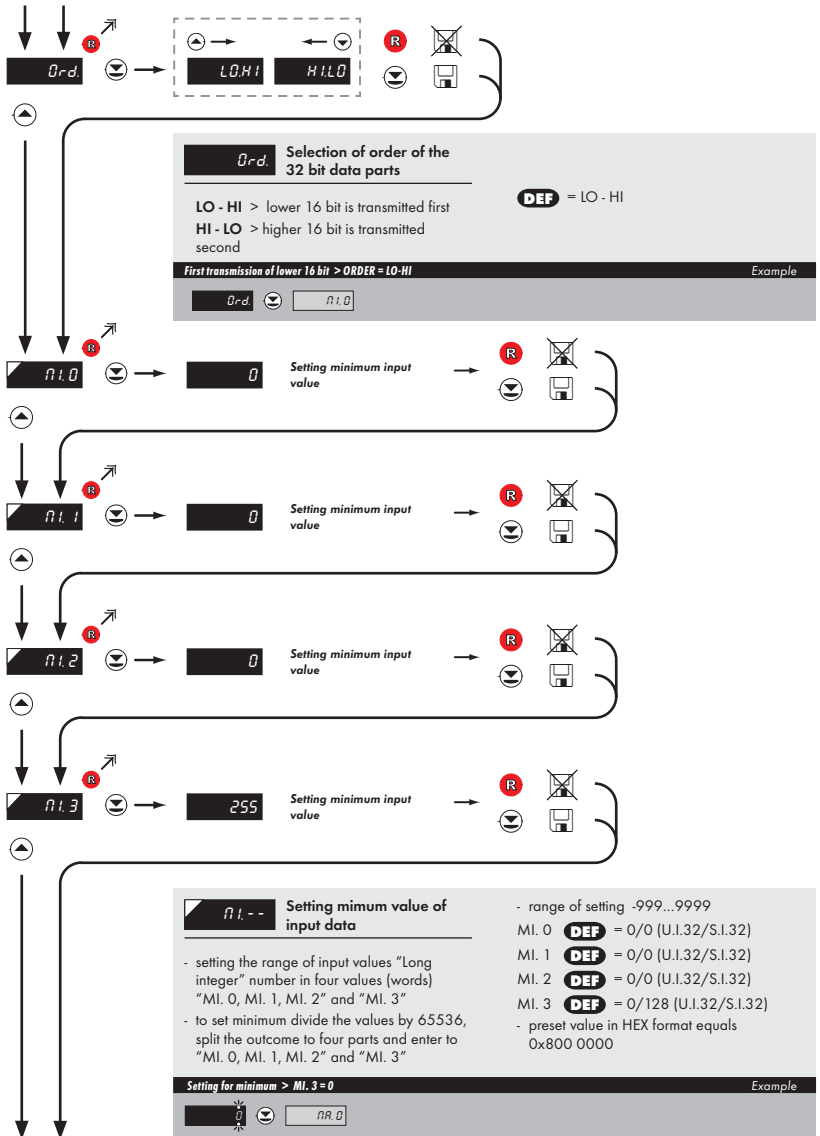

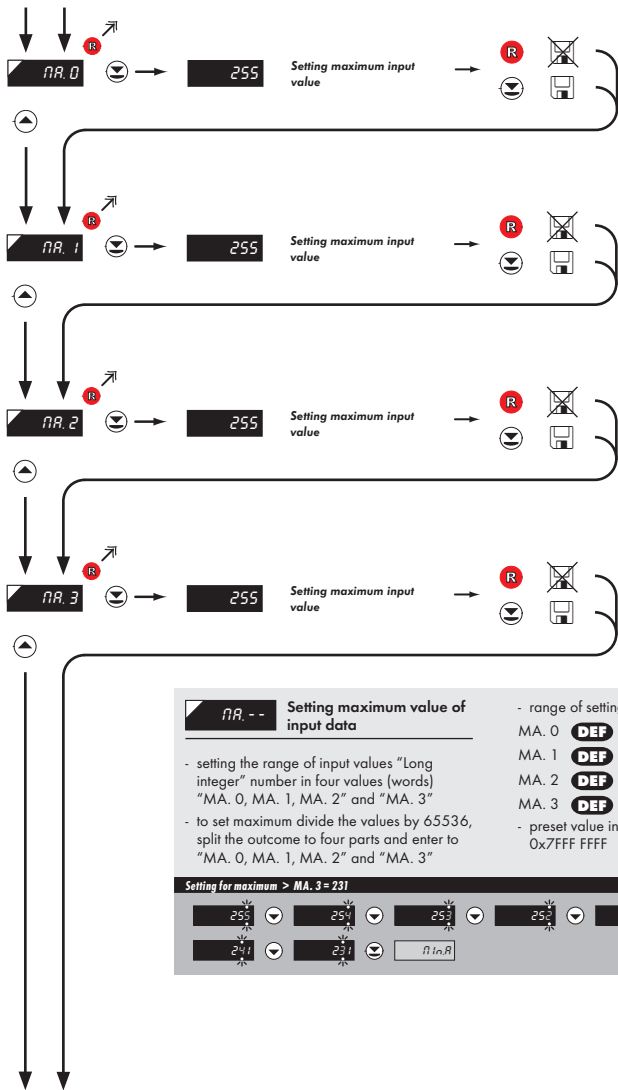

MA. -- Setting maximum value of input data

- setting the range of input values "Long integer" number in four values (words) "MA. 0, MA. 1, MA. 2" and "MA. 3"
- to set maximum divide the values by 65536, split the outcome to four parts and enter to "MA. 0, MA. 1, MA. 2" and "MA. 3"

- range of setting -999...9999

MA. 0 **DEF** = 255/255 (U.1.32/S.1.32)

MA. 1 **DEF** = 255/255 (U.1.32/S.1.32)

MA. 2 **DEF** = 255/255 (U.1.32/S.1.32)


MA. 3 **DEF** = 255/127 (U.1.32/S.1.32)

- preset value in HEX format equals 0x7FFF FFFF

Setting for maximum > MA. 3 = 231 Example

255 255 255 255 255 255

241 231 n InR

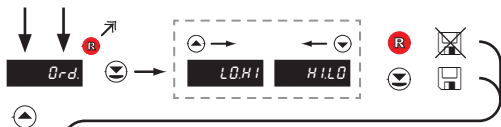

Ord. Selection of order of the 32 bit data parts


DEF = LO - HI

LO - HI > lower 16 bit is transmitted first
 HI - LO > higher 16 bit is transmitted second

First transmission of lower 16 bit > ORDER = LO-HI

Example

Ord. nIn



nIn Setting minimum input value


MIN DEF = 0

- range of setting -999...9999

Setting for minimum > MIN = 0

Example

nIn 0




nMax Setting maximum input value

MAX DEF = 100

- range of setting -999...9999

Setting for maximum > MAX = 300

Example

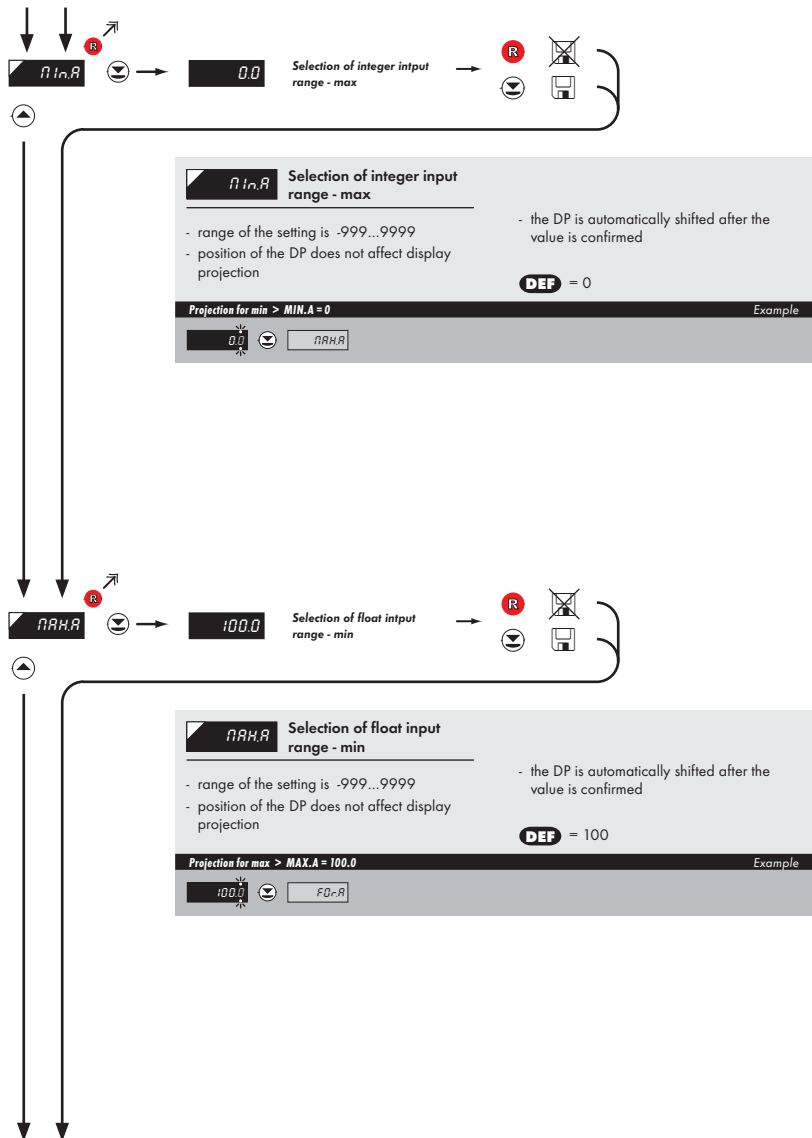



FD-R

Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 000.0


000.0

00.00

NE-U

*subsequent item on the menu depends on instrument equipment

Example

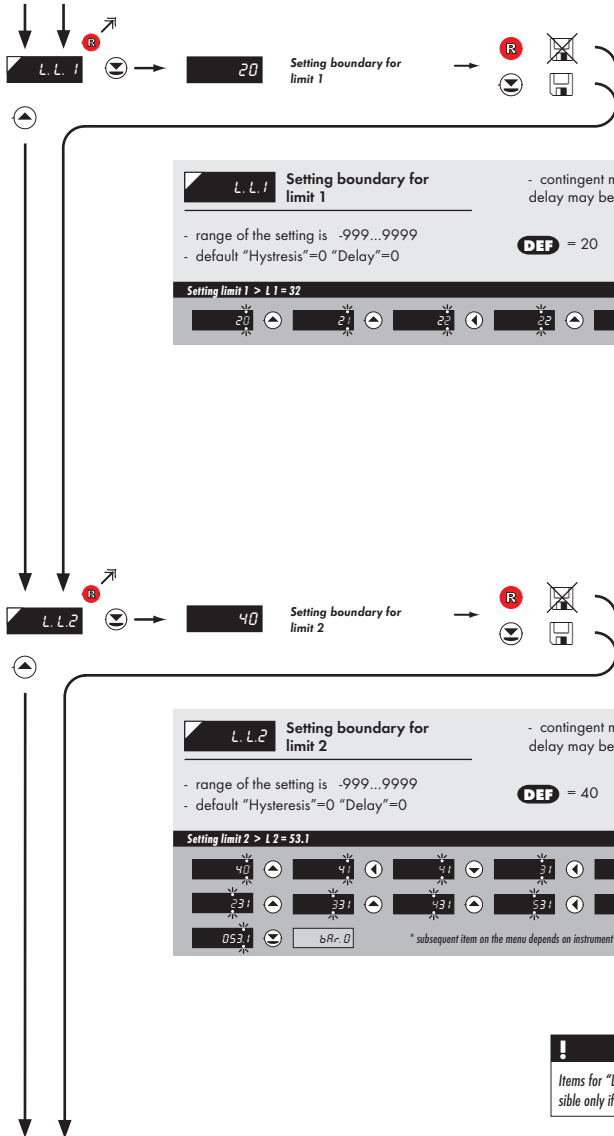

!
Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



L.L.3 Setting boundary for limit 3

- range of the setting is -999...9999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > L3 = 85 Example

| | | | | | |
|----|----|----|-------|---|----|
| 80 | 61 | 62 | 63 | 64 | 65 |
| 65 | 75 | 85 | bAr.0 | * subsequent item on the menu depends on instrument equipment | |



L.L.4 Setting boundary for limit 4

- range of the setting is -999...9999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > L4 = 103 Example

| | | | | | |
|----|----|----|-------|---|----|
| 80 | 81 | 82 | 83 | 84 | 85 |
| 03 | 03 | 03 | bAr.0 | * subsequent item on the menu depends on instrument equipment | |

TY.A.O. Setting the type of analog output

| Menu | Range | Description |
|------|-----------|--|
| 0-20 | 0...20 mA | |
| E. 4 | 4...20 mA | with indication of error statement (<3,6 mA) |
| 4-20 | 4...20 mA | |
| i0.5 | 0...5 mA | |
| u0-2 | 0...2 V | |
| u0-5 | 0...5 V | |
| 0-10 | 0...10 V | |

DEF = 4...20 mA

Type of analog output - 0...10 V > TY. A.O. = 0-10 Example

PIR.D.

PIR.D. Assigning the display value to the beginning of the AO range

DEF = 0


- range of the setting is -999...9999

Display value for the beginning of the AO range > MI. A.O. = 0 Example

PIR.D.

!

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

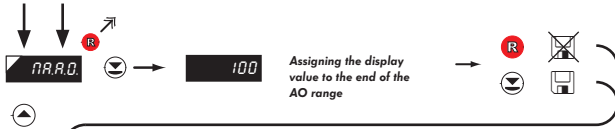

n.n.n.n. Assigning the display value to the end of the AO range **DEF = 100**


AO range

- range of the setting is -999...9999

Display value for the end of the AO range > MA.A.O. = 120 Example

100 (left arrow) 100 (right arrow) 110 (right arrow) 120 (right arrow) COL.D

Displayed only with options > **Analog output**

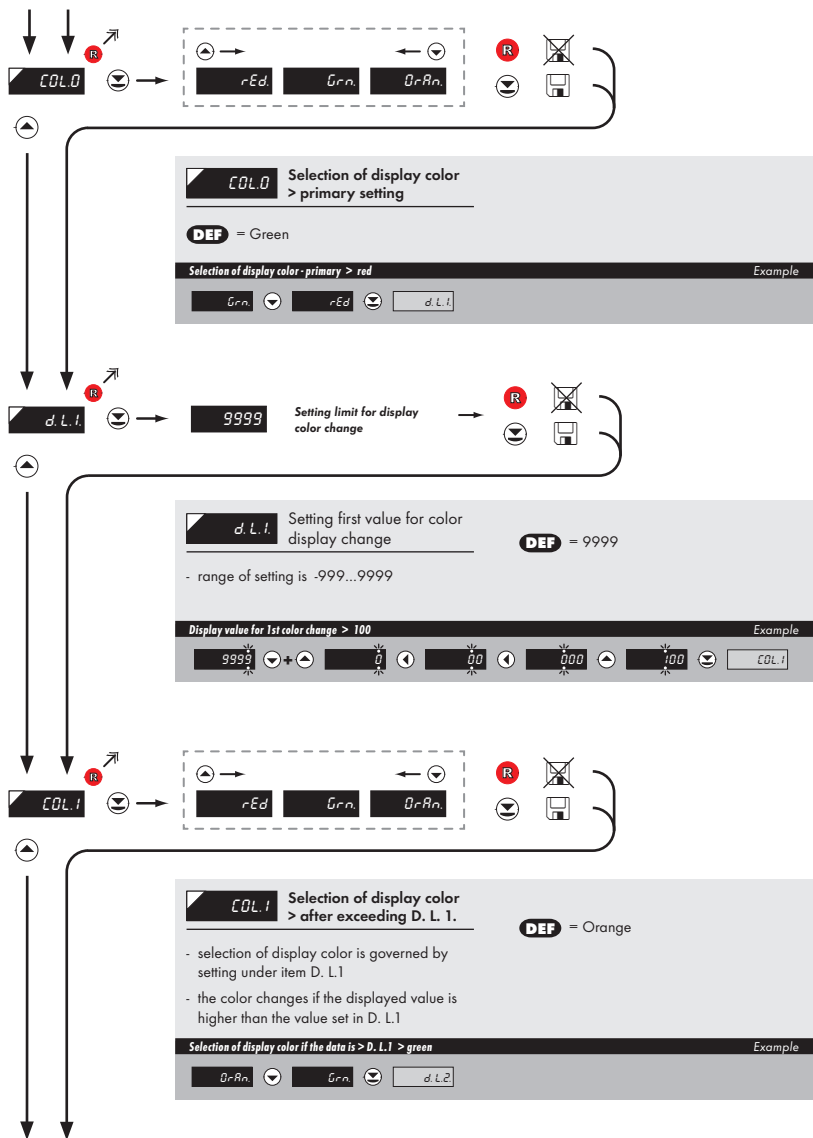



d.L.2 Setting second value for display color change **DEF** = 9999

- range of setting is -999...9999

Display value for 1st color change > 400 Example

| | | | | |
|------|---|-----|-----|------|
| 9999 | + | 0 | 00 | 000 |
| 200 | | 300 | 400 | COL2 |



COL2 Selection of display color > after exceeding D. L. 2 **DEF** = Red

- selection of display color is governed by setting under item D.L.2

- the color changes if the displayed value is higher than the value set in D. L.2

Selection of display color if the data is > D. L.2 > orange Example

| | | |
|-----|------|-----|
| rEd | OrAn | Red |
|-----|------|-----|



Ad.Ir Setting the address of IR remote control

- setting the remote control address is inevitable only in case there are other large displays OMD 201 within the reach of IR remote control


- range of the setting is 0...99

DEF = 0

New address - 21 > Ad.Ir = 21 Example

0 1 01 11 21 31

Menu



MENU Setting the menu type LIGHT/PROFI


LIGH. > menu LIGHT, a simple menu, which contains only the most essential items necessary for instrument setting > linear tree structure

PROF. > menu PROFI, a complete menu for complete instrument setting > tree menu structure

DEF = LIGHT

Menu LIGHT > MENU = LIGH. Example

LIGH RESE

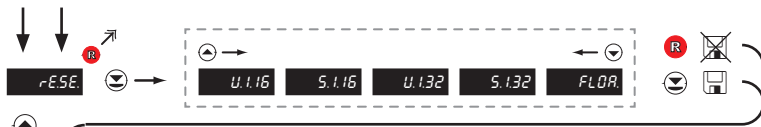


rESE. Restoration of manufacture instrument setting

- in the event of error setting the manufacture setting may be restored
- restoration is performed for the currently selected type of the instrument input
- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")
- loading manufacture calibration and primary setting of items on the menu (DEF)

Restoration of manufacture setting > RE.SE. Example

rESE U.116 LANG




LANG. Selection of language in instrument menu

- selection of language version of the instrument menu

DEF = ENGL

Language selection - ENGLISH > LANG. = ENGL. Example

ENGL PRLI

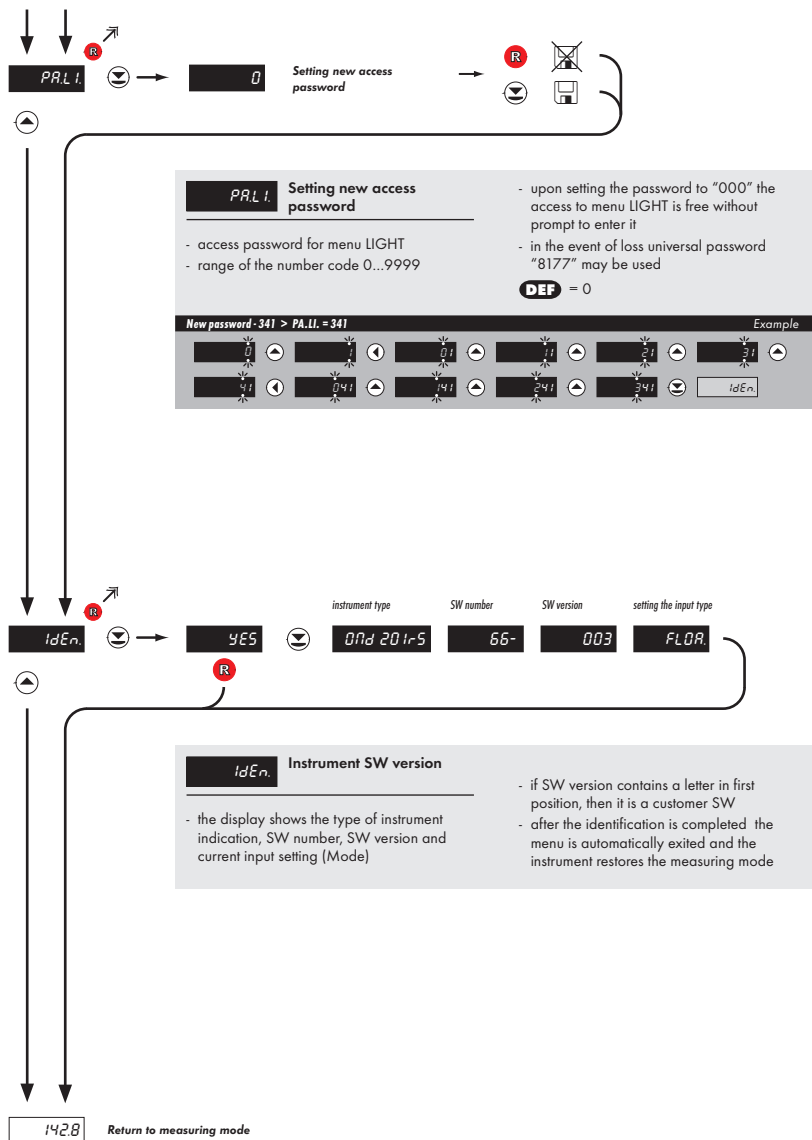

6.0

Setting "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

 SETTING
 PROFIL
 ▼
 ▼
 ▼
 ▼
 ▼
 ▼
 ▼



- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu




- temporary switch-over to **PROFI** menu, which is suitable to edit a few items
- after quitting **PROFI** menu the instrument automatically switches to **LIGHT** menu
- access is password protected (if it was not set under item PA.LI. =0)



- access into **LIGHT** menu and transition to item „MENU“ with subsequent selection of „PROFI“ and confirmation
- after re-entering the menu the **PROFI** type is active
- access is password protected (if it was not set under item PA.LI. =0)


6.1 Setting "PROFI" - INPUT

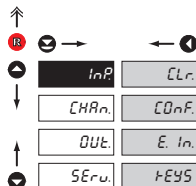

The primary instrument parameters are set in this menu

- Resetting internal values
- Selection of measuring range and parameters
- Setting external inputs functions
- Assigning further functions to keys on the instrument

6.1.1 Resetting internal values

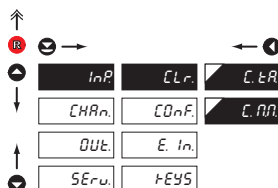

- Resetting internal values

 - Tare resetting
 - Resetting min/max value
- resetting memory for the storage of minimum and maximum value achieved during measurement

6.1.2a Selection of data baud rate

| | | | |
|-------|---------|------|-------|
| InP | CLr | bAUD | 0.6 |
| CHARn | CDnF | Adr | 1.2 |
| OUT | E. In | PrDt | 24 |
| SERv | KEYS | CDnN | 4.8 |
| | rEG. | | 9.6 |
| | NO.t.O. | | 19.2 |
| | tIN.O. | | 38.4 |
| | FDrN. | | 57.6 |
| | Dr.d. | | 115.2 |
| | nIn. | | 230.4 |
| | NAH. | | |

DEF

bAUD Selection of data baud rate

| | |
|-------|---------------------|
| 0.6 | Rate - 600 Baud |
| 1.2 | Rate - 1 200 Baud |
| 2.4 | Rate - 2 400 Baud |
| 4.8 | Rate - 4 800 Baud |
| 9.6 | Rate - 9 600 Baud |
| 19.2 | Rate - 19 200 Baud |
| 38.4 | Rate - 38 400 Baud |
| 57.6 | Rate - 57 600 Baud |
| 115.2 | Rate - 115 200 Baud |
| 230.4 | Rate - 230 400 Baud |


6.1.2b Setting instrument address

| | | | |
|-------|---------|------|---|
| InP | CLr | bAUD | 1 |
| CHARn | CDnF | Adr | |
| OUT | E. In | PrDt | |
| SERv | KEYS | CDnN | |
| | rEG. | | |
| | NO.t.O. | | |
| | tIN.O. | | |
| | FDrN. | | |
| | Dr.d. | | |
| | nIn. | | |
| | NAH. | | |


DEF

Adr Setting instrument address

- setting in range 1...247
- **DEF** = 1

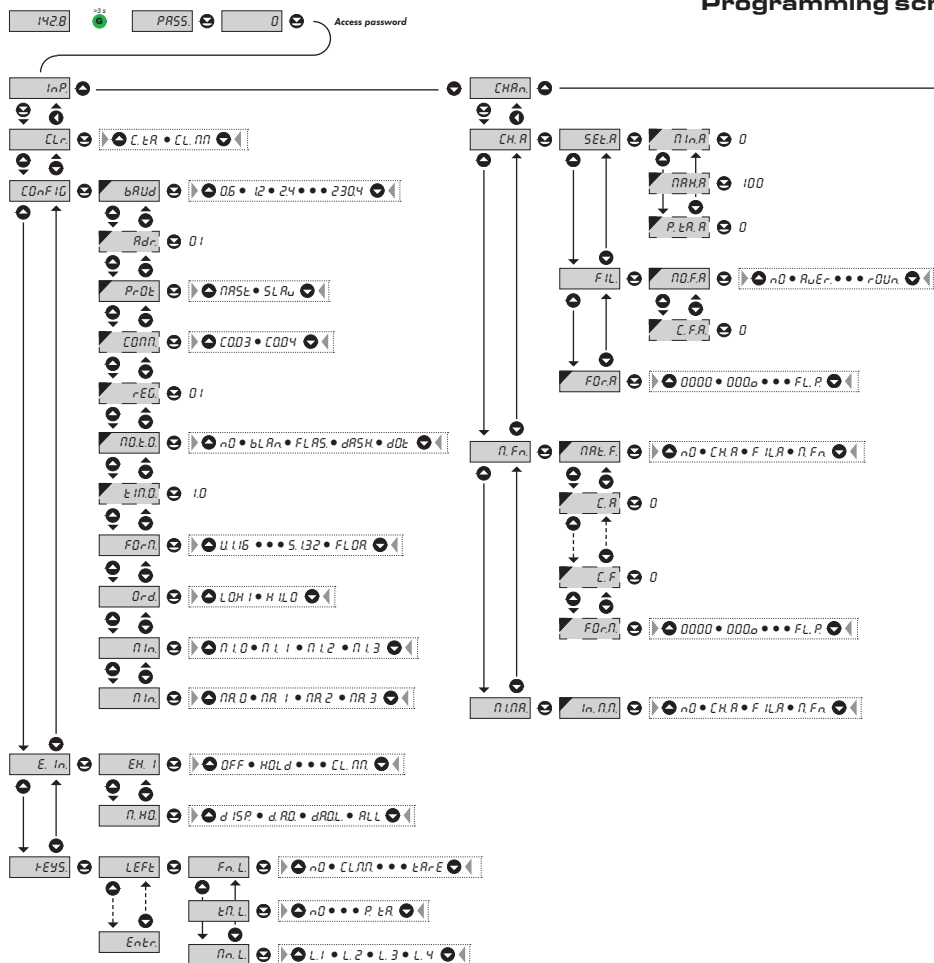

name PROFi MENU

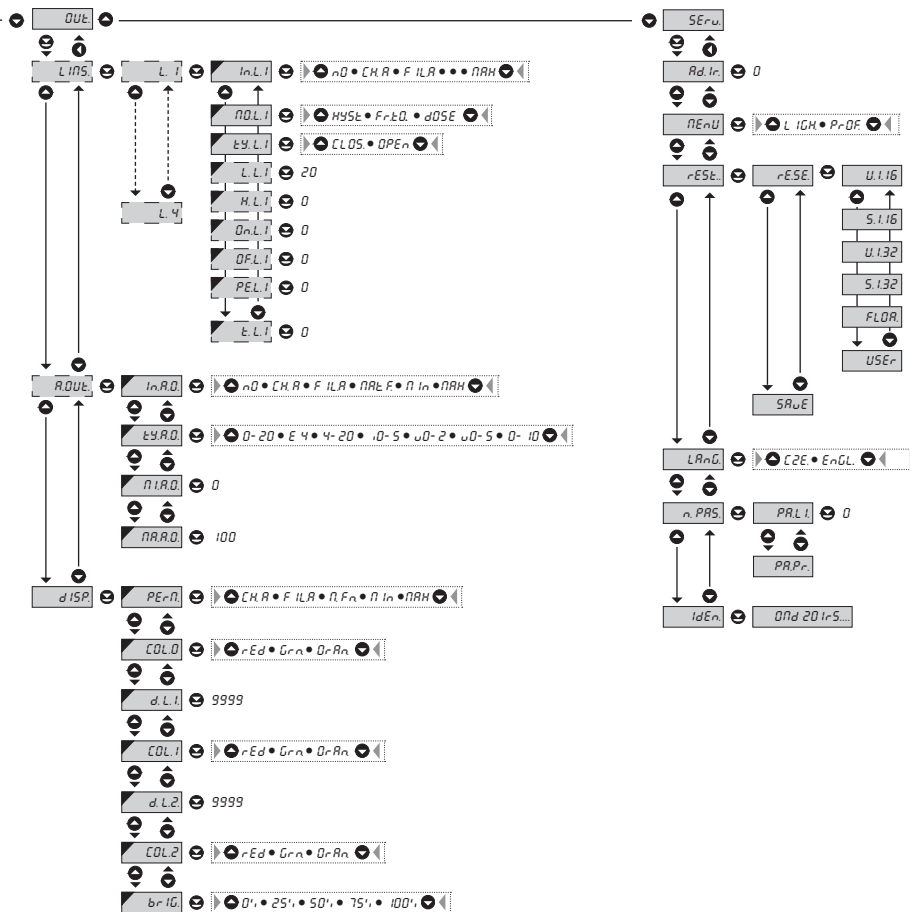

!
 Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

6.1.2c Selection of data protocol

↑

IR →

← 1

| | | | | |
|-------|-------|------|------|------------|
| InP | CLr | bAUd | SLAw | DEF |
| CHARn | COmF | Adr | PRSE | |
| OUT | E. In | PrDt | | |
| SERu | KEYS | COmM | | |
| | | rEG | | |
| | | NOtD | | |
| | | tINd | | |
| | | FDrN | | |
| | | Ord | | |
| | | nIn | | |
| | | NAH | | |

↓

↑

↓

PrDt Selection of data protocol

PRSE

Instrument solicits data from subordinate system

- instrument controls data transmission from subordinate system
- "COMM." may be used for selection of received data (for commands see data protocol)
- instrument asks 10 questions/s, if no response arrives within 2 s the display shows " - - - -"

SLAw

Passive Display - Slave

- passive display - slave is used where there is communication of other instruments or a computer in the "MASTER" mode. If "COMM." is correctly received, the instruments will display the data.

6.1.2d Selection of registers

↑

IR →

← 1

| | | | | |
|-------|-------|------|------|------------|
| InP | CLr | bAUd | CO03 | |
| CHARn | COmF | Adr | CO04 | DEF |
| OUT | E. In | PrDt | | |
| SERu | KEYS | COmM | | |
| | | rEG | | |
| | | NOtD | | |
| | | tINd | | |
| | | FDrN | | |
| | | Ord | | |
| | | nIn | | |
| | | NAH | | |

↓

↑

↓

COmM Selection of registers

- the item is accessible only after setting "MASTER"


Pr.03

Reading setup (holding) registers at address 4xxx

Pr.04

Reading input (input) registers at address 3xxx


6.1.2e Setting register address

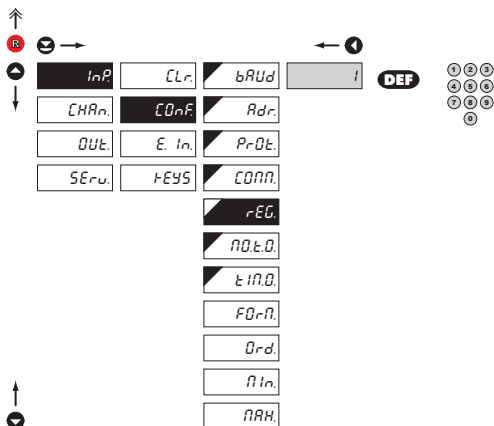

rEG. Setting register address

- the item is accessible only after setting "MASTER"
- defines the address of the register to be read
- allows to enter the range 0...65535, the address usually set is in range 0...9999 (without highest digits)
- **DEF** = 3

6.1.2f Selecting display mode in case of communication failure

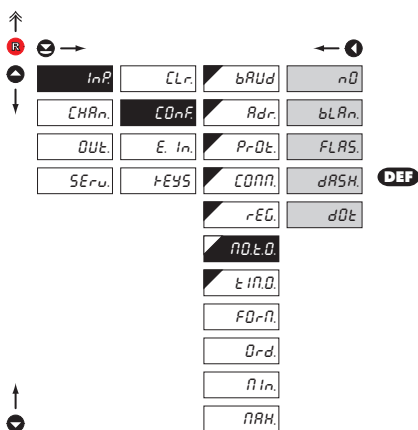

AD.t.O. Selecting display mode in case of communication failure

- n0** No reaction
- bLRn.** Display goes off
- FLRS.** Last displayed value starts flashing
- dRSH.** Dash symbols displayed
- dDt.** Decimal point is displayed



Item will not appear in "MASTER" protocol

6.1.2 | Setting input value

CDNF | Setting input value

„FORMAT“ > U.I.16/S.I.16

- range of the setting : 0...65 535

nI.0 Setting minimum value of input data

MI. 0 **DEF** = 0/0 (U.I.16/S.I.16)

MI. 1 **DEF** = 0/128 (U.I.16/S.I.16)

nRH.1 Setting maximum value of input data

MA. 0 **DEF** = 255/255 (U.I.16/S.I.16)

MA. 1 **DEF** = 255/127 (U.I.16/S.I.16)

„FORMAT“ > U.I.32/S.I.32

- range of the setting: -99 999...999 999

- setting the range of input values "Long integer" number in four values (words) "MI. 0, MI. 1, MI. 2, MI. 3" and "MA. 0, MA. 1, MA. 2, MA. 3"

- to set minimum/maximum divide the values by 65536, split the outcome to four parts and enter to "MI. 0, MI. 1, MI. 2, MI. 3" and "MA. 0, MA. 1, MA. 2, MA. 3"

nI.-. Setting minimum value of input data

MI. 0 **DEF** = 0/0 (U.I.32/S.I.32)

MI. 1 **DEF** = 0/0 (U.I.32/S.I.32)

MI. 2 **DEF** = 0/0 (U.I.32/S.I.32)

MI. 3 **DEF** = 0/128 (U.I.32/S.I.32)

nR.-. Setting maximum value of input data

MA. 0 **DEF** = 255/255 (U.I.32/S.I.32)

MA. 1 **DEF** = 255/255 (U.I.32/S.I.32)

MA. 2 **DEF** = 255/255 (U.I.32/S.I.32)

MA. 3 **DEF** = 255/127 (U.I.32/S.I.32)

„FORMAT“ > FLOAT

- range of the setting: -999...9999


nIn. Setting minimum value of input data

DEF = 0

nRH. Setting maximum value of input data

DEF = 100

6.1.4a Optional accessory functions of the keys

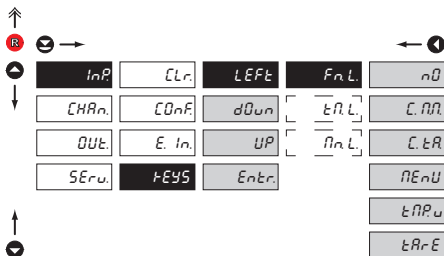Preset values of the control keys **DEF:**

| | |
|-------|-----------------|
| LEFT | Show Tare |
| UP | Show Max. value |
| DOWN | Show Min. value |
| ENTER | w/o function |



Setting is identical for LEFT, DOWN, UP and ENTER

Fn.L. Assigning further functions to instrument keys

- „FN. L.“ > executive functions
- „TM. L.“ > temporary projection of selected values
- „MN. L.“ > direct access into menu on selected item

nD Key has no further function

C.NN Resetting min/max value

C.tR Tare resetting

nENU Direct access into menu on selected item


- after confirmation of this selection the „MN. L.“ item is displayed on superior menu level, where required selection is performed

t.NP.u Temporary projection of selected values

- after confirmation of this selection the item „TM. L.“ is displayed on superior menu level, where required selection is performed

t.RrE Tare function activation

6.1.4c Optional accessory functions of the keys - Direct access to item

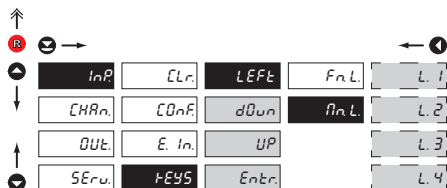


Fn.L Assigning access to selected menu item

- L.1 Direct access to item "LIM 1"
- L.2 Direct access to item "LIM 2"
- L.3 Direct access to item "LIM 3"
- L.4 Direct access to item "LIM 4"

!
Setting is identical for LEFT, DOWN, UP and ENTER


6.2 Setting "PROFI" - CHANNELS

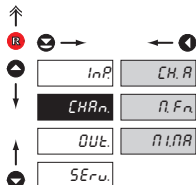

The primary instrument parameters are set in this menu

- CH.A** Setting parameters of measuring "Channel"
- n.F.n** Setting parameters of mathematic functions
- n.n.n** Selection of access and evaluation of Min/max value

6.2.1a Display projection

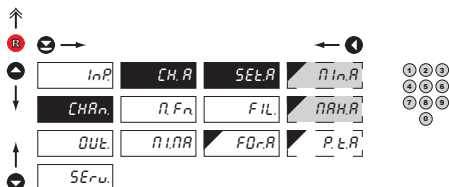

SEt.A Setting display projection


n.n.n Setting display projection for minimum value of

- input signal
- range of the setting is -999...9999
- **DEF** = 0

n.n.n Setting display projection for maximum value of

- input signal
- range of the setting is -999...9999
- **DEF** = 100


6.2.1b Setting fixed tare

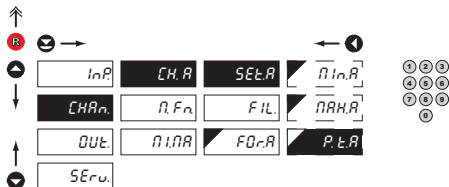

P.t.A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P.T.A > 0) display shows "T" symbol
- range of the setting is 0...9999999
- **DEF** = 0

6.2.1c Digital filters

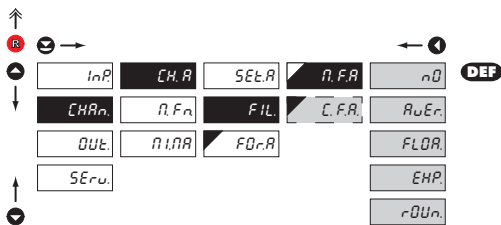

n.F.A. Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

nD Filters are off

RuEr Measured data average

- arithmetic average from given number („C.F.A.“) of measured values
- range 2...100

FLDR Selection of floating filter

- floating arithmetic average from given number („C.F.A.“) of measured data and updates with each measured value
- range 2...30

EHP Selection of exponential filter


- integration filter of first prvnho grade with time constant („C.F.A.“) measurement
- range 2...100

rDU.n Measured value rounding

- is entered by any number, which determines the projection step (e.g: "C.F.A."=2,5 > display 0, 2.5, 5,...)

C.F.A. Setting constants

- this menu item is always displayed after selection of particular type of filter
- **DEF** = 2

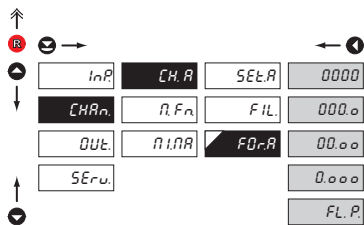6.2.1d Projection format - positioning of decimal point

FDR.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FL.P.“

0000 Setting DP - XXXX

000.0 Setting DP - XXX.x


DEF

00.00 Setting DP - XX.xx

0.000 Setting DP - X.xxx

FL.P. Floating DP

6.2.2a Mathematic functions

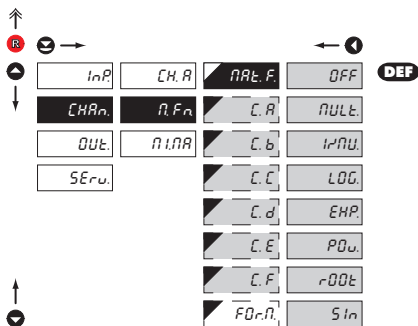
Mat. F. Selection of mathematic functions

OFF Mathematic functions are off

MULT Multinomial

$$Ax^2 + Bx^4 + Cx^3 + Dx^2 + Ex + F$$

IRNU $1/x$

$$\frac{A}{x^2} + \frac{B}{x^4} + \frac{C}{x^3} + \frac{D}{x^2} + \frac{E}{x} + F$$

LOG Logarithm

$$A \times \ln\left(\frac{Bx+C}{Dx+E}\right) + F$$

EXP Exponential

$$A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$$

POW Power

$$A \times (Bx+C)^{(Dx+E)} + F$$

ROOT Root


$$A \times \sqrt{\frac{Bx+C}{Dx+E}} + F$$

SIN Sin x

$$A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x + E \sin x + F$$

FOR.N Setting constants for calculation of mat. functions

- this menu is displayed only after selection of given mathematic function

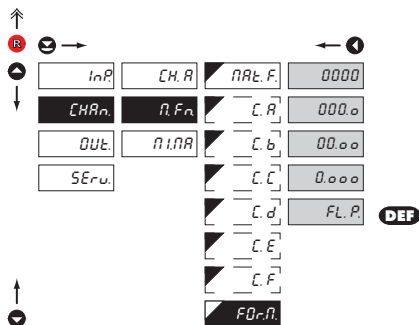6.2.2b **Mathematic functions - decimal point**
FD.P. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FL. P.“

0000 Setting DP - XXXX

000.0 Setting DP - XXX.x


00.00 Setting DP - XX.xx

0.000 Setting DP - X.xxx

FL.P. Floating DP

DEF

6.2.3 Selection of evaluation of min/max value

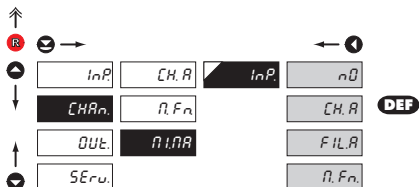

InP. Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated


nD Evaluation of min/max value is off

CH.A From "Channel A"

FIL.A From "Channel A" after digital filters processing

N.Fn. From "Mathematic functions"

6.3 Setting „PROFI“ - OUTPUTS

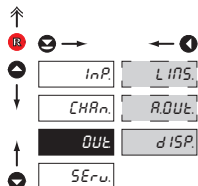


In this menu it is possible to set parameters of the instrument output signals

LIMS Setting type and parameters of limits

ADULT Setting type and parameters of analog output

dISP Setting display projection and brightness

6.3.1a Selection of input for limits evaluation

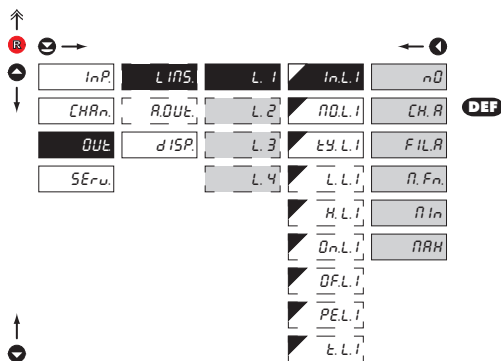

In.L.i Selection evaluation of limits

- selection of value from which the limit will be evaluated

n0 Limit evaluation is off

CH.R Limit evaluation from "Channel A"

FIL.R Limit evaluation from "Channel A" after digital filters processing

N.Fn Limit evaluation from "Mathematic functions"

N.In Limit evaluation from "Min.value"

N.RH Limit evaluation from "Max.value"



Setting is identical for L.2, L.3 and L.4

6.3.1b Selection of type of limit

| | | | | | |
|-------|-------|-----|--------|--------|------------|
| InP | L1HS | L.1 | In.L.1 | HYS.L. | DEF |
| CHARn | RDUt. | L.2 | NO.L.1 | FRt.O. | |
| DUt. | dISP. | L.3 | tY.L.1 | dOSE | |
| SERu. | | L.4 | L.L.1 | | |
| | | | H.L.1 | | |
| | | | On.L.1 | | |
| | | | OF.L.1 | | |
| | | | PE.L.1 | | |
| | | | t.L.1 | | |



Setting is identical for L2, L3 and L4

NO.L.1 Selection the type of limit

HYS.L. Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "L.L." are set, at which the limit will shall react, "H.L." the hysteresis range around the limit ($LIM \pm 1/2 HYS$) and time "T.L." determining the delay of relay switch-on

FRt.O. Frame limit

- for this mode the parameters are set for interval "ON.L." the relay switch-on and "OF.L." the relay switch-off

dOSE Dose limit (periodic)

- for this mode the parameters are set for "PE.L." determining the limit value as well as its multiples at which the output is active and "T.L." indicating the time during which is the output active

6.3.1c Selection of type of output

| | | | | | |
|-------|-------|-----|--------|-------|------------|
| InP | L1HS | L.1 | In.L.1 | CLOS. | DEF |
| CHARn | RDUt. | L.2 | NO.L.1 | OPEn | |
| DUt. | dISP. | L.3 | tY.L.1 | | |
| SERu. | | L.4 | L.L.1 | | |
| | | | H.L.1 | | |
| | | | On.L.1 | | |
| | | | OF.L.1 | | |
| | | | PE.L.1 | | |
| | | | t.L.1 | | |


tY.L.1 Selection of type of output

CLOS. Output switches on when condition is met


OPEn Output switches off when condition is met



Setting is identical for L2, L3 and L4

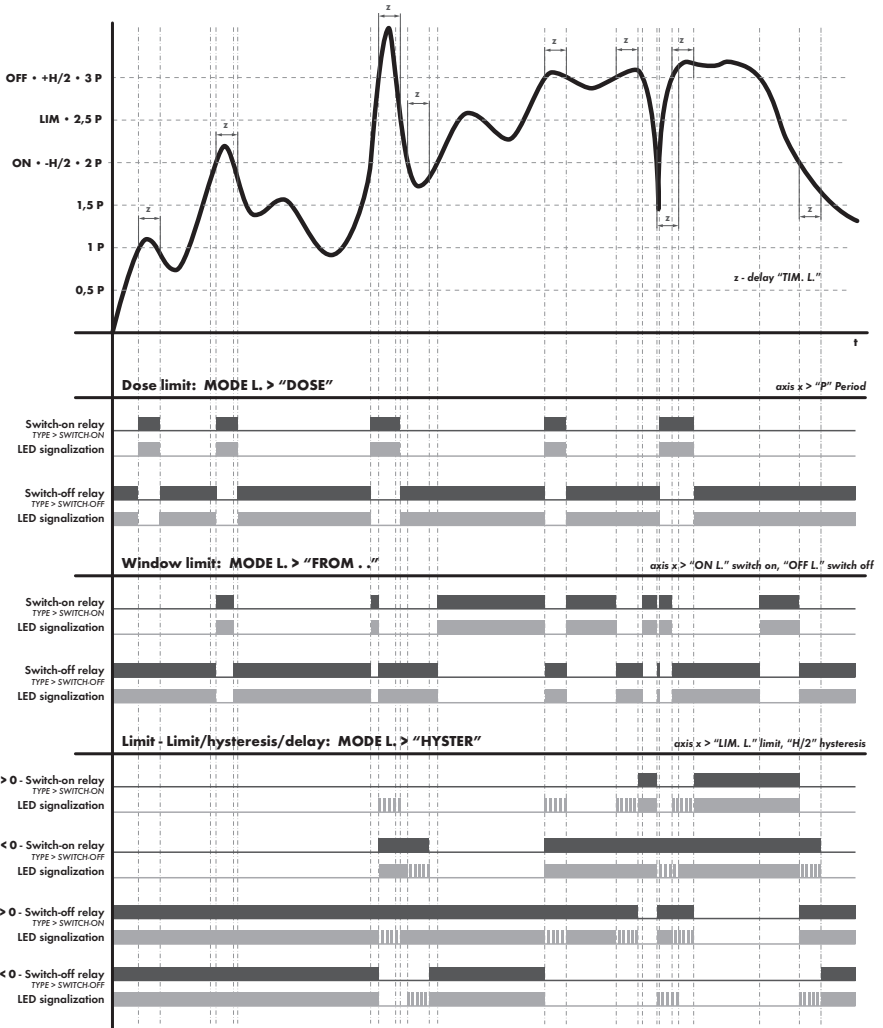

6.3.1d Setting values for limits evaluation

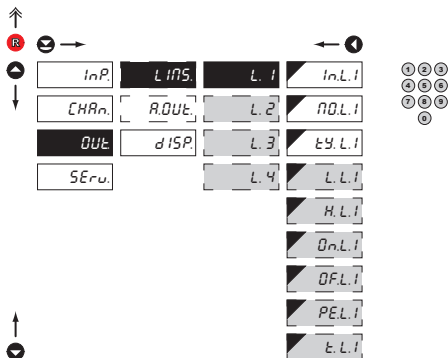

L i n . L i Setting limit for switch-on

- for type "HYST."

H . L . i Setting hysteresis

- for type "HYST."
- indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)

O n . L . i Setting the outset of the interval of limit switch-on

- for type "FR.TO."

O F . L . i Setting the end of the interval of limit switch-on

- for type "FR.TO."

P E . L . i Setting the period of limit switch-on


- for type "DOSE"

t . L . i Setting the time switch-on of the limit

- for type "HYST." and "DOSE"




Setting is identical for L 2, L 3 and L 4

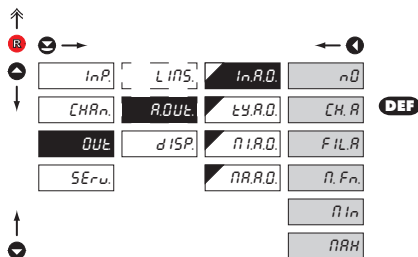6.3.2a Selection of input for analog output

In.A.O. Selection of evaluation of analog output


- selection of value from which the analog output will be evaluated

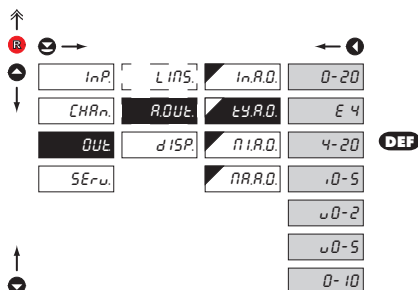- n0 AO evaluation is off
- CH.A AO evaluation from "Channel A"
- FIL.A AO evaluation from "Channel A" after digital filters processing
- n.Fn. AO evaluation from "Math.functions"
- nIn AO evaluation from "Min.value"
- nRH AO evaluation from "Max.value"

6.3.2b Selection of the type of analog output

ŁY.P. AO. Selection of the type of analog output

- 0-20 Type - 0...20 mA
- Ł 4 Type - 4...20 mA
- with indication of error statement (< 3,0 mA)
- 4-20 Type - 4...20 mA
- .0-5 Type - 0...5 mA
- Ł0-2 Type - 0...2 V
- Ł0-5 Type - 0...5 V
- 0-10 Type - 0...10 V

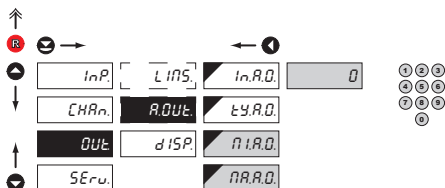6.3.2c Setting the analog output range




n.I.R.D. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

n.I.R.D. Assigning the display value to the beginning of the AO range
 - range of the setting is -999...9999
 - **DEF** = 0

n.R.R.D. Assigning the display value to the end of the AO range
 - range of the setting is -999...9999
 - **DEF** = 100

6.3.3a Selection of input for display projection

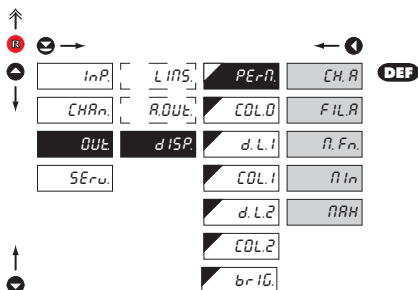


PEr.n. Selection display projection


- selection of value which will be shown on the instrument display

- CH.A** Projection of values from "Channel A"
- FIL.R** Projection of values from "Channel A" after digital filters processing
- n.F.n.** Projection of values from "Math.functions"
- n.In.** Projection of values from "Min.value"
- n.R.H.** Projection of values from "Max.value"

6.3.3b Selection of display color

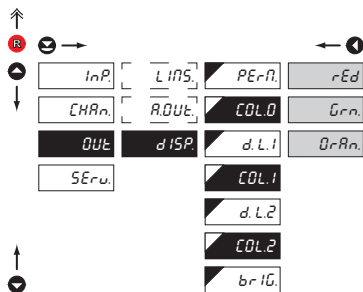
**COL.** Selection of display color

- the color selection is governed by setting under items "D. L.1." and "D. L.2."

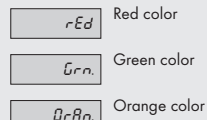

- "COL 0." **DEF** = Green
- "COL 1." **DEF** = Orange
- "COL 2." **DEF** = Red


6.3.3c Selection of display color change

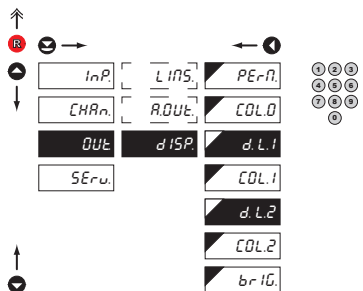**d.L.** Selection of display color change

- under items "D. L.1" and "D. L.2" the limit is set for the time when the display color shall change

- "D. L. 1." **DEF** = 9999
- "D. L. 2." **DEF** = 9999

6.3.3d Selection of display brightness

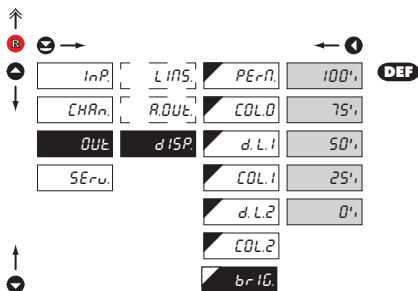


bRIG Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- 0% Display is off
- after keystroke display turns on for 10 s
- 25% Display brightness - 25%
- 50% Display brightness - 50%
- 75% Display brightness - 75%
- 100% Display brightness - 100%


6.4 Setting "PROFI" - SERVICE

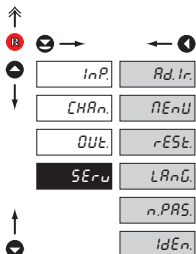

The instrument service functions are set in this menu

| | |
|--------------|--|
| Ad.In | Setting the address of IR control |
| nEnU | Selection of menu type LIGHT/PROFI |
| rESt | Restore instrument manufacture setting and calibration |
| LAnG | Language version of instrument menu |
| n.PAS | Setting new access password |
| IdEn | Instrument identification |


6.4.1 Setting the address of IR remote control

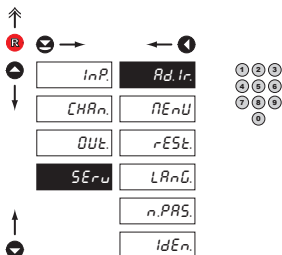

| | |
|--------------|--|
| Ad.In | Setting the address of IR remote control |
|--------------|--|

- setting the remote control address is inevitable only in case there are other large displays OMD 201 within the reach of IR remote control
- range of the setting is 0..99
- **DEF** = 0

6.4.2 Selection of type of programming menu

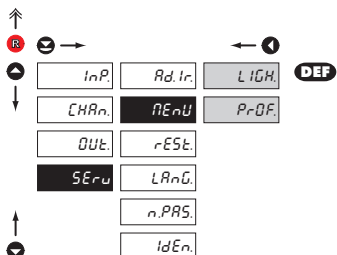

!
Change of setting is valid upon next access into menu

nEnU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills


L IGH. Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another

PrDF. Active PROFi menu

- complete programming menu for expert users
- tree menu

6.4.3 Restoration of manufacture setting

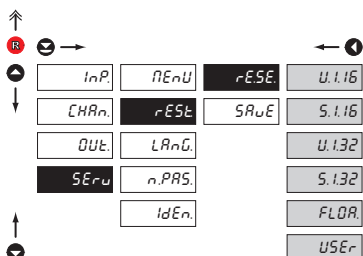

!
After restoration the instrument switches off for couple seconds

rESE. Return to manufacture setting of the instrument

--- Return to manufacture setting of the instrument

- in the event of error setting it is possible to return to manufacture setting
- restoration is performed for currently selected type of data format
- provided you stored your user setting in the "PROFI" menu it is possible to restore it (option "USER")
- reading the primary setting of items in menu (DEF)


USEr Restore user setting of the instrument

- reading user setting of the instrument, i.e. setting stored under SERV/REST/SAVE

SRAE Save user setting of the instrument

- saving the setting allows the operator its future contingent restoration


6.4.4 Selection of instrument menu language version

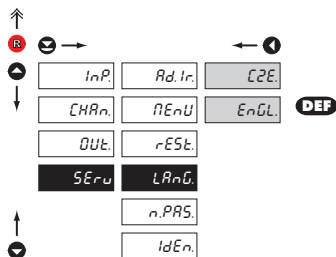

LANG Selection of instrument menu language version

- ČZE Instrument menu is in Czech
- EnGL Instrument menu is in English

6.4.5 Setting new access password

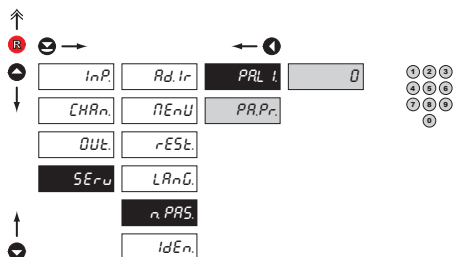


n.PRS Setting new password for access to LIGHT and

PROFI menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFÍ Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss: LIGHT Menu > „8177“ PROFÍ Menu > „7915“


6.4.6 Instrument identification

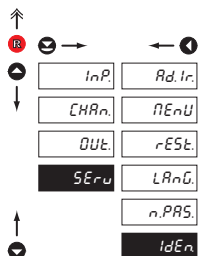

IdEn Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

7.0 Setting items into "USER" menu

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  item
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

Setting

flashing legend - current setting is displayed



n0

item will not be displayed in USER menu

YES

item will be displayed in USER menu with editing option

SHD U

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu



Example:

Into USER menu were selected these items

(keys ①) > CL. TA., L 1, L 2, L 3, for which we have preset this sequence (keys ②):

| | |
|---------|-----------------------------|
| CL. TA. | 5 |
| L 1 | 0 (sequence not determined) |
| L 2 | 2 |
| L 3 | 1 |

Upon entering USER menu

(key ③) items will be projected in the following sequence: LIM 3 > LIM 2 > CL.TAR. > LIM 1

Command 6h > Input value

<AA> 06 00 00 <Word Hi> <Word Lo> <CRC Lo> <CRC Hi>

where:

Word is the value in the format signed integer -32 768 (8000h) - 0 - 32 767 (7FFFh)

When displayed this value is recalculated with the aid of values entered in menu "INPUTS/CONFIG/MIN/MIN. Lo and MAX. Lo. Values "MIN. Hi" and "MAX. Hi" are of no significance in this case.

Response:

<AA> 06 00 00 <Word Hi><Word Lo><CRC Lo><CRC Hi>.

Command 10h > Input value

<AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi>

where:

<Hi Word><Lo Word> together they create the value LONG INT.

Input values are calculated through the following values:

$$\text{CHAN. A} = \text{MIN. A} + \frac{(\text{MAX. A} - \text{MIN. A})}{(\text{MAX.} - \text{MIN.})} \times (\text{input data} - \text{MIN.})$$

Chan. A value to be displayed and further processed in the instrument

MIN. A, MAX. A values entered in menu CHANNELS/CHAN. And/SETTIN.

MIN., MAX. values entered in menu INPUTS/CONFIG

MIN. = MIN. Hi x 65536 + MIN. Lo

MAX. = MAX. Hi x 65536 + MAX. Lo

Response:

Command copied without data part <AA> 10 00 00 00 02 <CRC Lo><CRC Hi>.

Command 20h > NON-STANDARD COMMAND for MODBUS

making instrument control accessible through standard commands of the OM ASCII protocol

<AA> 20 <number of symbols in standard message> standard message <CRC Lo> <CRC Hi>

Response:

provided no error occurs in MODBUS frame:

<AA> 20 <number of characters in standard message> standard message <CRC Lo> <CRC Hi>

In this format is also the response ?00, reporting error in processing standard OM command.

Address field of standard message will always be 00 - here without any significance.

ERROR STATUS

In case of wrong address or CRC nothing comes back.

In case of error command (CRC is not controlled) <AA> A0 01 <CRC Lo> <CRC Hi> comes back. If an error is in 10h command error statement “2” or “3” is reported.

If other command is used than the one corresponding with selected data format, it is evaluated as error command.

In common:

<AA> instrument address - binary 1 - 247 (set in instrument menu)

<CRC Lo> <CRC Hi> is a control word according to definitions in Appendix C of MODBUS protocol description.

TERMINATING COMMUNICATION

Communication is terminated provided no data arrives during 3 1/2 characters. This period is determined with uncertainty of ±250µs. MODBUS has standard rates up to 19 200. For higher rate it is necessary to count with this uncertainty - e.g. 115 200 Baud -> 500±250 µs, 230 400 Baud -> 250 ±250 µs.

| FORMAT | ORDER | COMMAND | DATA |
|------------|---------|---------|--|
| U. INT. 16 | n/a | 0x06 | <AA> 06 00 00 <Word Hi> <Word Lo> <CRC Lo> <CRC Hi> |
| S. INT. 16 | n/a | 0x06 | <AA> 06 00 00 <Word Hi> <Word Lo> <CRC Lo> <CRC Hi> |
| U. INT. 32 | LO - HI | 0x10 | <AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi> |
| S. INT. 32 | LO - HI | 0x10 | <AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi> |
| FLOAT | LO - HI | 0x10 | <AA> 10 00 00 00 02 04 <Lo Word Hi> <Lo Word Lo> <Hi Word Hi> <Hi Word Lo> <CRC Lo> <CRC Hi> |
| U. INT. 32 | HI - LO | 0x10 | <AA> 10 00 00 00 02 04 <Hi Word Hi> <Hi Word Lo> <Lo Word Hi> <Lo Word Lo> <CRC Lo> <CRC Hi> |
| S. INT. 32 | HI - LO | 0x10 | <AA> 10 00 00 00 02 04 <Hi Word Hi> <Hi Word Lo> <Lo Word Hi> <Lo Word Lo> <CRC Lo> <CRC Hi> |
| FLOAT | HI - LO | 0x10 | <AA> 10 00 00 00 02 04 <Hi Word Hi> <Hi Word Lo> <Lo Word Hi> <Lo Word Lo> <CRC Lo> <CRC Hi> |

LEGEND

| | | |
|--------------|------------------------------|---|
| # | Command beginning | |
| <AA> | Instrument address (1...247) | |
| <Word xx> | 16-bit data | |
| <Lo Word xx> | 32 bit data (lower part) | |
| <Hi Word xx> | 32 bit data (higher part) | |
| U.INT.16 | unsigned integer | 0 (0x0000)...65 535 (0xFFFF) |
| S.INT.16 | signed integer | -32 768 (0x8000)...65 535 (0x7FFF) |
| U.INT.32 | unsigned integer | 0 (0x0000 0000)...4 294 967 295 (0xFFFF FFFF) |
| S.INT.32 | signed integer | -2 147 483 648 (0x8000 0000)...65 535 (0x7FFF FFFF) |
| FLOAT | IEEE floating point | ±6,80564693277058E+38 <Hi Word Hi> = ZEEE EEE; <Hi Word Lo> = EMMM MMMM <Lo Word Hi> = MMMM MMMM; <Lo Word Lo> = MMMM MMMM Z...sign (1(0)/-1(1)); E...Exponent (-127(0x00)...0(0x7F)...128(0xFF)) M...Mantisa (1.0...2.0), highest mantisa bit is always 1 and it is covered by the lowest exponent bit e.g.: 0x3F80 0000 = Z*2 ⁻¹ *E*M = 1*2 ⁻¹ (0)*1 = 1 |

| ERROR | CAUSE | ELIMINATION |
|--------------|---|--|
| <i>d. Un</i> | Number is too small (large negative) to be displayed | change DP setting, channel constant setting |
| <i>d. Ou</i> | Number is too large to be displayed | change DP setting, channel constant setting |
| <i>t. Un</i> | Number is outside the table range | increase table values, change input setting (channel constant setting) |
| <i>t. Ou</i> | Number is outside the table range | increase table values, change input setting (channel constant setting) |
| <i>i. Un</i> | Input quantity is smaller than permitted input quantity range | change input signal value or input (range) setting |
| <i>i. Ou</i> | Input quantity is larger than permitted input quantity range | change input signal value or input (range) setting |
| <i>E. Hu</i> | A part of the instrument does not work properly | send the instrument for repair |
| <i>E. EE</i> | Data in EEPROM corrupted | perform restoration of manufacture setting, upon repeated error statement send instrument for repair |
| <i>E. dR</i> | Data in EEPROM outside the range | perform restoration of manufacture setting, upon repeated error statement send instrument for repair |
| <i>E. CL</i> | Memory was empty (presetting carried out) | upon repeated error statement send instrument for repair, possible failure in calibration |

INPUT

| | |
|--------------|--|
| Protocol: | ASCII, MESSBUS, MODBUS - RTU, PROFIBUS DP |
| Data format: | 8 bit + no parity + 1 stop bit (ASCII) 7 bit + even parity + 1 stop bit (MESSBUS) |
| Rate: | 600...230 400 Baud (max. 12 Mbaud for PROFIBUS) |
| RS 232: | isolated, two-way communication |
| RS 485: | isolated, two-way communication, addressing (in range 1...247) |

PROJECTION

| | |
|----------------|---|
| Display: | 9999, intensive red/green/orange 7 segment LED, digit height 57 or 100 or 125 mm |
| Projection: | ±9999 |
| Decimal point: | adjustable - in menu |
| Brightness: | adjustable - in menu |

INSTRUMENT ACCURACY

| | |
|------------------|--|
| Linearisation: | by linear interpolation in 50 points - solely via OM Link |
| Digital filters: | Averaging, Floating average, Exponential filter, Rounding |
| Functions: | Tare - display resetting Hold - stop measuring (at contact) Lock - control key locking MM - min/max value Mathematic functions |
| OM Link: | serial communication interface for setting, operation and update of instrument SW |
| Watch-dog: | reset after 400 ms |
| Calibration: | at 25°C and 40 % of r.h. |

COMPARATOR

| | |
|-------------|--|
| Type: | digital, adjustable in menu |
| Mode: | Hysteresis, From, Dosing |
| Limits: | -999...9999 |
| Hysteresis: | 0...999999 |
| Delay: | 0...99,9 s |
| Outputs: | 4x relays with switch-off contact (Form C) (230 VAC/50 VDC, 3 A)* |
| Relay: | 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300 |

ANALOGO OUTPUTS

| | |
|----------------|---|
| Type: | isolated, programmable with resolution of max.10 000 points, analog output corresponds with displayed data, type and range are adjustable |
| Non-linearity: | 0,2 % of range |
| TC: | 100 ppm/°C |
| Rate: | response to change of value < 150 ms |
| Voltage: | 0...2 V/5 V/10 V |
| Current: | 0...5/20 mA/4...20 mA - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V |

MEASURED DATA RECORD

| | |
|---------------|---|
| Type RTC: | time-controlled logging of measured data into instrument memory, allows to log up to 250 000 values |
| Type FAST: | fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s |
| Transmission: | via data output RS 232/485 or via OM Link |

EXCITATION

| | |
|-------------|---------------------------------|
| Adjustable: | 5...24 VDC/max. 1,2 W, isolated |
|-------------|---------------------------------|

POWER SUPPLY

| | |
|----------|--|
| Options: | 10...30 V AC/DC, max. 27 VA, isolated, - fuse inside (T 4A) 80...250 V AC/DC, max. 27 VA, isolated - fuse inside (T 4A) |
|----------|--|

MECHANIC PROPERTIES

| | |
|----------------|--------------------------|
| Material: | anodized aluminum, black |
| Dimensions: | see chapter 13 |
| Panel cut-out: | see chapter 13 |

OPERATING CONDITIONS


| | |
|------------------------|---|
| Connection: | through cable bushings to terminal boards inside the instru- ment, conductor section up to <1,5 mm ² /<2,5 mm ² |
| Stabilisation period: | within 15 minutes after switch-on |
| Working temp.: | 0°...60°C |
| Storage temp.: | -10°...85°C |
| Cover: | IP64 |
| Construction: | safety class I |
| Overvoltage category: | EN 61010-1, A2 |
| Dielectric strength: | 4 kVAC after 1 min between supply and input 4 kVAC after 1 min between supply and data/analog output 4 kVAC after 1 min between supply and relay output 2,5 kVAC after 1 min between input and data/analog output |
| Insulation resistance: | for pollution degree II, measurement category III instrum.power supply > 670 V (PI), 300 V (DI) Input/output > 300 V (PI), 150 (DI) |
| EMC: | EN 61326-1 |

* values apply for resistance load


Front view



Side view



Panel cut-out

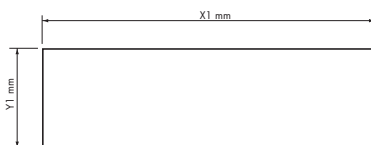

| Height | X | Y | X1 | Y1 |
|--------------|-----|-----|-----|-----|
| 57 | 372 | 116 | 364 | 108 |
| 100-4 | 465 | 181 | 457 | 173 |
| 100-6 | 651 | 181 | 643 | 173 |
| 125-4 | 539 | 237 | 531 | 228 |
| 125-6 | 754 | 237 | 746 | 228 |

Tolerance: ± 1 mm

Panel thickness: 0,5 ... 50 mm

Wall mounting

As a standard, large displays are designed for panel installation. Upon request we may also supply a holder for wall mounting, see picture.



Product **OMD 201RS**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Y E A R S

Stamp, signature

DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its full responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the type listed hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant statutory orders.

Product: 4/6-digit programmable large display

Type: **OMD 201**

Version: UNI, PWR, UQC, RS

Conformity is assessed pursuant to the following standards:

| | |
|-------------|--|
| El. safety: | EN 61010-1 |
| EMC: | EN 50131-1, chapter 14 and chapter 15 |
| | EN 50130-4, chapter 7 |
| | EN 50130-4, chapter 8 |
| | EN 50130-4, chapter 9 |
| | EN 50130-4, chapter 10 |
| | EN 50130-4, chapter 11 |
| | EN 50130-4, chapter 12 |
| | EN 50130-4, chapter 13 |
| | EN 50130-5, chapter 20 |
| | prEN 50131-2-1, par. 9.3.1 |
| | EN 61000-4-8 |
| | EN 61000-4-9 |
| | EN 61000-3-2 ed. 2:2001 |
| | EN 61000-3-3: 1997, Cor. 1:1998, Z1:2002 |
| | EN 55022, chapter 5 and chapter 6 |

and Ordinance on:

| | |
|-------------|--------------------|
| El. safety: | No. 168/1997 Coll. |
| EMC: | No. 169/1997 Coll. |

The evidence are the protocols of authorized and accredited organizations:

VTÚE Praha, experimental laboratory No. 1158, accredited by ČIA
VTÚPV Vyškov, experimental laboratory No. 1103, accredited by ČIA

Place and date of issue: Prague, 12. Juni 2001

Miroslav Hackl v.r.
Company representative

Mode of asses. of conformity §12, par. 4 b, d Act No. 22/1997 Coll.