

# USER MANUAL

## OM 502

5 DIGIT PROGRAMMABLE INSTRUMENT

DC VOLTMETER/AMMETER

PROCESS MONITOR

INTEGRATOR

LINEARIZATOR

DISPLAYS FOR LINEAR POTENTIOMETERS

DISPLAY INSTRUMENT FOR TENSIOMETERS

DISPLAYS FOR LVDT SENSORS



*Outstanding Measurement Value*



## SAFETY INSTRUCTIONS

Please read carefully the enclosed safety instructions and observe them!

Installation, all operational interventions, maintenance and service must be performed by a qualified personnel and in accordance with the attached information and safety regulations. The manufacturer is not liable for damage caused by improper installation, configuration, maintenance, and service.

The recorder must be installed according to the respective application. Incorrect installation can cause a malfunction, which can result in damage or accident.

The recorder uses dangerous voltages that can cause a fatal accident. Before you start solving problems (e.g. in case of failure or disassembly), the device must be disconnected from the power supply. For safety information the EN 61 010-1 + A2 standard must be observed.

When removing or inserting a card, observe the safety instructions and follow the recommended procedure. During any intervention the recorder must be disconnected from the power supply.

Do not attempt to repair or modify the device. A defective recorder must be sent for repair to the manufacturer.

These devices should be safeguarded by isolated or common fuses (breakers)!

The recorder is not designed for installation in potentially explosive surroundings (Ex). Use it only outside potentially explosive surroundings

## TECHNICAL DATA

Measuring instruments of the OM 502 series conform to the European regulation 2014/30/EU and 2014/35/EU

The instruments are up to the following European standards

EN 61010-1	Electrical safety
EN 61326-1	Electronic measuring, control and laboratory devices - Requirements for EMC "Industrial use"
IEC 980: 1993, Par. 6	Seismic resistance

The recorders are applicable for unlimited use in agricultural and industrial areas.

### ORBIT MERRET, spol. s r.o.

Vodňanská 675/30  
198 00 Praha 9  
Czech republic

Tel: +420 - 281 040 200  
Fax: +420 - 281 040 299  
orbit@merret.eu  
www.orbit.merret.eu

<b>1. CONTENTS</b> .....	<b>3</b>
<b>2. INSTRUMENT DESCRIPTION</b> .....	<b>4</b>
<b>3. INSTRUMENT CONNECTION</b> .....	<b>6</b>
Measuring ranges .....	6
Termination of RS 485 communication line .....	6
Instrument connection .....	7
Recommended connection of sensors .....	8
<b>4. INSTRUMENT SETTING</b> .....	<b>10</b>
Symbols used in the instructions .....	12
Setting the DP and the (-) sign .....	12
Control keys function .....	13
Setting/permitting items into "USER" menu .....	13
<b>5. SETTING "LIGHT" MENU</b> .....	<b>14</b>
5.0 Description "LIGHT" menu .....	14
Setting input - Type "DC" .....	18
Setting input - Type "PM" .....	20
Setting input - Type "I" .....	22
Setting input - Type "LX" .....	24
Setting input - Type "DU" .....	26
Setting input - Type "T" .....	28
Setting input - Type "LVDT" .....	30
Setting Limits .....	32
Setting analog output .....	34
Selection of programming menu „LIGHT"/„PROFI" .....	36
Restoration of manufacture setting .....	36
Automatic calibration - input range (only "DU") .....	37
Selection of instrument menu language version .....	38
Setting new access password .....	38
Instrument identification .....	39
<b>6. SETTING "PROFI" MENU</b> .....	<b>40</b>
6.0 Description of "PROFI" menu .....	40
6.1 "PROFI" menu - INPUTS .....	42
6.1.1 Resetting internal values .....	42
6.1.2 Setting measuring type, range, mode, rate .....	43
6.1.3 Setting the Real Time .....	45
6.1.4 External input function selection .....	48
6.1.5 Optional accessory functions of the keys .....	49
6.2 "PROFI" menu - CHANNEL .....	57
6.2.1 Setting measuring parameters (projection, filters, decimal point, description) .....	57
6.2.2 Setting mathematic functions .....	57
6.2.3 Setting integrator parameters .....	60
6.2.4 Selection of evaluation of min/max. value .....	64
6.3 "PROFI" menu - OUTPUT .....	66
6.3.1 Setting data logging .....	66
6.3.2 Setting Limits .....	68
6.3.3 Setting data output .....	71
6.3.4 Setting analog output .....	72
6.3.5 Selection of display projection .....	74
6.4 "PROFI" menu - SERVICE .....	76
6.4.1 Selection of programming menu „LIGHT"/„PROFI" .....	76
6.4.2 Restoration manufacture setting .....	77
6.4.3 Automatic calibration - input range .....	78
6.4.4 Selection of instrument menu language version .....	79
6.4.5 Setting new access password .....	79
6.4.6 Instrument identification .....	79
<b>7. SETTING ITEMS INTO "USER" MENU</b> .....	<b>80</b>
<b>8. DATA PROTOCOL</b> .....	<b>82</b>
<b>9. ERROR STATEMENTS</b> .....	<b>84</b>
<b>10. TABLE OF SYMBOLS</b> .....	<b>85</b>
<b>11. TECHNICAL DATA</b> .....	<b>86</b>
<b>12. INSTRUMENT DIMENSIONS AND INSTALATION</b> .....	<b>88</b>
<b>13. CERTIFICATE OF GUARANTEE</b> .....	<b>89</b>



## 2. INSTRUMENT DESCRIPTION

### 2.1 DESCRIPTION

The OM 502 model series are 5 digit panel programmable instruments.

The instrument is based on 8-bit microcontroller with high-rate 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

#### TYPES AND RANGES

<b>DC</b>	<b>DC Voltmeter/Ammeter</b> ±999,99 mV; ±999,99 mV; ±9,9999 V; ±99,999 V; ±300,00 V ±999,99 μA; ±9,9999 mA; ±99,999 mA; ±999,99 mA; ±5,0000 A
<b>PM</b>	<b>Process monitor</b> 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V
<b>I</b>	<b>Integrator</b> 0...5 mA/0 ...20 mA/4...20 mA/±2 V/±5 V/±10 V
<b>L</b>	<b>Linearizator</b> 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V
<b>DU</b>	<b>Display unit for linear potentiometers</b> Linear potentiometer (min. 500 Ω)
<b>T</b>	<b>Weighing indicator</b> 1...4 / 2...8 / 4...16 mV/V
<b>LVDT</b>	<b>Display unit for LVDT sensor</b> 1 / 3 / 5 VAC, 2,5 / 5 / 10 kHz

#### PROGRAMMABLE PROJECTION, FUNCTION

Measuring range:	adjustable (PM, I, LX) or as per order (DC, T)
Setting:	manual, optional display projection may be set for both limit values of the input signal, e.g. input 0...20 mA > 0...8500,0
Projection:	±99999 (-99999...99999)
Integration (I):	with time base 1 s, projection of integrated and current value
Weighing function (T):	manual or automatic calibration, signalization of stabilized equilibrium, zero stabilization, automatic zero monitoring, defined number of sections on the scale
Projection (T):	±99999 (Mode - Standard) selection of size of the section - 0,001/0,002/0,005/0,01/0,02/0,05/0,1/0,2/0,5/1/2/5/ 10/20/50/100 (Mode - WEIGHT)

#### LINEARIZATION

Linearization:	by linear interpolation in 50 points (solely via OM Link)
Linearization (LX):	linear interpolation in 256 points and 16 tables

#### DIGITAL FILTERS

Floating average:	from 2...30 measurements
Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

#### MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Fixed tare:	fixed preset tare
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

**EXTERNAL CONTROL**

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

**2.2 OPERATION**

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

<b>LIGHT</b>	<b>Simple programming menu</b> - contains solely items necessary for instrument setting and is protected by optional number code
<b>PROFI</b>	<b>Complete programming menu</b> - contains complete instrument menu and is protected by optional number code
<b>USER</b>	<b>User programming menu</b> - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

**OMLINK** The operation program is freely accessible ([www.orbit.merret.eu](http://www.orbit.merret.eu)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

**2.3 OPTIONS**

**Excitation** is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

**Comparators** are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0..99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

**Data outputs** are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII, MESSBUS, MODBUS - RTU or PROFIBUS protocol.

**Analog outputs** will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

**Measured data record** is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (100 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 266 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

### 3. INSTRUMENT CONNECTION



The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

#### MEASURING RANGES


TYPE	INPUTS I	INPUTS U
DC	$\pm 999,99 \mu\text{A}$ ; $\pm 9,9999 \text{ mA}$ ; $\pm 99,999 \text{ mA}$ ; $\pm 999,99 \text{ mA}$ ; $\pm 5,0000 \text{ A}$	$\pm 999,99 \text{ mV}$ ; $\pm 999,99 \text{ mV}$ ; $\pm 9,9999 \text{ V}$ ; $\pm 99,999 \text{ V}$ ; $\pm 300,00 \text{ V}$
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10 \text{ V}$
I	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10 \text{ V}$
LX	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10 \text{ V}$
DU	Linear potentiometer (min. 500 $\Omega$ )	
T	1...4 / 2...8 / 4...16 mV/V	


#### Termination of RS 485 communication line

##### X3 - Termination of communication line RS 485


Full	Significance	Default	Recommendation
1-2	connect L+ to (+) source	terminalconnected	connect at the end of line do not disconnect
3-4	termination of line 120 Ohm	disconnected	
5-6	connect L- to (-) source	terminalconnected	

RS 485 line should have a linear structure - wires (ideally shielded and twisted) should lead from one device to another.

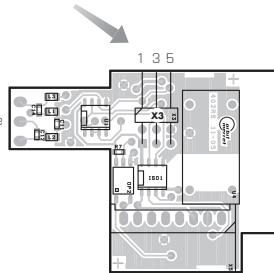



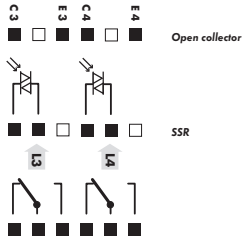


Signal „SENSE“ measures supply voltage on tensionmeter upon 6-wire connection, for 4-wire connection join brackets B+C and F+G directly on the instrument. When using the instrument in highly disturbing environment we recommend using 4-wire connection.

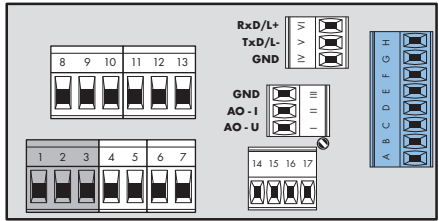

OM 502DC, PM, I, LX

- INPUT U
- INPUT I
- GND
- Shielding
- GND
- Excitation

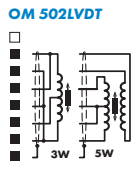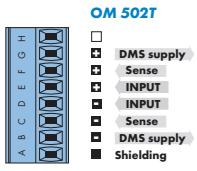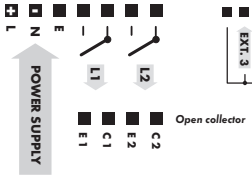


Terminal block "Shielding" is designed for connecting shielding of the supply lead (connected only on the side of the instrument).  
The "Shielding" and "GND" terminal blocks **MUST NOT** be connected

Excitation value may be set by trimmer above the terminal block no. 17


Grounding on terminal block 3 has to be connected at all times

### 3. INSTRUMENT CONNECTION

Example connection of a 2-wire sensor with current signal output powered by instrument's excitation

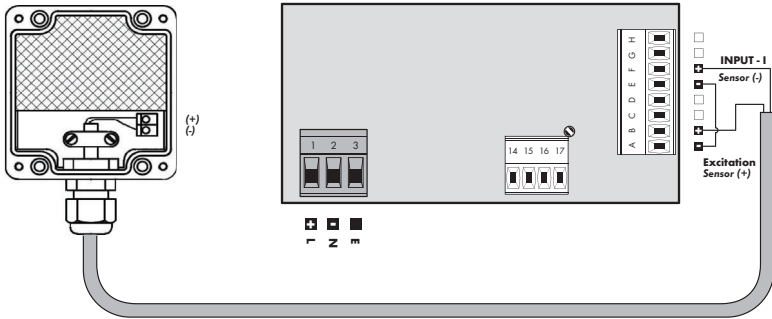


Example connection of a 3-wire sensor with current signal output powered by instrument's excitation

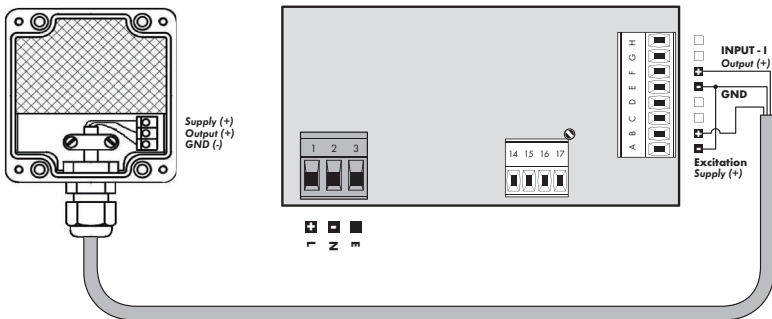



Example connection of 3-wire sensor with voltage signal output powered by instrument's excitation

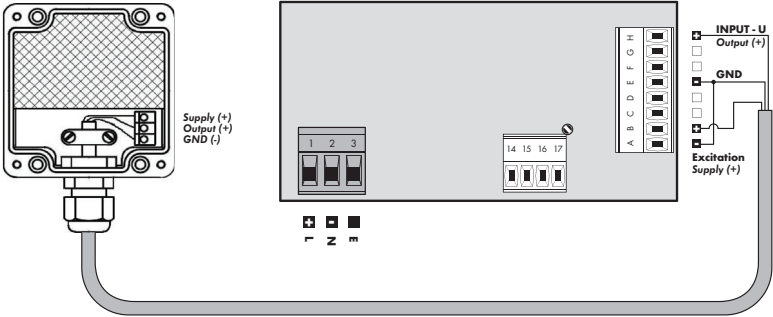

## 4. INSTRUMENT SETTING

### SETTING PROFI

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

### SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

### SETTING USER

For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

**4.1** SETTING


The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT**      **Simple programming menu**
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI**      **Complete programming menu**
- contains complete instrument menu and is protected by optional number code
- USER**      **User programming menu**
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
  - acces without password

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible ([www.orbit.merret.eu](http://www.orbit.merret.eu)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

## Scheme of processing the measured signal

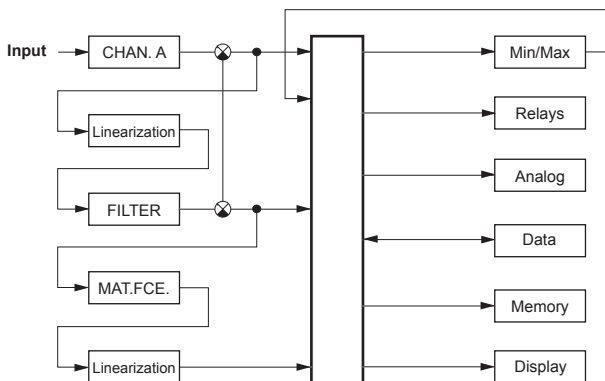

## 4. INSTRUMENT SETTING

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

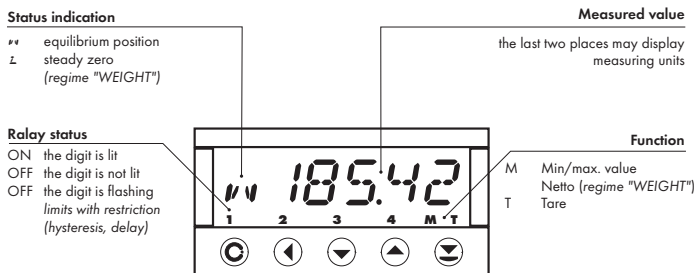

### Symbols used in the instructions

**DC PM**  
**DU I LX T** Indicates the setting for given type of instrument

**DEF** values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

30 continues on page 30

### Setting the decimal point and the minus sign

#### DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by .

#### THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

KEY	MEASUREMENT	MENU	SETTING NUMBERS/SELECTION
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
	programmable key function	move to next item	move up
	programmable key function	confirm selection	confirm setting/selection
			numeric value is set to zero
	access into LIGHT menu		
	access into PROFI menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

Setting items into „USER“ menu

- in **LIGHT** or **PROFI** menu
- no items permitted in **USER** menu from manufacture
- on items marked by inverted triangle

# USER

legend is flashing - current setting is displayed



**ND** item will not be displayed in USER menu

**YES** item will be displayed in USER menu with the option of setting

**SHOW** item will be solely displayed in USER menu

## 5. SETTING LIGHT

# SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure



Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

### Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	<b>DEF</b>

Access password  
 1428  PASSW  0

**DC** Setting projection

**MIN**  0.00 **MA: A**  100.00 **FORM: A**  0000.00

**PM** Selecting measuring range/Projection setting

**MODE**  4-20mA **MIN**  0.00 **MA: A**  100.00 **FORM: A**  0000.00

**I** Selecting measuring range/Projection setting/Setting multiplying and dividing constancy

**MODE**  4-20mA **MA: A**  0.00 **MA: A**  100.00 **SCALE**  1

**DIVID**  1 **FORM: A**  0000.00

**LX** Selecting measuring range/Projection setting/Table selection

**MODE**  4-20mA **MA: A**  0.00 **MA: A**  100.00 **TAB: A**  TAB 0

**FORM: A**  0000.00

**DU** Setting projection

**MIN**  0.00 **MA: A**  100.00 **FORM: A**  0000.00

**T** Selecting measuring mode/Setting projection and tensionmeter sensitivity

**RANGE**  2 MPa **MODE**  STANB **MA: A**  100 **SCALE**  2

**MA: A**  100 **FORM: A**  0000.00

**LVDI** Selecting measuring mode/Setting projection

**MODE**  3-WIRE **PRIMAP**  3V-5 **GAIN**  GAIN 1 **MIN: A**  0

**MA: A**  100 **FORM: A**  0000.00

**LIM: L1**  20 **LIM: L2**  40 **LIM: L3**  60 **LIM: L4**  80

Option - Comparators

**TYP: A.D.**  0-20mA **MIN: A.D.**  0 **MA: A.D.**  100

Option - Analog output

Menu type

**MENU**  LIGHT **Return to manufacture calibration**  RE CAL  YES **Return to manufacture setting**  RE SET  TYP

Calibration - only for "DU"

**C: MIN**  YES **C: MA: A**  YES

Return to measuring mode 1428

Language selection

**LANG**  ENGL

New password

**PAS: LI**  0

Identification

**IDENT**  YES

Typy of instr.

**DM 502PM**


SW version

**90-001**

Input

**4-20mA**

## 5. SETTING LIGHT

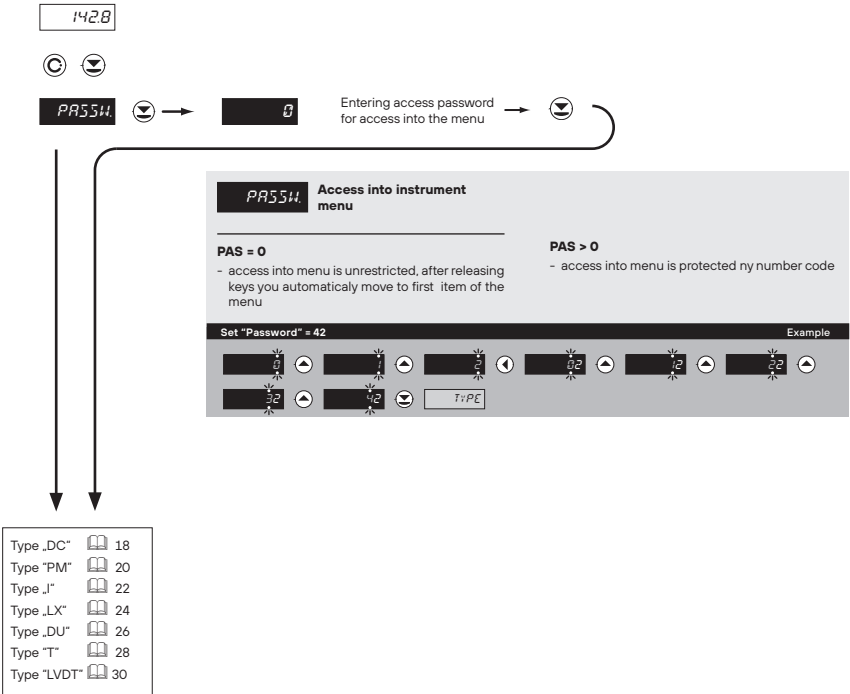





## SETTING **LIGHT** 5.



# 5. SETTING LIGHT

FOR INSTRUMENT > OM 502DC



**MIN A** Setting display projection for minimum value of input signal

signal


- range of the setting: ±99999 (-99999...99999)
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mV > MIN A = -25

Example

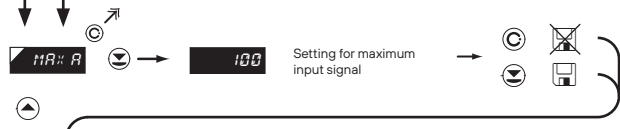

**MAX A** Setting display projection for maximum value of input signal

signal


- range of the setting: ±99999 (-99999...99999)
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for 999.9 mV > MAX A = 3500

Example

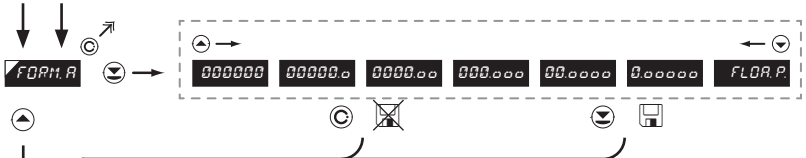

**FORM.R** Setting projection of the decimal point


- positioning of the DP is set here in the measuring mode **DEP** = 0000.00

Projection of DP on display > 00000.0 Example

0000.00    00000.0    MENU    \*subsequent item on the menu depends on instrument equipment

## 5. SETTING LIGHT

FOR INSTRUMENT > OM 502PM

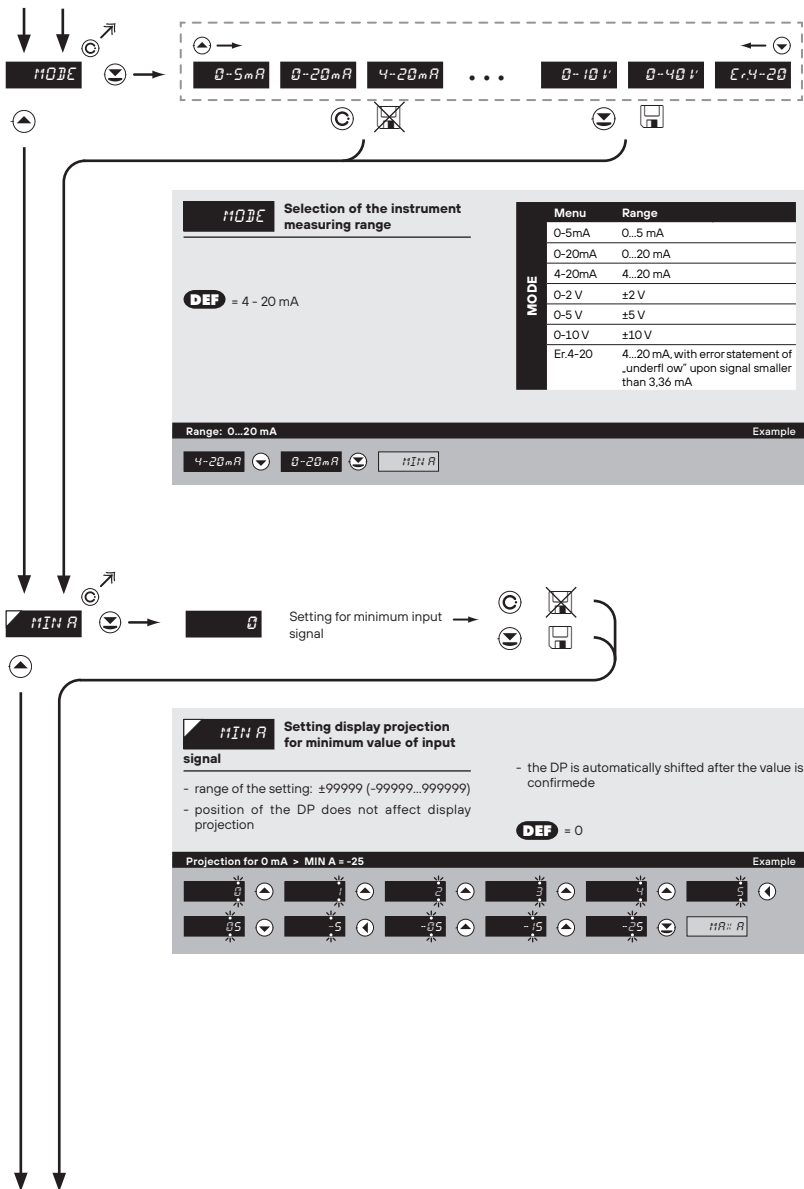



**MAX A** Setting display projection for maximum value of input signal

- the DP is automatically shifted after the value is confirmed
- range of the setting:  $\pm 99999$  (-99999...99999)
- position of the DP does not affect display projection

**DEF** = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	200	300	400
500	500	500	2500	FORM A	



**FORM A** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

**DEF** = 0000.00

Projection of DP on display > 00000.0 Example


0000.00	00000.0	MENU
---------	---------	------


\*subsequent item on the menu depends on instrument equipment



# 5. SETTING LIGHT

FOR INSTRUMENT > OM 502I

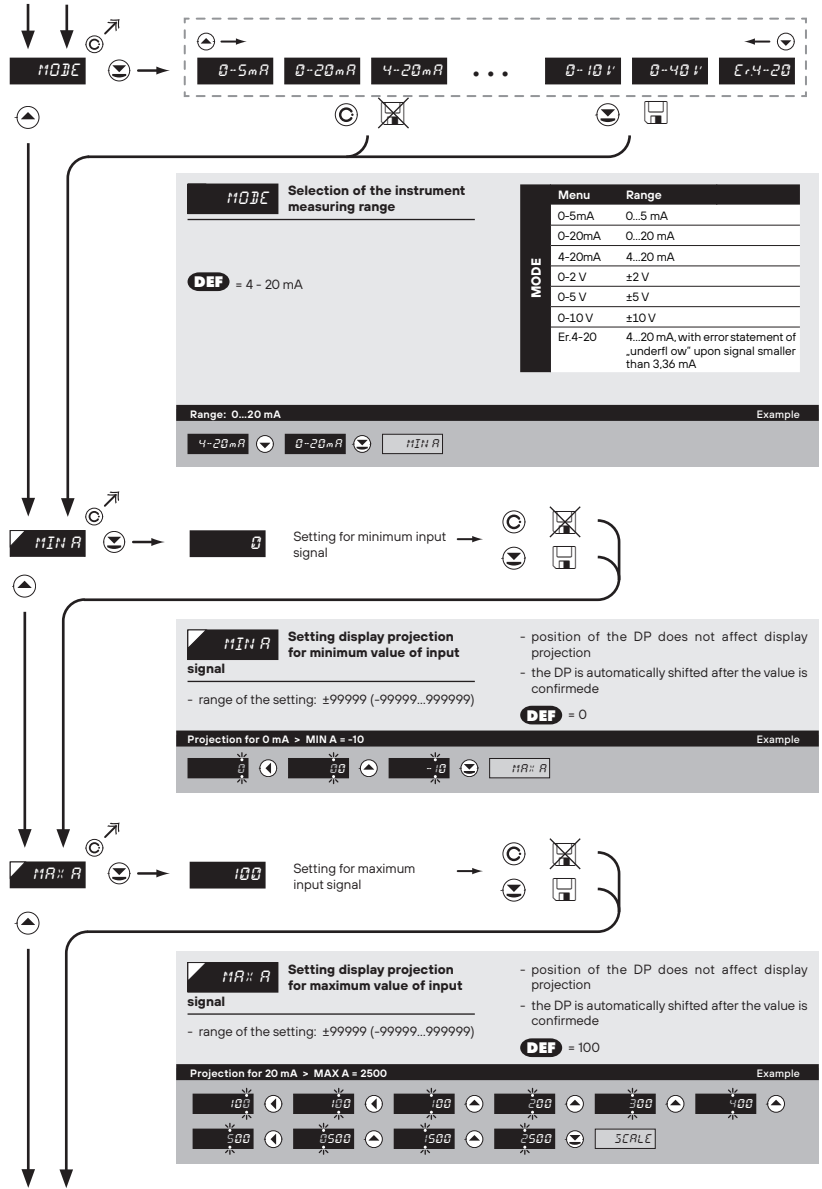


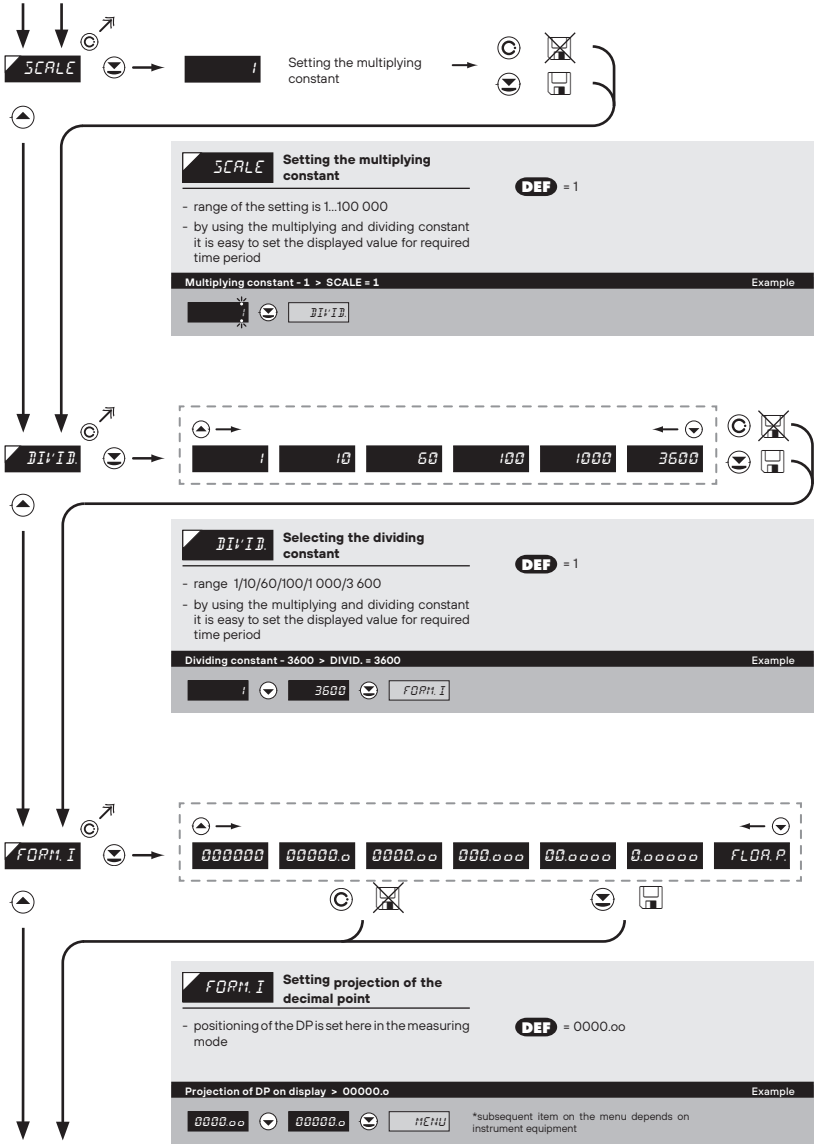



# 5. SETTING LIGHT

FOR INSTRUMENT > OM 502LX

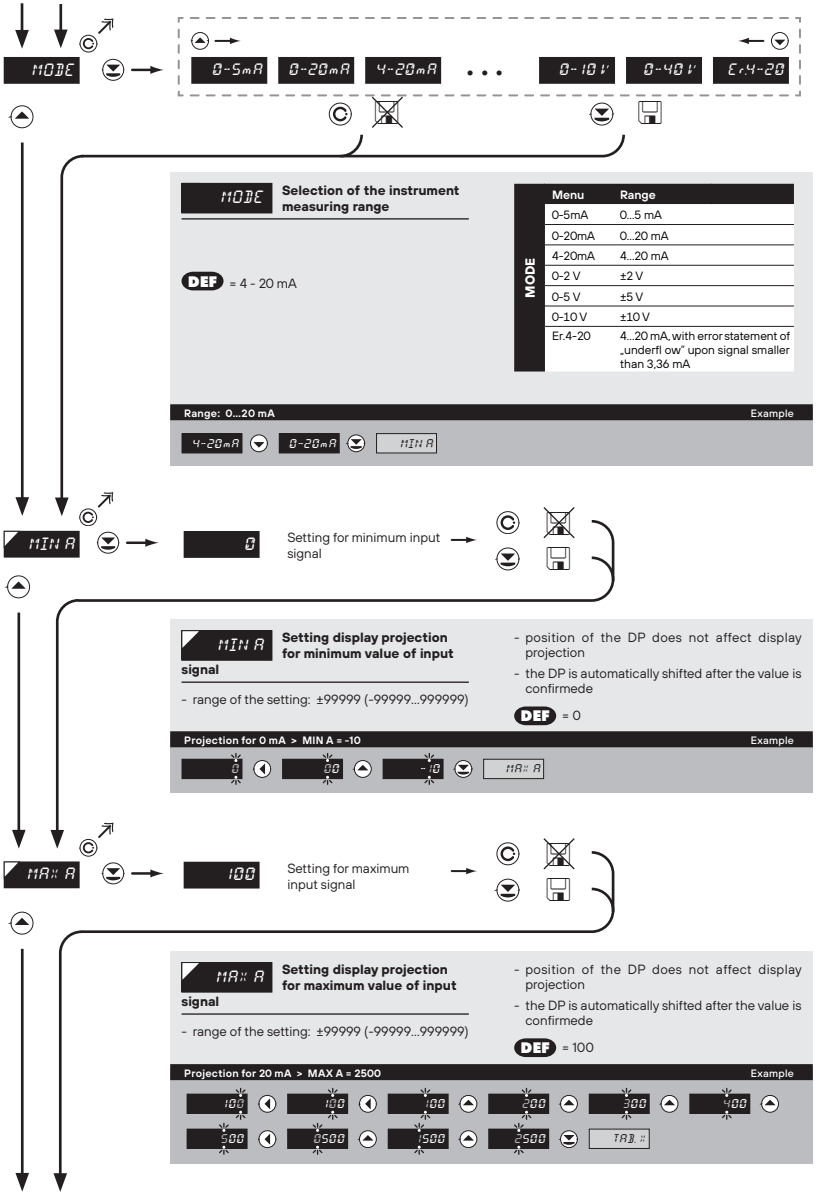

MODE

0-5mA   0-20mA   4-20mA   ...   0-10V   0-40V   Er:4-20

**MODE** Selection of the instrument measuring range

**DEF** = 4 - 20 mA

Menu	Range
0-5mA	0..5 mA
0-20mA	0..20 mA
4-20mA	4..20 mA
0-2 V	±2 V
0-5 V	±5 V
0-10 V	±10 V
Er:4-20	4..20 mA, with error statement of „underflow“ upon signal smaller than 3.36 mA

Range: 0...20 mA   Example

4-20mA   0-20mA   MIN A

**MIN A** Setting for minimum input signal

Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting: ±99999 (-99999...999999)

**DEF** = 0

Projection for 0 mA > MIN A = -10   Example

0   00   -10   MIN A

**MAX A** Setting for maximum input signal

Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting: ±99999 (-99999...999999)

**DEF** = 100

Projection for 20 mA > MAX A = 2500   Example

100   100   100   200   300   400

500   0500   1500   2500   TRIP






**TAB. #** Selection of the linearization table

**DEF** = TAB. 0

Selection of the linearization table - Table no. 1 > TAB. = 1 Example

TAB. 0 TAB. 1 FDRH. #

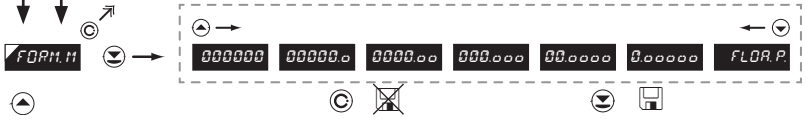

**FDRH. #** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode **DEF** = 0000.00

Projection of DP on display > 00000.0 Example


0000.00 00000.0 MENU

\*subsequent item on the menu depends on instrument equipment



# 5. SETTING LIGHT

FOR INSTRUMENT > OM 502DU

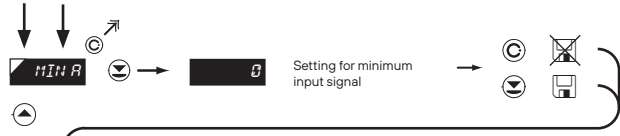

**MIN A** Setting display projection for minimum value of input signal

signal


- range of the setting: ±99999 (-99999...999999)
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

---

Projection for the beginning > MIN A = 0 Example

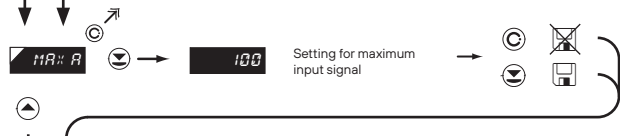

**MAX A** Setting display projection for maximum value of input signal

signal


- range of the setting: ±99999 (-99999...999999)
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 100

---

Projection for the end > MAX A = 5000 Example

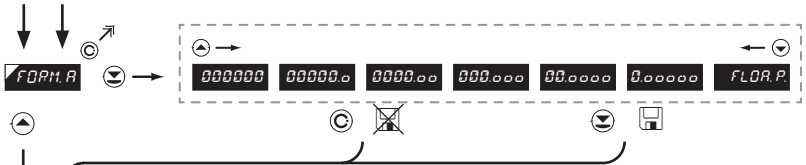

**FORM.R** Setting projection of the decimal point

- positioning of the DPI is set here in the measuring mode **DEF** = 0000.00

Projection of DP on display > 00000.0 Example


0000.00 [down arrow] 00000.0 [down arrow] MENU \*subsequent item on the menu depends on instrument equipment

32

Calibration of the beginning and the end of range of linear potentiometer is on page 37

## 5. SETTING LIGHT

FOR INSTRUMENT > OM 502T

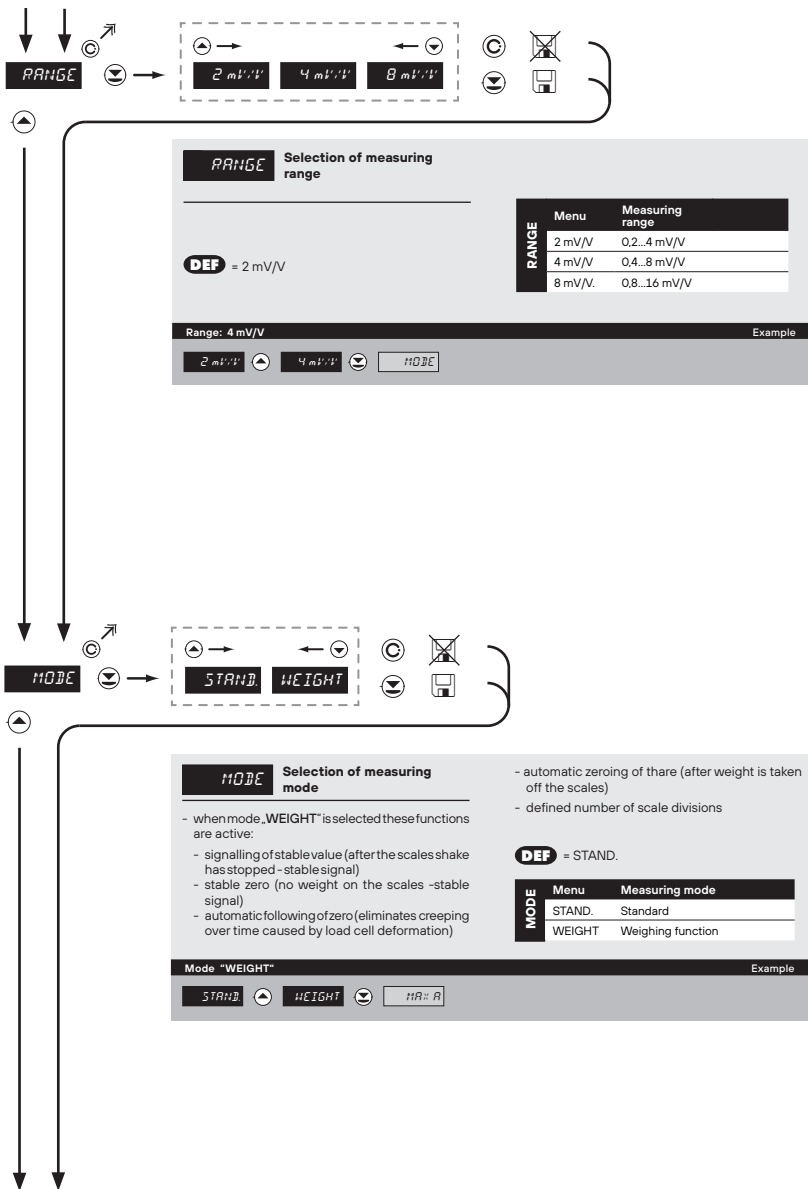



**MAX A** Setting display projection for maximum value of input signal

- the DP is automatically shifted after the value is confirmed

- range of the setting: ±99999 (-99999...999999)

- position of the DP does not affect display projection

**DEF** = 100

**Weighing range is -200 kg > MAX A = 200** Example

Items in the menu "Manual Calibration":  
 MAX A Sensor range  
 SENSE Sensor sensitiveness

Items in the menu "Automatic Calibration":  
 (after calibration in menu "SERVIC./CALIB.):  
 MIN A The load at which minimum calibration was performed  
 MAX A The load at which maximum calibration was performed  
 - for maximum calibration we recommend the value of reference load to be in the upper third of the measuring range




**SENSE** Setting display projection for maximum input signal value

- DP is automatically shifted after the value is confirmed

- range of the setting: 0.2...16.0

**DEF** = 2.0000

**Sensitiveness 2.0018 mV/V > SENSE = 2.0018** Example

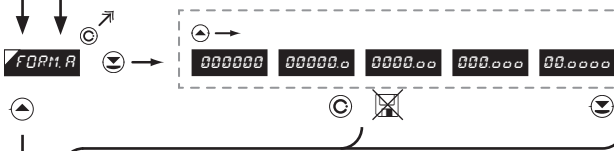

**FORM A** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode


**DEF** = 0000.00

**Projection of DP on display > 00000.0** Example

\*subsequent item on the menu depends on instrument equipment

## 5. SETTING LIGHT

FOR INSTRUMENT > OM 502LVDT

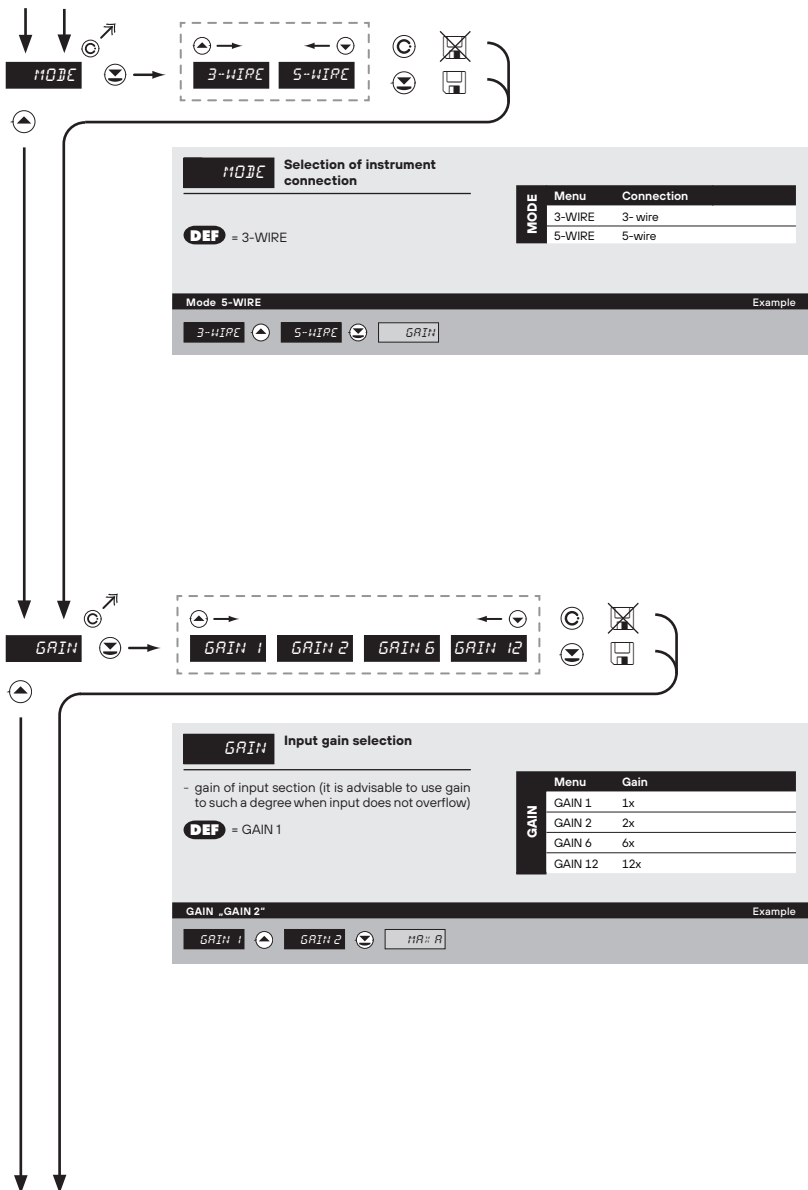



**MIN A** Setting display projection for minimum value of input signal

- the DP is automatically shifted after the value is confirmed
- range of the setting:  $\pm 99999$  (-99999...99999)
- position of the DP does not affect display projection

**DEF** = 0

Projection for the beginning > MIN A = 0 Example




**MAX A** Setting display projection for maximum value of input signal

- the DP is automatically shifted after the value is confirmed
- range of the setting:  $\pm 99999$  (-99999...99999)
- position of the DP does not affect display projection

**DEF** = 100

Projection for the end > MAX A = 5000 Example

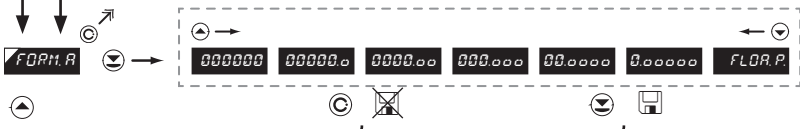

**FORM A** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

**DEF** = 0000.00

Projection of DP on display > 00000.0 Example

\*subsequent item on the menu depends on instrument equipment

## 5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > COMPARATORS




**LIM L.1** Setting boundary for limit 1

- range of the setting: -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 20  
**DEF** „Hysteresis“=0 „Delay“=0

Setting limit 1 > L1 = 32 Example

20	21	22	23	32	MENU
----	----	----	----	----	------

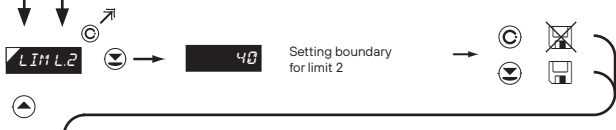

**LIM L.2** Setting boundary for limit 2

- range of the setting: -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 40  
**DEF** „Hysteresis“=0 „Delay“=0

Setting limit 2 > L2 = 53.1 Example

40	41	42	43	53.1	53.1	53.1
23.1	33.1	43.1	53.1	53.1	53.1	0053.1
00053.1	00053.1	00053.1	MENU	* subsequent item on the menu depends on instrument equipment		

**!** Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.






**LIM L3** Setting boundary for limit 3

- range of the setting: -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 60  
**DEF** .Hysteresis=0, „Delay“=0

Setting limit 3 > L 3 = 85 Example

60	61	62	63	64	65
65	75	85	MENU	* subsequent item on the menu depends on instrument equipment	

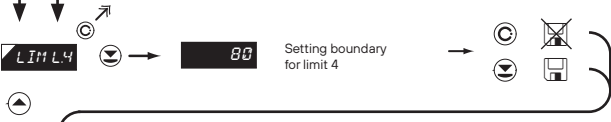

**LIM L4** Setting boundary for limit 4

- range of the setting: -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 80  
**DEF** .Hysteresis="0, „Delay“=0

Setting limit 4 > L 4 = 103 Example

80	81	82	83	84	85
83	88	103	MENU	* subsequent item on the menu depends on instrument equipment	



# 5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT




**TYP. A.O.** Setting the type of analog output

Menu	Range	Description
0-20mA	0..20 mA	
Er.4-T	4..20 mA	with error message indication and broken loop indication (<3.6 mA)
4-20T	4..20 mA	with broken loop indication (<3.6 mA)
Er.4-20	4..20 mA	with indication of error statement (<3.6 mA)
4-20mA	4..20 mA	
0-5mA	0..5 mA	
0-2 V	0..2 V	
0-5 V	0..5 V	
0-10 V	0..10 V	
+-10 V	±10 V	

**DEF** = 4...20 mA

Type of analog output - 0...10 V > TYP. A.O. = 0-10 V Example

4-20mA 0-5mA 0-2 V 0-5 V 0-10 V MIN A.O.

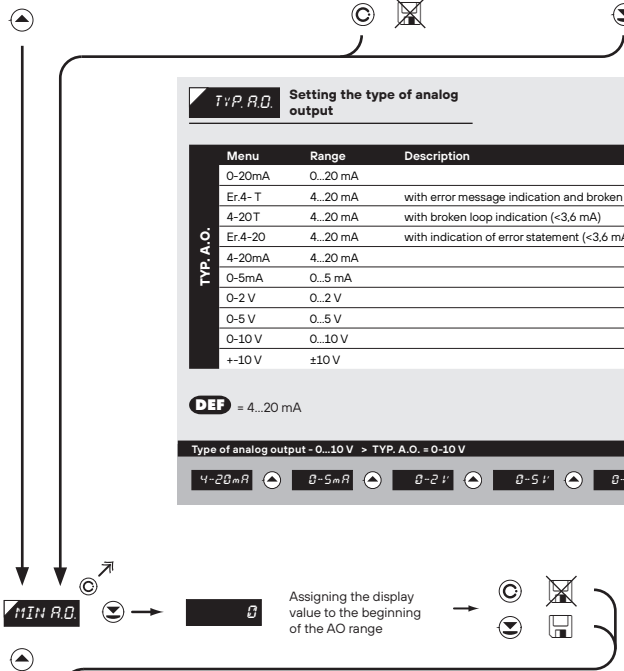


**MIN. A.O.** Assigning the display value to the beginning of the AO range **DEF** = 0

- range of the setting: -99999...999999

Display value for the beginning of the AO range > MIN A.O. = 0 Example

0 MIN A.O.

**!** Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

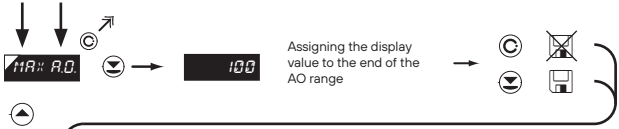

**HR: R.O. Assigning the display value to the end of the AO range**


- range of the setting: -99999...999999

**DEF = 100**

Display value for the end of the AO range > MAX A.O. = 120 Example

100 100 110 120 MENU

## 5. SETTING LIGHT

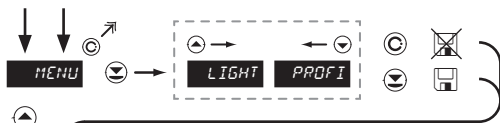

**MENU** Setting the menu type  
**LIGHT/PROFI**

**LIGHT** > menu LIGHT, a simple menu, which contains only the most essential items necessary for instrument setting  
> linear tree structure

**PROFI** > menu PROFI, a complete menu for complete instrument setting  
> tree menu structure

**DEF** = LIGHT

Menu LIGHT > MENU = LIGHT Example

LIGHT  RE.CAL




**RE.CAL.** Restoration of manufacture calibration

- in the event of error calibration it is feasible to restore manufacture calibration. Prior to execution of any modifications you will be asked to confirm your selection. (YES)

Restoration of manufacture setting > RE.CAL. Example

RE.CAL.  YES  RE.SET



**RE.SET.** Restoration of manufacture instrument setting

- in the event of error setting the manufacture setting may be restored

- restoration is performed for the currently selected type of the instrument input (select "TYPE")

- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")

- loading manufacture calibration and primary setting of items on the menu (DEF)


Restoration of manufacture setting > RE.SET. Example

RE.SET.  TYPE  LANG

\* subsequent item on the menu depends on instrument equipment

Type „DC“		38
Type „PM“		38
Type „I“		38
Type „LX“		38
Type „DU“		37
Type „T“		38
Type „LVDT“		37

Type "DU" and "LVDT"



**C.MIN** Calibration of input range - the potentiometer/sensor traveller in initial position


Only for type "DU" and "LVDT"

- prior confirming the flashing "YES" sign the potentiometer/sensor traveller has to be in given idle position

---

Calibration of the beginning of the range > C. MIN Example

**YES**



**C.MAX** Calibration of input range - the potentiometer /sensor traveller in end position

Only for type "DU" and "LVDT"


- prior confirming the flashing "YES" sign the potentiometer/sensor traveller has to be in given idle position

---

Calibration of the end of the range > C. MAX Example

**YES**

## 5. SETTING LIGHT

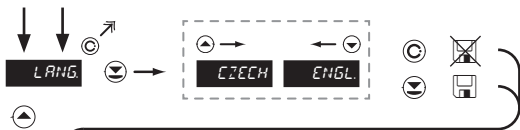

**LANG.** Selection of language in instrument menu

- selection of language version of the instrument menu

**DEF** = ENGL.

Language selection - ENGLISH > LANG. = ENGL. Example

ENGL.  PAS.LI



**PAS.LI.** Setting new access password

- access password for menu LIGHT
- range of the number code 0...9999
- upon setting the password to "0000" the access to menu LIGHT is free without prompt to enter it


- in case the password is lost, please contact the administrator of this device

**DEF** = 0

New password - 341 > PAS.LI. = 341 Example

0	1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8	9

IBCHT

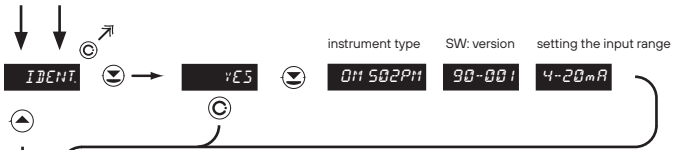

**IDENT.** **Instrument SW version**

---

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)
- if SW version contains a letter in first position, then it is a customer SW

- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

**142.8** Return to measuring mode

## 6. SETTING **PROFI**

# SETTING **PROFI**

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

### 6.0 SETTING "PROFI"

#### **PROFI**

##### **Complete programming menu**

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

#### Switching over to "PROFI" menu




- access to **PROFI** menu
- password protected access (unless set as follows under the item SERVIC. > N. PASS. > PROFI =0)





## 6. SETTING PROFI


### 6.1 SETTING "PROFI" - INPUT

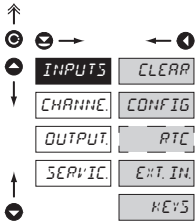

The primary instrument parameters are set in this menu

<b>CLEAR</b>	Resetting internal values
<b>CONFIG.</b>	Selection of measuring range and parameters
<b>RTC</b>	Setting date and time for option with RTC
<b>EXT. IN.</b>	Setting external inputs functions
<b>KEYS</b>	Assigning further functions to keys on the instrument

### 6.1.1 RESETTING INTERNAL VALUES

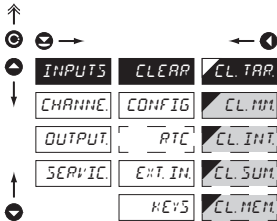

<b>CLEAR</b>	<b>Resetting internal values</b>
<b>CL. TAR.</b>	Tare resetting
<b>CL. MIN.</b>	Resetting min/max value
- resetting memory for the storage of minimum and maximum value achieved during measurement	
<b>CL. INT.</b>	Resetting integrated value
- only for instrument OM 502I	
<b>CL. SUM.</b>	Resetting the sum
- summation serves for cumulative totals of values (e.g. shift operation), when after resetting the integrator ("N. INT") the display value is added to the total ("SUM")	
- only for instrument OM 502I	
<b>CL. MEM.</b>	Resetting the instrument memory
- resetting memory with data measured in the "FAST" or "RTC" modes	
- not in standard equipment/hodnoty	

## 6.1.2a SELECTION OF MEASURING RATE

↑

⊙ →

← ⊙

↑

INPUTS CLEAR **RANGE** 100.0 **DEF**

↓

CHANNEL CONFIG RANGE 66.7

OUTPUT [PTC] MODE 50.0

SERVIC. ENT. IN TRACE0 25.0

KEYS R. ZERO 12.5

PARHR 10.0 **DEF** „T“

BRN 8.0 **DEF**

4.0

2.0

1.0

0.5

0.3

0.1

↑

⊙

**RANGE** Selection of measuring rate

100.0	100,0 measurement/s
66.7	66,7 measurement/s
50.0	50,0 measurement/s
25.0	25,0 measurement/s
12.5	12,5 measurement/s
10.0	10,0 measurement/s
8.0	8,0 measurement/s
4.0	4,0 measurement/s
2.0	2,0 measurement/s
1.0	1,0 measurement/s
0.5	0,5 measurement/s
0.3	0,3 measurement/s
0.1	0,1 measurement/s

## 6.1.2b SELECTION OF MEASURING RANGE

T

↑

⊙ →

← ⊙

↑

INPUTS CLEAR RANGE 2 mV/V **DEF**

↓

CHANNEL CONFIG RANGE 4 mV/V

OUTPUT [PTC] MODE 8 mV/V

SERVIC. ENT. IN TRACE0

KEYS R. ZERO

↑

⊙

**RANGE** Selection of measuring range

RANGE	Menu	Measuring range
	2 mV/V	0.2..4 mV/V
	4 mV/V	0.4..8 mV/V
	8 mV/V	0.8..16 mV/V



## 6. SETTING PROFI

### 6.1.2c SELECTION OF MEASURING RANGE/MODE

Navigation icons: ↑, Ⓞ, ↗, ↓, ←, Ⓚ, ↘, Ⓛ, ↙, Ⓜ, Ⓝ, Ⓟ, Ⓠ, Ⓡ, Ⓢ, Ⓣ, Ⓤ, Ⓥ, Ⓦ, Ⓧ, Ⓨ, Ⓩ, ⓐ, ⓑ, ⓓ, ⓔ, ⓖ, ⓗ, ⓘ, ⓙ, ⓚ, ⓛ, ⓜ, ⓞ, ⓟ, ⓠ, ⓡ, ⓢ, ⓣ, ⓤ, ⓶, ⓷, ⓸, ⓹, ⓺, ⓻, ⓼, ⓽, ⓿, Ⓚ, Ⓛ, Ⓜ, Ⓝ, Ⓟ, Ⓠ, Ⓡ, Ⓢ, Ⓣ, Ⓤ, Ⓥ, Ⓦ, Ⓧ, Ⓨ, Ⓩ, ⓐ, ⓑ, ⓓ, ⓔ, ⓖ, ⓗ, ⓘ, ⓙ, ⓚ, ⓛ, ⓜ, ⓞ, ⓟ, ⓠ, ⓡ, ⓢ, ⓣ, ⓤ, ⓶, ⓷, ⓸, ⓹, ⓺, ⓻, ⓼, ⓽, ⓿

Menu structure:

- INPUTS: CLEAR, PERIODS, 0-5 mA, PM/I/LX
- CHANNEL: CONFIG, RANGE, 0-20 mA
- OUTPUT: PTC, MODE, 4-20 mA, DEF
- SERVIC: EXT. IN, TRACE0, 0-2 V
- KEYS: R. ZERO, 0-5 V
- 0-10 V
- 0-10 V
- ERM-20
- CURR.
- VOLT.
- LVDT: 3-WIRE, DEF
- T: STAND, DEF
- 5-WIRE
- WEIGHT

MODE		Selection of measuring range/mode
Menu	Measuring range	
0-5mA	0...5 mA	
0-20mA	0...20 mA	
4-20mA	4...20 mA	
0-2V	±2V	
0-5V	±5V	
0-10V	±10V	
Er.4-20	4...20 mA, with error statement of „underflow“ upon signal smaller than 3.36 mA	
CURR.	Current range after automatic calibration	
VOLT.	Voltage range after automatic calibration	

MODE		Menu	Measuring range
	STAND.	Standard mode	
	WEIGHT	Weighing mode	

MODE		Menu	Connection
	3-WIRE	3-wire	
	5-WIRE	5-wire	

### 6.1.2d SELECTION OF AUTOMATIC ZERO MONITORING

Navigation icons: ↑, Ⓞ, ↗, ↓, ←, Ⓚ, ↘, Ⓛ, ↙, Ⓜ, Ⓝ, Ⓟ, Ⓠ, Ⓡ, Ⓢ, Ⓣ, Ⓤ, Ⓥ, Ⓦ, Ⓧ, Ⓨ, Ⓩ, ⓐ, ⓑ, ⓓ, ⓔ, ⓖ, ⓗ, ⓘ, ⓙ, ⓚ, ⓛ, ⓜ, ⓞ, ⓟ, ⓠ, ⓡ, ⓢ, ⓣ, ⓤ, ⓶, ⓷, ⓸, ⓹, ⓺, ⓻, ⓼, ⓽, ⓿, Ⓚ, Ⓛ, Ⓜ, Ⓝ, Ⓟ, Ⓠ, Ⓡ, Ⓢ, Ⓣ, Ⓤ, Ⓥ, Ⓦ, Ⓧ, Ⓨ, Ⓩ, ⓐ, ⓑ, ⓓ, ⓔ, ⓖ, ⓗ, ⓘ, ⓙ, ⓚ, ⓛ, ⓜ, ⓞ, ⓟ, ⓠ, ⓡ, ⓢ, ⓣ, ⓤ, ⓶, ⓷, ⓸, ⓹, ⓺, ⓻, ⓼, ⓽, ⓿

Menu structure:

- INPUTS: CLEAR, PERIODS, NO, DEF, WEIGHT
- CHANNEL: CONFIG, RANGE, YES
- OUTPUT: PTC, MODE
- SERVIC: EXT. IN, TRACE0
- KEYS: R. ZERO

TRACE0		Selection of automatic zero monitoring
	NO	Function is off
	YES	Function is on

- in 4% of the measuring range zero automatically faces the condition that correction must not be larger than 0,5 section/sec
- setting is possible only for mode "WEIGHT"

### 1.2e SELECTION OF AUTOMATIC WEIGHT RESETTING

Navigation icons: ↑, Ⓞ, ↗, ↓, ←, Ⓚ, ↘, Ⓛ, ↙, Ⓜ, Ⓝ, Ⓟ, Ⓠ, Ⓡ, Ⓢ, Ⓣ, Ⓤ, Ⓥ, Ⓦ, Ⓧ, Ⓨ, Ⓩ, ⓐ, ⓑ, ⓓ, ⓔ, ⓖ, ⓗ, ⓘ, ⓙ, ⓚ, ⓛ, ⓜ, ⓞ, ⓟ, ⓠ, ⓡ, ⓢ, ⓣ, ⓤ, ⓶, ⓷, ⓸, ⓹, ⓺, ⓻, ⓼, ⓽, ⓿, Ⓚ, Ⓛ, Ⓜ, Ⓝ, Ⓟ, Ⓠ, Ⓡ, Ⓢ, Ⓣ, Ⓤ, Ⓥ, Ⓦ, Ⓧ, Ⓨ, Ⓩ, ⓐ, ⓑ, ⓓ, ⓔ, ⓖ, ⓗ, ⓘ, ⓙ, ⓚ, ⓛ, ⓜ, ⓞ, ⓟ, ⓠ, ⓡ, ⓢ, ⓣ, ⓤ, ⓶, ⓷, ⓸, ⓹, ⓺, ⓻, ⓼, ⓽, ⓿

Menu structure:

- INPUTS: CLEAR, PERIODS, NO, DEF, WEIGHT
- CHANNEL: CONFIG, RANGE, YES
- OUTPUT: PTC, MODE
- SERVIC: EXT. IN, TRACE0
- KEYS: R. ZERO

R. ZERO		Selection of automatic weight resetting
	NO	Function is off
	YES	Function is on

- if stabilized negative value is displayed for a period > 5 s (at active Tare function) the tare is automatically reset
- selection is possible only for mode "WEIGHT"

6.1.2f SENSOR POWER SELECTION

**LVDT**

Navigation diagram for sensor power selection. The central menu shows the following options:

- INPUTS: CLEAR, REAR.D.S, 1V-2.5
- CHANNE: CONF IG, MODE, 1V-5
- OUTPUT: PTC, PRIMAR, 1V-10
- SERVIC: EXT. IN, GAIN, 3V-2.5
- KEYS: 3V-5 (DEF), 3V-10, 5V-2.5, 5V-5, 5V-10

**PRIMAR** Sensor AC power selection

- 1V-##** Power supply 1 V with adjustable frequency 2.5 / 5/10 kHz
- 3V-##** Power supply 3 V with adjustable frequency 2.5 / 5/10 kHz
- 5V-##** Power supply 5 V with adjustable frequency 2.5 / 5/10 kHz

6.1.2g INPUT GAIN SELECTION

**LVDT**

Navigation diagram for input gain selection. The central menu shows the following options:

- INPUTS: CLEAR, REAR.D.S, GAIN 1 (DEF)
- CHANNE: CONF IG, MODE, GAIN 2
- OUTPUT: PTC, PRIMAR, GAIN 6
- SERVIC: EXT. IN, GAIN, GAIN 12
- KEYS

**GAIN** Input gain selection

- gain of input section (it is advisable to use gain to such a degree when input does not overflow)

- GAIN 1** 1x
- GAIN 2** 2x
- GAIN 6** 6x
- GAIN 12** 12x

- only for 3-wire sensors

- only for 3-wire sensors

6.1.3 SETTING THE REAL TIME CLOCK

Navigation diagram for setting the real time clock. The central menu shows the following options:

- INPUTS: CLEAR, TIME 00.00.00
- CHANNE: CONF IG, DATE
- OUTPUT: PTC
- SERVIC: EXT. IN, KEYS

**PTC** Setting the real time clock (RTC)

**TIME** Time setting

- format 23.59.59


**DATE** Date setting

- format DD.MM.YY


# 6. SETTING PROFI



## Programming schem

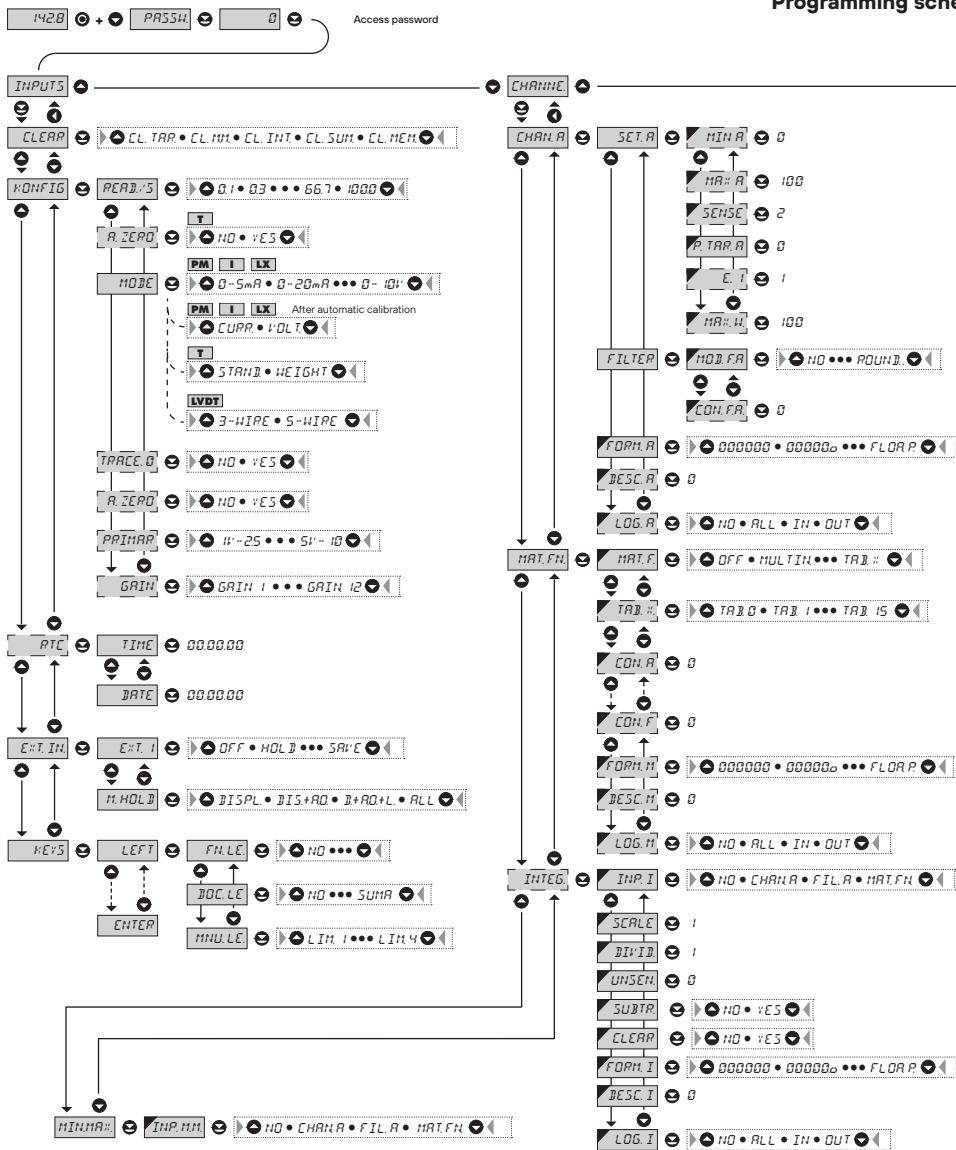


Scheme PROF MENU

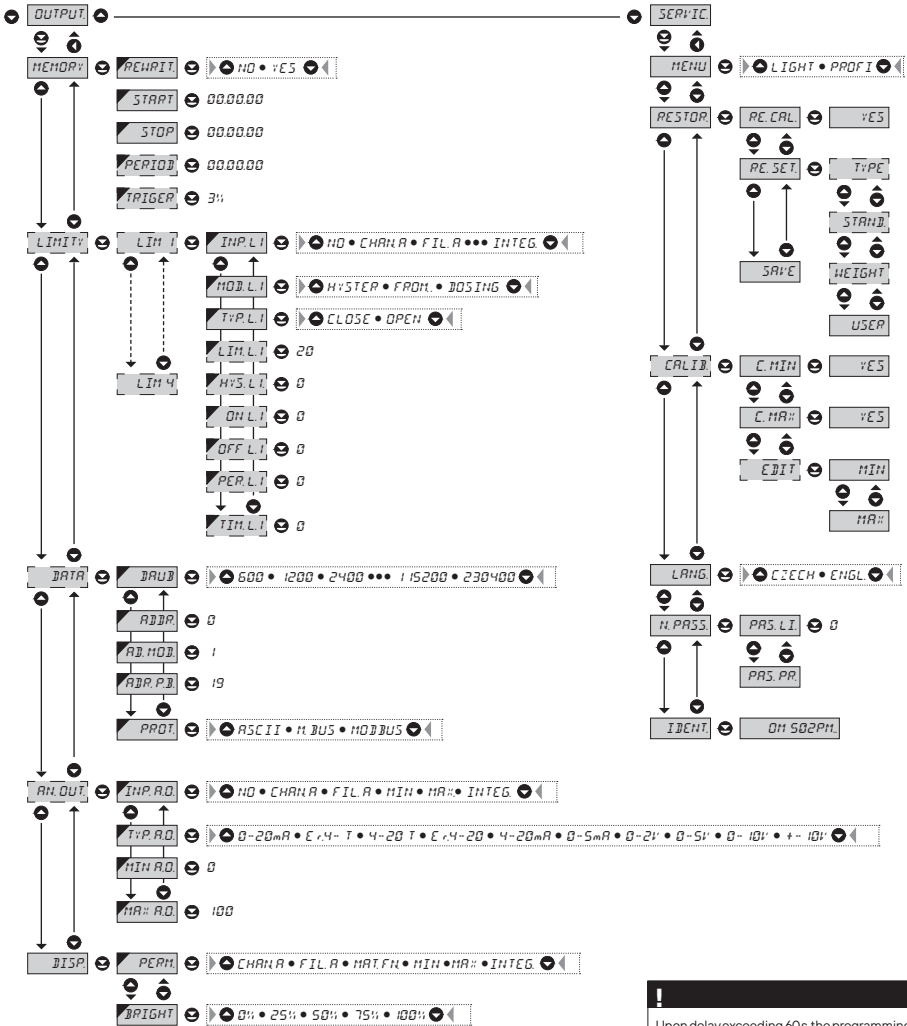

! Upon delay exceeding 60s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

## 6. SETTING PROFI


### 6.1.4a EXTERNAL INPUT FUNCTION SELECTION

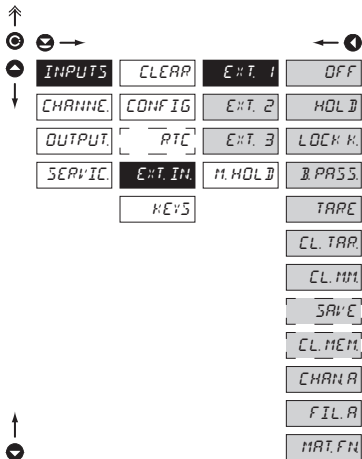

EXT. IN.	External input function selection
OFF	Input is off
HOLD	Activation of HOLD
LOCK K.	Locking keys on the instrument
PASS.	Activation of locking access into programming menu
TARE	Tare activation
CL. TAR.	Tare resetting
CL. MIN.	Resetting min/max value
SAVE	Activation of the measured data record into instrument memory (not in standard equipment)
CL. INT.	Resetting integrated value
- only for instrument OM 502I	
CL. SUM.	Resetting the sum
- only for instrument OM 502I	
CL. MEM.	Clearing memory for option FAST/RTC
CHAN. A	Displaying value of "Channel A"
FIL. R	Displaying value of "Channel A" after being processed by digital filters
MAT. FN.	Displaying value of "Mathematical function"
- <b>DEF</b> EXT. 1 > HOLD	
- <b>DEF</b> EXT. 2 > LOCK K.	
- <b>DEF</b> EXT. 3 > TARE	
<b>*</b>	
Procedure identical for EXT. 2 and EXT. 3	




## 6.1.4b SELECTION OF FUNCTION "HOLD"

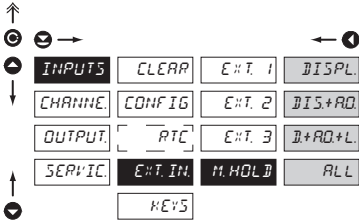

### M.HOLD Selection of function "HOLD"

DISPL.	"HOLD" locks only the value displayed
DIS.+RD.	"HOLD" locks the value displayed and on AO
D.+RD.+L.	"HOLD" locks the value displayed, on AO and limit evaluation
ALL	"HOLD" locks the entire instrument

## 6.1.5a OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS

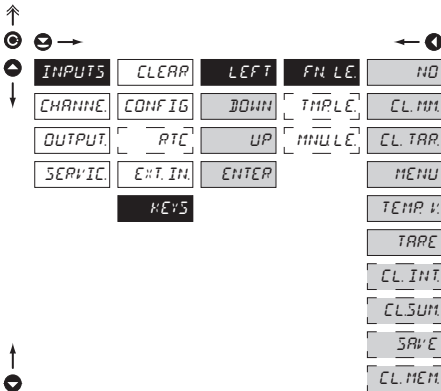

### FN.LE. Assigning further functions to instrument keys

- „FN.LE.“ > executive functions

NO Key has no further function

CL.MN. Resetting min/max value

CL.TAR. Tare resetting

MENU Direct access into menu on selected item

- after confirmation of this selection the "MNU.LE." item is displayed on superior menu level, where required selection is performed

TEMP.V. Temporary projection of selected values

- after confirmation of this selection the item "TMP.LE." is displayed on superior menu level, where required selection is performed

TARE Tare function activation

CL.INT. Resetting integrated value (only for OM 502)

CL.SUM. Resetting the sum (only for OM 502)

SAVE Activation of measured data recording in instrument's memory (not in standard equipment)

- storing the requested value into the memory after pressing a designated key

CL.MEM. Clearing memory

- clearing memory with data measured in modes "FAST" or "RTC"


**!**  
Preset values of the control keys **DEF.**

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o functions

**!**  
Setting is identical for LEFT, DOWN, UP and ENTER

## 6. SETTING PROFI

### 6.1.5b OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - TEMPORARY PROJECTION

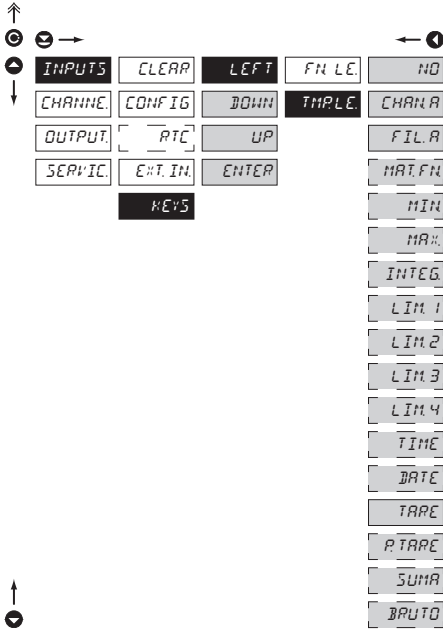

#### **TMP. LE.** Temporary projection of selected item

- „TMP. LE.“ > temporary projection of selected values
- “Temporary” projection of selected value is displayed for the time of keystroke
- “Temporary” projection may be switched to permanent by pressing **⊕** + “Selected key”, this holds until the stroke of any key


<b>NO</b>	Temporary projection is off
<b>CHAN. A</b>	Temporary projection of “Channel A” value
<b>FIL. A</b>	Temporary projection of “Channel A” value after processing digital filters
<b>MATH. FN</b>	Temporary projection of “Mathematic functions” value
<b>MIN</b>	Temporary projection of “Min. value”
<b>MAX</b>	Temporary projection of “Max. value”
<b>INTEG.</b>	Temporary projection of “Integrated value”
<b>LIM 1</b>	Temporary projection of “Limit 1” value
<b>LIM 2</b>	Temporary projection of “Limit 2” value
<b>LIM 3</b>	Temporary projection of “Limit 3” value
<b>LIM 4</b>	Temporary projection of “Limit 4” value
<b>TIME</b>	Temporary projection of “TIME” value
<b>DATE</b>	Temporary projection of “DATE” value
<b>TARE</b>	Temporary projection of “TARE” value
<b>P. TARE</b>	Temporary projection of “P. TARE” value
<b>SUMA</b>	Temporary projection of “SUM” (only for OM 502)
<b>BRUTO</b>	Temporary projection of the sum of the values of “CHAN. A + TARE + P.TARE”



Setting is identical for LEFT, DOWN, UP and ENTER

## 6.1.5c

### OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - DIRECT ACCESS TO ITEM

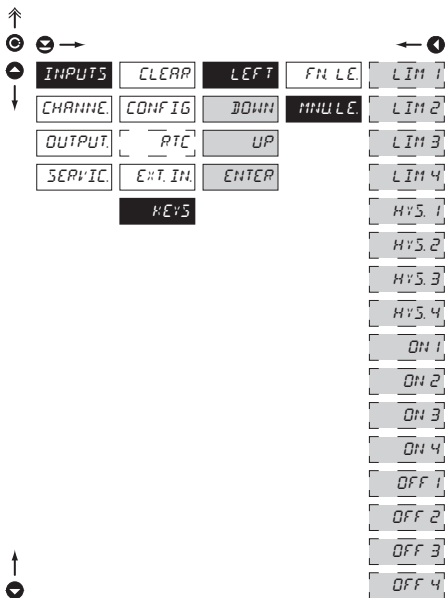

#### MNU LE Assigning access to selected menu item

- „MNU LE.“ > direct access into menu on selected item


- [ LIM 1 ] Direct access to item "LIM 1"
- [ LIM 2 ] Direct access to item "LIM 2"
- [ LIM 3 ] Direct access to item "LIM 3"
- [ LIM 4 ] Direct access to item "LIM 4"
- [ HYS. 1 ] Direct access to item "HYS. 1"
- [ HYS. 2 ] Direct access to item "HYS. 2"
- [ HYS. 3 ] Direct access to item "HYS. 3"
- [ HYS. 4 ] Direct access to item "HYS. 4"
- [ ON 1 ] Direct access to item "ON 1"
- [ ON 2 ] Direct access to item "ON 2"
- [ ON 3 ] Direct access to item "ON 3"
- [ ON 4 ] Direct access to item "ON 4"
- [ OFF 1 ] Direct access to item "OFF 1"
- [ OFF 2 ] Direct access to item "OFF 2"
- [ OFF 3 ] Direct access to item "OFF 3"
- [ OFF 4 ] Direct access to item "OFF 4"

**!**  
Setting is identical for LEFT, DOWN, UP and ENTER



## 6. SETTING PROFI

### 6.2 SETTING "PROFI" - CHANNELS

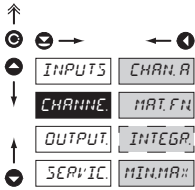


The primary instrument parameters are set in this menu

<b>CHAN. A</b>	Setting parameters of measuring "Channel"
<b>MAT. FN.</b>	Setting parameters of mathematic functions
<b>INTEGR.</b>	Setting parameters for integrator (OM 502)
<b>MIN.MA.</b>	Selection of access and evaluation of Min/max value

#### 6.2.1a PROJECTION ON DISPLAY - MANUAL CALIBRATION

**DC PM DU I LX**

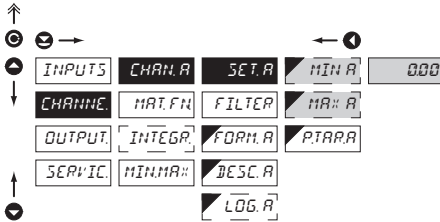

**SET. A** Setting display projection

**MIN. A** Setting display projection for minimum value of input signal


- range of the setting is -99999...999999
- menu is dynamic, after using automatic calibration this item is no more displayed
- **DEF** = 0.00

**MA. A** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- **DEF** = 100.00

## 6.2.1b PROJECTION ON DISPLAY - MANUAL CALIBRATION

T

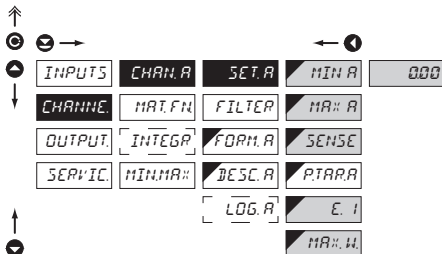

**Manual calibration**  
 MAX Sensor range  
 SENSE Sensor sensitiveness

**Automatic calibration**  
 (after calibration in menu "SERVIC./CALIB.")  
 MIN Size of load with which minimum calibration was performed  
 MAX Size of load with which maximum calibration was performed

- upon maximum calibration we recommend the reference load value in the upper third of the measuring range

**SET. A** Setting display projection

**MIN. A** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- menu is dynamic, in manual calibration this item is not displayed
- **DEF** = 0.00

**MA#: A** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- **DEF** = 100.00

**SENSE** Setting the tensionmeter sensitiveness (mV/V)

- range 1..4/2..8/4...16 mV/V
- fixed resolution in 4 decimal points
- menu is dynamic, the item is displayed only in automatic calibration


**E. I** Setting the size of sections for projection

- range: 0.001/0.002/0.005/0.01/.../100

**MA#: U** Setting the upper weighing limit

- range of the setting is -99999...999999

## 6.2.1c SETTING FIXED TARE


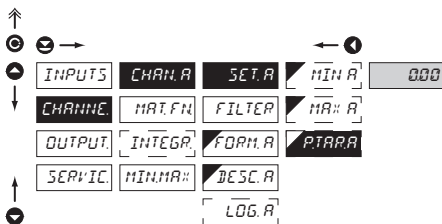


**P. TAR. A** Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. TAR. A ≠ 0) is in effect, display does not show the "T" symbol
- range of the setting: -99999...999999
- **DEF** = 0

## 6. SETTING PROFIL

### 6.2.1d DIGITAL FILTERS

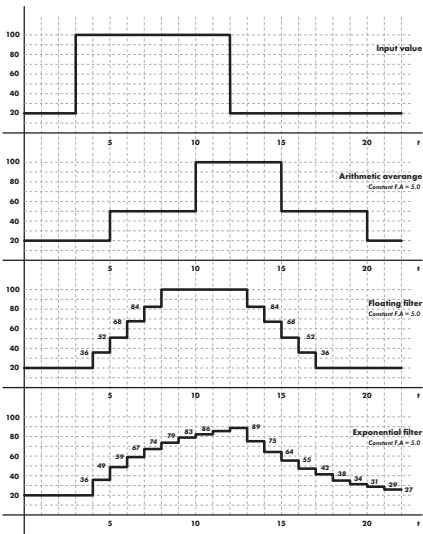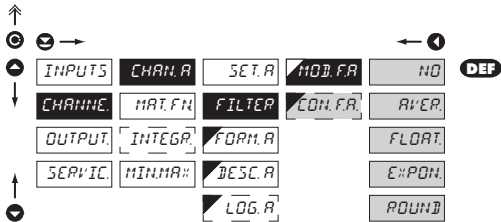

#### MOD.FA Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used

**NO** Filters are off

**AVER** Measured data average

- arithmetic average from given number („CON.FA“) of measured values
- range 2...100

**FLOAT** Selection of floating filter

- floating arithmetic average from given number („CON.FA“) of measured data and updates with each measured value
- range 2...30

**EXPON** Selection of exponential filter

- integration filter of first prvniho grade with time constant („CON.FA“) measurement
- range 2...100

**ROUND** Measured value rounding


- is entered by any number, which determines the projection step (e.g. „CON.FA“ = 2.5 > display 0, 2.5, 5,...)

**CON.FA** Setting constants

- this menu item is always displayed after selection of particular type of filter

**DEF** = 2

## 6.2.1e PROJECTION FORMAT - POSITIONING OF DECIMAL POINT

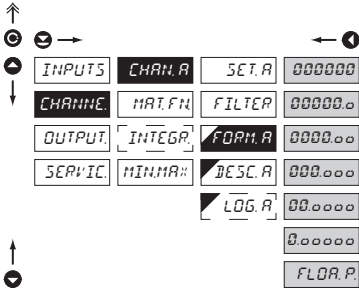

### FORM.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOAT.P.“

000000 Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

0000.00 Setting DP - XXXX.xx

#### DEF


000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLDR.P. Floating DP

## 6.2.1f PROJECTION OF DESCRIPTION - THE MEASURING UNITS

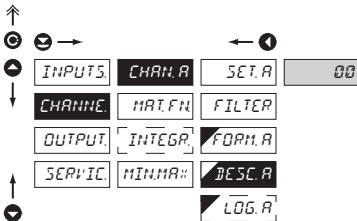

### DESC.A Setting projection of descrpt. for "Channel A"

- projection of mesured data may be extended (at the expense of the number of displayed places) by two characters for description

- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95

- description is cancelled by code 00

- DEF = none


#### !

Table of signs on page 85

## 6. SETTING PROFI

6.2.1g

SELECTION OF STORING DATA INTO INSTRUMENT MEMORY

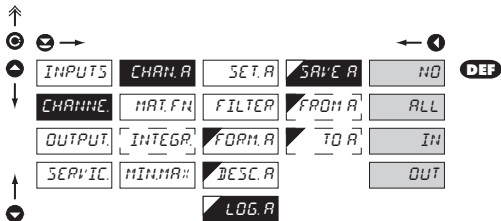

**SAVE R**

**Selection of storing data into instrument memory**

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT.>MEMORY" (not in standard experiment)

NO

Measured data is not stored

ALL

Measured data is stored in memory

IN

Only data measured within the set interval is stored in memory

OUT

Only data measured outside the set interval is stored in memory

**FROM R**

Setting the initial interval value

- setting range: -99999...999999


**TO R**

Setting the final interval value

- setting range: -99999...999999



6.2.2a MATHEMATIC FUNCTIONS

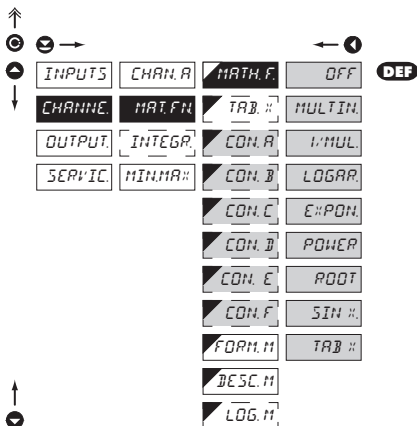

**MATH.F** Selection of mathematic functions

**OFF** Mathematic functions are off

**MULTIN.** Multinomial

$$Ax^5 \square Bx^4 \square Cx^3 \square Dx^2 \square Ex \square F$$

**1/x**  $1/x$

$$\frac{A}{x^2} \square \frac{B}{x^4} \square \frac{C}{x^3} \square \frac{D}{x^2} \square \frac{E}{x} \square F$$

**LOGAR.** Logarithm

$$A \square \ln \left( \frac{Bx \square C}{Dx \square E} \right) \square F$$

**EXPON.** Exponencial

$$A \square e^{\frac{Bx \square C}{Dx \square E}} \square F$$

**POWER** Power

$$A \square Bx \square C^{\square Dx \square E} \square F$$

**ROOT** Root

$$A \square \sqrt{\frac{Bx \square C}{Dx \square E}} \square F$$

**SIN** Sin x

$$A \sin^5 x \square B \sin^4 x \square C \sin^3 x \square D \sin^2 x$$

$\square E \sin x \square F$

**TAB** Switching on linearization table

- this menu can only be accessed in OM 502LX


**CON.** Setting constants for calculation of mat.functions

- this menu is displayed only after selection of given mathematic function

## 6. SETTING PROFI

### 6.2.2b MATHEMATIC FUNCTIONS - SELECTION OF LINEARIZATION TABLE

LX

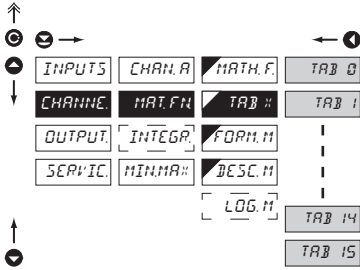


#### TAB : Selection of linearization table

- this item is available only in type OM 502LX

TAB 0	Table number 0
TAB 1	Table number 1
-----	
TAB 14	Table number 14
TAB 15	Table number 15

### 6.2.2c MATHEMATIC FUNCTIONS - DECIMAL POINT

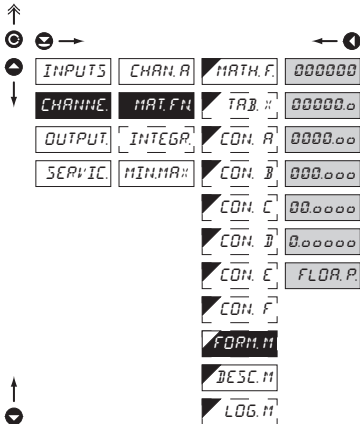


#### FORM. H Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA. P.“

000000	Setting DP - XXXXXX.
00000.0	Setting DP - XXXXX.x
0000.00	Setting DP - XXXX.xx
000.000	Setting DP - XXX.xxx
00.0000	Setting DP - XX.xxxx
0.00000	Setting DP - X.xxxxx
FLOA. P.	Floating DP

- DEP

## 6.2.2d MATHEMATIC FUNCTIONS - MEASURING UNITS

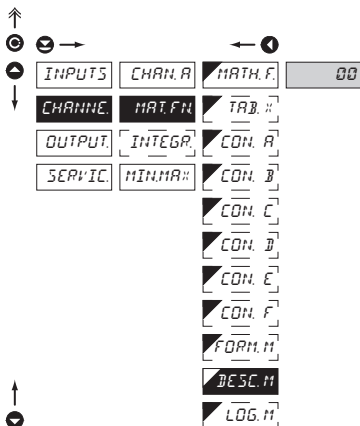

### DESC.M Setting projection of description for "MAT. FN"


- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00

- **DEF** = no description



Table of signs on page 85

## 6.2.2e MATHEMATIC FUNCTIONS - SELECTION OF STORING DATA INTO INSTRUMENT MEMORY

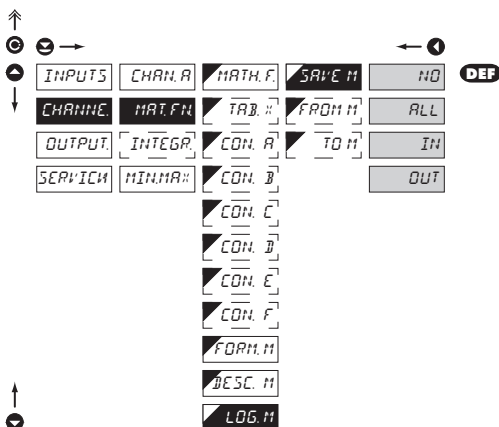

### LOG.M Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT.> MEMORY" (not in standard experiment)

**NO** Measured data is not stored

**ALL** Measured data is stored in memory

**IN** Only data measured within the set interval is stored in memory

**OUT** Only data measured outside the set interval is stored in memory

**FROM.H** Setting the initial interval value

- setting range: -99999...999999

**TO.H** Setting the final interval value

- setting range: -999999...999999



## 6. SETTING PROFI

### 6.2.3a SELECTION OF INPUT QUANTITY FOR CALCULATION

I

#### INP. I Selection of input quantity for calculation

- selecting value from which the integrated value will be calculated

- NO** Evaluation of min/max value is off
- CHAN. A** From "Channel A"
- FIL. R** From "Channel A" after modification by dig.filter
- MAT. FN.** From "Mathematic functions"

!

Primary setting of "Integrator" range is under "CHANNELS/SETTING A/MAX A", where maximum projection is set at time base 1 s

### 6.2.3b SETTING CALIBRATION CONSTANTS

I


#### SCALE Setting the multiplying constant

- through multiplying constant we may further mathematically adjust the data display projection
- range of the setting is 1...100 000
- **DEP** = 1

#### DIV. D. Setting the dividing constant


- through dividing constant we may further mathematically adjust the data display projection
- range: 1/10/60/100/1000/3600
- **DEP** = 1

## 6.2.3c SETTING THE "ZERO" BAND OF INSENSITIVENESS

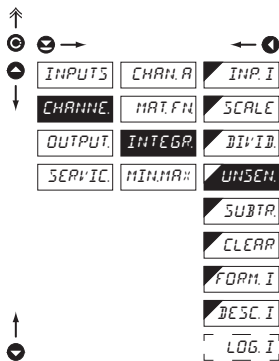**UNSEN.** Setting the band of insensitiveness

- by setting this item it is possible to extend "Zero" and thus achieve integration of the input signal from the set value
- range of the setting is 0...100 000
- **DEF** = 0

## 6.2.3d SELECTION OF THE TYPE OF INTEGRATION

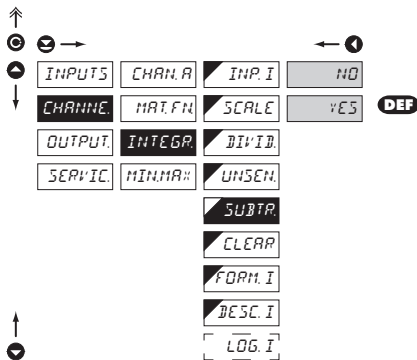**SUBTR.** Selection of the type of integration

- the selection allows to suppress the negative value of input signal, i.e. the instrument integrates only in positive values (adds up)

**NO** Subtraction is off


**YES** Subtraction enabled

## 6. SETTING PROFI

6.2.3e

SELECTION OF AUTOMATIC RESETTING

I

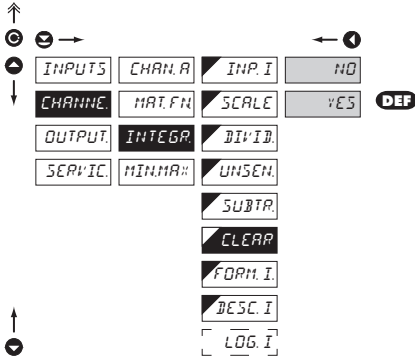

**CLEAR**

**Selection of automatic resetting**

- in this step it is possible to allow automatic resetting upon display overflow

NO

Automatic resetting is off

- upon display overflow error statement is displayed

YES


Automatic resetting is enabled

- upon display overflow the instrument is automatically reset to zero and proceeds in continuous measuring

6.2.3f

SELECTION OF PROJECTION FORMAT

I

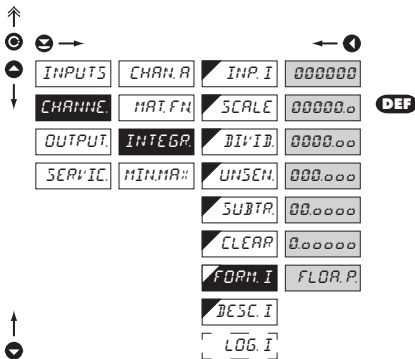

**FORM. I**

**Selection of decimal point**

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA. P.“

000000

Setting DP - XXXXXXX.

00000.0

Setting DP - XXXXX.x

0000.00

Setting DP - XXXX.xx

000.000

Setting DP - XXX.xxx

00.0000

Setting DP - XX.xxxx


0.00000

Setting DP - X.xxxxx

FLOA. P.

Floating DP

6.2.3g SELECTION OF PROJECTION OF MEASURING UNITS

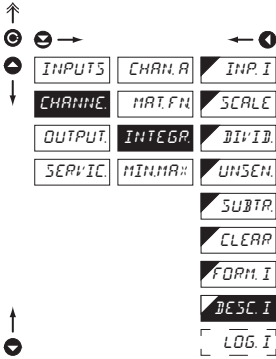


**DESC. I** Setting projection of description for INTEGR.

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00

- **DEF** = no description

! Table of signs on page 85

6.2.3h SELECTION OF STORING DATA INTO INSTRUMENT MEMORY

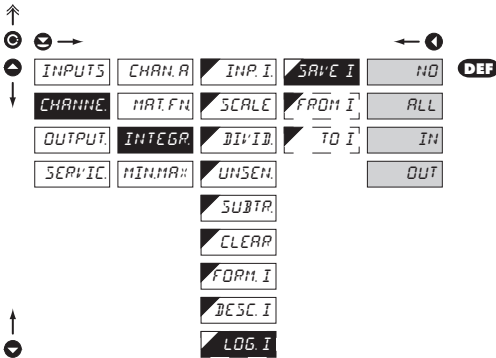

**LOG. I** Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item 'OUTPUT.> MEMORY' (not in standard experiment)

- NO** Measured data is not stored
- ALL** Measured data is stored in memory
- IN** Only data measured within the set interval is stored in memory
- OUT** Only data measured outside the set interval is stored in memory

**FROM I** Setting the initial interval value

- setting range: -99999...999999


**TO I** Setting the final interval value

- setting range: -999999...999999

## 6. SETTING PROFI

6.2.4

SELECTION OF EVALUATION OF MIN/MAX VALUE

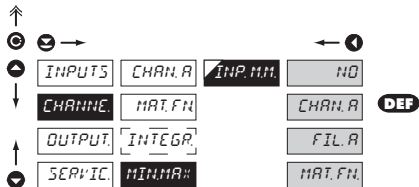

**INP.M.M.**

**Selection of evaluation of min/max value**

- selection of value from which the min/max value will be calculated

**NO**

Evaluation of min/max value is off

**CHAN.A**

From "Channel A"

**FIL.A**

From "Channel A" after digital filters processing

**MAT.FN.**


From "Mathematic functions"





## 6. SETTING PROFI


### 6.3 SETTING „PROFI“ - OUTPUTS

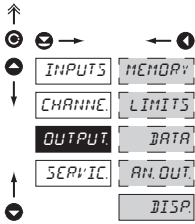

In this menu it is possible to set parameters of the instrument output signals

- MEMORY** Setting data logging into memory
- LIMITS** Setting type and parameters of limits
- DATA** Setting type and parameters of data output
- AN. OUT.** Setting type and parameters of analog output
- DISP.** Setting display projection and brightness

#### 6.3.1a SELECTION OF MODE OF DATA LOGGING INTO INSTRUMENT MEMORY

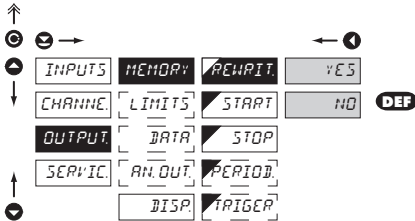


**REWRIT.** Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

- NO** Rewriting values prohibited
- YES** Rewriting values permitted, the oldest get rewritten by the latest

6.3.1b SETTING DATA LOGGING INTO INSTRUMENT MEMORY - RTC

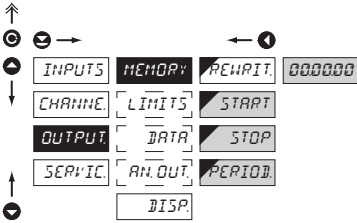


- START** Start of data logging into instrument memory
  - time format HH.MM.SS
- STOP** Stop data logging into instrument memory
  - time format HH.MM.SS
- PERIOD** Period of data logging into instrument memory
  - determines the period in which values will be logged in an interval delimited by the time set under items START and STOP
  - time format HH.MM.SS
  - records are made on a daily basis in selected interval and period
  - item not displayed if "SAVE" is selected in menu (INPUT > EXT. IN.)

**RTC**

The lowest recording rate possible is once a day, the highest is every second. Under exceptional circumstances it is possible to set the rate to 8 times per second by entering the recording period as 00.00:00. However, this mode is not recommended due to the memory overload. Recordings are realised in a timeframe of one day and are repeated periodically every following day. Recordings can take place either inside or outside of selected time intervals. The duration of re-writing can be determined by the number of channels recorded as well as by the recording rate.

6.3.1c SETTING DATA LOGGING INTO INSTRUMENT MEMORY - FAST

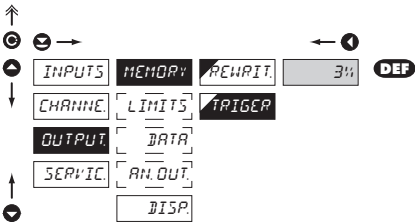

- TRIGGER** Setting logging data into inst. memory
    - logging data into inst. memory is governed by the following selection, which determines how many percent of the memory is reserved for data logging prior to initiation of trigger impulse
    - initialization is on ext. input or button
    - setting in range 1...100%
    - when setting 100%, datalogging works in the mode ROLL > data keep getting rewritten in cycles
- 1. Memory initialization**
    - clear memory (ext.input, button)
    - LED "M" flashes, after reading TRIGGER (%) memory is permanently shining. In ROLL flashes constantly.
  - 2. Triggering**
    - external input, button
    - after the memory LED is full "M" turns off
    - in the ROLL mode the trigger ends datalogging and LED turns off
  - 3. Termination**
    - ext. input, button or reading data via RS

**FAST**


The memory operates on the basis of memory oscilloscope. Select an area of 0...100% of the memory capacity (100% represents 8192 individual recordings for a single channel measurement). This area is filled cyclically up to the point when the recording starts (activated by the front panel button or by an external input). When the remaining memory capacity fills up the recording stops. A new recording is possible after the deletion of the latest recording. It is possible to abort a recording before its completion by reading out the data.



## 6. SETTING PROFI

MODE > HYSTER • FROM - TO • DOSING

DESCRIPTION OF RELAY FUNCTION

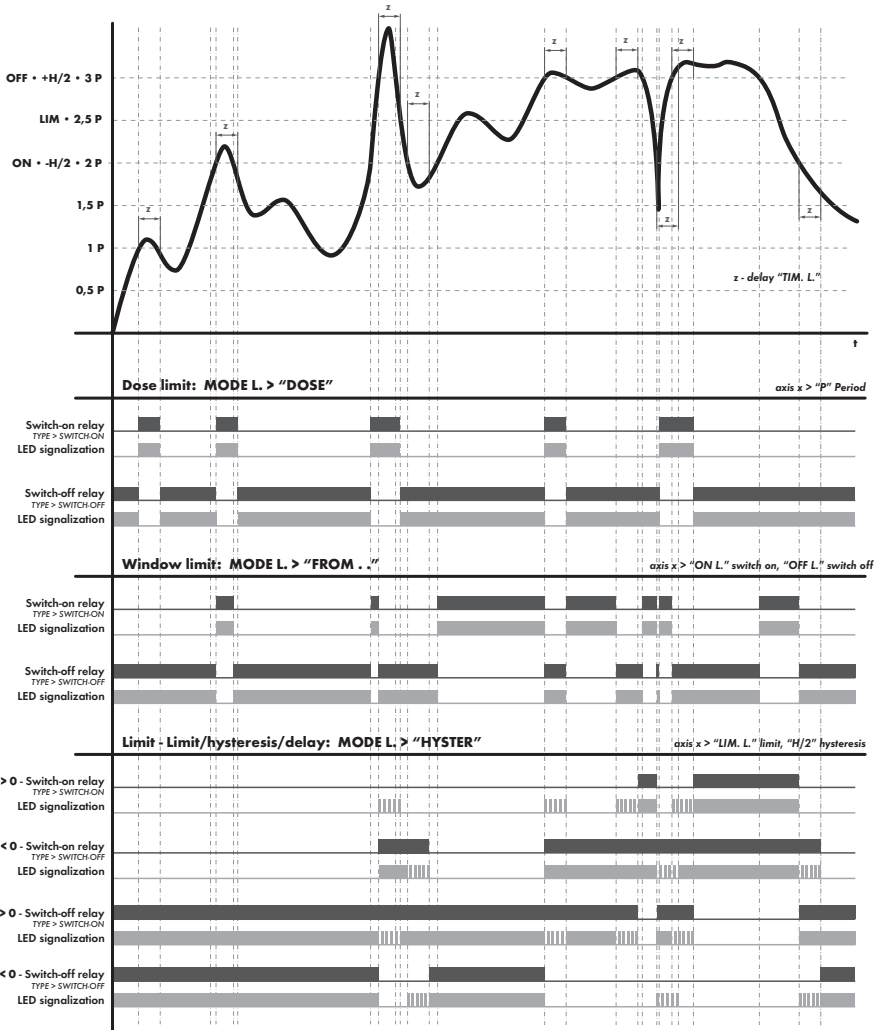

6.3.2a SELECTION OF INPUT FOR LIMITS EVALUATION

**INP.L1 Selection evaluation of limits**

- selection of value from which the limit will be evaluated

**DEF** NO Limit evaluation is off

CHAN.A Limit evaluation from "Channel A"

FIL.R Limit evaluation from "Channel A" after digital filters processing

MAT.FN. Limit evaluation from "Mathematic functions"

MIN Limit evaluation from "Min. value"

MA;; Limit evaluation from "Max. value"

INTEG. Limit evaluation from "Integrated value"

**!** Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

6.3.2b SELECTION OF TYPE OF LIMIT

**MOD.L1 Selection the type of limit**

**DEF** HYSTER Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "LIM.L1" are set, at which the limit will shall react, "HYS.L1" the hysteresis range around the limit (LIM±1/2HYS) and time "TIM.L1" determining the delay of relay switch-on

FROM. Frame limit

- for this mode the parameters are set for interval "ON.L1" the relay switch-on and "OFF.L1" the relay switch-off


DOSING Dose limit (periodic)

- for this mode the parameters are set for "PER.L1" determining the limit value as well as its multiples at which the output is active and "TIM.L2" indicating the time during which is the output active

**!** Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

## 6. SETTING PROFI

### 6.3.2c SELECTION OF TYPE OF OUTPUT

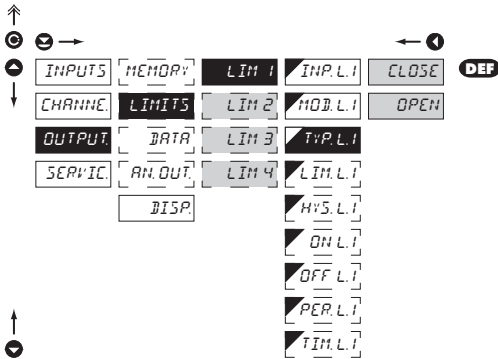

**TYP.L.1** Selection of type of output

---


**CLOSE** Output switches on when condition is met

**OPEN** Output switches off when condition is met

---

**!** Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

### 6.3.2d SETTING VALUES FOR LIMITS EVALUATION

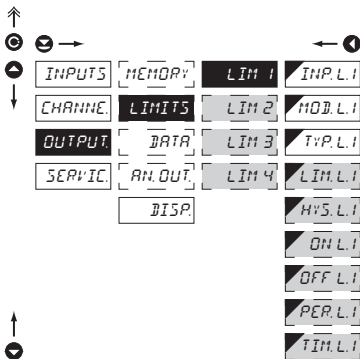

**LIM.L.1** Setting limit for switch-on

- for type "HYSTER"

**HYS.L.1** Setting hysteresis

- for type "HYSTER"
- indicates the range around the limit (in both directions, LIM.  $\pm 1/2$  HYS.)

**ON.L.1** Setting the outset of the interval of limit switch-on

- for type "FROM.."

**OFF.L.1** Setting the end of the interval of limit switch-on

- for type "FROM.."

**PER.L.1** Setting the period of limit switch-on

- for type "DOSING"

**TIM.L.1** Setting the time switch-on of the limit

- for type "HYSTER" and "DOSING"
- setting within the range:  $\pm 0..99.9$  s
- positive time > relays switches on after crossing the limit (LIM.L.1) and the set time (TIM.L.1)
- negative time > relays switches off after crossing the limit (LIM.L.1) and the set negative time (TIM.L.1)

---

**!** Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

## 6.3.3a SELECTION OF DATA OUTPUT BAUD RATE

Navigation diagram for setting baud rate. The central menu shows 'BAUD' selected. Navigation arrows point to various baud rate options: 600, 1200, 2400, 4800, 9600 (DEF), 19200, 38400, 57600, 115200, and 230400.

BAUD	Selection of data output baud rate
600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud


## 6.3.3b SETTING INSTRUMENT ADDRESS

Navigation diagram for setting instrument address. The central menu shows 'ADDR.' selected. Navigation arrows point to '0' and '1'. A second menu shows 'AD-MOD.' selected. Navigation arrows point to '1' and '19'.

ADDR.	Setting instrument address
	- setting in range 0...31
DEF	= 00
AD-MOD.	Setting instrument address - MODBUS
	- setting in range 1...247
DEF	= 1
ADR.P.B.	Setting instrument address - PROFIBUS
	- setting in range 1...127
DEF	= 19

## 6. SETTING PROFI

### 6.3.3c SELECTION OF DATA OUTPUT PROTOCOL

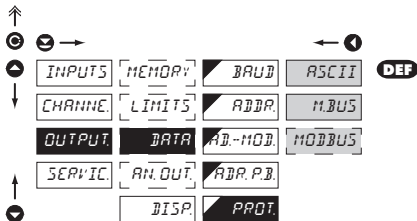

#### PROT Selection of the type of analog output


**ASCII** Data protocol  
ASCII

**M.BUS** Data protocol  
DIN MessBus

**MODBUS** Data protocol  
MODBUS-RTU

- option is available only for RS 485

### 6.3.4a SELECTION OF INPUT FOR ANALOG OUTPUT

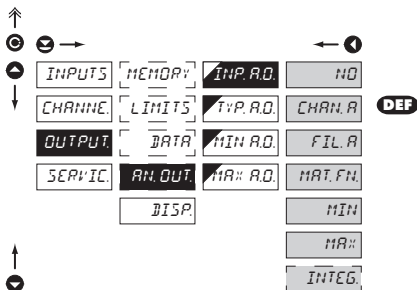

#### INP. A.O. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

**NO** AO evaluation is off

**CHAN. A** AO evaluation from  
"Channel A"

**FIL. A** AO evaluation from  
"Channel A" after digital  
filters processing

**MAT. FN.** AO evaluation from "Math.  
functions"


**MIN** AO evaluation from "Min.  
value"

**MAX** AO evaluation from "Max.  
value"

**INTEG.** AO evaluation  
from "Integrated value"




## 6.3.4b SELECTION OF THE TYPE OF ANALOG OUTPUT

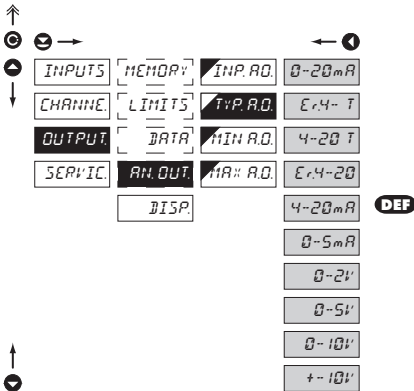

### TYP. R.O. Selection of the type of analog output

- 0-20mA** Type: 0...20 mA
- 4..20 mA** Type: 4...20 mA with indication
  - with broken loop detection and indication of error statement (< 3,6 mA)
- 4-20 V** Type: 4...20 mA with indication
  - with broken loop detection (< 3,6 mA)
- 4..20mA** Type: 4...20 mA with indication
  - with indic. of error statement (< 3,6 mA)
- 4-20mA** Type: 4...20 mA
- 0-5mA** Type: 0...5 mA
- 0-2V** Type: 0...2 V
- 0-5V** Type: 0...5 V
- 0-10V** Type: 0...10 V
- + - 10V** Type: ±10 V

## 6.3.4c SETTING THE ANALOG OUTPUT RANGE

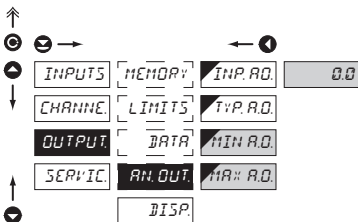

### AN. OUT. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

**MIN. R.O.** Assigning the display value to the beginning of the AO range

- range of the setting: -99999...999999

- **DEF** = 0


**MAX. R.O.** Assigning the display value to the end of the AO range

- range of the setting: -99999...999999

- **DEF** = 100

## 6. SETTING PROFI

### 6.3.5a SELECTION OF INPUT FOR DISPLAY PROJECTION

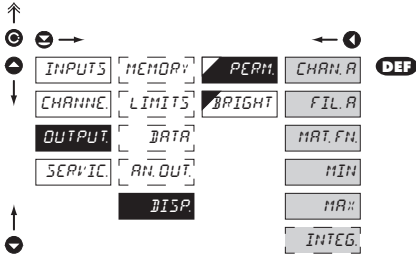


**PERM Selection display projection**

- selection of value which will be shown on the instrument display

CHAN.A	Projection of values from "Channel A"
FIL.A	Projection of values from "Channel A" after digital filters processing
MAT.FN.	Projection of values from "Math.functions"
MIN	Projection of values from "Min.value"
MAx.	Projection of values from "Max. value"
INTEG.	Projection of values from "Integrated value"

### 6.3.5b SELECTION OF DISPLAY BRIGHTNESS

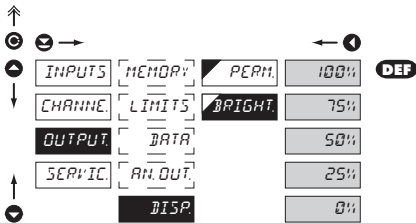

**BRIGHT Selection of display brightness**

- by selecting display brightness we may appropriately react to light conditions in place of instrument location


0%	Display is off
25%	Display brightness - 25%
50%	Display brightness - 50%
75%	Display brightness - 75%
100%	Display brightness - 100%

- after keystroke display turns on for 10 s



## 6. SETTING PROFI


### 6.4 SETTING "PROFI" - SERVIS

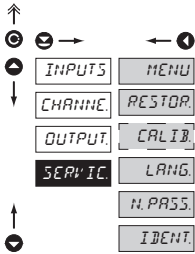

The instrument service functions are set in this menu



<b>MENU</b>	Selection of menu type LIGHT/PROFI
<b>RESTOR.</b>	Restore instrument manufacture setting and calibration
<b>CALIB.</b>	Input range calibration for „DU“, „T“ and „LVDT“ version
<b>LANG.</b>	Language version of instrument menu
<b>N.PASS.</b>	Setting new access password
<b>IDENT.</b>	Instrument identification

#### 6.4.1 SELECTION OF TYPE OF PROGRAMMING MENU

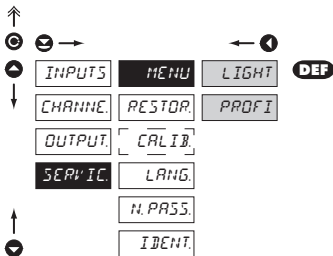

<b>MENU</b>	<b>Selection of menu type - LIGHT/PROFI</b>
- enables setting the menu complexity according to user needs and skills	
<b>LIGHT</b>	Active LIGHT menu
- simple programming menu, contains only items necessary for configuration and instrument setting	
- linear menu > items one after another	
<b>PROFI</b>	Active PROFI menu
- complete programming menu for expert users	
- tree menu	
<b>!</b>	
Change of setting is valid upon next access into menu	

6.4.2 RESTORATION OF MANUFACTURE SETTING

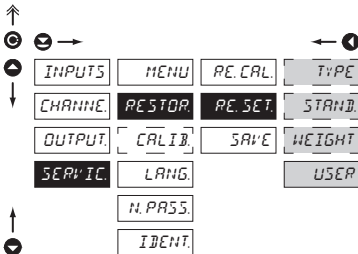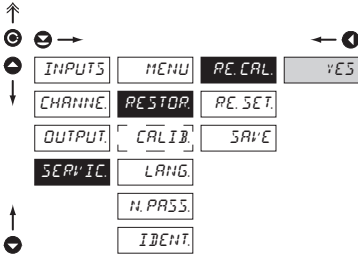

**RESTOR.** Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

**RE.CAL.** Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm you selection .YES'

**RE.SET.** Restoration of instrument manufacture setting

**TYPE** Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

**STAND.** Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF, only for OM 502T)

**WEIGHT** Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF, only for OM 502T)

**USER** Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under **SERVIC./RESTOR./SAVE**

**SAVE** Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed


**!** After restoration the instrument switches off for couple seconds

JOBS PERFORMED	RESTORE	
	CALIBRATION	SETTING
cancels USER menu rights	✓	✓
deletes table of items order in USER-LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancels or linearization tables	✓	✓
clears tare	✓	✓
restore manufacture calibration	✓	✗
restore manufacture setting	✗	✓

## 6. SETTING PROFI

### 6.4.3 CALIBRATION - INPUT RANGE

LVDT DU T

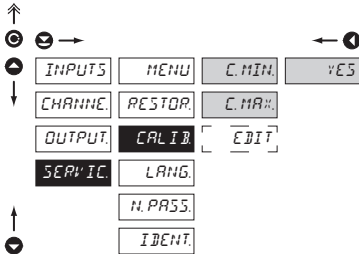

**!**

**Manual calibration**  
 MAX Sensor range  
 SENSE Sensor sensitiveness

**Automatic calibration**  
 (after calibration in menu "SERVIC./CALIB.")  
 MIN Size of load with which minimum calibration was performed  
 MAX Size of load with which maximum calibration was performed

- upon maximum calibration we recommend the reference load value in the upper third of the measuring range

#### CALIB Input range calibration

- prior performing any changes you will be asked to confirm your selection "YES"

**C.MIN** Calibration of the beginning of the measuring range

- prior confirmation of the selection the reference signal has to be connected

**C.MAX** Calibration of the end of the measuring range


- prior confirmation of the selection the reference signal has to be connected

**!**

After incorrect client calibration it is always possible to restore manufacture calibration ("SERVIC./RESTOR/CALIB.")

### 6.4.4 CALIBRATION - MODIFICATION OF INTERNAL CONSTANTS

T

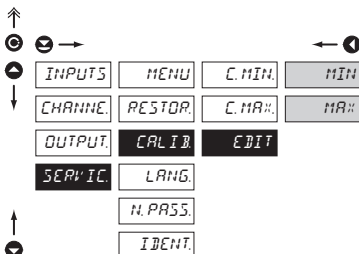

#### EDIT Modification of internal calibration constants

- this option is designed solely for contingent metrological examination and protocol
- item is available after aut. calibration


**MIN** Minimum calibration range

- range:  $\pm 99.0000$

**MAX** Maximum calibration range

- range:  $\pm 99.0000$


## 6.4.5 SELECTION OF INSTRUMENT MENU LANGUAGE VERSION

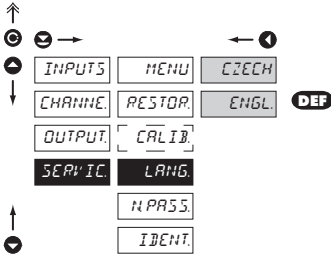

### LANG. Selection of instrument menu language version

- CZECH** Instrument menu is in Czech
- ENGL.** Instrument menu is in English


## 6.4.6 SETTING NEW ACCESS PASSWORD

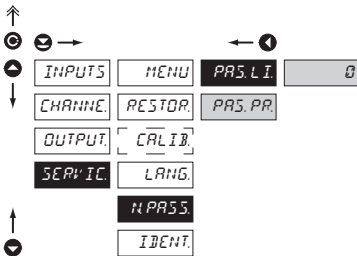

### H.PASS. Setting new password for access to LIGHT and PROFI menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFI menu.
- numerici code range: 0..9999
- universal passwords in the event of loss: LIGHT Menu > „8177” PROFI Menu > „7915”

## 6.4.7 INSTRUMENT IDENTIFICATION

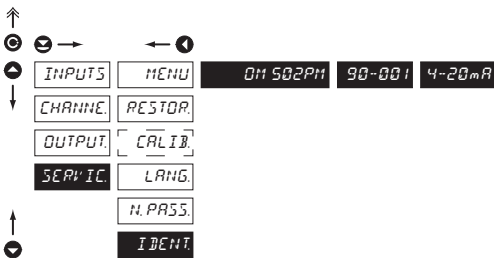

### IDENT. Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

IDENT.	Pos.	Description
	1.	type of instrument
	2.	SW: number - version
	3.	the input type

## 7. SETTING USER

# SETTING USER


For user operation

Menu items are set by the user (Profi/Light) as per request


Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

### 7.0 SETTING ITEMS INTO "USER" MENU

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  **LIM 1**
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure

#### Setting

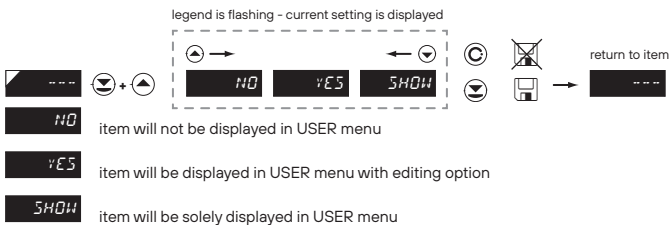


#### Setting sequence of items in "USER" menu




In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu

setting projection sequence



### Example of ranking the order of menu items in the "USER" menu

In this example we want to have a direct access to menu items Limit 1 and Limit 2 (example show is for the Light menu, but can equally be used in the Profi menu).

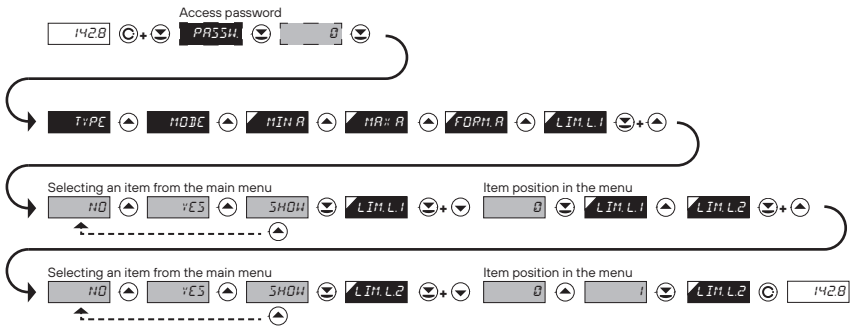

The result of this setting is that when the **Ⓢ** button is pressed, the display will read „LIM L.1“. By pressing **⏪** button you confirm your selection and then you can set the desired limit value, or by pressing the **⏩** button you can go to setting of „LIM. L.2“ where you can proceed identically as with Limit one.

You can exit the setting by pressing the **⏪** button by which you store the latest setting and pressing the **Ⓢ** button will take you back to the measuring mode



## 8. DATA PROTOCOL

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit  
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 + 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [www.orbit.merret.cz](http://www.orbit.merret.cz) or SW OM Link.

### DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

EVENT	TYPE	PROTOCOL	TRANSMITTED DATA
Data solicitation (PC)	232	ASCII	# A A <CR>
		MessBus	No - data is transmitted permanently
	485	ASCII	# A A <CR>
		MessBus	<SADR> <ENQ>
Data transmission (instrument)	232	ASCII	> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
	485	ASCII	> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE> 1
Confirmation of data acceptance (PC) - Bad			<NAK>
Sending address (PC) prior command			<EADR> <ENQ>
Confirmation of address (instrument)			<SADR> <ENQ>
Command transmission (PC)	232	ASCII	# A A N P (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> \$ N P (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
	485	ASCII	# A A N P (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> \$ N P (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
Command confirmation (instrument)	232	ASCII	OK ! A A <CR>
		ASCII	Bad ? A A <CR>
		Messbus	No - data is transmitted permanently
		Messbus	No - data is transmitted permanently
	485	ASCII	OK ! A A <CR>
		ASCII	Bad ? A A <CR>
		Mess-Bus	OK <DLE> 1
		Mess-Bus	Bad <NAK>
Instrument identification			# A A 1 Y <CR>
HW identification			# A A 1 Z <CR>
One-time transmission			# A A 7 X <CR>
Repeated transmission			# A A 8 X <CR>

## LEGEND

SING	RANGE		DESCRIPTION
#	35	23 <sub>H</sub>	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal)
<CR>	13	0D <sub>H</sub>	Carriage return
<SP>	32	20 <sub>H</sub>	Space
N, P			Number and command - command code
D			Data - usually characters "0".."9", "-", ".", ";", (D) - dp. and (-) may prolong data
R	30 <sub>H</sub> ..3F <sub>H</sub>		Relay and tare status
!	33	21 <sub>H</sub>	Positive confirmation of command (ok)
?	63	3F <sub>H</sub>	Negative confirmation of command (point)
>	62	3E <sub>H</sub>	Beginning of transmitted data
<STX>	2	02 <sub>H</sub>	Beginning of text
<ETX>	3	03 <sub>H</sub>	End of text
<SADR>	adresa +6	0 <sub>H</sub>	Prompt to send from address
<EADR>	adresa +4	0 <sub>H</sub>	Prompt to accept command at address
<ENQ>	5	05 <sub>H</sub>	Terminate address
<DLE>1	16 49	10, 31 <sub>H</sub>	Confirm correct statement
<NAK>	21	15 <sub>H</sub>	Confirm error statement
<BCC>			Check sum ->XOR

## RELAY, TARE

SIGN	RELAY 1	RELAY 2	TARE	CHANGE RELAY 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00<sub>H</sub>..FF<sub>H</sub>. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

## 9. ERROR STATEMENTS

ERROR	CAUSE	ELIMINATION
<i>E. DIS<sub>-</sub></i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>E. DIS<sub>''</sub></i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>E. TAB<sub>-</sub></i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. TAB<sub>''</sub></i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. INP<sub>-</sub></i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>E. INP<sub>''</sub></i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. H<sub>xx</sub></i>	A part of the instrument does not work properly	send the instrument for repair
<i>E. EE<sub>-</sub></i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. SE<sub>-</sub></i>	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. CLR</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration
<i>E. OUT</i>	Analogue output current loop disconnected	check wire connection

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7
0		Q	"	#	\$	%	&	'	0	!	"	#	\$	%	&	'	
8	:	)	*	+	,	-	.	/	8	(	)	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	VA	Vr	<	=	>	?	24	8	9	VA	Vr	<	=	>	?
32	P	A	B	C	D	E	F	G	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[	\	]	^	_	56	X	Y	Z	[	\	]	^	_
64	`	a	b	c	d	e	f	g	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w	80	p	q	r	s	t	u	v	w
88	x	y	z	{		}	~		88	x	y	z	{		}	~	

# 11. TECHNICAL DATA

## INPUT

range is fixed, as per order

Range:	±99,999 mV	>1.8 MΩ
	±999,99 mV	1.8 MΩ
	±9,9999 V	1.8 MΩ
	±99,999 V	1.8 MΩ
	±300,00 V	1.8 MΩ
	±999,99 μA	<300 mV
	±9,9999 mA	<300 mV
	±99,999 mA	<300 mV
	±999,99 mA	<50 mV
	±5,0000 A	<10 mV

Range:	0...5 mA	<300 mV
	0...20 mA	<300 mV
	4...20 mA	<300 mV
	±2 V	1.8 MΩ
	±5 V	1.8 MΩ
	±10 V	1.8 MΩ
	±40 V	1 MΩ

Number of inputs: 2. (Input U and Input I)

Range:	0...5 mA	<300 mV
	0...20 mA	<300 mV
	4...20 mA	<300 mV
	±2 V	1.8 MΩ
	±5 V	1.8 MΩ
	±10 V	1.8 MΩ
	±40 V	1 MΩ

Number of inputs: 2. (Input U and Input I)

Time base: 1 s

Zobrazení: immediate (±99999)  
accrued (999999)

Range:	0...5 mA	<300 mV
	0...20 mA	<300 mV
	4...20 mA	<300 mV
	±2 V	1.8 MΩ
	±5 V	1.8 MΩ
	±10 V	1.8 MΩ
	±40 V	1 MΩ

Number of inputs: 2. (Input U and Input I)

Linearization: linear interpolation in 256 points

Number of tables: 16

Voltage of lin. pot. 2,5 VDC/6 mA  
min. potentiometer resistance is 500 Ω

Sensitiveness: 1...4 / 2...8 / 4...16 mV/V

Connection: 4/6-wire

Tensiometer volt.: 10 VDC, max. load 65 Ω

Connection: 3/5-wire

Gain: 1x/2x/6x/12x

Power supply: 1/3/5 VAC with frequency 2,5/5/10 kHz

## DC

Input U  
Input U  
Input U  
Input U  
Input U

Input I  
Input I  
Input I  
Input I  
Input I

## PM

Input I  
Input I  
Input I  
Input U  
Input U  
Input U

## I

Input I  
Input I  
Input I  
Input U  
Input U  
Input U

## I

Input I  
Input I  
Input I  
Input U  
Input U  
Input U

## DU

## T

## LVDT

## PROJECTION

Display: 999999, intensive red or green  
14-ti segment LED, digit height 14 mm  
Projection: ±99999 (-99999...999999)  
Decimal point: adjustable - in menu  
Brightness: adjustable - in menu

## INSTRUMENT ACCURACY

TC: 50 ppm/°C  
Accuracy: ±0,02% of range + 1 digit  
±0,05% of range + 1 digit **DU, T**  
**Above accuracies apply for projection 99999**

Rate: 0,1...100 measurements/s  
Overload capacity: 10x (t < 100 ms) not for 300 V and 5 A,  
2x (long-term)

Linearisation: by linear interpolation in 50 points  
- solely via OM Link

Digital filters: Averaging, Floating average, Exponential filter,  
Rounding

Functions: Tare - display resetting  
Hold - stop measuring (at contact)  
Lock - control key locking

MM - min/max value

Mathematic functions

OM Link: company communication interface for setting,  
operation and update of instrument SW

Watch-dog: reset after 400 ms

Calibration: at 25°C and 40% of r.h.

## COMPARATOR

Type: digital, adjustable in menu

Mode: Hysteresis, From, Dosing

Limits: -99999...999999

Hysteresis: 0...999999

Delay: 0...99,9 s

Outputs: 2x relays with switch-on contact (Form A)

(230 VAC/30 VDC, 3 A)\*

2x relays with switch-off contact (Form C)

(230 VAC/50 VDC, 3 A)\*

2x SSR (250 VAC/1 A)\*

2x/4x open NPN collector (30 VDC/100 mA)

2x bistabil relays (250 VAC/250 VDC, 3 A/0,3 A)\*

Relay: 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

\* values apply for resistance load

**DATA OUTPUTS**

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS  
 Data format: 8 bit + no parity + 1 stop bit (ASCII)  
 7 bit + even parity + 1 stop bit (MessBus)  
 Rate: 600...230 400 Baud  
 9 600 Baud...12 Mbaud (PROFIBUS)  
 RS 232: isolated, two-way communication  
 RS 485: addressing (max. 31 instruments)  
 PROFIBUS Data protocol SIEMENS

**ANALOG OUTPUTS**

Type: isolated, programmable with 16 bits D/A  
 convertor, analogoutput corresponds with  
 displayed data, type and range are adjustable  
 Non-linearity: 0,1 % of range  
 TC: 15 ppm/°C  
 Rate: response to change of value < 1 ms  
 Voltage: 0...2 V/5 V/10 V/±10 V  
 Current: 0...5/20 mA/4...20 mA  
 - compensation of conduct to 500 Ω/12 V  
 or 1 000 Ω/24 V

**MEASURED DATA RECORD**

Type RTC: time-controlled logging of measured data into  
 instrument memory, allows to log up  
 to 250 000 values  
 Type FAST: fast data logging into instrument memory,  
 allows to log up to 8 000 values at a rate of 40  
 records/s  
 Transmission: via data output RS 232/485 or via OM Link

**EXCITATION**

Adjustable: 5...24 VDC/max. 1,2 W, isolated  
 Fixed: 10 VDC, maximal load is 65 Ω

**T**

**POWER SUPPLY**

Options: 10...30 V AC/DC, 13,5 VA, PF ≥ 0,4,  
 $I_{STP} < 40 \text{ A/1 ms, isolated}$   
 - fuse inside (T 4000 mA)  
 80...250 V AC/DC, 13,5 VA, PF ≥ 0,4,  
 $I_{STP} < 40 \text{ A/1 ms, isolated}$   
 - fuse inside (T 630 mA)

**MECHANIC PROPERTIES**

Material: Noryl GFN2 SE1, incombustible UL 94 V-I  
 Dimensions: 96 x 48 x 120 mm  
 Panel cut-out: 90,5 x 45 mm

**OPERATING CONDITIONS**

Connection: connector terminal board, conductor  
 cross-section <1,5 mm<sup>2</sup> /<2,5 mm<sup>2</sup>  
 Stabilisation period: within 15 minutes after switch-on  
 Working temp.: 0°...60°C  
 Storage temp.: -10°...85°C  
 Cover: IP64 (front panel only)  
 Construction: safety class I  
 Dielectric strength: 4 kVAC after 1 min between supply and input  
 4 kVAC after 1 min between supply and data/  
 analog output  
 4 kVAC after 1 min between supply and relay  
 output  
 2,5 kVAC after 1 min between supply and data/  
 analog output  
 Overvoltage cat.: EN 61010-1, A2  
 Insulation resist.: for pollution degree II, measurement cat. III  
 instrum.power supply > 670 V (PI), 300 V (DI)  
 Input/output > 300 V (PI), 150 (DI)  
 EMC: EN 61326-1


## 12. INSTRUMENT DIMENSIONS AND INSTALLATION




**Front view**



**Panel cut**

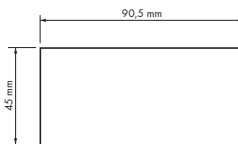



**Side view**

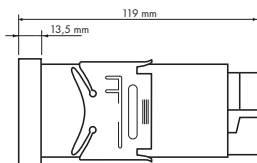

Panel thickness: 0,5...20 mm

### INSTRUMENT INSTALLATION

1. insert the instrument into the panel cut-out
2. fit both travellers on the box
3. press the travellers close to the panel

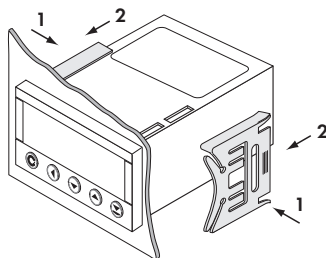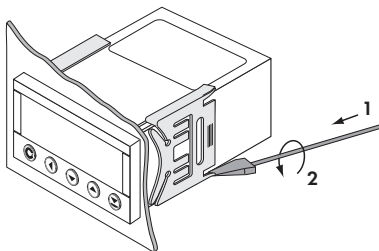

### INSTRUMENT DISASSEMBLY

1. slide a screw driver under the traveller wing
2. turn the screw driver and remove the traveller
3. take the instrument out of the panel





Product **OM 502** **DC PM I LX DU T LVDT**  
 Type .....  
 Manufacturing No. ....  
 Date of sale .....

# WARRANTY

A guarantee period of 60 months from the date of sale to the user applies to this instrument.  
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

# YEARS

Stamp, signature

# ES DECLARATION OF CONFORMITY



**Company:** **ORBIT MERRET, spol. s r.o.**  
Klánská 81/141, 142 00 Prague 4, Czech Republic, IDNo.: 00551309

**Manufactured:** **ORBIT MERRET, spol. s r.o.**  
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

**Product:** Programmable panel instrument

**Type:** **OM 502**

**Version:** DC, PM, I, LX, DU, T, LVDT

## **Thas been designed and manufactured in line with requirements of:**

Low-voltage electrical equipment (directive no. 2014/35/EU)

Electromagnetic compatibility (directive no. 2014/30/EU)

## **The product qualities are in conformity with harmonized standard:**

el. bezpečnost: EN 61010-1

EMC: EN 61326-1

Electronic measuring, control and laboratory devices – Requirements for EMC "Industrial use"  
EN 50131-1, chap. 14 and chap. 15, EN 50130-4, chap. 7, EN 50130-4, chap. 8 (EN 61000-4-11, ed. 2), EN 50130-4, chap. 9 (EN 61000-4-2), EN 50130-4, chap. 10 (EN 61000-4-3, ed. 2), EN 50130-4, chap. 11 (EN 61000-4-6), EN 50130-4, chap. 12 (EN 61000-4-4, ed. 2), EN 50130-4, chap. 13 (EN 61000-4-5), EN 61000-4-8, EN 61000-4-9, EN 61000-6-1, EN 61000-6-2, EN 55022, kap. 5 a kap. 6

The product is furnished with CE label issued in 2007.

## **As documentation serve the protocols of authorized and accredited organizations:**

EMC MO CR, Testing institute of technical devices, protocol no. 80/6-330/2006 of 15/01/2007  
MO CR, Testing institute of technical devices, protocol no. EMI.80/6-333/2006 of 15/01/2007

Place and date of issue: Prague, 19. Juli 2009

Miroslav Hackl  
Company representative



**ORBIT MERRET, spol. s r. o.**  
Vodňanská 675/30  
198 00 Praha 9  
Czech Republic

tel.: +420 281 040 200  
fax.: +420 281 040 299  
orbit@merret.eu

[www.orbit.merret.eu](http://www.orbit.merret.eu)

