




OMD 201 UNI-B

**4/6 DIGIT PROGRAMMABLE
UNIVERSAL LAGRE DISPLAY**

DC VOLTMETER/AMMETER
PROCESS MONITOR
OHMMETER
THERMOMETER FOR PT 100/500/1 000
THERMOMETER FOR NI 1 000
THERMOMETER FOR THERMOCOUPLES
DISPLAYS FOR LIN. POTENTIOMETERS

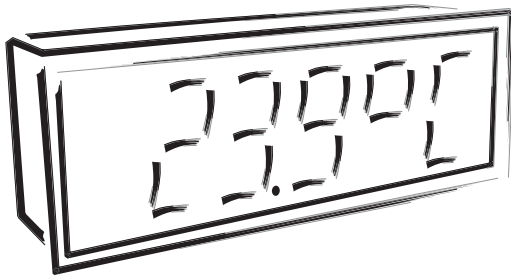

SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OMD 201 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:

EN 55 022, class B

EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanska 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.cz
www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	8
	Symbols used in the instructions	10
	Setting the DP and the (-) sign	10
	Control keys function	11
	Setting/permitting items into "USER" menu	11
5.	Setting "LIGHT" menu	12
5.0	Description "LIGHT" menu	12
	Setting input - type "DC"	16
	Setting input - type "PM"	16
	Setting input - type "OHM"	18
	Setting input - type "RTD - Pt"	19
	Setting input - type "RTD - Ni"	20
	Setting input - type "T/C"	21
	Setting input - type "RTD - Cu"	22
	Setting measuring range for channels B, C, D	24
	Setting display colors	38
	Setting projection for channel B	40
	Setting projection for channel C	42
	Setting projection for channel D	44
	Setting Limits	46
	Setting analog output	48
	Selection of programming menu „LIGHT"/„PROFI"	50
	Restoration of manufacture setting	50
	Calibration - input range (DU)	51
	Selection of instrument menu language version	52
	Setting new access password	52
	Instrument identification	53
6.	Setting "PROFI" menu	54
6.0	Description of "PROFI" menu	54
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	58
6.1.2	Setting measuring type, range, mode, rate,	59
6.1.3	Setting the Real Time	66
6.1.4	External input function selection	66
6.1.5	Optional accessory functions of the keys	68
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	72
6.2.2	Setting mathematic functions	76
6.2.3	Selection of evaluation of min/max. value	81
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting Limits	83
6.3.2	Setting data output	87
6.3.3	Setting analog output	88
6.3.4	Selection of display projection	90
6.4	"PROFI" menu - SERVICE	
6.4.1	Setting the address of IR remote control	92
6.4.2	Selection of programming menu „LIGHT"/„PROFI"	93
6.4.3	Restoration manufacture setting	93
6.4.4	Calibration - input range (DU)	94
6.4.5	Selection of instrument menu language version	95
6.4.6	Setting new access password	95
6.4.7	Instrument identification	96
7.	Setting items into "USER" menu	98
8.	Method of measuring of the cold junction	100
9.	Data protocol	102
10.	Error statements	104
11.	Technical data	106
12.	Instrument dimensions and installation	108
13.	Certificate of guarantee	109

2.1 Description

The OMD 201 model series are 4/6 digit large panel programmable displays designed for maximum efficiency and user comfort while maintaining their favourable price.

Type OMD 201 UNI is a multifunction instrument with the option of configuration for 7 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The accuracy is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

The OMD 201 is a multifunction instrument available in following types and ranges

Type UNI

DC:	$\pm 60/\pm 150/\pm 300/\pm 1200$ mV
PM:	$0...5$ mA/ $0...20$ mA/ $4...20$ mA/ ± 2 V/ ± 5 V/ ± 10 V/ ± 40 V
OHM:	$0...100$ Ω / $0...1$ k Ω / $0...10$ k Ω / $0...100$ k Ω
RTD-Pt:	Pt 50/100/Pt 500/Pt 1 000
RTD-Cu:	Cu 50/Cu 100
RTD-Ni:	Ni 1 000/Ni 10 000
T/C:	J/K/T/E/B/S/R/N/L
DU:	Linear potentiometer (min. 500 Ω)

Type UNI, option A

DC:	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A/ ± 2 A/ ± 5 A/ ± 100 V/ ± 250 V/ ± 500 V
------------	---

Type UNI, option B (expansion by 3 more inputs)

PM:	$3 \times 0...5$ mA/ $0...20$ mA/ $4...20$ mA/ ± 2 V/ ± 5 V/ ± 10 V/ ± 40 V
------------	---

PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input $0...20$ mA > $0...850,0$
Projection:	-9999...9999

COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

LINEARIZATION

Linearization:*	by linear interpolation in 50 points (solely via OM Link)
-----------------	---

DIGITAL FILTERS

Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, exponential, root, suma, divide

* only for type DC, PM, DU

EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value

2.2 Operation

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING RANGES

Type	Input I	Input U
DC	$\pm 60/\pm 150/\pm 300/\pm 1\ 200$ mV	
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V
OHM	0...0,1/1/10/100 k Ω	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N/L	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "A"


Type	Input I	Input U
DC	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A to GND (C) ± 2 A/ ± 5 A to GND (B)	± 100 V/ ± 250 V/ ± 500 V to GND (C)

OPTION "B"

Type	Input 2, 3, 4/I	Input 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V




"INPUT - I" may be connected to a maximum of 250 mA, i.e. tenfold overload of the range. Beware of improper connection/confusing the current and voltage inputs. It may cause damage to measuring resistance in the Current Input (15 R).

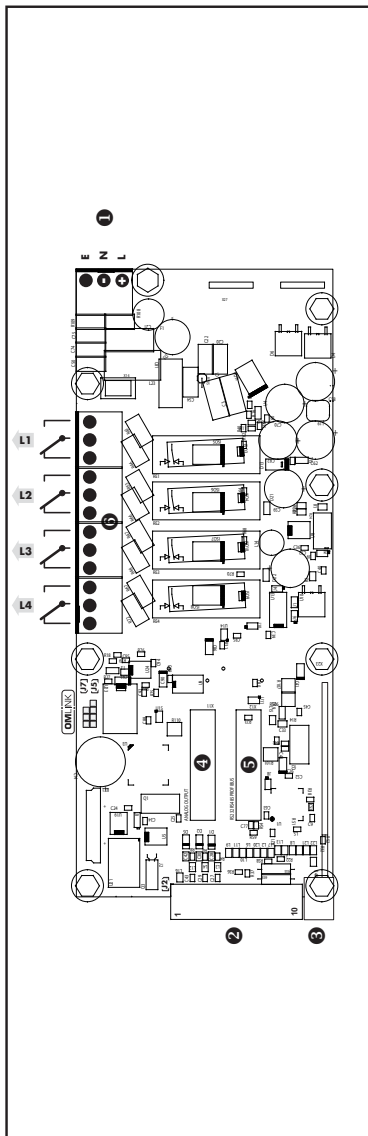

1 Power supply



4 Analog output




5 Data output




6 Relays



2 Input

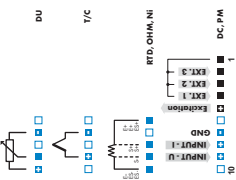


3 Input-Option

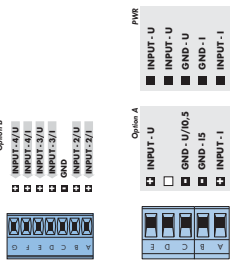

1 Power supply



4 Analog output




5 Data output




6 Relays



2 Input

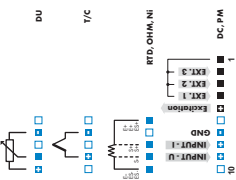

3 Input-Option

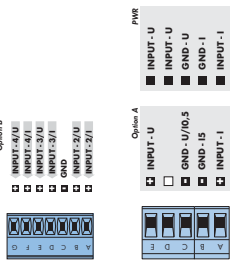

PROFI

Setting

profi

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

light

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT** **Simple programming menu**
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
 - contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
 - access without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.

Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Scheme of processing the measured signal

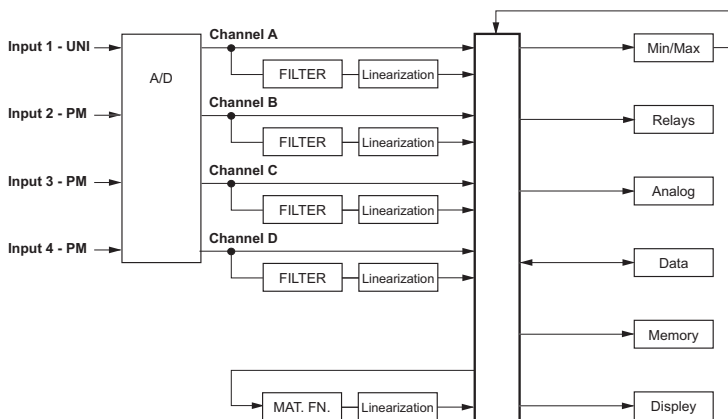

Setting and controlling the instrument is performed by means of the Remote control. With the aid of the Remote control it is possible to browse through the operation menu and to select and set the required values.

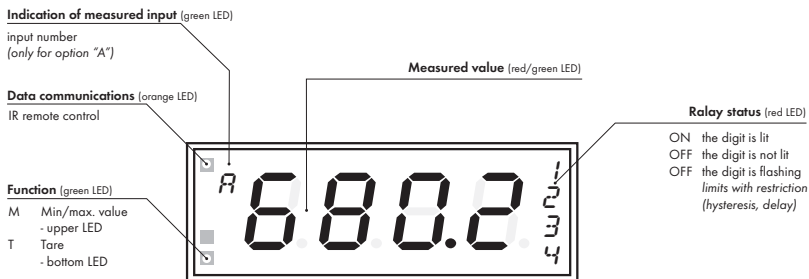

Symbols used in the instructions

DC **PM**

DU **OHM** **RTD** **T/C**

Indicates the setting for given type of instrument

DEF

values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

30 continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing . Positioning is performed by / .

THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade*
	programmable key function	move to previous item	move down*
	programmable key function	move to next item	move up*
	programmable key function	confirm selection	confirm setting/selection
	access into LIGHT/PROFI menu		
>3 s 	direct access into PROFI menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

* alternatively, the setting may be done from the numeric keys of the remote control by selecting directly the number required

Setting items into „USER“ menu

- in LIGHT or PROFI menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle

user

Legend is flashing - current setting is displayed



- item will not be displayed in USER menu
- item will be displayed in USER menu with the option of setting
- item will be solely displayed in USER menu

5.0

Setting "LIGHT"

LIGHT

Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code

SETTING LIGHT

light

- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF



Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

Access password
 1428 **G** PASS 0

Active inputs: InA 4 In Type of input - Channel A: tYP.1 Pn Measuring range - Channel A: nDd.1 4-20

RTD OHM
 C0n 2-w F0r.R 000.a
T/C
 C0n EH.1 C.d.t. 23 F0r.R 000.a
 Selecting projection and connection

Measuring range - Channel B: nDd.2 4-20 Measuring range - Channel C: nDd.3 4-20 Measuring range - Channel D: nDd.4 4-20

DC PM OHM DU Setting projection - Channel A: n In.A 0 nA.R.A 100 F0r.R 000.a Basic color: C 0.R Grn

First color's limit: L 1.A 3333 Color after first limit: C. 1.A 0-r.A.n Second color's limit: L 2.A 6667 Color after second limit: C. 2.A rEd

Setting projection - Channel B: n In.b 0 nA.R.b 100 F0r.b 000.a Basic color: C 0.b Grn

Setting projection - Channel C: n In.C 0 nA.R.C 100 F0r.C 000.a Basic color: C 0.C Grn

Setting projection - Channel D: n In.d 0 nA.R.d 100 F0r.d 000.a Basic color: C 0.d Grn


L.L.1 20 **L.L.2** 40 **L.L.3** 60 **L.L.4** 80
 Option - comparator


tY.R.0 4-20 **n I.R.0** 0 **nA.R.0** 100
 Option - Analog output

Menu type: nEnU LIGH Return to manufacture calibration: rECR YES Return to manufacture setting: rESE Firn

DU Calibration - only for "DU": C n.1 YES C n.R YES Language selection: LAnG EnGL New password: PRL1 0

Identification: IdEn YES Instrument: 0nD201Un1-b SW version: 64-001 Input: 4 In 1428 Return to measuring mode

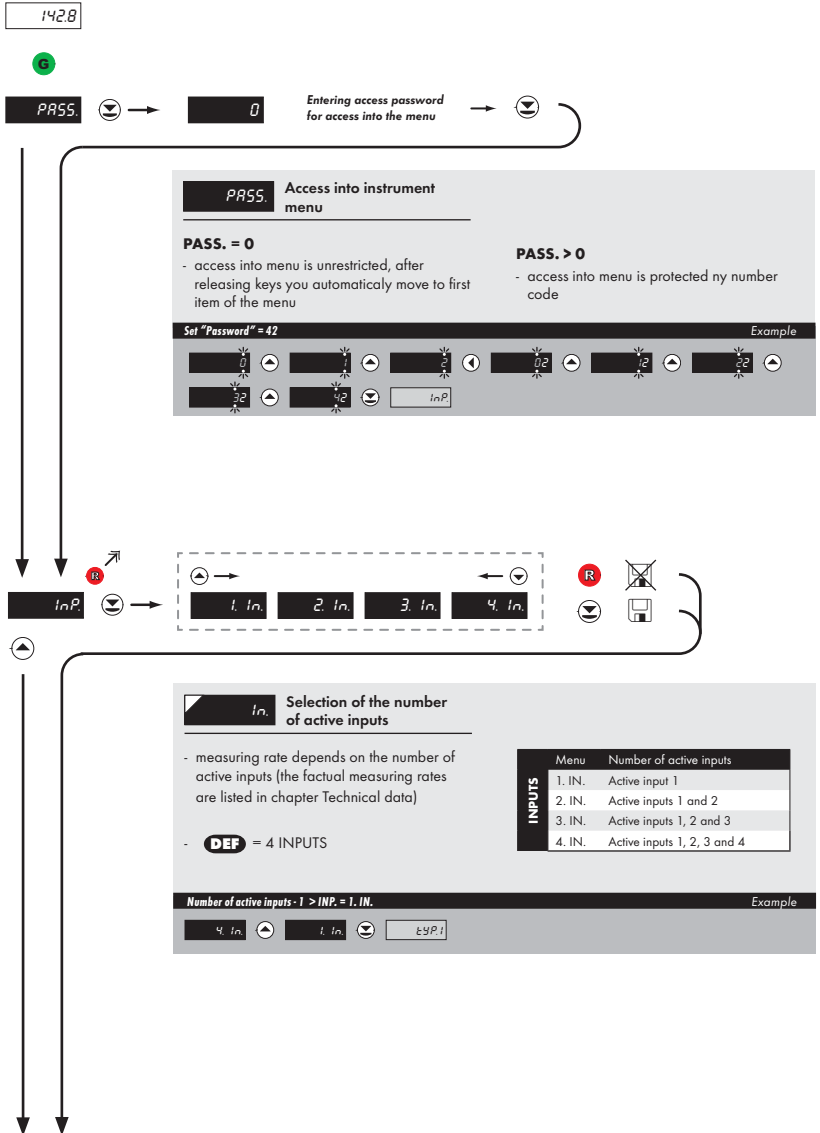

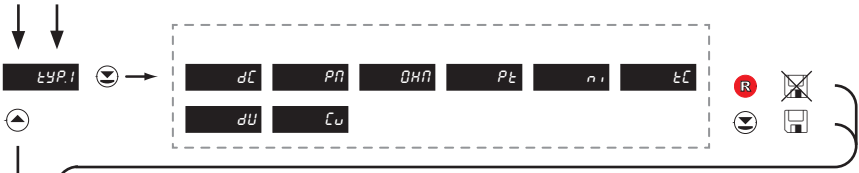

TYPE

Selection of the type of instrument

- primary selection of the type of instrument
- performs default setting **DEF** of values from manufacture, incl. calibration
- **DEF** = "PM"

TYPE

Menu	Type of instrument
DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
Pt	Thermometer for sensors Pt
Ni	Thermometer for sensors Ni
TC	Thermometer for thermocouples
DU	Display for lin. potentiometer
Cu	Thermometer for sensors Cu

TYPE "PM" Example

PM

⌵

nDd.1

Type „DC“	📖	16
Type "PM"	📖	16
Type "OHM"	📖	17
Type "RTD-Pt"	📖	18
Type "RTD-Ni"	📖	19
Type "T/C"	📖	20
Type "DU"	📖	24
Type "RTD-Cu"	📖	22

Channel A DC DC DC DC

Navigation path: Top panel (MOD.1) → Book icon (24) → MOD.1 menu.

MOD.1 Selection of the instrument measuring range

DEF = ±60 mV

Menu	Measuring range
60	±60 mV
150	±150 mV
300	±300 mV
1200	±1,2 V

Range ±150 mV

Example: 60 | 150 | MOD.1

Channel A PM PM PM PM

Navigation path: Top panel (MOD.1) → Book icon (24) → MOD.1 menu.


MOD.1 Selection of the instrument measuring range

DEF = 4 - 20 mA

Menu	Measuring range
i0-5	0...5 mA
0-20	0...20 mA
4-20	4...20 mA
...	...
0-10	0...10 V
0-40	0...40 V
Er. 4	4...20 mA, with error statement „underflow“ in case of signal less than 3,36 mA

Range 0...20 mA

Example: 4-20 | u0-2 | MOD.1

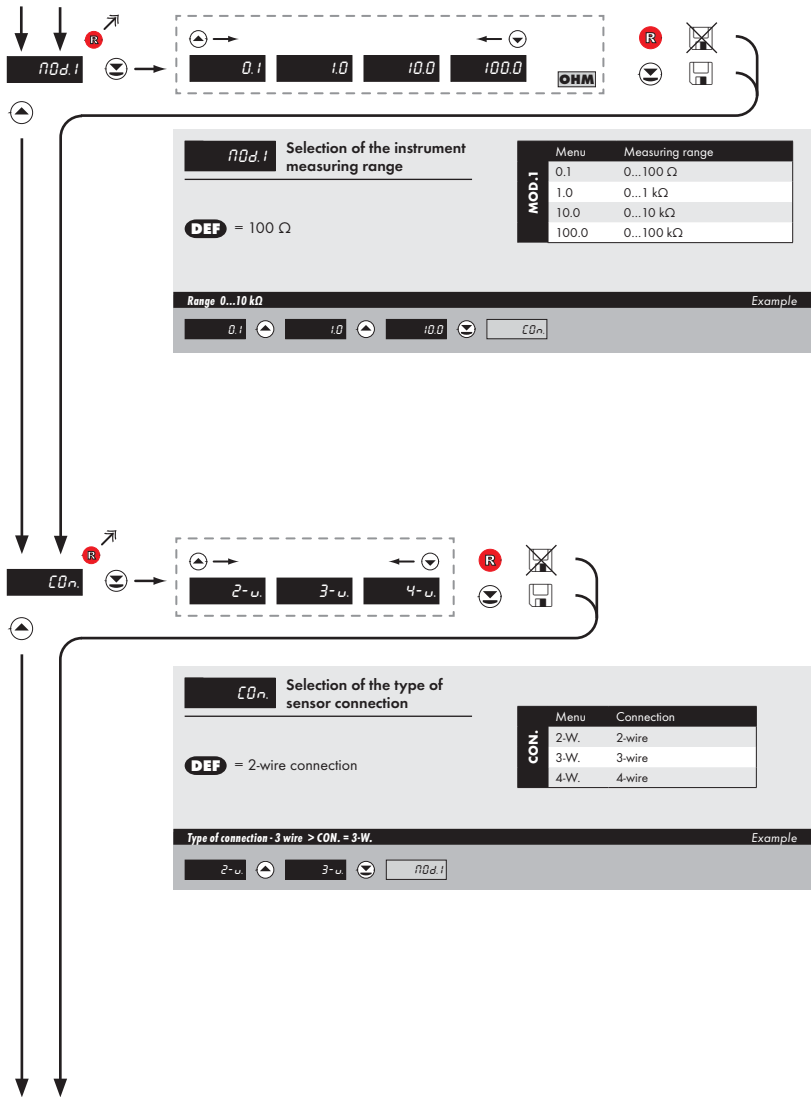



MOD.1 Selection of the instrument measuring range

DEF = Pt 100 (3 850 ppm/°C)

Menu	Measuring range
EU0.1	Pt 100 (3 850 ppm/°C)
EU0.5	Pt 500 (3 850 ppm/°C)
EU1.0	Pt 1000 (3 850 ppm/°C)
US0.1	Pt 100 (3 920 ppm/°C)
R. 50	Pt 50 (3 910 ppm/°C)
R.100	Pt 100 (3 910 ppm/°C)

Range - Pt 1 000 > MOD.1 = EU.0.1 Example

EU0.1 EU0.5 EU1.0

CON Selection of the type of sensor connection

DEF = 2-wire connection

Menu	Connection
2-W.	2-wire
3-W.	3-wire
4-W.	4-wire

Type of connection - 3 wire > CON. = 3-W. Example

2-w 3-w



MOD.1 Selection of the instrument measuring range

DEF = Ni 1 000 - 5 000 ppm/°C

Menu	Measuring range
5-1	Ni 1 000 (5 000 ppm/°C)
6-1	Ni 1 000 (6 180 ppm/°C)
5-10	Ni 10 000 (5 000 ppm/°C)
6-10	Ni 10 000 (6 180 ppm/°C)

Range - Ni 1 000/5 000ppm > MOD.1 = 5-10 Example

5-1 6-1 5-10 MOD.1



CO.n Selection of the type of sensor connection

DEF = 2-wire connection

Menu	Connection
2-W.	2-wire
3-W.	3-wire
4-W.	4-wire

Type of connection - 3 wire > CON. = 3-W. Example

2-w 3-w CO.n



C.J. T. Setting temperature of cold junction **DEF = 23**

- range 0...99°C with compensation box

Setting temperature of cold junction > C.J. T. = 35 Example

23 ▲ 24 ▲ 25 ◀ 25 ▲ 35 ▼

!

For thermocouple type "B" the items CON. and C.J. T. are not available

!

Method and procedure of setting the cold junctions is described in separate chapter on page 100






MOD.1 Selection of the instrument measuring range

DEF = Cu 50 (4 285 ppm/°C)

Menu	Measuring range
8-50	Cu 50 (4 285 ppm/°C)
8-0.1	Cu 100 (4 285 ppm/°C)
6-50	Cu 50 (4 260 ppm/°C)
6-0.1	Cu 100 (4 260 ppm/°C)

Range - Cu 50/4260 ppm > MOD.1 = 6-50 Example

8-50 ◀ ▶ 8-0.1 ▶ ◀ 6-50 Ⓜ [CON]




CON. Selection of the type of sensor connection


DEF = 2-wire connection

Menu	Connection
2-W	2-wire
3-W	3-wire
4-W	4-wire

Type of connection - 3-wire > CON. = 3-W. Example

2-w ◀ ▶ 3-w Ⓜ [MOD.1]

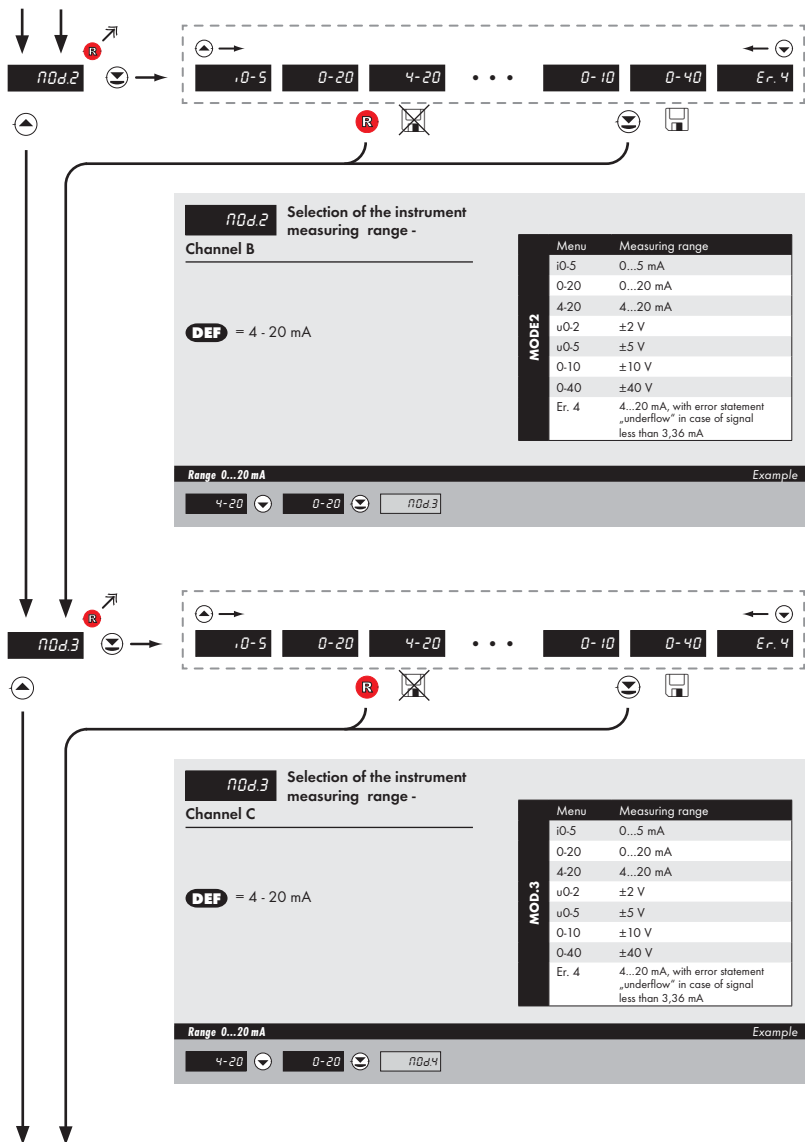

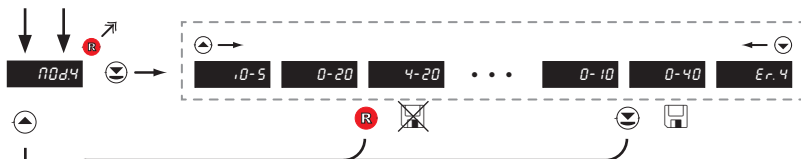

MOD.4 Selection of the instrument measuring range -

Channel D

DEF = 4 - 20 mA

Menu	Measuring range
i0-5	0...5 mA
0-20	0...20 mA
4-20	4...20 mA
u0-2	±2 V
u0-5	±5 V
0-10	±10 V
0-40	±40 V
Er. 4	4...20 mA, with error statement „underflow“ in case of signal less than 3,36 mA

Range 0...20 mA Example

4-20 0-20 n in b



0.100R Setting display projection for minimum value of input signal

- range of the setting: -999...9999

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for 0 mV > MIN.A = 0

Example



0.100R Setting display projection for maximum value of input signal

- range of the setting: -999...9999

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 100

Projection for 150 mV > MAX.A = 3500

Example






min.A Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting: -999...9999

DEP = 0

Projection for 0 mA > MIN.A = 25 Example

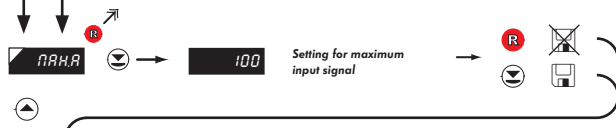


max.A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed


- range of the setting: -999...9999


DEP = 100

Projection for 20 mA > MAX.A = 2500 Example

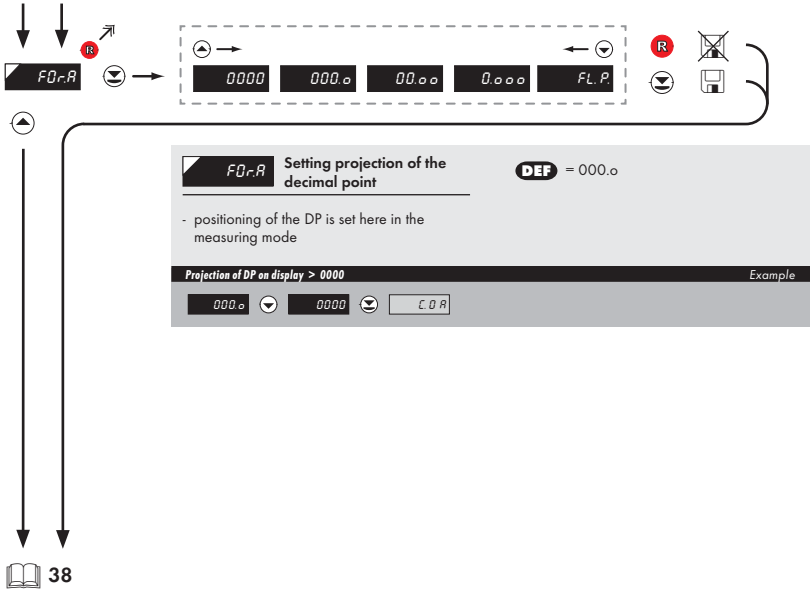

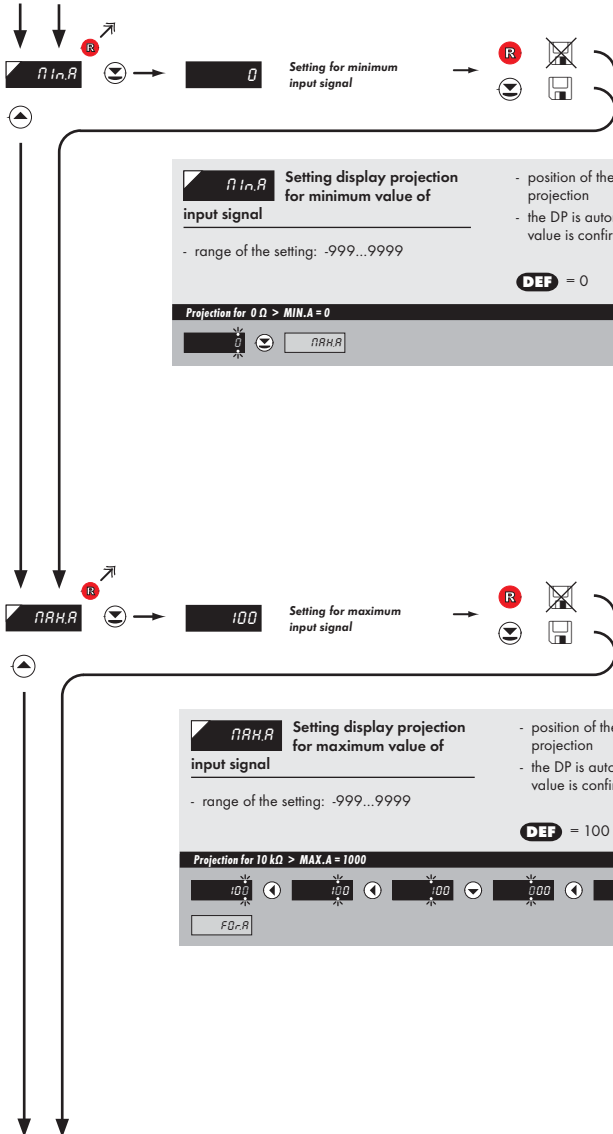

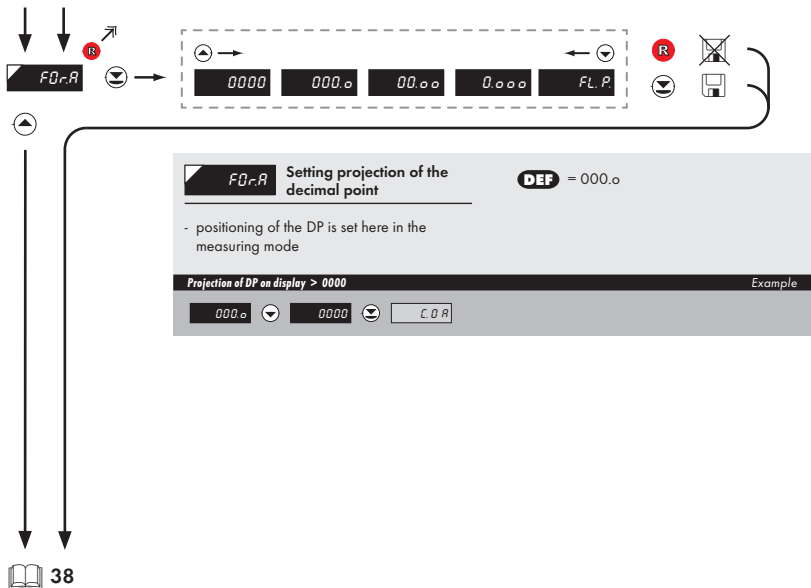

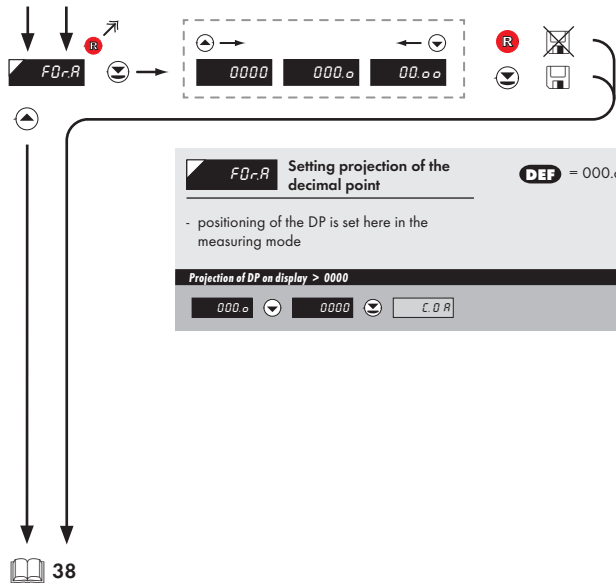



FD-r-R Setting projection of the decimal point **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 *Example*

000.0 0000 C D R





MIN.A Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting: -999...9999

DEF = 0

Projection for the beginning > MIN.A = 0 Example



MAX.A Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting: -999...9999

DEF = 100

Projection for the end > MAX.A = 5000 Example




FD.r.A Setting projection of the decimal point **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 Example

000.0 0000 C 0 A

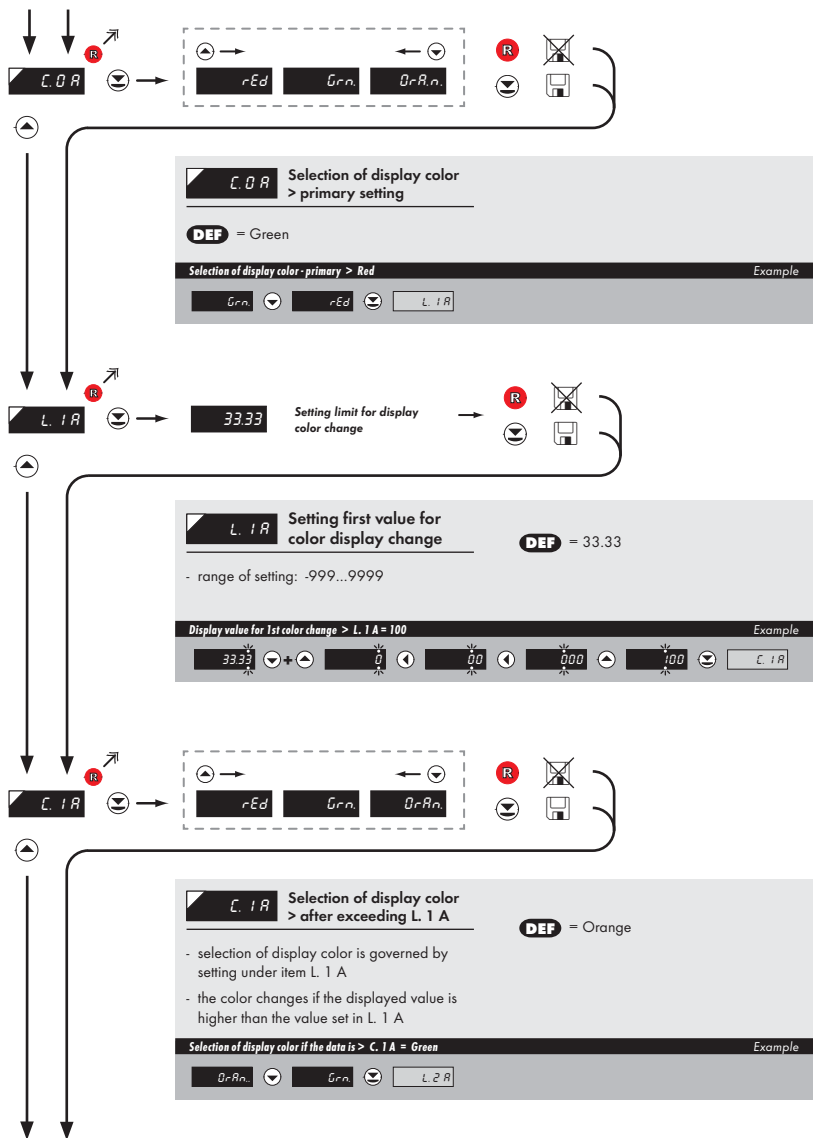



L.2 A Setting second value for display color change **DEF** = 66.67

- range of setting: -999...9999

Display value for 1st color change > L.2 A = 400 Example

66.67 + 0 00 000

200 300 400 L.2 A



L.2 A Selection of display color > after exceeding L.2 A **DEF** = Red

- selection of display color is governed by setting under item L.2 A

- the color changes if the displayed value is higher than the value set in L.2 A

Selection of display color if the data is > C.2 A > orange Example

rEd OrAn Bln b



n in.b Setting display projection for minimum value of input signal - Channel B

- range of the setting: -999...9999

DEP = 0

Projection for 0 mA > MIN.B = 25 Example

0	1	2	3	4	5	6	7	8	9
↑	↑	↑	↑	↑	↑	↑	↑	↑	↑
↓	↓	↓	↓	↓	↓	↓	↓	↓	↓

PAH.B

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed



MAX.B Setting display projection for maximum value of input signal - Channel B

- range of the setting: -999...9999

DEP = 100

Projection for 20 mA > MAX.B = 2500 Example

100	200	300	400	500	600	700	800	900	1000
↓	↓	↓	↓	↓	↓	↓	↓	↓	↓
↑	↑	↑	↑	↑	↑	↑	↑	↑	↑

F0-B

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed



F0r.b Setting projection of the decimal point - Channel B **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 Example

000.0 0000 00.00 0.000




C0b Selection of display color > primary setting - Channel B **DEF** = Green

Selection of display color - primary > Red Example

Grn rEd L1b

Setting is identical as for "Channel A"

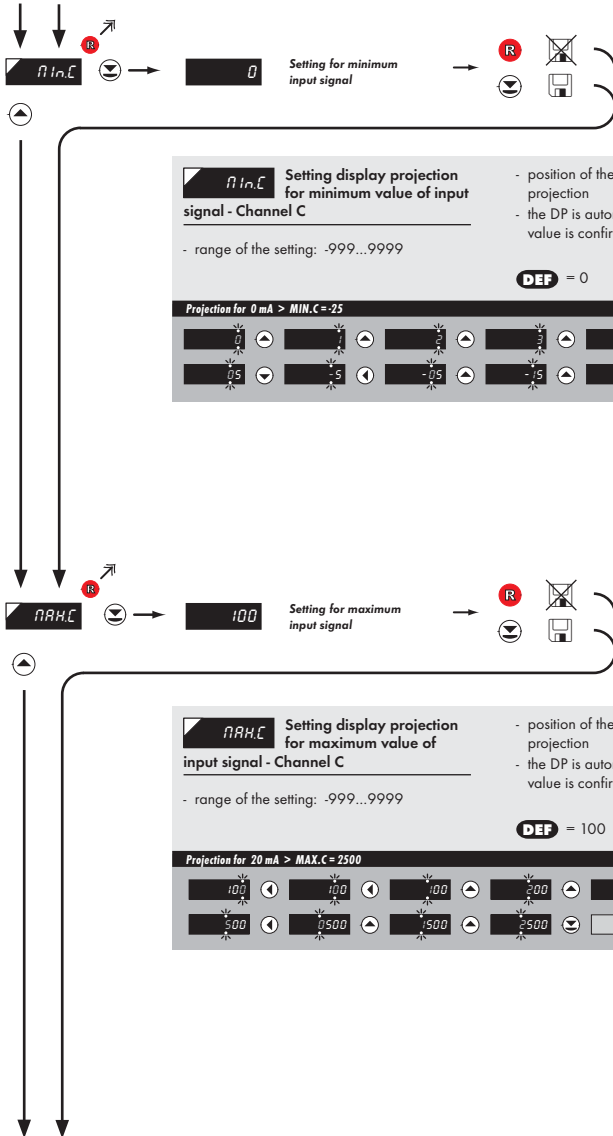



FD.r.C Setting projection of the decimal point - Channel C **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 Example

000.0 ◀ 0000 ◀ C.0.C




C.0.C Selection of display color > primary setting - Channel C **DEF** = Green

Selection of display color - primary > Red Example

Grn ◀ rEd ◀ L.I.C

Setting is identical as for "Channel A"

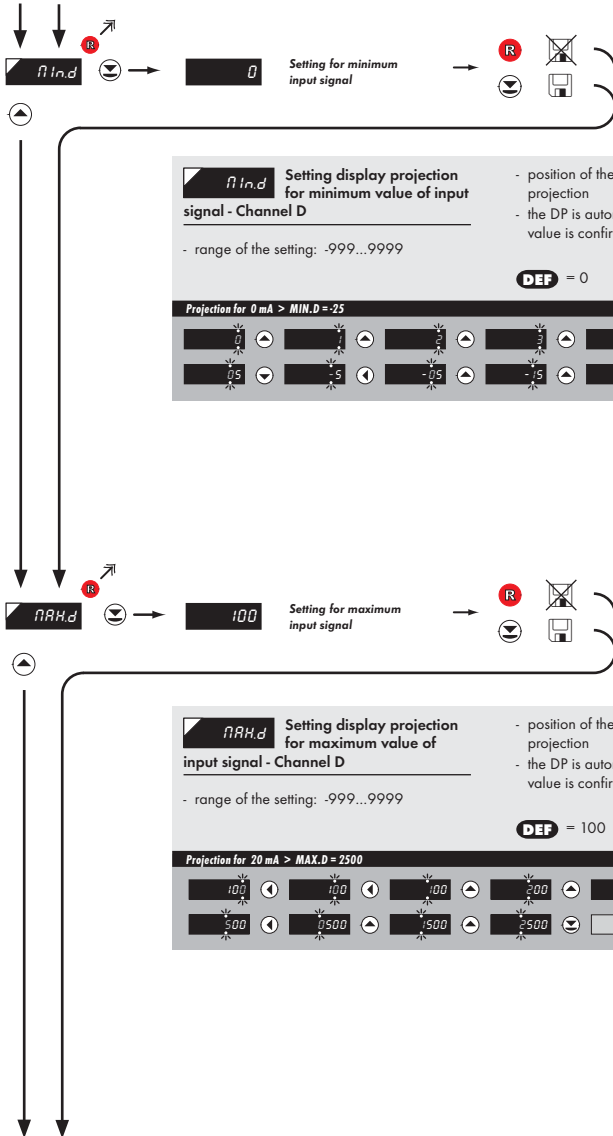



F0r.d Setting projection of the decimal point - Channel D **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 Example

000.0 0000 C.0.d




C.0.d Selection of display color > primary setting - Channel D **DEF** = Green

Selection of display color - primary > Red Example

Grn rEd L.1.d

Setting is identical as for "Channel A"

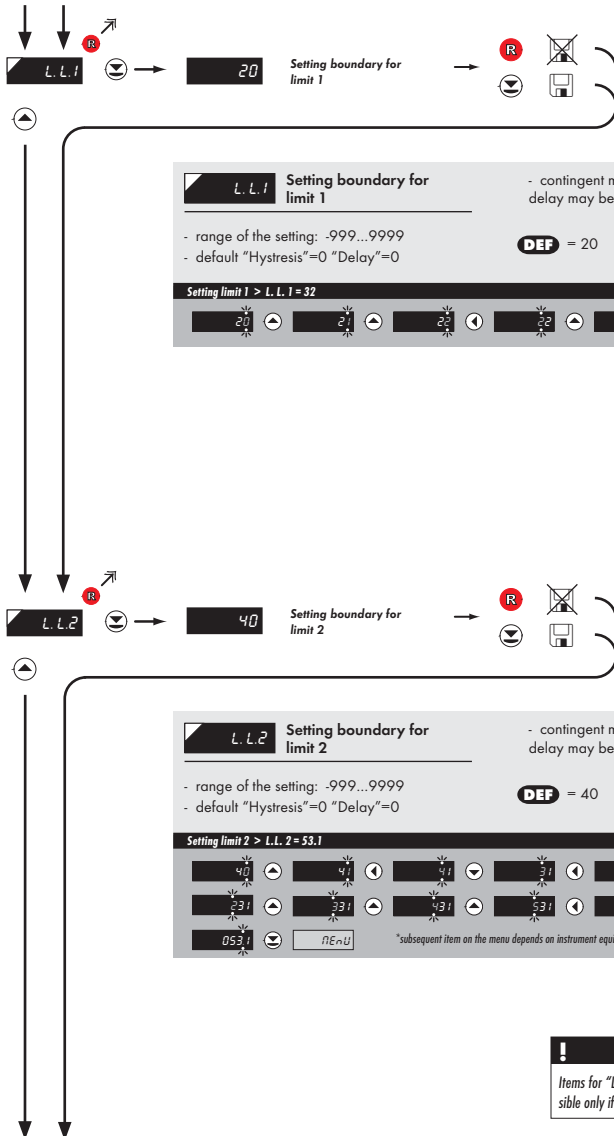

L.L.1 Setting boundary for limit 1

- range of the setting: -999...9999
- default "Hysteresis"=0 "Delay"=0

DEP = 20

Setting limit 1 > L.L.1 = 32

Example




L.L.2 Setting boundary for limit 2

- range of the setting: -999...9999
- default "Hysteresis"=0 "Delay"=0

DEP = 40

Setting limit 2 > L.L.2 = 53.1

Example



*subsequent item on the menu depends on instrument equipment

!
Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



L.L.3 Setting boundary for limit 3

- contingent modification of hysteresis or delay may be performed in "PROFI" menu
- range of the setting: -999...9999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > L.L.3 = 85 Example

80	61	62	63	64	65
65	75	85	MENU		



L.L.4 Setting boundary for limit 4

- contingent modification of hysteresis or delay may be performed in "PROFI" menu
- range of the setting: -999...9999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > L.L.4 = 103 Example

80	81	82	83	83	83
03	03	03	MENU		

*subsequent item on the menu depends on instrument equipment

TY.A.O. Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
Er. 4	4...20 mA	with indication of error statement (<3,6 mA)
4-20	4...20 mA	
i0-5	0...5 mA	
u0-2	0...2 V	
u0-5	0...5 V	
0-10	0...10 V	

DEF = 4...20 mA

Type of analog output - 0...10 V > TY. A.O. = 0-10 Example

4-20 i0-5 u0-2 u0-5 0-10 **M.I.A.O.**

M.I.A.O. Assigning the display value to the beginning of the AO range **DEF** = 0


- range of the setting: -999...9999

Display value for the beginning of the AO range > M.I.A.O. = 0 Example

M.I.A.O.

!

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

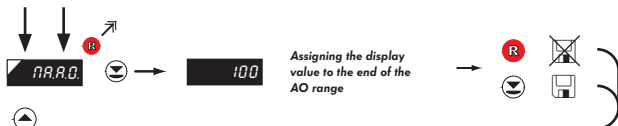

n.a.a.o. Assigning the display value to the end of the AO range **DEF** = 100

AO range

- range of the setting: -999...9999

Display value for the end of the AO range > MA.A.O. = 120 Example

100


100


120

120


n.e.u

Displayed only with options > **Analog output**

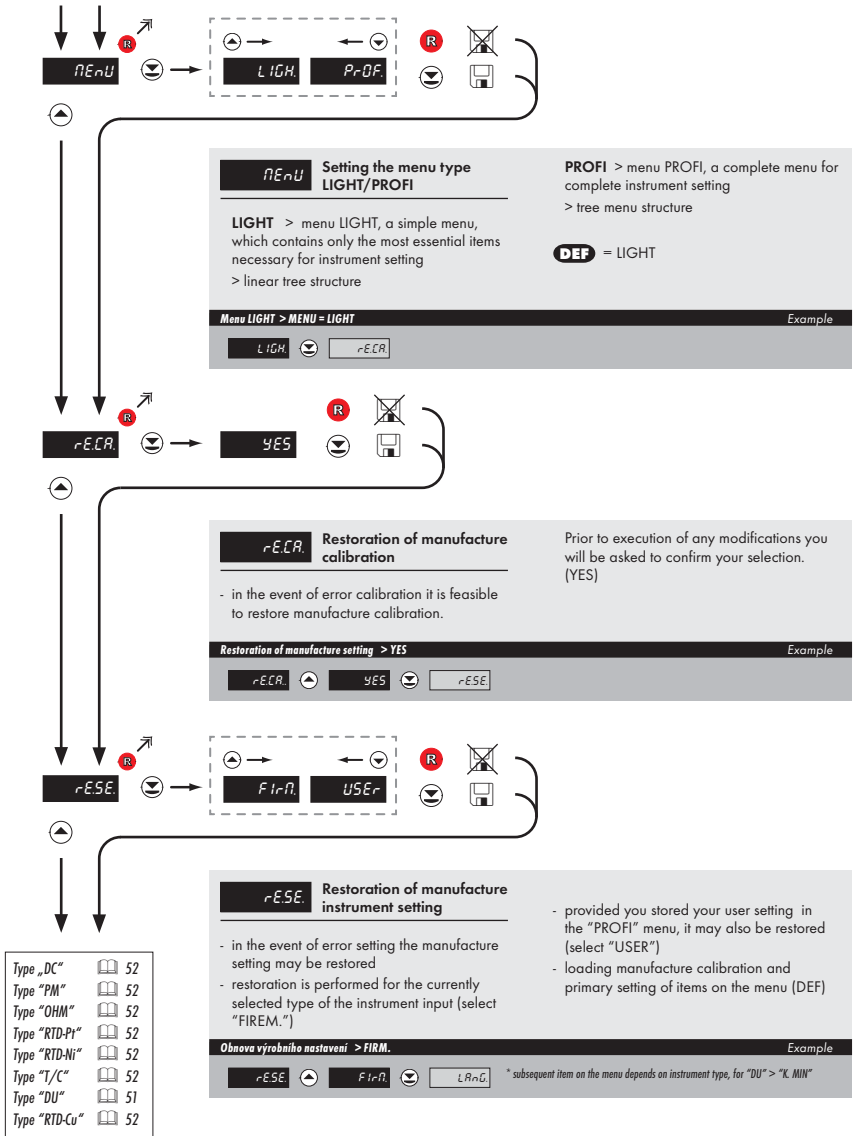

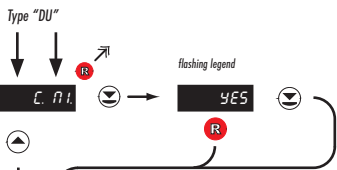


C. P1	Calibration of input range - the potentiometer traveller in initial position	<i>Only for type "DU"</i>
- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position		
Calibration of the beginning of the range > C. MI.		<i>Example</i>
YES	C. P1	

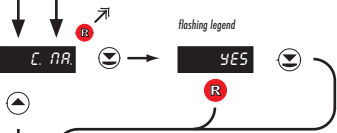

C. P2	Calibration of input range - the potentiometer traveller in end position	<i>Only for type "DU"</i>
- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position		
Calibration of the end of the range > C. MA.		<i>Example</i>
YES	C. P2	



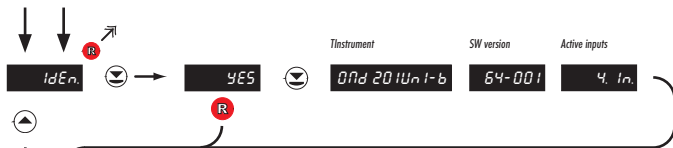


IdEn.

Instrument SW version

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)
- if SW version contains a letter in first position, then it is a customer SW
- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

IDEN.	Packet	Description
1.	Instrument	
2.	SW version	
3.	Number of active inputs	



Return to measuring mode

6.0

Setting "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

 SETTING
 PROFIL
 ▼
 ▼
 ▼
 ▼
 ▼
 ▼
 ▼
 ▼



- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu

>3 s




- temporary switch-over to **PROFI** menu, which is suitable to edit a few items
- after quitting **PROFI** menu the instrument automatically switches to **LIGHT** menu
- access is password protected (if it was not set under item N.PAS. =0)




- access into **LIGHT** menu and transition to item „MENU“ with subsequent selection of „PROFI“ and confirmation
- after re-entering the menu the **PROFI** type is active
- access is password protected (if it was not set under item N.PAS. =0)

me of PROFi MENU

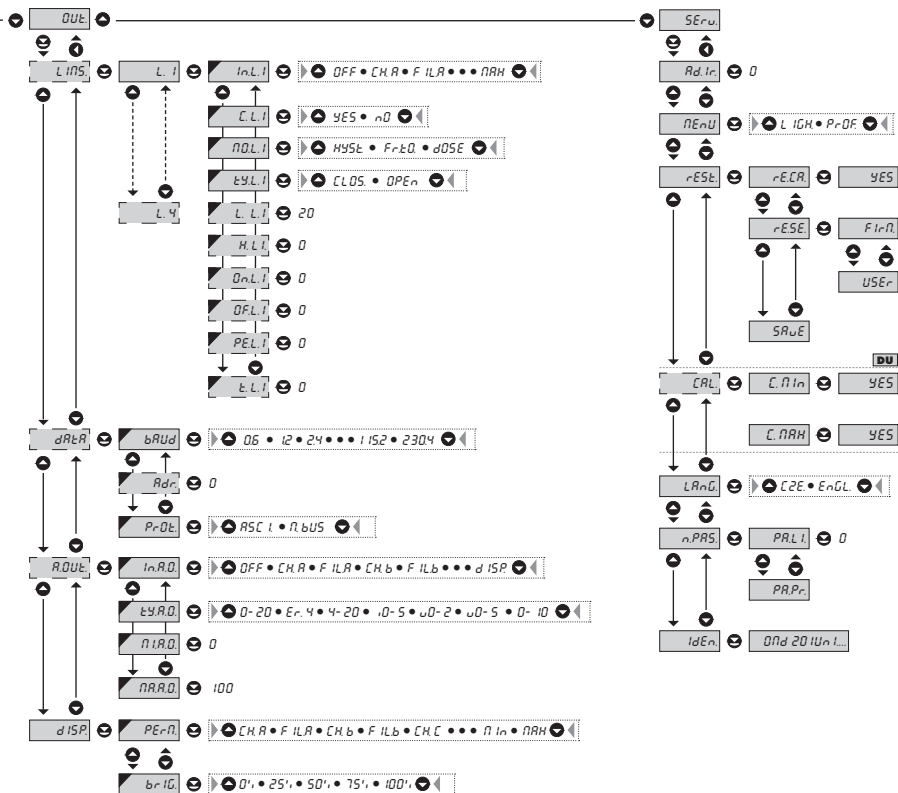

!
 Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode


6.1 Setting "PROFI" - INPUT

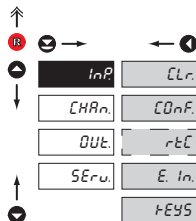

The primary instrument parameters are set in this menu

CLr	Resetting internal values
CDnF	Selection of measuring range and parameters
r-tC	Setting date and time for option with RTC
E. In	Setting external inputs functions
tEYS	Assigning further functions to keys on the instrument


6.1.1 Resetting internal values

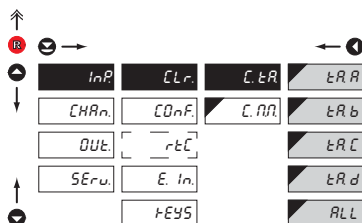

C.tR	Resetting Tare
tR A	Tare resetting - Channel A
tR b	Tare resetting - Channel B
tR c	Tare resetting - Channel C
tR d	Tare resetting - Channel D
ALL	Tare resetting - Channel A, B, C and D
C.nN	Resetting min/max value

- resetting memory for the storage of minimum and maximum value achieved during measurement

6.1.2c Selection of measuring mode for multichannel instrument

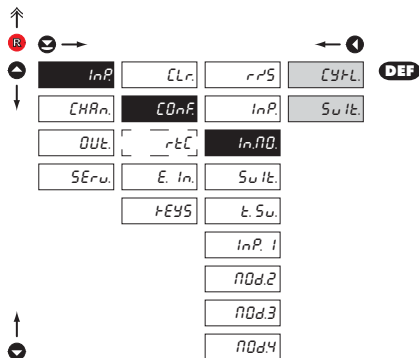

inNO Selection of measuring mode in multichannel instrument


CYCL Cyclic measuring on all channels

- instrument evaluates measured data simultaneously on all channels
- selection of cycle very significantly affects measuring rate and depends also on the number of active inputs (factual measuring rates are listed in the chapter Technical data)

SwIt Measuring on selected channel

- instrument evaluates measured data only on selected channel

6.1.2d Selection of inputs switching

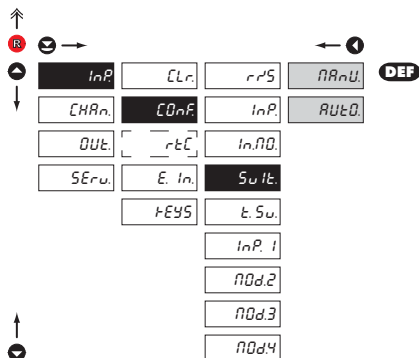

SwIt Selection of inputs switching


MANU Manual inputs switching

- inputs switching is controlled by selected key on the front panel or selected external input

AUT0 Automatic inputs switching

- inputs switching is automatic in a time period set in "T. SW."

6.1.2e Setting the period for inputs switching

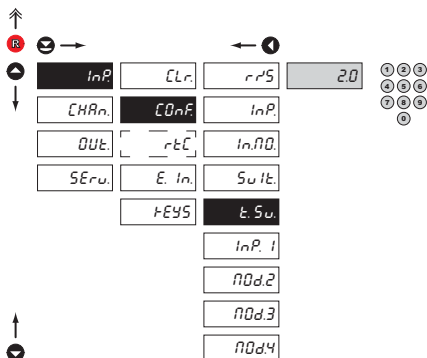


t.Sw. Setting the period for inputs switching

- setting the time period for projection of channels in automatic mode of inputs switching ("AUTO.")
- range of setting 0,5...99,9 s

DEF TIM. SW. = 2 s

6.1.2f Selection of „instrument“ type for channel A

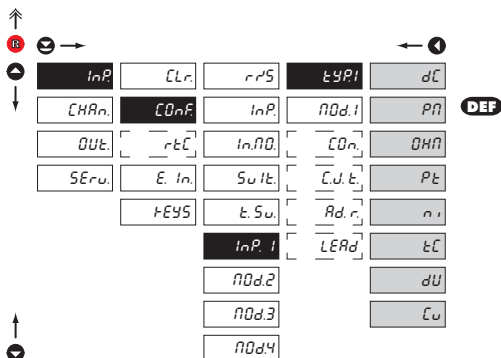

tYP.1 Selection of „instrument“ type for channel A

- selection of particular type of "instrument" is bound to relevant dynamic items

dC	DC voltmeter
Pn	Process monitor
OHn	Ohmmeter
Pt	Thermometer for Pt xxx
ni	Thermometer for Ni xxxx
tC	Thermometer pro thermocouples
dU	Display for linear potentiometers
Cu	Thermometer for Cu xxx

6.1.2h Selection of type of sensor connection for channel A

RTD **OHM** **T/C**

Navigation icons: ↑, ↓, ←, →, [R], [M]

INP	CLr	rrS	tYP.1	2-u.	DEF
CHARn	COAF	InP.	nOd.1	3-u.	
OUT	rtC	In.nO.	COA	4-u.	
SERu.	E. In.	SuIt.	Rd.r.		
	KEYS	t. Su.	LEAd.		
		InP. 1			
		nOd.2			
		nOd.3			
		nOd.4			

Navigation icons: ↑, ↓, ←, →, [R], [M]

INP	CLr	rrS	tYP.1	InT.1	
CHARn	COAF	InP.	nOd.1	InT.2	
OUT	rtC	In.nO.	COA	EHt.1	DEF
SERu.	E. In.	SuIt.	C.J.t.	EHt.2	
	KEYS	t. Su.			
		InP. 1			
		nOd.2			
		nOd.3			
		nOd.4			

COA Selection of type of sensor connection

RTD **OHM**

2-u. 2-wire connection

3-u. 3-wire connection

4-u. 4-wire connection

T/C

InT. 1 Measurement without reference thermocouple

- measuring cold junction at instrument brackets

InT. 2 Measurement with reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

EH. 1 Measurement without reference thermocouple

- the entire measuring set is working under invaried and constant temperature

EH. 2 Measurement with reference thermocouple

- when using compensation box

!
Method and procedure of setting the cold junctions is described in separate chapter on page 100

!
For thermocouple type "B" the items CON. and C.J. T. are not available

6.1.2k Compensation of 2-wire conduct

RTD OHM

Navigation icons: ↑, ↓, ←, →, [R], [M], [DEF]

InP	CLr	rrS	tYP.1	YES
CHARn	COFF	InP	nOd.1	
OUT	rtC	In.nD	COB	
SERu	E. In	SwIt	Ad.r	
	KEYS	t.Su	LEAd	
		InP.1		
		nOd.2		
		nOd.3		
		nOd.4		

LEAd Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- **DEF** = 0

6.1.2l Selection of measuring range for channel B

Navigation icons: ↑, ↓, ←, →, [R], [M], [DEF]

InP	CLr	rrS	10-5
CHARn	COFF	InP	0-20
OUT	rtC	In.nD	4-20 DEF
SERu	E. In	SwIt	u0-2
	KEYS	t.Su	u0-5
		InP.1	0-10
		nOd.2	0-40
		nOd.3	Er.4
		nOd.4	


nOd.2 Selection of instrument measuring range for channel B

Menu	Measuring range
i0-5	0...5 mA
0-20	0...20 mA
4-20	4...20 mA
u0-2	±2 V
u0-5	±5 V
0-10	±10 V
0-40	±40 V
Er. 40	4...20 mA, with error statement „underflow“ in case of signal less than 3.36 mA

*

Setting procedure is identical for MOD. 3 and MOD. 4

6.1.3 Setting the real time clock

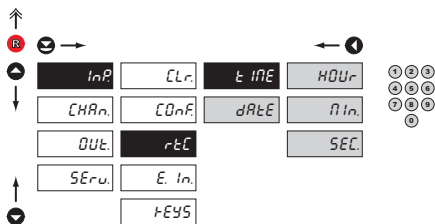


r.t.C. Setting the real time clock (RTC)

tIME Time setting
- format 23.59.59

dAtE Date setting
- format DD.MM.RR

6.1.4a External input function selection

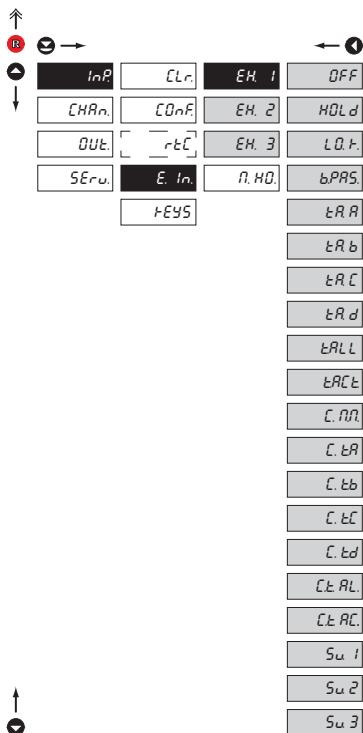

E. In. External input function selection

- OFF** Input is off
- HOLD** Activation of HOLD
- L.D.F.** Locking keys on the instrument
- b.PAS** Activation of locking access into programming menu LIGHT/PROFI
- t.R.** Tare activation
- TARE A, B, C, D, All, Active
- C.NN** Resetting min/max value
- C.-** Tare resetting
- TARE A, B, C, D, All, Active
- S.u. 1** Successive switching of channel projection
- S.u. 2** BCD switching of channel projection - EX. 1, 2
- for operation see the table
- following this choice the setting for "EX. 2" is automatically restricted
- S.u. 3** BCD switching of channel projection - EX. 1, 2, 3
- for operation see the table
- following this choice the setting for EX. 2" and "EX. 3" is automatically restricted

Table with operation of external inputs


Channel	EX. 1	EX. 2	EX. 3
FIL. A	0	0	
FIL. B	0	1	
FIL. C	1	0	
FIL. D	1	1	
MF	0	0	1
Min	0	1	1
Max	1	0	1
Max	1	1	1

- **DEF** EX. 1 > HOLD
- **DEF** EX. 2 > LOCK
- **DEF** EX. 3 > SWCH. 1

*

Setting procedure is identical for EX. 2 and EX. 3

6.1.4b Selection of function "HOLD"

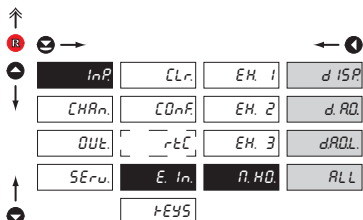


H. H.O. Selection of function "HOLD"

d ISP "HOLD" locks only the value displayed

d RQ "HOLD" locks the value displayed and on AO

d RQL "HOLD" locks the value displayed, on AO and limit evaluation

ALL "HOLD" locks the entire instrument

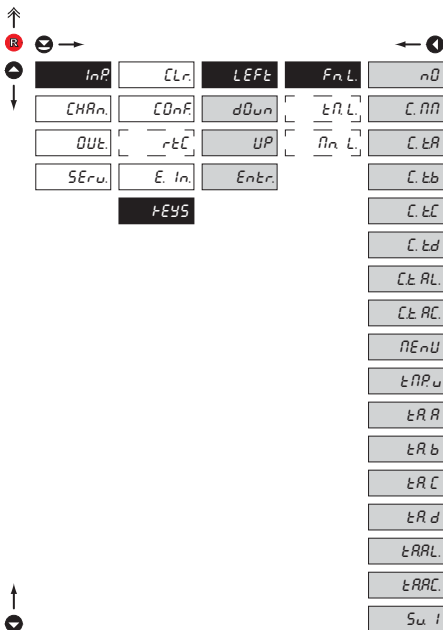6.1.5a Optional accessory functions of the keys

Fn. L_E Assigning further functions to instrument keys

- „Fn. L“ > executive functions
- „TM. L“ > temporary projection of selected values
- „MN. L“ > direct access into menu on selected item

- | | |
|--|--|
| | Key has no further function |
| | Resetting min/max value |
| | Tare resetting |
| | Direct access into menu on selected item |
| | Temporary projection of selected values |
| | Tare function activation |
| | Successive switching of channel projection |



Presett values of the keybuttons **DEF**:

LEFT	Channel B, after filtration
UP	Channel C, after filtration
DOWN	Channel D, after filtration
ENTER	Channel switching "SW. 1"




Setting is identical for LEFT, DOWN, UP and ENTER



The channel in use is the one permanently displayed

6.1.5b Optional accessory functions of the keys - Temporary projection

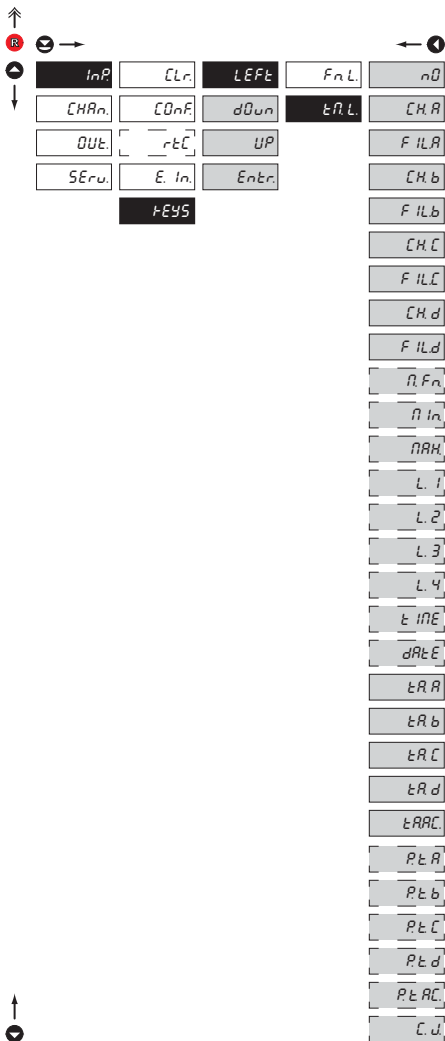

tN.L. Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **C** + "Selected key", this holds until the stroke of any key

nD Temporary projection is off

CH - Temporary projection of "Channel A, B, C or D" value

FIL - Temporary projection of "Channel A, B, C or D" value after processing digital filters

n.Fn Temporary projection of "Mathematic functions" value

n.In Temporary projection of "Min. value"

n.H Temporary projection of "Max. value"

L.1 Temporary projection of "Limit 1" value

L.2 Temporary projection of "Limit 2" value

L.3 Temporary projection of "Limit 3" value

L.4 Temporary projection of "Limit 4" value

tINE Temporary projection of "TIME" value

dAtE Temporary projection of "DATE" value

tR - Temporary projection of "TARE" value

- TARE A, B, C, D, All, Active


P.t - Temporary projection of "P. TARE" value

- TARE A, B, C, D, Active

C.J. Temporary projection of "CJC" value




Setting is identical for LEFT, DOWN, UP and ENTER

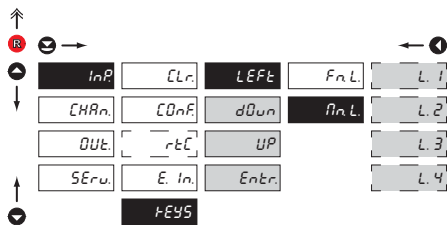6.1.5c Optional accessory functions of the keys - Direct access to item

Fn.L. Assigning access to selected menu item

- L.1** Direct access to item "LIM 1"
- L.2** Direct access to item "LIM 2"
- L.3** Direct access to item "LIM 3"
- L.4** Direct access to item "LIM 4"

! Setting is identical for LEFT, DOWN, UP and ENTER

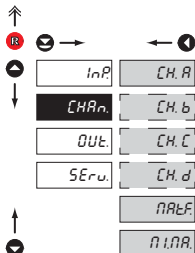6.2 Setting "PROFI" - CHANNELS




The primary instrument parameters are set in this menu

- CH.a** Setting parameters of measuring "Channel A"
- CH.b** Setting parameters of measuring "Channel B"
- CH.c** Setting parameters of measuring "Channel C"
- CH.d** Setting parameters of measuring "Channel D"
- NAR.F** Setting parameters of mathematic functions
- MIN.A** Selection of access and evaluation of Min/max value

6.2.1a Display projection

DC PM DU OHM

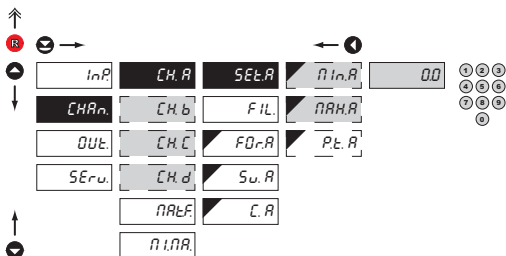


SEt.A Setting display projection

- MIN.A** Setting display projection for minimum value of input signal
 - range of the setting: -999...9999
 - **DEF** = 0.0
- NAR.A** Setting display projection for maximum value of input signal
 - range of the setting: -999...9999
 - **DEF** = 100.0

6.2.1b Setting fixed tare


DC PM DU OHM

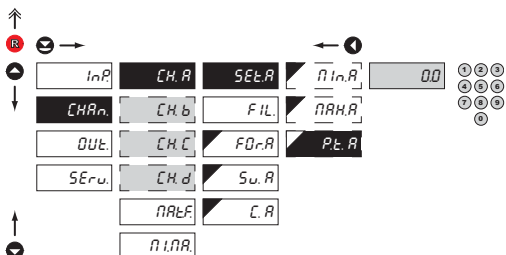

Pt.A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. T. A > 0) display shows "T" symbol
- range of the setting: 0...9999
- **DEF** = 0.0

6.2.1c Digital filters

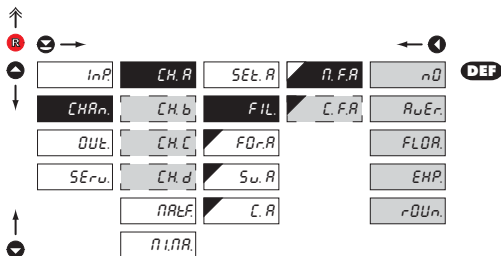

Setting is identical for "Channel B, C and D"

n.F.A Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

nD Filters are off

RuEr Measured data average

- arithmetic average from given number („C.F.A“) of measured values
- range 2...100

FLDR Selection of floating filter

- floating arithmetic average from given number („C.F.A“) of measured data and updates with each measured value
- range 2...30

EHP Selection of exponential filter

- integration filter of first prvnho grade with time constant („C.F.A“) measurement
- range 2...100


rDU.n Measured value rounding

- is entered by any number, which determines the projection step (e.g: "C.F.A"=2,5 > display 0, 2.5, 5,...)

C.F.A Setting constants

- this menu item is always displayed after selection of particular type of filter
- **DEF** = 2


6.2.1f Selection of display color

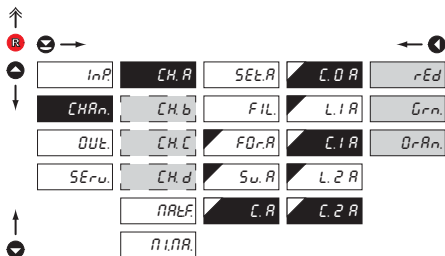

Setting is identical for "Channel B, C and D"


C.- Selection of display color

- color selection is controlled through setting under items "L.1 A" and "L.2 A"

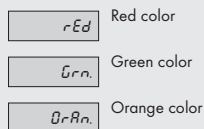

- "C.0 x" **DEF** = Green
- "C.1 x" **DEF** = Orange
- "C.2 x" **DEF** = Red

6.2.1g Selection of display color change

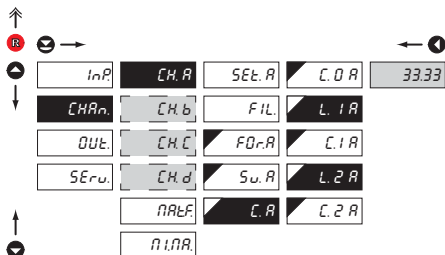


Setting is identical for "Channel B, C and D"

L.-A Selection of display color change

- under items "L.1 A" and "L.2 A" is set the limit when display color shall change

- "L.1 A" **DEF** = 33.33
- "L.2 A" **DEF** = 66.67

6.2.2a Matematické funkce - volba vstupu

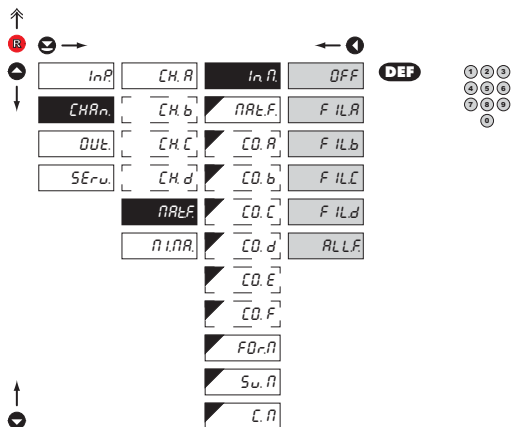
In.P. Selection of input for calculation of mathematic function

- selection of value from which the mathematic function will be calculated

OFF Mathematic functions are off

FIL.A From "Channel A" after modification by digital filter


FIL.B From "Channel B" after modification by digital filter

FIL.C From "Channel C" after modification by digital filter

FIL.D From "Channel D" after modification by digital filter

ALL.F From "Channels A, B, C, D" after modification by digital filters

6.2.2b Mathematic functions

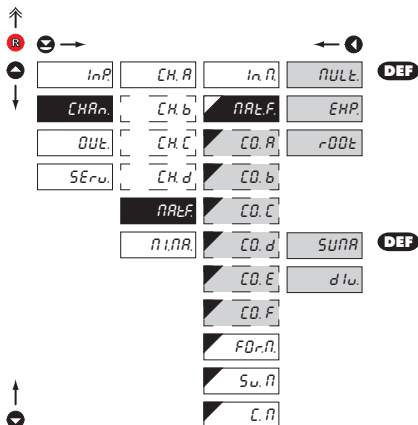

NULt.F. Selection of mathematic functions

On selecting „FIL. -“ in item „IN. M.“

NULt. Polynomial
 $Ax^5 + Bx^4 + Cx^3 + Dx^2 + Ex + F$

EHP. Exponential
 $A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$

r00t. Root
 $A \times \sqrt{\frac{Bx+C}{Dx+E}} + F$


On selecting „ALL.F.“ in item „IN. M.“

SUNA. Sum of the values from channels (inputs)
 $(A \times KA + B \times KB + C \times KC + D \times KD) \times E + F$

dIu. Quotient of values from channels (inputs)
 $(A \times KA + C \times KC) / (B \times KB + D \times KD) \times E + F$


E.N. Setting constants for calculation of mat. functions

- this menu is displayed only after selection of given mathematic function

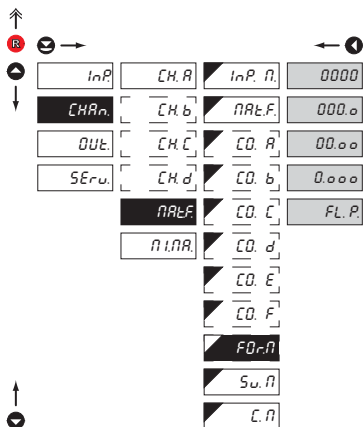6.2.2c **Mathematic functions - decimal point****F0r.N** Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FL.P.“


- Setting DP - XXXX
- Setting DP - XXX.x
- Setting DP - XX.xx
- Setting DP - X.xxx
- Floating DP
- DEF**

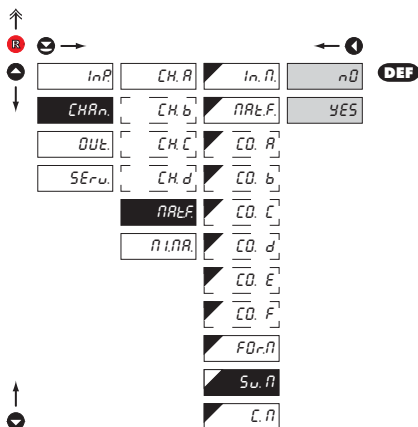6.2.2d **Mathematic functions - selection of channel projection upon switching****Su.N** Selection of channel projection upon switching

- setting in this item enables the user to select individual measuring channels which will be displayed upon switching the channel functions „SW. A“


- Projection restricted
- Projection permitted

6.2.2e Selection of display color

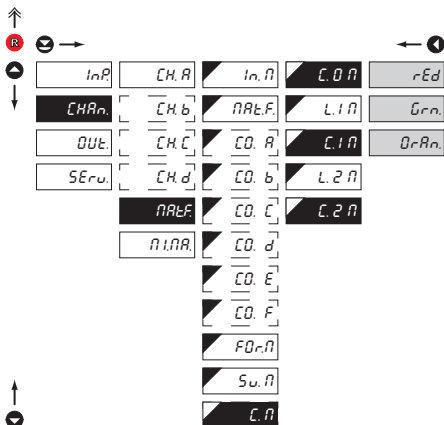


C. - M Selection of display color

- color selection is controlled through setting under items "L.1 M" and "L.2 M"

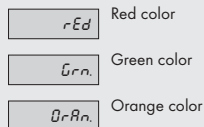

- "C.0 M" **DEF** = Green
- "C.1 M" **DEF** = Orange
- "C.2 M" **DEF** = Red

6.2.2f Selection of display color change

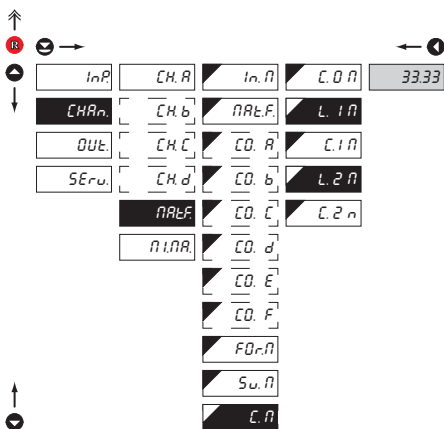


L. - M Selection of display color change

- under items "L.1 M" and "L.2 M" is set the limit when display color shall change

- "L.1 M" **DEF** = 33.33
- "L.2 M" **DEF** = 66.67

6.2.3 Selection of evaluation of min/max value

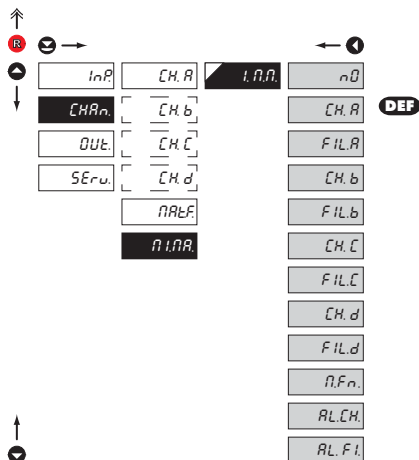


I.N.N. Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated

- nD Evaluation of min/max value is off
- CH.A From "Channel A"
- FIL.A From "Channel A" after digital filters processing
- CH.b From "Channel B"
- FIL.b From "Channel B" after digital filters processing
- CH.C From "Channel C"
- FIL.C From "Channel C" after digital filters processing
- CH.d From "Channel D"
- FIL.d From "Channel D" after digital filters processing
- n.F.n From "Mathematic functions"
- AL.CH From "Channel A, B, C and D"
- AL.F.I From "Channel A, B, C and D" after digital filters processing

6.3 Setting „PROFI“ - OUTPUTS

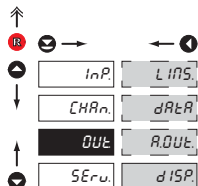

In this menu it is possible to set parameters of the instrument output signals

LIMS Setting type and parameters of limits

dRtR Setting type and parameters of data output

RQUt Setting type and parameters of analog output

dISP Setting display projection and brightness

6.3.1b Selection of more channels for limit evaluation

↑	⊖	⊕	←	→	⊖
⊖	⊕	⊖	⊕	⊖	⊕
INP	LIMS	L.1	IN.L.1	F.R	YES-NO
CHARn	dRtR	L.2	C.L.1	F.b	
OUT	RDUt	L.3	NO.L.1	F.L	
SERu	dISP	L.4	tYL.1	F.d	
			L.L.1		
			H.L.1		
			ON.L.1		
			OF.L.1		
			PE.L.1		
			t.L.1		
↑	⊖	⊕			

C.L.1 Selection of channels for limit evaluation

- the item is accessible only if items "ALL.CH" or "ALL.F." are set in OUTPUT/LIMITS/LIM 1/INP. L1, when "ALL.CH." is selected descriptions "CH.A...D" are displayed, when "ALL.F." descriptions "F.A...D"
- setting allows to assign arbitrary number of measuring channels to one limit for their evaluation
- the limit is active if at least one value in arbitrary channel exceeds set limit
- **DEF** = YES

Setting is identical for LIM 1, LIM 2, LIM 3 i LIM 4

6.3.1c Selection of type of limit

↑	⊖	⊕	←	→	⊖
⊖	⊕	⊖	⊕	⊖	⊕
INP	LIMS	L.1	IN.L.1	HYSL	DEF
CHARn	dRtR	L.2	C.L.1	FrtD	
OUT	RDUt	L.3	NO.L.1	dOSE	
SERu	dISP	L.4	tYL.1		
			L.L.1		
			H.L.1		
			ON.L.1		
			OF.L.1		
			PE.L.1		
			t.L.1		
↑	⊖	⊕			

NO.L.1 Selection the type of limit

- HYSL** Limit is in mode "Limit, hysteresis, delay"
 - for this mode the parameters of "L. L." are set, at which the limit will shall react, "H. L." the hysteresis range around the limit (LIM ±1/2 HYS) and time "T. L." determining the delay of relay switch-on
- FrtD** Frame limit
 - for this mode the parameters are set for interval "ON. L." the relay switch-on and "OF. L." the relay switch-off
- dOSE** Dosing limit (periodic)
 - for this mode the parameters are set for "PE. L." determining the limit value as well as its multiples at which the output is active and "T. L." indicating the time during which is the output active

Setting is identical for LIM 1, LIM 2, LIM 3 i LIM 4

6.3.1.d Selection of type of output

InP	L1NS	L.1	In.L.1	CLOS	DEF
CHARn	dARtR	L.2	C.L.1	DPEn	
DUt	ADUe	L.3	AD.L.1		
SEru	dISP	L.4	t.L.1		
			L.L.1		
			H.L.1		
			Dn.L.1		
			DF.L.1		
			PE.L.1		
			t.L.1		

t.L.1 Selection of type of output

CLOS Output switches on when condition is met

DPEn Output switches off when condition is met

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.1.e Setting values for limits evaluation

InP	L1NS	L.1	In.L.1	20	①②③④⑤
CHARn	dARtR	L.2	C.L.1		
DUt	ADUe	L.3	AD.L.1		
SEru	dISP	L.4	t.L.1		
			L.L.1		
			H.L.1		
			Dn.L.1		
			DF.L.1		
			PE.L.1		
			t.L.1		

L.L.1 Setting limit for switch-on

- for type "HYST."

H.L.1 Setting hysteresis

- for type "HYST."
- indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)

Dn.L.1 Setting the outset of the interval of limit switch-on

- for type "FR.TO."

DF.L.1 Setting the end of the interval of limit switch-on

- for type "FR.TO."

PE.L.1 Setting the period of limit switch-on

- for type "DOSE"

t.L.1 Setting the time switch-on of the limit

- for type "HYST." and "DOSE"
- setting in range: $\pm 0...99,9$ s
- positive time > relay switches after the limit is exceeded (L.L.1) and time setting (T.L.1)
- negative time > relay switches off after the limit is exceeded (L.L.1) and set negative time (T.L.1)

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.2a Selection of data output baud rate

inP	LIInS	bRUD	0.6
CHAn	dRtR	Rdr	1.2
DUt	RDUt	R.Pb	24
SEru	dISP	PRDt	4.8
			9.6
			19.2
			38.4
			57.6
			115.2
			230.4

DEF

bRud	Selection of data output baud rate
0.6	Rate - 600 Baud
1.2	Rate - 1 200 Baud
2.4	Rate - 2 400 Baud
4.8	Rate - 4 800 Baud
9.6	Rate - 9 600 Baud
19.2	Rate - 19 200 Baud
38.4	Rate - 38 400 Baud
57.6	Rate - 57 600 Baud
115.2	Rate - 115 200 Baud
230.4	Rate - 230 400 Baud

6.3.3b Setting instrument address


inP	LIInS	bRUD	0
CHAn	dRtR	Rdr	
DUt	RDUt	R.Pb	
SEru	dISP	PRDt	

0 0 0 0 0 0 0 0

Rdr	Setting instrument address
	- setting in range: 0...31
DEF	= 00

R.Pb	Setting instrument address - PROFIBUS
	- setting in range: 0...127
DEF	= 0


6.3.2c Selection of data output protocol

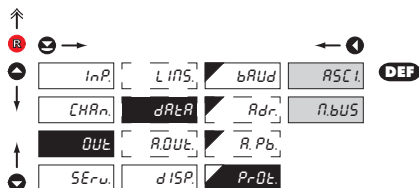

PrOt Selection of the type of analog output

- ASCI** Data protocol ASCII
- nBUS** Data protocol DIN MessBus

6.3.3a Selection of input for analog output

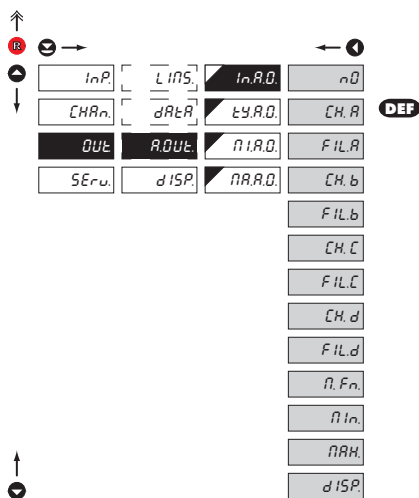


InAO Selection evaluation analog output

- selection of value from which the analog output will be evaluated

- nD** AO evaluation is off
- CH.A** From "Channel A"
- FIL.A** From "Channel A" after digital filters processing
- CH.b** From "Channel B"
- FIL.b** From "Channel B" after digital filters processing
- CH.C** From "Channel C"
- FIL.C** From "Channel C" after digital filters processing
- CH.d** From "Channel D"
- FIL.d** From "Channel D" after digital filters processing
- n.Fn** From "Math.functions"
- nIn** From "Min. value"
- nAH** From "Max. value"
- dISP** From "Permanently projected display value"

6.3.3b Selection of the type of analog output

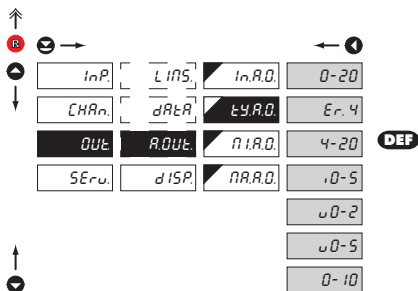

EY.A.O. Selection of the type of analog output

0-20 Type - 0...20 mA

Er. 4 Type - 4...20 mA

- with indication of error statement (< 3,0 mA)

4-20 Type - 4...20 mA


.0-5 Type - 0...5 mA

μ0-2 Type - 0...2 V

μ0-5 Type - 0...5 V

0-10 Type - 0...10 V

6.3.3c Setting the analog output range

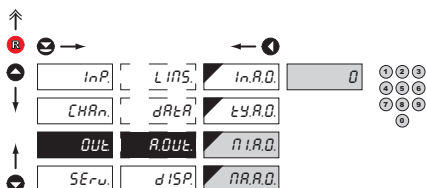

ROUt. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

nI.A.O. Assigning the display value to the beginning of the AO range


- range of the setting: -999...9999

- **DEF** = 0

nR.A.O. Assigning the display value to the end of the AO range


- range of the setting: -999...9999

- **DEF** = 100

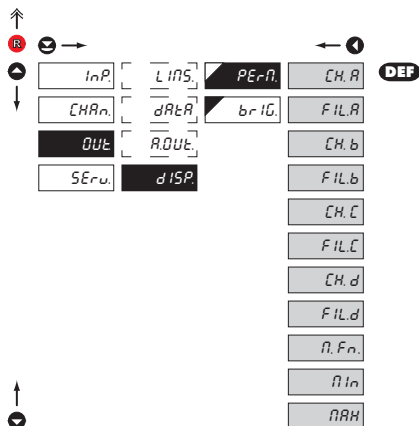6.3.4a Selection of input for display projection


PEr.n.	Selection display projection
	- selection of value which will be shown on the instrument display
CH.a	From "Channel A"
FIL.a	From "Channel A" after digital filters processing
CH.b	From "Channel B"
FIL.b	From "Channel B" after digital filters processing
CH.c	From "Channel C"
FIL.c	From "Channel C" after digital filters processing
CH.d	From "Channel D"
FIL.d	From "Channel D" after digital filters processing
n.Fn.	From "Math.functions"
n.in	From "Min.value"
MAX	From "Max.value"

6.3.4b Selection of display brightness

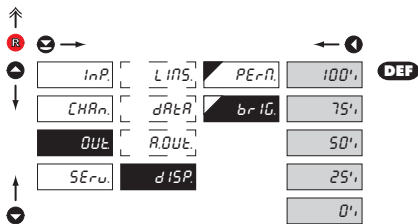

briG. Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

0% Display is off

- after keystroke display turns on for 10 s


25% Display brightness - 25%

50% Display brightness - 50%

75% Display brightness - 75%

100% Display brightness - 100%


6.4 Setting "PROFI" - SERVIS

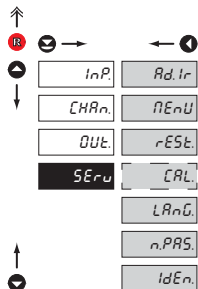

The instrument service functions are set in this menu

<i>Ad.Ir</i>	Setting the address of IR remote control
<i>nEnÜ</i>	Selection of menu type LIGHT/PROFI
<i>rESt</i>	Restore instrument manufacture setting and calibration
<i>CAL Ib</i>	Input range calibration for „DU“ version
<i>LANÜ</i>	Language version of instrument menu
<i>n.PAS</i>	Setting new access password
<i>IdEn</i>	Instrument identification


6.4.1 Setting the address of IR remote control

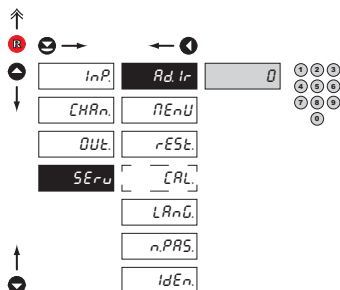

Ad.Ir Setting the address of IR remote control

- setting the remote control address is inevitable only in case there are other large displays OMD 201 within the reach of IR remote control
- range of the setting is 0...999
- **DEF** = 0

6.4.2 Selection of type of programming menu

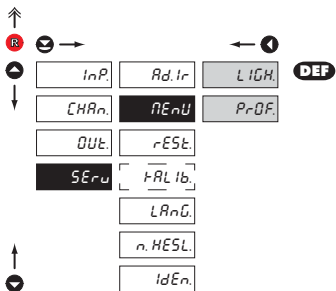

Change of setting is valid upon next access into menu

nEnU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills


L.IGH. Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another

PrDF. Active PROFi menu

- complete programming menu for expert users
- tree menu

6.4.3 Restoration of manufacture setting

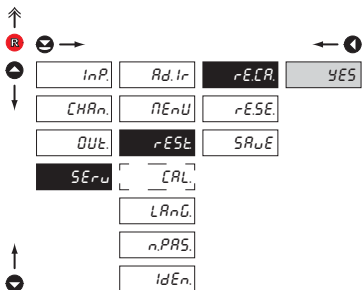


rESt. Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

rESt. Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm your selection „YES“

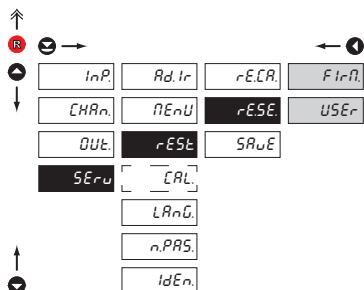

Jobs performed	Restore	
	Calibration	Setting
cancels USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancels or linearization tables	✓	✓
clears tare	✓	✓
clears conduct resistances	✓	✓
restore manufacture calibration	✓	✗
restore manufacture setting	✗	✓

rESE Restoration of instrument manufacture setting

F.Ir.A Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

USE.r Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERV./REST./SAVE

SR.uE Save instrument user setting


- storing the user setting allows the operator to restore it in future if needed



After restoration the instrument switches off for couple seconds

6.4.3 Calibration - Input range


DU

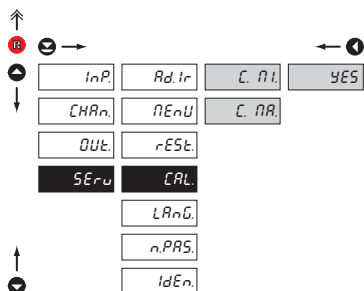

C.AL Input range calibration

- when "C. MI." is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MA." is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by „YES"

6.4.4 Selection of instrument menu language version

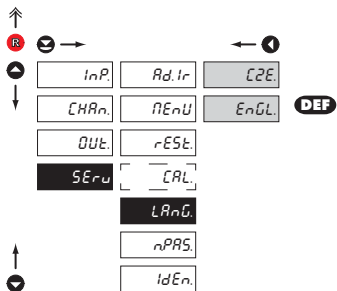


LAnG. Selection of instrument menu language version

CZE. Instrument menu is in Czech


EnGL. Instrument menu is in English

6.4.5 Setting new access password

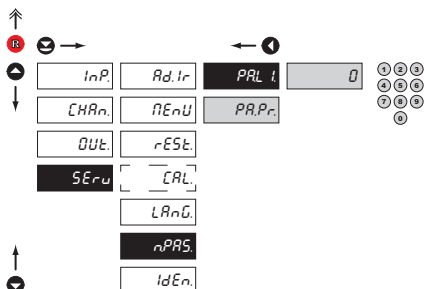

n.PAS. Setting new password for access to LIGHT and PROFi menu


- this selection enables changing number code that blocks the access into LIGHT and PROFi menu
- range of the number code: 0...9999
- universal password in the event of loss:
LIGHT Menu > „8177”
PROFI Menu > „7915”

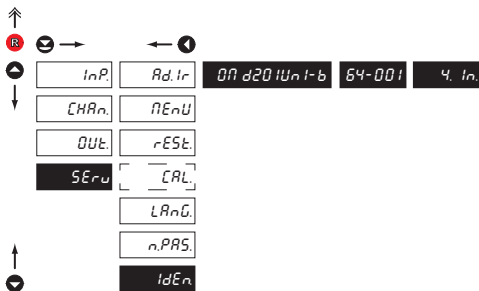
6.4.6 Instrument identification

IdEn. Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

	Packet	Description
IDENT.	1.	Instrument
	2.	SW version
	3.	Number of active inputs

7.0 Setting items into "USER" menu

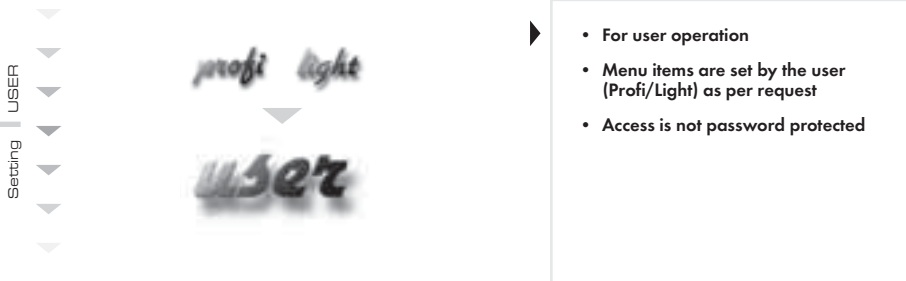- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L i
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



Setting

flashing legend - current setting is displayed



n0

item will not be displayed in USER menu

4E5

item will be displayed in USER menu with editing option

5H0u

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu

setting projection sequence



Example:

Into USER menu were selected these items:

(keys ①) > TA. A, L. 1, L. 2, L. 3, for which we have preset this sequence


(key ②):

TA. A	5
L. L. 1	0 (sequence not determined)
L. L. 2	2
L. L. 3	1

Upon entering USER menu

(key ③) items will be projected in the following sequence: L. 3 > L. 2 > TA. A > L. 1

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

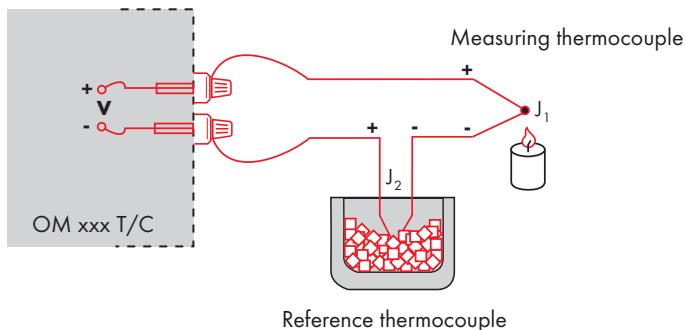

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set $C0n$ in the instrument menu to $inE2$ or $EHt2$
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu $C.t$ its temperature (applies for setting $C0n$ to $EHt2$)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu $C0n$ to $inE2$. Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set $C0n$ in the instrument menu to $inE1$ or $EHt1$
- when measuring temperature without reference thermocouple the error in measured data may be as much as $10^{\circ}C$ (applies for setting $C0n$ to $EHt1$)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Event	Type	Protocol	Transmitted data																	
Data solicitation (PC)	232	ASCII	#	A	A	<CR>														
		MessBus	No - data is transmitted permanently																	
	485	ASCII	#	A	A	<CR>														
		MessBus	<SADR>	<ENQ>																
Data transmission (instrument)	232	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>
	485	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>	
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE>	1																
Confirmation of data acceptance (PC) - Bad			<NAK>																	
Sending address (PC) prior command			<EADR>	<ENQ>																
Confirmation of address (instrument)			<SADR>	<ENQ>																
Command transmission (PC)	232	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<STX>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
	485	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<SADR>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
Command confirmation (instrument)	232	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		MessBus	No - data is transmitted permanently																	
	485	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		MessBus	OK	<DLE>	1															
			Bad	<NAK>																
Command confirmation (inst.) - OK	485	MessBus	!	A	A	<CR>														
Command confirmation (instrument) - Bad			?	A	A	<CR>														
Instrument identification			#	A	A	1Y	<CR>													
HW identification			#	A	A	1Z	<CR>													
One-time transmission			#	A	A	7X	<CR>													
Repeated transmission			#	A	A	8X	<CR>													

LEGEND

#	35	23 _H	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal
<CR>	13	0D _H	Carriage return
<SP>	32	20 _H	Space
N, P			Number and command - command code
D			Data - usually characters "0"... "9", ".", "-", ";", (D) - dp. and (-) may prolong data
R	30 _H ...3F _H		Relay and tare status
!	33	21 _H	Positive confirmation of command (ok)
?	63	3F _H	Negative confirmation of command (point)
>	62	3E _H	Beginning of transmitted data
<STX>	2	02 _H	Beginning of text
<ETX>	3	03 _H	End of text
<SADR>	address + 60 _H		Prompt to send from address
<EADR>	address + 40 _H		Prompt to accept command at address
<ENQ>	5	05 _H	Terminate address
<DLE>	16 49	10 _H 31 _H	Confirm correct statement
<NAK>	21	15 _H	Confirm error statement
<BCC>			Check sum -XOR

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00_H...FF_H. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

ERROR	CAUSE	ELIMINATION
<i>d.U_n</i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>d.O_u</i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>t.U_n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>t.O_u</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>i.U_n</i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>i.O_u</i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>CHH_u</i>	A part of the instrument does not work properly	send the instrument for repair
<i>CHEE</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>CHSE.</i>	Change of tied item in menu, Data in EEPROM outside the range	change setting if dependent items, perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>CHCL.</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration

INPUT - CHANNEL A

range is adjustable			DC
	±60 mV	>100 MOhm	Input U
	±150 mV	>100 MOhm	Input U
	±300 mV	>100 MOhm	Input U
	±1200 mV	>100 MOhm	Input U

range is adjustable			PM
	0/4...20 mA	< 400 mV	Input I
	±2 V	1 MOhm	Input U
	±5 V	1 MOhm	Input U
	±10 V	1 MOhm	Input U
	±40 V	1 MOhm	Input U

range is adjustable			OHM
	0...100 Ohm		
	0...1 kOhm		
	0...10 kOhm		
	0...100 kOhm		
Connection:	2, 3 or 4 wire		

Pt xxxxx	-200°...850°C		RTD
Pt xxxxx/3910 ppm	-200°...1 100°C		
Ni xxxxx	-50°...250°C		
Cu/4260 ppm	-50°...200°C		
Cu/4280 ppm	-200°...200°C		
Type Pt:	EU > 100/500/1 000 Ohm, with 3 850 ppm/°C		
	US > 100 Ohm, with 3 920 ppm/°C		
	RU > 50/100 Ohm, with 3 910 ppm/°C		
Type Ni:	Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C		
Type Cu:	Cu 50/Cu 100 with 4 260/4 280 ppm/°C		
Connection:	2, 3 or 4 wire		

range is adjustable in configuration menu			T/C
Type:	J (Fe-CuNi)	-200°...900°C	
	K (NiCr-Ni)	-200°...1 300°C	
	T (Cu-CuNi)	-200°...400°C	
	E (NiCr-CuNi)	-200°...690°C	
	B (PtRh30-PtRh6)	300°...1 820°C	
	S (PtRh10-Pt)	-50°...1 760°C	
	R (Pt13Rh-Pt)	-50°...1 740°C	
	N (Omegalloy)	-200°...1 300°C	
	L (Fe-CuNi)	-200°...900°C	

Voltage of lin. pot. 2,5 VDC/6 mA
min. potentiometer resistance is 500 Ohm

INPUT - CHANNEL B

range is adjustable			PM
	0/4...20 mA	< 400 mV	Input I
	±2 V	1 MOhm	Input U
	±5 V	1 MOhm	Input U

±10 V	1 MOhm	Input U
±40 V	1 MOhm	Input U

INPUT - CHANNEL C

range is adjustable			PM
	0/4...20 mA	< 400 mV	Input I
	±2 V	1 MOhm	Input U
	±5 V	1 MOhm	Input U
	±10 V	1 MOhm	Input U
	±40 V	1 MOhm	Input U

INPUT - CHANNEL D

range is adjustable			PM
	0/4...20 mA	< 400 mV	Input I
	±2 V	1 MOhm	Input U
	±5 V	1 MOhm	Input U
	±10 V	1 MOhm	Input U
	±40 V	1 MOhm	Input U

PROJECTION

Display:	999999, intensive red/green/orange 7-mi segment LED, digit height 57, 100, 125 mm
Projection:	-99999...999999
Decimal point:	adjustable - in menu
Brightness:	adjustable - in menu

INSTRUMENT ACCURACY

TC:	100 ppm/°C	
Accuracy:	±0,1 % of range + 1 digit	
	±0,15 % of range + 1 digit	RTD, T/C
	Above accuracies apply for projection 9999	

Resolution:	0,01°/0,1°/1°	RTD
Rate:	0,1...40 measurements/s, see table	
Overload capacity:	10x (t < 100 ms) not for 250 V and 5 A, 2x (long-term)	
Linearisation:	by linear interpolation in 50 points - solely via OM Link	
Digital filters:	Averaging, Floating average, Exponential filter, Rounding	
Comp. of conduct:	max. 40 Ohm/100 Ohm	RTD
Comp. of cold junct.:	adjustable	T/C
	0°...99°C or automatic	

Functions:	Tare - display resetting Hold - stop measuring (at contact) Lock - control key locking MM - min/max value Mathematic functions
OM Link:	company communication interface for setting, operation and update of instrument SW
Watch-dog:	reset after 400 ms
Calibration:	at 25°C and 40 % of r.h.

* values apply for resistance load

COMPARATOR

Type: digital, adjustable in menu
 Mode: Hysteresis, From, Dose
 Limita: -99999...999999
 Hysteresis: 0...999999
 Delay: 0...99,9 s
 Outputs: 4x relays with switch-off contact (Form C)
 (250 VAC/50 VDC, 5 A)*
 Relay: 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

DATA OUTPUTS

Protocols: ASCII, DIN MessBus
 Data format: 8 bit + no parity + 1 stop bit (ASCII)
 7 bit + even parity + 1 stop bit (MessBus)
 Rate: 600...230 400 Baud
 RS 232: isolated, two-way communication
 RS 485: isolated, two-way communication,
 addressing (max. 31 instruments)
 PROFIBUS Data protocol SIEMENS

ANALOG OUTPUT

Type: isolated, programmable with resolution of max. 10 000 points, analog output corresponds with displayed data, type and range are adjustable
 Non-linearity: 0,2 % of range
 TC: 100 ppm/°C
 Rate: response to change of value < 40 ms
 Voltage: 0...2 V/5 V/10 V
 Current: 0...5/20 mA/4...20 mA
 - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

EXCITATION

Adjustbale: 5...24 VDC/max. 1,2 W, isolated

POWER SUPPLY

Options: 10...30 V AC/DC, max. 27 VA, isolated
 - fuse inside (T 4 A)
 80...250 V AC/DC, max. 27 VA, isolated
 - fuse inside (T 4 A)

MECHANIC PROPERTIES

Material: anodized aluminum, black
 Dimensions: see chapter 13
 Panel cut-out: see chapter 13

OPERATING CONDITIONS


Connection: connector terminal board,
 conductor cross-section <1,5 mm² / <2,5 mm²
 Stabilisation period: within 15 minutes after switch-on
 Working temp.: 0°...60°C
 Storage temp.: -10°...85°C
 Cover: IP64
 Construction: safety class I
 Overvoltage category: EN 61010-1, A2
 Dielectric strength: 4 kVAC after 1 min between supply and input
 4 kVAC after 1 min between supply and data/analog output
 4 kVAC after 1 min between supply and relay output
 2,5 kVAC after 1 min between supply and data/analog output
 Insulation resistance: for pollution degree II, measurement category III
 instrum.power supply > 670 V (PI), 300 V (DI)
 Input/output > 300 V (PI), 150 (DI)
 EMC: EN 61000-3-2+A12; EN 61000-4-2, 3, 4, 5, 8, 11;
 EN 550222, A1, A2

Table of mesuring rate depending on the number of inputs


Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
Qty. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
Qty. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
Qty. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
Qty. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
Qty. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
Qty. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
Qty. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
Qty. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02

PI - Primary insulation, DI - Double insulation


Front view

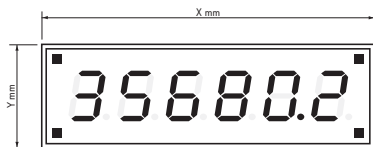

Side view



Panel cut-out

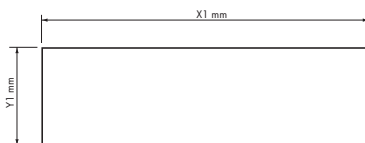


Height	X	Y	X1	Y1
57	372	116	364	108
100-4	465	181	457	173
100-6*	677	181	669	173
100-6	647	181	639	173
125-4	539	237	531	228
125-6	754	237	746	228

Tolerance: ± 1 mm

Panel thickness: 0,5 ... 50 mm

Wall mounting

As a standard, large displays are designed for panel installation. Upon request we may also supply a holder for wall mounting, see picture.

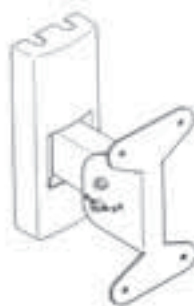

Product **OMD 201UNI - B**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

YEARS

Stamp, signature

DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánská 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňánská 675/30, 198 00 Prague 9, Czech Republic

declares at its full responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the type listed hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant statutory orders.

Product: 4/6-digit programmable panel instrument

Type: **OMD 201**

Version: UNI, PWR, UQC, RS

Conformity is assessed pursuant to the following standards:

El. safety: EN 61010-1
EMC: EN 50131-1, chapter 14 and chapter 15
EN 61000-11
EN 61000-4-11
EN 61000-4-2
EN 61000-4-3
EN 61000-4-6
EN 61000-4-4
EN 61000-4-8
EN 60003-2+A12, Cor. 1, A1, A2
EN 55022, chapter 5 and chapter 6

and Ordinance on:

El. safety: No. 168/1997 Coll.
EMC: No. 169/1997 Coll.

The evidence are the protocols of authorized and accredited organizations:

VTÚE Praha, experimental laboratory No. 1158, accredited by ČIA
VTÚPV Vyškov, experimental laboratory No. 1103, accredited by ČIA

Place and date of issue: Prague, 12. Juni 2001

Miroslav Hackl v.r.
Company representative

Mode of asses. of conformity §12, par. 4 b, d Act No. 22/1997 Coll.