



OMD 201 UNI

4/6 DIGIT PROGRAMMABLE UNIVERSAL LAGRE DISPLAY

DC VOLTMETER / AMMETER
PROCESS MONITOR
OHMMETER
THERMOMETER FOR PT 100 / 500 / 1 000
THERMOMETER FOR NI 1 000
THERMOMETER FOR THERMOCOUPLES
DISPLAYS FOR LIN. POTENTIOMETERS



SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OMD 201 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:
EN 55 022, class B
EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanská 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.cz
www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	8
	Symbols used in the instructions	10
	Setting the DP and the (-) sign	10
	Control keys function	11
	Setting/permitting items into "USER" menu	11
5.	Setting "LIGHT" menu	12
5.0	Description "LIGHT" menu	12
	Setting input - Type "DC"	16
	Setting input - Type "PM"	18
	Setting input - Type "DU"	20
	Setting input - Type "OHM"	22
	Setting input - Type "RTD - Pt"	24
	Setting input - Type "RTD - Cu"	26
	Setting input - Type "RTD - Ni"	28
	Setting input - Type "T/C"	30
	Setting Limits	32
	Setting analog output	34
	Setting display colors	36
	Selection of programming menu „LIGHT"/„PROFI"	38
	Restoration of manufacture setting	38
	Calibration - input range (DU)	39
	Selection of instrument menu language version	40
	Setting new access password	40
	Instrument identification	41
6.	Setting "PROFI" menu	42
6.0	Description of "PROFI" menu	42
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	44
6.1.2	Setting measuring type, range, mode, rate,	45
6.1.3	Setting the Real Time	51
6.1.4	External input function selection	51
6.1.5	Optional accessory functions of the keys	52
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	56
6.2.2	Setting mathematic functions	60
6.2.3	Selection of evaluation of min/max. value	62
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting data logging	64
6.3.2	Setting Limits	66
6.3.3	Setting data output	68
6.3.4	Setting analog output	69
6.3.5	Selection of display projection	71
6.4	"PROFI" menu - SERVICE	
6.4.1	Setting the address of IR remote control	74
6.4.2	Selection of programming menu „LIGHT"/„PROFI"	75
6.4.3	Restoration manufacture setting	75
6.4.4	Calibration - input range (DU)	76
6.4.5	Selection of instrument menu language version	76
6.4.6	Setting new access password	77
6.4.7	Instrument identification	77
7.	Setting items into "USER" menu	78
7.0	Configuration "USER" menu	78
8.	Method of measuring of the cold junction	80
9.	Data protocol	82
10.	Error statements	84
11.	Table of symbols	85
12.	Technical data	86
13.	Instrument dimensions and instalation	88
14.	Certificate of guarantee	89
	Declaration of conformity	92

2.1 Description

The OMD 201 model series are 4/6 digit large panel programmable displays designed for maximum efficiency and user comfort while maintaining their favourable price.

Type OMD 201 UNI is a multifunction instrument with the option of configuration for 7 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

The OMD 201 is a multifunction instrument available in following types and ranges

type UNI

DC:	0...60/150/300/1200 mV
PM:	0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
OHM:	0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ
RTD-Pt:	Pt 50/100/Pt 500/Pt 1 000
RTD-Cu:	Cu 50/Cu 100
RTD-Ni:	Ni 1 000/Ni 10 000
T/C:	J/K/T/E/B/S/R/N
DU:	Linear potentiometer (min. 500 Ω)

type UNI, option A

DC:	0...1 A/0...5 A/120 V/±250 V/±500 V
------------	-------------------------------------

type UNI, option B (expansion by 3 more inputs)

PM:	3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
------------	---

PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
Projection:	-9999...9999 (-99999...999999)

COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

LINEARIZATION

Linearization:*	by linear interpolation in 50 points (solely via OM Link)
-----------------	---

DIGITAL FILTERS

Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

2.2 Operation

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

OMLINK Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING RANGES

Type	Input I	Input U
DC	0...60/150/300/1 200 mV	
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V
OHM	0...0,1/1/10/100 k Ω /Autorange	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "A"

Type	Input I	Input U
DC	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A to GND (C) ± 2 A/ ± 5 A to GND (B)	± 100 V/ ± 250 V/ ± 500 V to GND (C)

OPTION "B"

Type	Input 2, 3, 4/I	Input 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V

PROFI

Setting

profi

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

light

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT** **Simple programming menu**
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
 - contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
 - acces without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.

Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Scheme of processing the measured signal

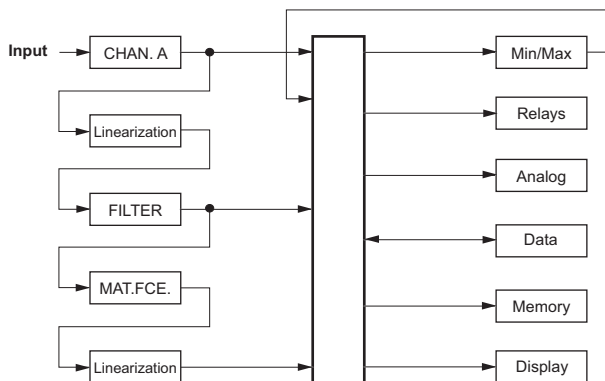

Setting and controlling the instrument is performed by means of the Remote control. With the aid of the Remote control it is possible to browse through the operation menu and to select and set the required values.

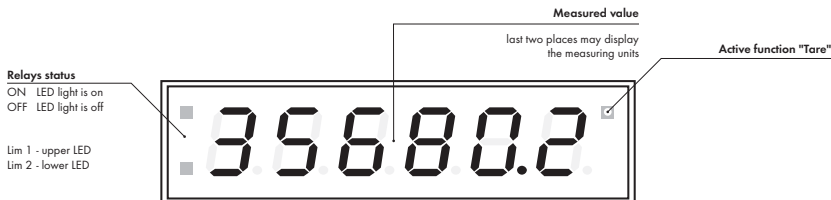

Symbols used in the instructions

DC PM

DU OHM RTD T/C

Indicates the setting for given type of instrument

DEF

values preset from manufacture



symbol indicates a flashing light (symbol)



inverted triangle indicates the item that can be placed in USER menu



broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version



after pressing the key the set value will not be stored



after pressing the key the set value will be stored



30 continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key **◀** with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by **▲/▼**.

THE MINUS SIGN

Setting the minus sign is performed by the key **⊖** on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > **⊖**, on class 100 > -87)

Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade *
	programmable key function	move to previous item	move down *
	programmable key function	move to next item	move up *
	programmable key function	confirm selection	confirm setting/selection
	access into LIGHT/PROFI menu		
>3 s 	direct access into PROFi menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

* alternatively, the setting may be done from the numeric keys of the remote control by selecting directly the number required

Setting items into „USER“ menu

- in LIGHT or PROFi menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle

user

Legend is flashing - current setting is displayed



- item will not be displayed in USER menu
- item will be displayed in USER menu with the option of setting
- item will be solely displayed in USER menu

5.0

Setting "LIGHT"

LIGHT

Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code

SETTING LIGHT

light

- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF

142.8



PASSW

0

Access password

!
Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

TYPE

dC

MODE

60 nV

Selecting input and range

RTD OHM

COEFF

2-wire

FORN.A

00000.0

Selecting projection and connection

TC

COEFF

EMF 16C

CJTEEN

23

FORN.A

00000.0

DC PM OHM DU

AIN.A

0

NAH.A

100

FORN.A

0000.00

LIN.L1

20

LIN.L2

40

Option - comparator

LIN.L3

60

LIN.L4

80

Option - Analog output

TYPE.A0

120

AIN.A0

0

NAH.A0

100

Primary color

COL.0

GREEN

First color limit

d15.L.1

9999

Color beyond first limit

COL.2

red

Second color limit

d15.L.1

9999

Color beyond second limit

COL.2

ORANGE

Menu type

MENU

LIGHT

Return to manufacture calibration

CALIB.

YES

Return to manufacture setting

SEETIN.

YES

DU

C.AIN

YES

C.NAH

YES

Calibration - only for "DU"

Language selection

LANG.

ENGL

New password

n.PASS

0


Identification

IDENT.

YES

Return to measuring mode

OND 201...

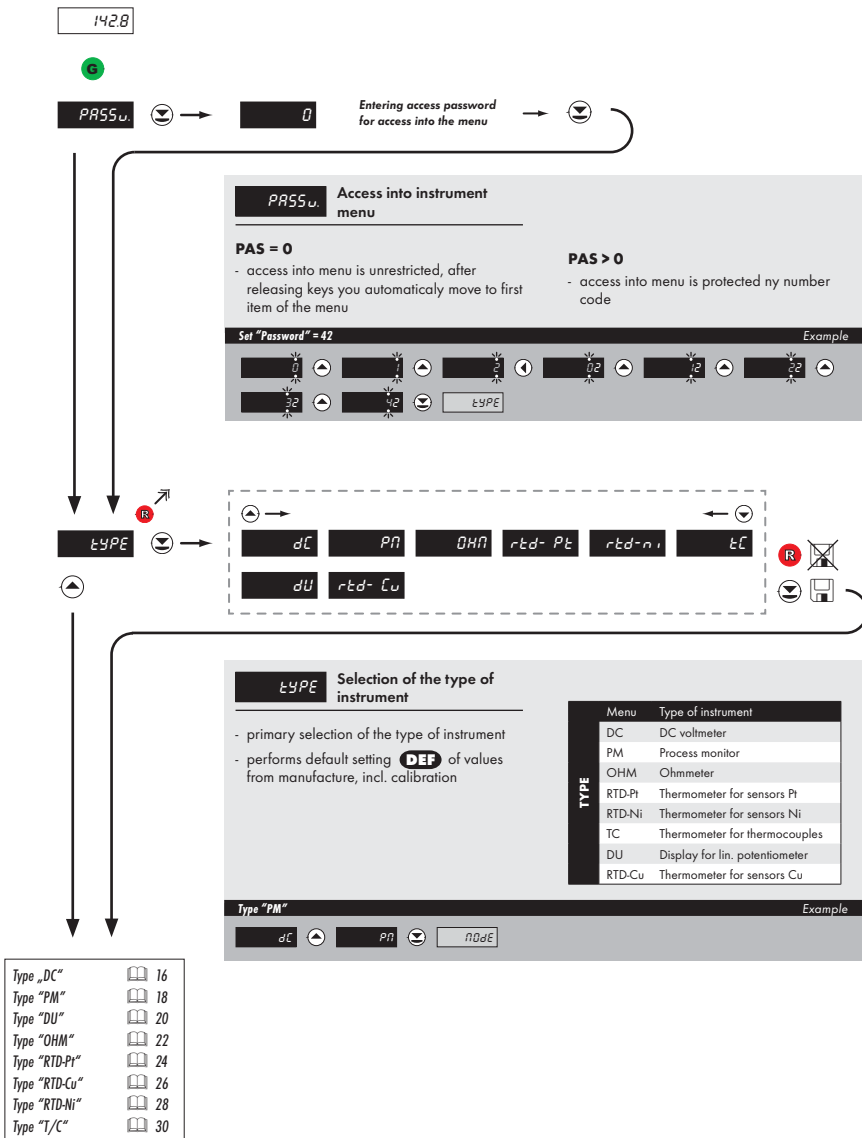

Type "DC"



nDdE Selection of the instrument measuring range

DEF = 60 mV

DEF = 500 V*

* only for option "A"

MODE	Menu	Measuring range
MODE	60 mV	±60 mV
	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±1,2 V
MODE-A	100 V	±100 V
	250 V	±250 V
	500 V	±500 V
	0.10 A	±0,1 A
	0.25 A	±0,25 A
	0.50 A	±0,5 A
	1.00 A	±1 A
	5.00 A	±5 A

Range ±150 mV Example

60 nV 150 nV nInR



nInR Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 0

Projection for 0 mV > MIN A = 0 Example

0 nInR



MAX A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for 150 mV > MAX A = 3500 Example

100	100	100	200	300	400
500	500	1500	2500	3500	FD.A

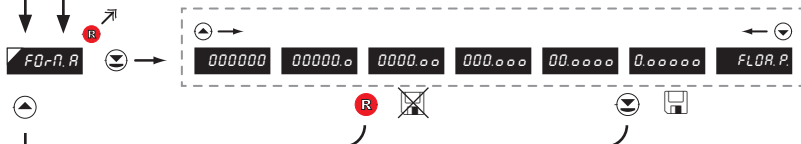

FD.A Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 0000.00

Projection of DP on display > 00000.0 Example

0000.00	00000.0	AE.U
---------	---------	------

*subsequent item on the menu depends on instrument equipment

Type "PM"

n0dE

0-5 mA 0-20 mA 4-20 mA 0-2 V 0-5 V 0-10 V 0-40 V

n In A

0

Setting for minimum input signal

n In A Setting display projection for minimum value of input signal

- range of the setting is -99999...999999

DEF = 0

Projection for 0 mA > MIN A = -25

Example

Example

Menu	Range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0.2 V	±2 V
0.5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V

MODE

Range 0...20 mA Example

4-20 mA 0-20 mA n In A

DEF = 4 - 20 mA

DEF = 0

Projection for 0 mA > MIN A = -25 Example

0 5 10 20 5 10 20 5 10 20 5 10 20 5 10 20

5 5 5 5 5 5 5 5 5 5 5 5 5 5 5

n In A



MAX A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	200	300	400
500	500	500	500	500	FD-R

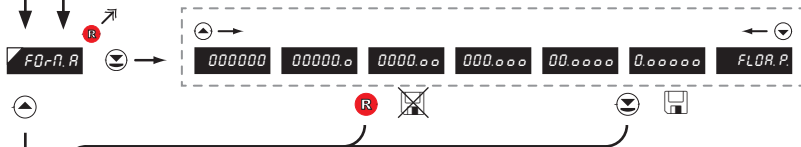

FD-R Setting projection of the decimal point

DEF = 0000.00


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00	00000.00	AE-U
---------	----------	------

* subsequent item on the menu depends on instrument equipment

Type "DU"

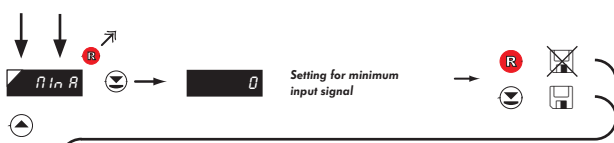

0 Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 0

Projection for the beginning > MIN A = 0

Example



100 Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for the end > MAX A = 5000

Example

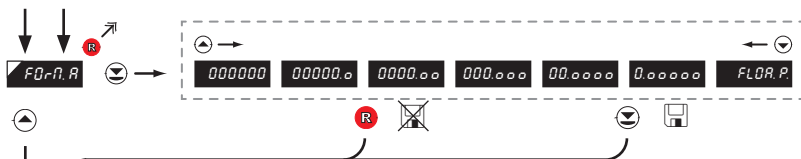

FLOOR.P Setting projection of the decimal point **DEF** = 0000.00

- positioning of the DP is set here in the measuring mode


Projection of DP on display > 0000.00 Example

0000.00 * subsequent item on the menu depends on instrument equipment

32

Calibration of the beginning and the end of range of linear potentiometer is on page 39



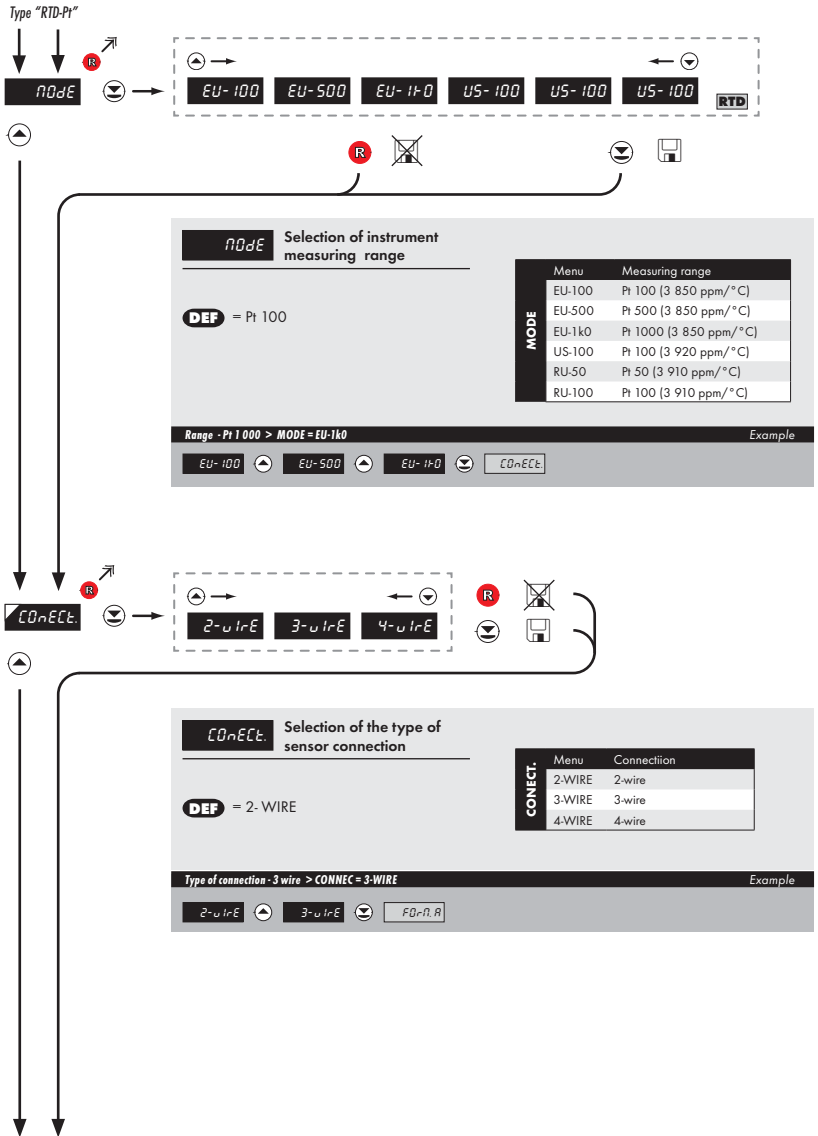



FD-r.A Setting projection of the decimal point **DEF** = 00000.0


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 *Example*

00000.0 000000 nE-n

* subsequent item on the menu depends on instrument equipment



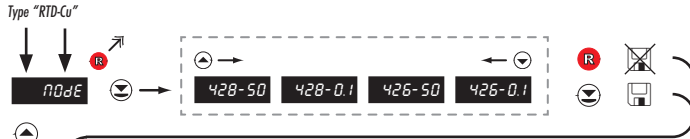

nDdE Selection of instrument measuring range

DEF = Cu 50/4 280 ppm

MODE	Menu	Measuring range
	428-50	Cu 50 (4 280 ppm/°C)
	428-0.1	Cu 100 (4 280 ppm/°C)
	426-50	Cu 50 (4 260 ppm/°C)
	426-0.1	Cu 100 (4 260 ppm/°C)

Range - Cu 50/4 260 ppm > MODE = 426-50 Example

428-50 428-0.1 426-50 CONEct



CONEct. Selection of the type of sensor connection

DEF = 2-WIRE

CONNECT.	Menu	Connection
	2-WIRE	2-wire
	3-WIRE	3-wire
	4-WIRE	4-wire

Type of connection - 3 wire > CONNEC = 3-WIRE Example

2-wIrE 3-wIrE 4-wIrE F0nR



FD-r.n.R

Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 00000.0

Projection of DP on display > 000000

Example

00000.0

▼

000000


▼

nE-n

* subsequent item on the menu depends on instrument equipment



32

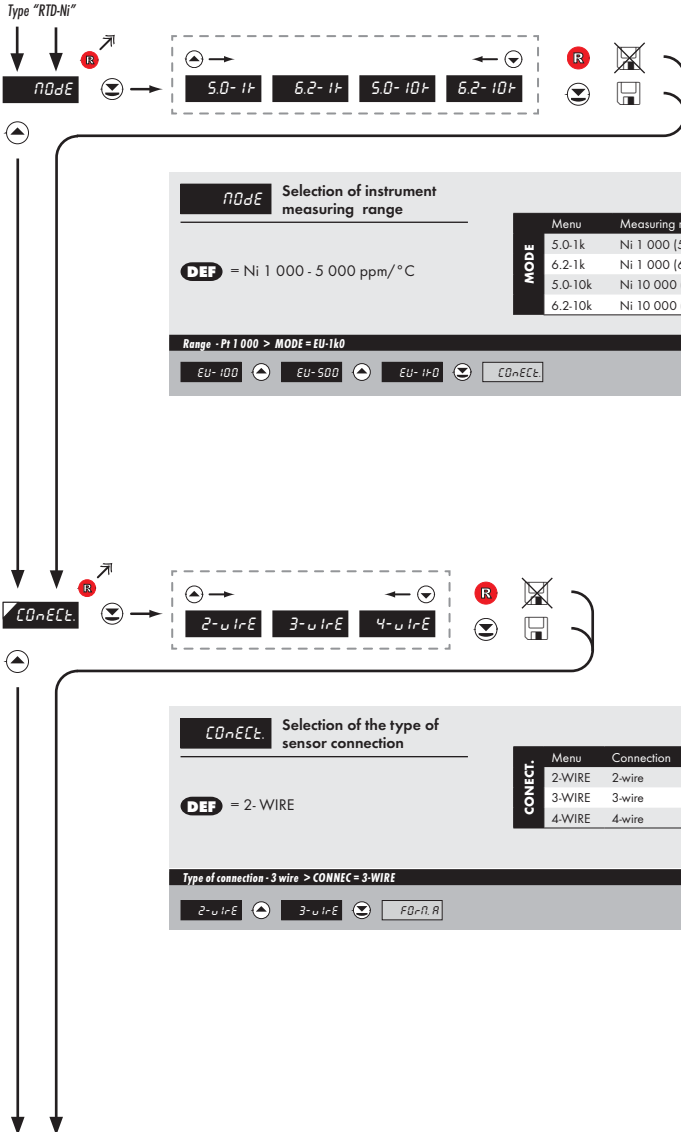



FD-r.n.R

Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 00000.0

Projection of DP on display > 000000

Example

00000.0
000000
nE-n

**subsequent item on the menu depends on instrument equipment*



RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni



C.J. TEM. Setting temperature of cold junction **DEF = 23**

- range 0...99 °C with compensation box

Setting temperature of cold junction > C.J. TEM. = 35 Example

23 24 25 25 35 FD-R.R.



FD-R.R. Setting projection of the decimal point **DEF = 00000.0**


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 Example

00000.0 000000 000000 * subsequent item on the menu depends on instrument equipment

!
For thermocouple type "B" the items CONECT. and C.J. TEM. are not available

!
Method and procedure of setting the cold junctions is described in separate chapter on page 80

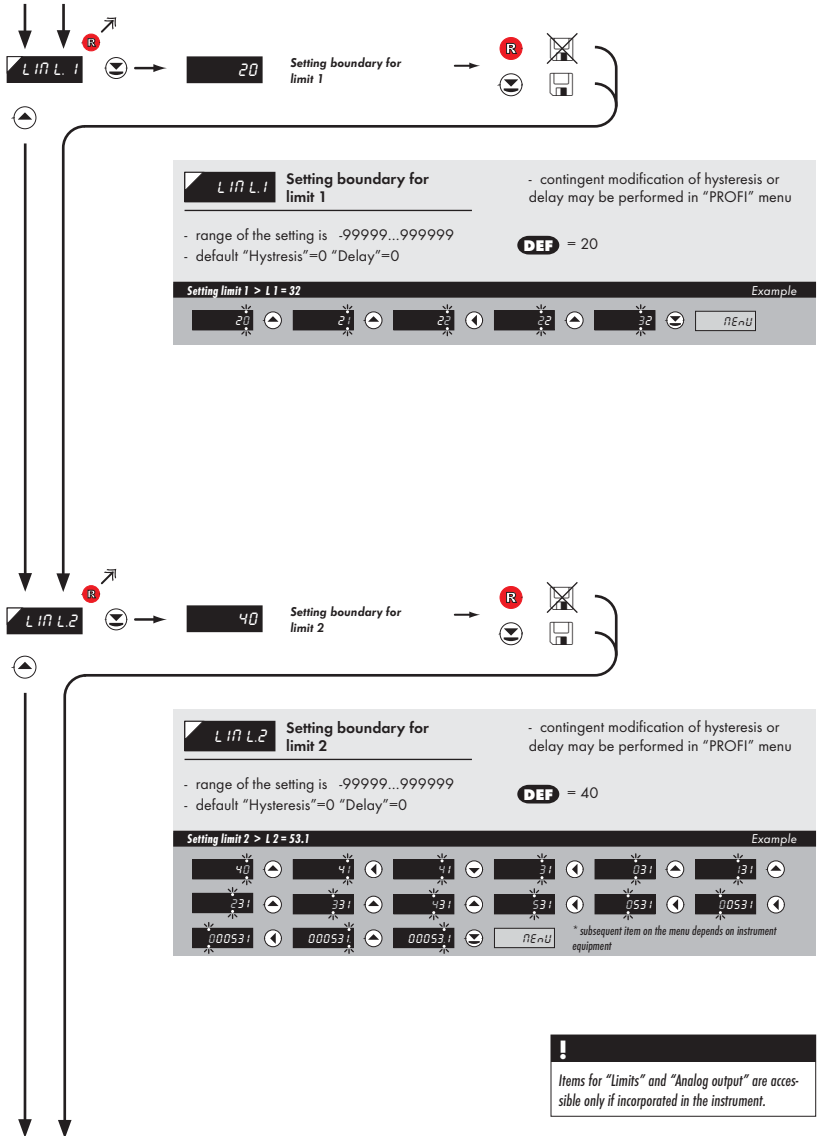



LIN L3 Setting boundary for limit 3

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > L3 = 85 Example

* subsequent item on the menu depends on instrument equipment



LIN L4 Setting boundary for limit 4

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > L4 = 103 Example

* subsequent item on the menu depends on instrument equipment

TYP. A.O. (Red R icon)

- 0-20 mA
- E. 4-20 mA
- 4-20 mA
- 0-5 mA
- 0-2 V
- 0-5 V
- 0-10 V

Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
E. 4-20mA	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0.5mA	0...5 mA	
0.2 V	0...2 V	
0.5 V	0...5 V	
0-10 V	0...10 V	

DEF = 4...20 mA

Type of analog output - 0...10 V > TYP. A.O. = 0-10 V Example

4-20 mA 0-5 mA 0-2 V 0-5 V 0-10 V MIN A.O.

MIN A.O. (Red R icon)

0 Assigning the display value to the beginning of the AO range

DEF = 0


- range of the setting is -99999...999999

Display value for the beginning of the AO range > MIN A.O. = 0 Example

MIN A.O.

!

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

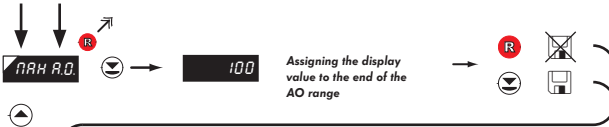


MAX A.O. Assigning the display value to the end of the AO range **DEF** = 100

- range of the setting is -99999...999999

Display value for the end of the AO range > MAX A.O. = 120 Example

Displayed only with options > **Analog output**

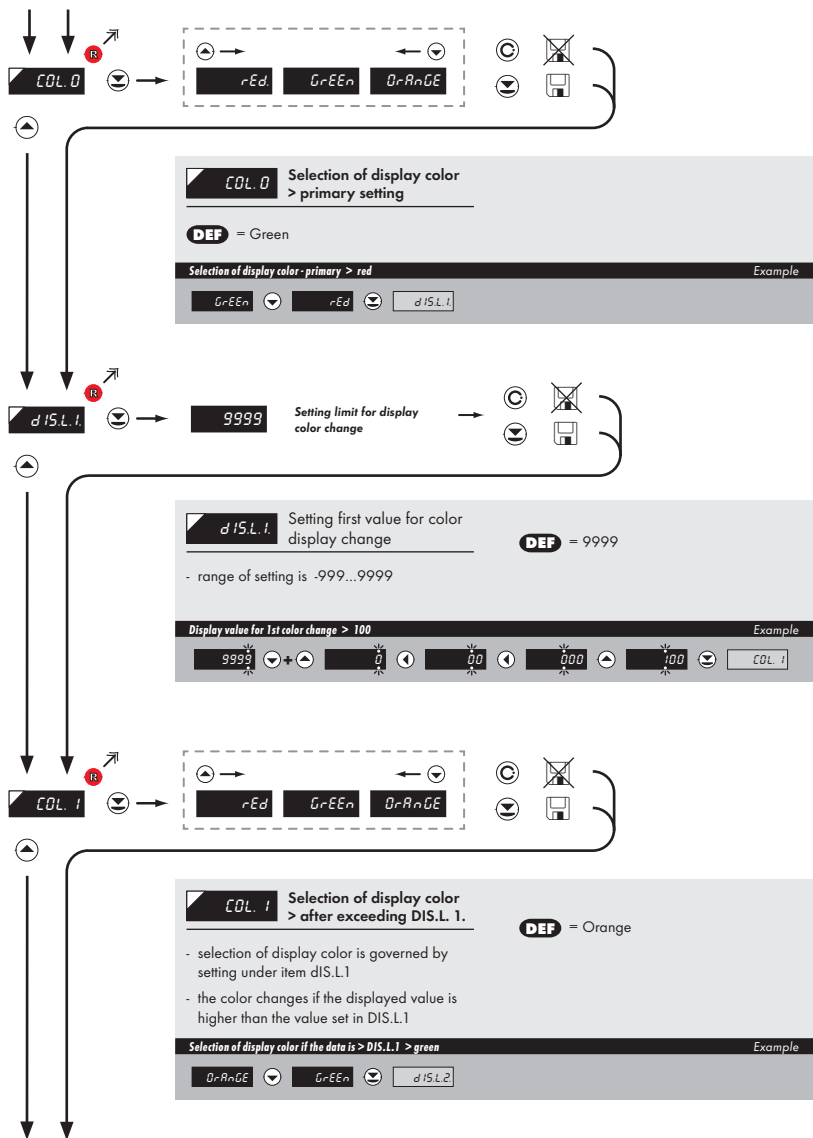



d 15.L.2 Setting second value for display color change **DEF** = 9999

- range of setting is -999...9999

Display value for 1st color change > 400 Example

9999	+	0	←	00	←	000
200	↑	300	↑	400	↓	COL.2




COL.2 Selection of display color > after exceeding DIS.L.2 **DEF** = Red

- selection of display color is governed by setting under item DIS.L.2
- the color changes if the displayed value is higher than the value set in DIS.L.2

Selection of display color if the data is > DIS.L.2 > orange Example

rEd	↓	OrAnGE	↓	OrAnGE
-----	---	--------	---	--------

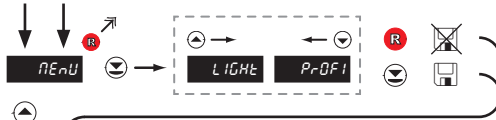

MENU Setting the menu type
LIGHT/PROFI

LIGHT > menu LIGHT, a simple menu, which contains only the most essential items necessary for instrument setting
> linear tree structure

PROFI > menu PROFi, a complete menu for complete instrument setting
> tree menu structure

DEF = LIGHT

Menu LIGHT > MENU = LIGHT Example

LIGHT CALIB




CALIB Restoration of manufacture calibration

- in the event of error calibration it is feasible to restore manufacture calibration.

Prior to execution of any modifications you will be asked to confirm your selection. (YES)

Restoration of manufacture setting > CALIB. Example

CALIB YES SETT.IN



SETT.IN Restoration of manufacture instrument setting

- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")

- loading manufacture calibration and primary setting of items on the menu (DEF)

- in the event of error setting the manufacture setting may be restored


- restoration is performed for the currently selected type of the instrument input (select "TYPE")

Restoration of manufacture setting > SETTIN. Example

SETT.IN TYPE LANC

* subsequent item on the menu depends on instrument type, for "DU" > "K.MIN"

Type „DC“		40
Type "PM"		40
Type "DU"		39
Type "OHM"		40
Type "RTD-Pt"		40
Type "RTD-Cu"		40
Type "RTD-Ni"		40
Type "T/C"		40

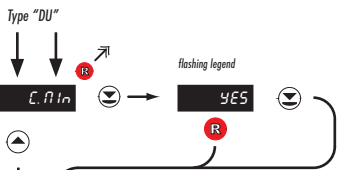


C. MIN Calibration of input range - the potentiometer traveller in initial position Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

Calibration of the beginning of the range > C. MIN Example

YES **C. MAX**

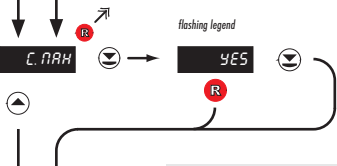


C. MAX Calibration of input range - the potentiometer traveller in end position Only for type "DU"


- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

Calibration of the end of the range > C. MAX Example

YES **LRNG**



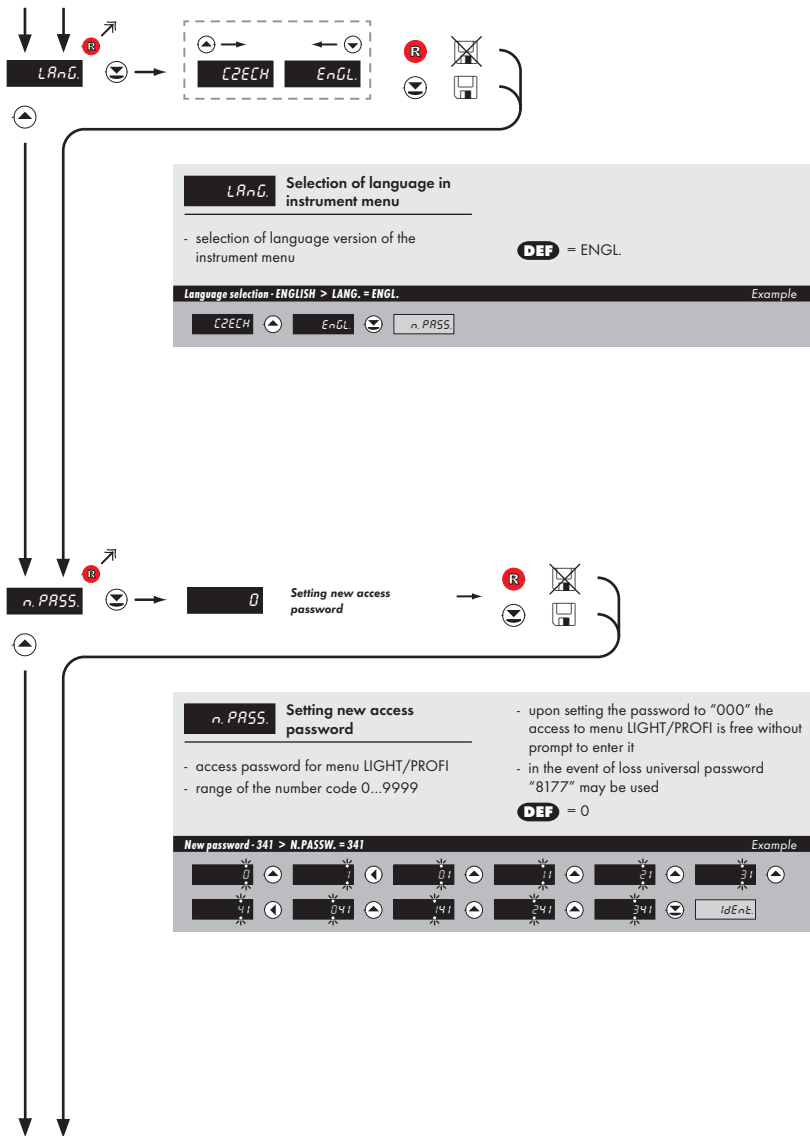

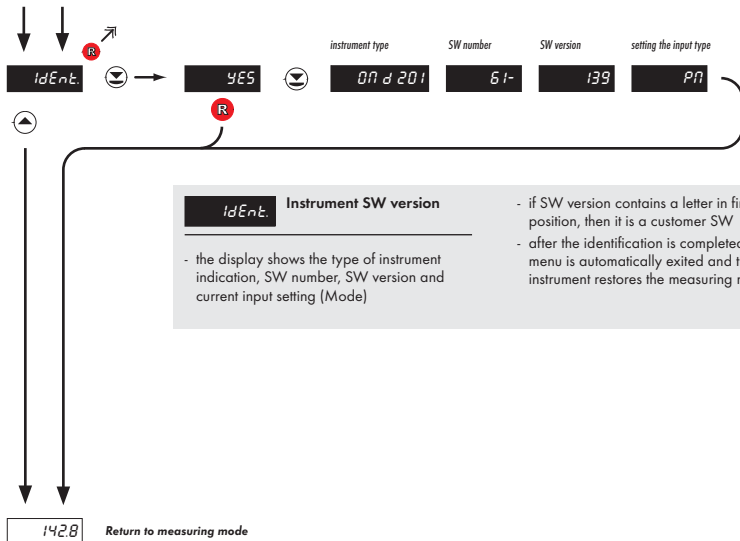


6.0

Setting "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

 SETTING
 PROFI
 


- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu

>38




- temporary switch-over to **PROFI** menu, which is suitable to edit a few items
- after quitting **PROFI** menu the instrument automatically switches to **LIGHT** menu
- access is password protected (if it was not set under item N. PASS. =0)



- access into **LIGHT** menu and transition to item „MENU“ with subsequent selection of „PROFI“ and confirmation
- after re-entering the menu the **PROFI** type is active
- access is password protected (if it was not set under item N. PASS. =0)


6.1 Setting "PROFI" - INPUT

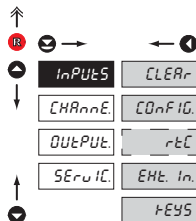

The primary instrument parameters are set in this menu

CLEAR	Resetting internal values
CONFIG	Selection of measuring range and parameters
rtc	Setting date and time for option with RTC
EXT. In	Setting external inputs functions
FEYS	Assigning further functions to keys on the instrument

6.1.1 Resetting internal values

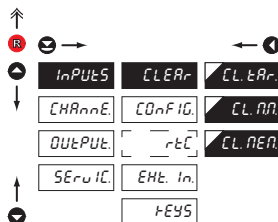

CLEAR Resetting internal values

CL.tAR. Tare resetting

CL.NE.N. Resetting min/max value

- resetting memory for the storage of minimum and maximum value achieved during measurement

CL.NE.N. Resetting the instrument memory

- resetting memory with data measured in the "FAST" or "RTC" modes
- not in standard equipment

6.1.2a Selection of measuring rate

INPUTS	CLEAR	rERdRS	40.0
CHARnNE	CONF IG	TYPE	20.0
OUTPUt	rEtC	NOdE	10.0
SERvIC	EHt. In.	COncEt	5.0
	FEYS	CJ.tEN	2.0
		Ad.rES	1.0
		LEAdS	0.5
			0.2
			0.1

DEF

rERdRS Selection of measuring rate

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s

6.1.2b Selection of „instrument“ type


INPUTS	CLEAR	rERdRS	dC
CHARnNE	CONF IG	TYPE	Pn
OUTPUt	rEtC	NOdE	OHn
SERvIC	EHt. In.	COncEt	rtd-Pt
	FEYS	CJ.tEN	rtd-ni
		Ad.rES	tC
		LEAdS	dU
			rtd-Cu


DEF

TYPE Selection of „instrument“ type

- selection of particular type of "instrument" is bound to relevant dynamic items

dC	DC voltmeter
Pn	Process monitor
OHn	Ohmmeter
rtd-Pt	Thermometer for Pt xxx
rtd-ni	Thermometer for Ni xxxx
tC	Thermometer for thermocouples
dU	Display for linear potentiometers
rtd-Cu	Thermometer for Cu xxx

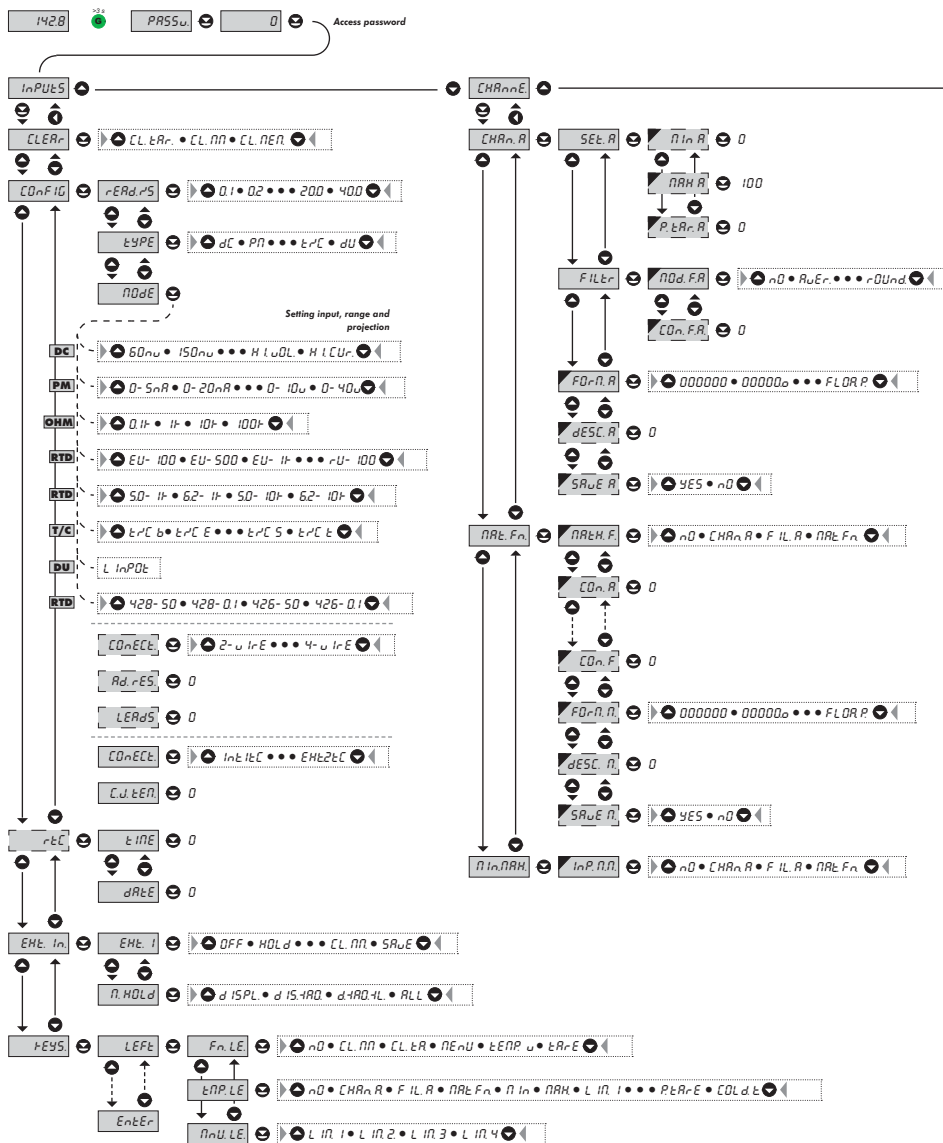

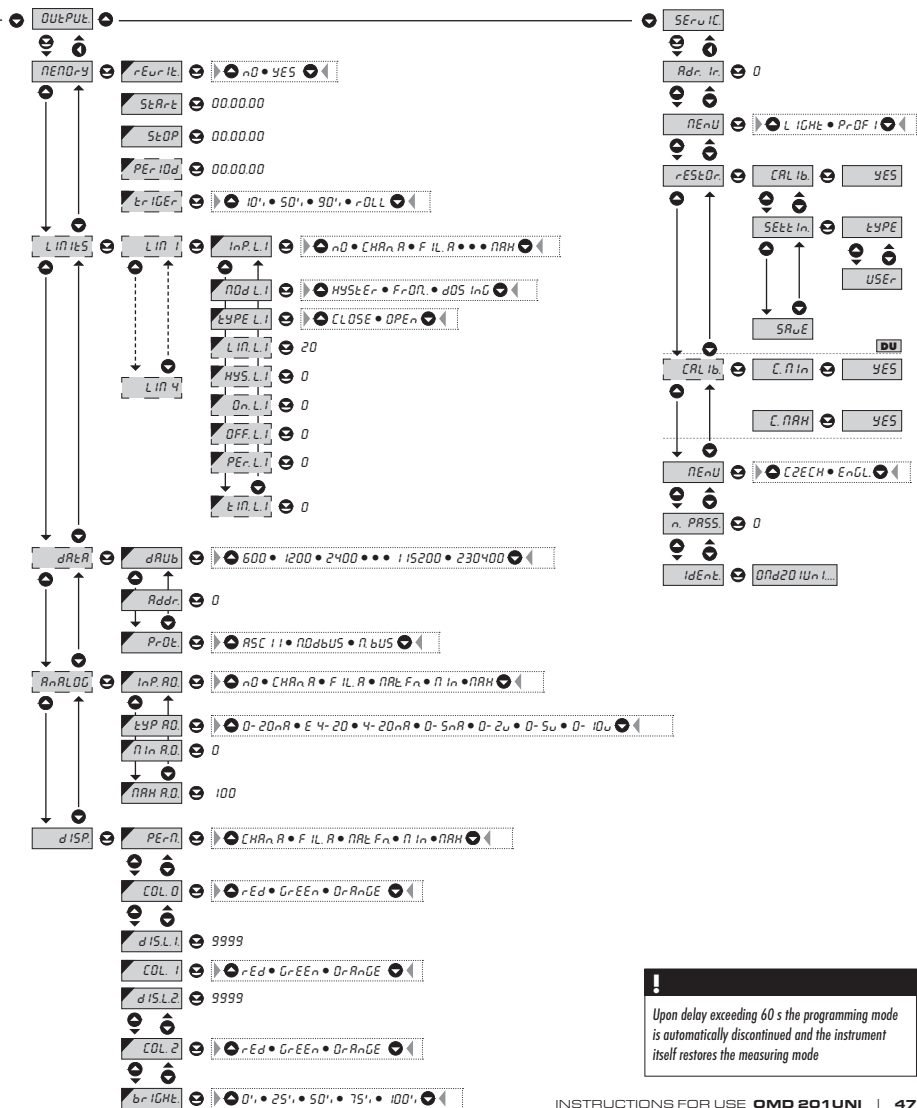

!
Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

6.1.2c Selection of measuring range

↑

⊖

⊕

↓

inPUtS	CLEARr	rERAdS	DC
CHARAnE	COnt Ig	tyPE	OHM
OUtPUt	rEt	nOdE	DEF
SERu iC	EMt. In.	COntEct	
	KEYS	C.U.tEr	
		Ad.rES	
		LERAdS	

← 1

DEF

	DC		OHM
	60n u		100 r
	150n u		1 t
	300n u		10 t
	1200n u		100 t
	100 u		AUtO
	250 u		
DEF	500 u	DEF	4-20n A
	0.10 A		0-2 u
	0.25 A		0-5 u
	0.50 A		0-10 u
	1.00 A		0-40 u
	5.00 A		
	DC - A		PM
	100 u		0-5n A
	250 u		0-20n A
DEF	500 u	DEF	4-20n A
	0.10 A		0-2 u
	0.25 A		0-5 u
	0.50 A		0-10 u
	1.00 A		0-40 u
	5.00 A		
	RTD-Pt		RTD-Cu
DEF	EU-100	DEF	428-50
	EU-500		428-0.1
	EU-1t0		426-50
	US-100		426-0.1
	rU-50		
	rU-100		
	RTD-Ni		T/C
DEF	5.0-1t		t r C b
	6.2-1t		t r C E
	5.0-10t		t r C d
	6.2-10t	DEF	t r C t
			t r C n
			t r C r
			t r C S
DEF	DU		t r C t
	Lin.POt		

Switching in the mode AUTO - "OHM"

0.1 > 1 k	0.101 k
1 k > 10 k	1.010 k
10 k > 100 k	10.10 k
100 > 10 k	9.900 k
10 k > 1 k	0.990 k
1 k > 0.1 k	0.099 k

When selecting the "AUTO" range, the items "MIN", "MAX", "P. TAR. A" will not be displayed in the "CHAN. A" setting

nOdE Selection of instrument measuring range

	Menu	Measuring range
DC	60 mV	±60 mV
	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±1.2 V
	100 V	±100 V
DC-A	250 V	±250 V
	500 V	±500 V
	0.10 A	±0,1 A
	0.25 A	±0,25 A
	0.50 A	±0,5 A
PM	1.00 A	±1 A
	5.00 A	±5 A
	0.5mA	0..5 mA
	0.20mA	0..20 mA
	4.20mA	4..20 mA
OHM	0.2 V	±2 V
	0.5 V	±5 V
	0.10 V	±10 V
	0.40 V	±40 V
	AUTO	Automatická změna rozsahu
RTD-Pt	Menu	Measuring range
	EU-100	Pt 100 (3 850 ppm/°C)
	EU-500	Pt 500 (3 850 ppm/°C)
	EU-1k0	Pt 1000 (3 850 ppm/°C)
	US-100	Pt 100 (3 920 ppm/°C)
RTD-Ni	RU-50	Pt 50 (3 910 ppm/°C)
	RU-100	Pt 100 (3 910 ppm/°C)
	Menu	Measuring range
	5.0-1k	Ni 1 000 (5 000 ppm/°C)
	6.2-1k	Ni 1 000 (6 180 ppm/°C)
RTD-Cu	5.0-10k	Ni 10 000 (5 000 ppm/°C)
	6.2-10k	Ni 10 000 (6 180 ppm/°C)
	Menu	Measuring range
	428-50	Cu 50 (4 280 ppm/°C)
	428-0.1	Cu 1 00 (4 280 ppm/°C)
T/C	426-50	Cu 50 (4 260 ppm/°C)
	426-0.1	Cu 100 (4 260 ppm/°C)
	Menu	Type of thermocouple
	T/C B	B
	T/C E	E
T/C J	J	
T/C K	K	
T/C N	N	
T/C R	R	
T/C S	S	
T/C T	T	

6.1.2.d Selection of type of sensor connection

RTD **OHM** **T/C**

↑ (R) →

INPUTS	CLEAR	READRS	2-wire	DEF
CHARACT	CONF ID	TYPE	3-wire	
OUTPUT	rtC	MODE	4-wire	
SERUI	EXT. In.	CONNECT		
	KEYS	Ad. RES.		
		LEADS		

↓

↑ (R) →

INPUTS	CLEAR	READRS	Int. 1tC	
CHARACT	CONF ID	TYPE	Int. 2tC	
OUTPUT	rtC	MODE	EXT. 1tC	DEF
SERUI	EXT. In.	CONNECT	EXT. 2tC	
	KEYS	C.J. TEN.		

↓

CONNECT Selection of type of sensor connection

RTD **OHM**

- 2-wire** 2-wire connection
- 3-wire** 3-wire connection
- 4-wire** 4-wire connection

T/C

- Int. 1tC** Measurement without reference thermocouple
 - measuring cold junction at instrument brackets
- Int. 2tC** Measurement with reference thermocouple
 - measuring cold junction at instrument brackets with anti-series connected reference thermocouple
- EXT. 1tC** Measurement without reference thermocouple
 - the entire measuring set is working under invaried and constant temperature
- EXT. 2tC** Measurement with reference thermocouple
 - when using compensation box




Method and procedure of setting the cold junctions is described in separate chapter on page 80



For thermocouple type "B" the items **CONNECT** and **C.J. TEN.** are not available

6.1.2e Setting temperature of cold junction


T/C

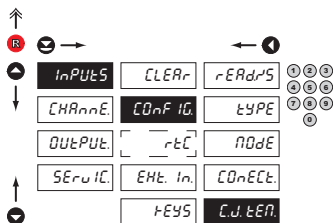**C.J. tEN.** Setting temperature of cold junction

- range 0...99 °C with compensation box
- **DEF** = 23 °C

6.1.2f Compensation of 2-wire conduct


RTD OHM

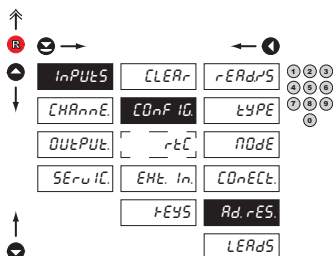**Ad. rES.** Offset of the beginning of the measuring range

- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head
- entered directly in Ohm (0...9999)
- **DEF** = 0


6.1.2g Compensation of 2-wire conduct

RTD OHM

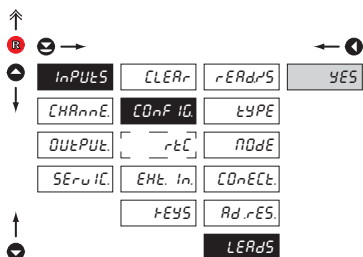**LEAdS** Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- **DEF** = 0

6.1.3 Setting the real time clock

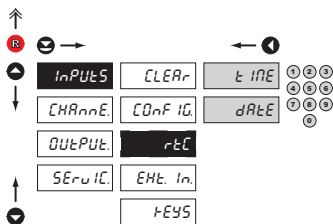

r.t.C. Setting the real time clock (RTC)


tIME Time setting

- format 23.59.59

dAtE Date setting

- format DD.MM.YY

6.1.4a External input function selection

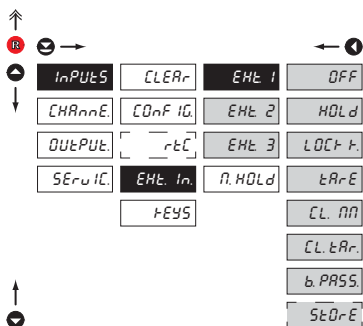

EHt. In. External input function selection

OFF Input is off

HOLD Activation of HOLD

LOCK F. Locking keys on the instrument

tARtE Tare activation

CL. nN Resetting min/max value

CL. tAR. Tare resetting

b.PASS Activation of locking access into programming menu LIGHT/PROFI

StORtE Activation of measured data record in instrument memory (not in standard equipment)

- **DEF** EXT. 1 > HOLD


- **DEF** EXT. 2 > LOCK K.

- **DEF** EXT. 3 > TARE

*

Setting procedure is identical for EXT. 2 and EXT. 3

6.1.5b Optional accessory functions of the keys - Temporary projection

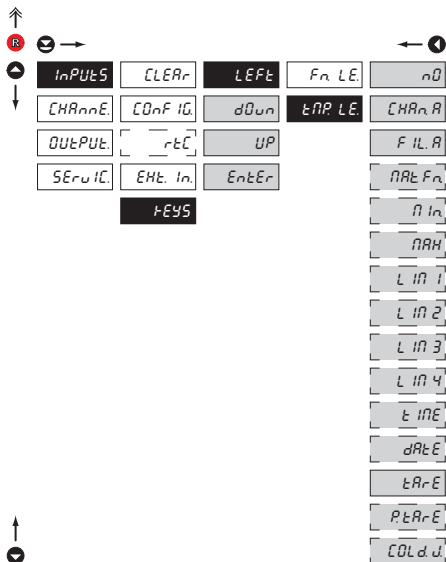

TEMP. L_E Temporary projection of selected item


- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **RE** + "Selected key", this holds until the stroke of any key

nD	Temporary projection is off
CHANN.A	Temporary projection of "Channel A" value
FIL.R	Temporary projection of "Channel A" value after processing digital filters
MATH.Fn	Temporary projection of "Mathematic functions" value
n In	Temporary projection of "Min. value"
MAX	Temporary projection of "Max. value"
L In 1	Temporary projection of "Limit 1" value
L In 2	Temporary projection of "Limit 2" value
L In 3	Temporary projection of "Limit 3" value
L In 4	Temporary projection of "Limit 4" value
TIME	Temporary projection of "TIME" value
DATE	Temporary projection of "DATE" value
TARE	Temporary projection of "TARE" value
P. TARE	Temporary projection of "P. TARE" value
CJCL.d.	Temporary projection of "CJC" value



Setting is identical for LEFT, DOWN, UP and ENTER


6.1.5c Optional accessory functions of the keys - Direct access to item

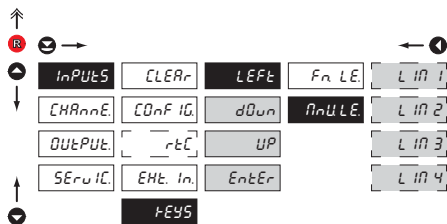
Fn.U.LE Assigning access to selected menu item

- LIM 1** Direct access to item "LIM 1"
- LIM 2** Direct access to item "LIM 2"
- LIM 3** Direct access to item "LIM 3"
- LIM 4** Direct access to item "LIM 4"

!
Setting is identical for LEFT, DOWN, UP and ENTER

6.2 Setting "PROFI" - CHANNELS

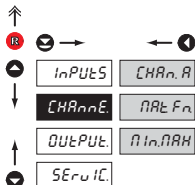


The primary instrument parameters are set in this menu

- CHANNEL** Setting parameters of measuring "Channel"
- RATE FN** Setting parameters of mathematic functions
- MIN MAX** Selection of access and evaluation of Min/max value

6.2.1a Display projection

DC PM DU OHM

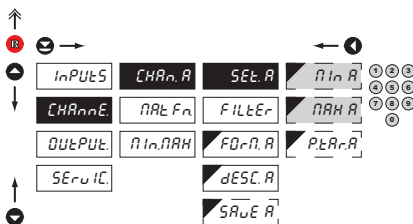

SET A Setting display projection

MIN A Setting display projection for minimum value of


- input signal
- range of the setting is -99999...999999
- **DEF** = 0

MAX A Setting display projection for maximum value of

- input signal
- range of the setting is -99999...999999
- **DEF** = 100

6.2.1b Setting fixed tare


DC PM DU OHM

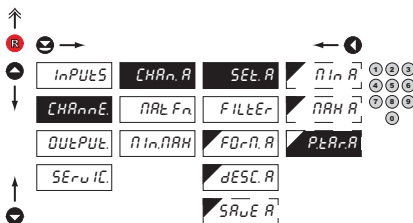

P.TAR A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. TAR. A > 0) display shows "T" symbol
- range of the setting is 0...999999
- **DEF** = 0

6.2.1c Digital filters

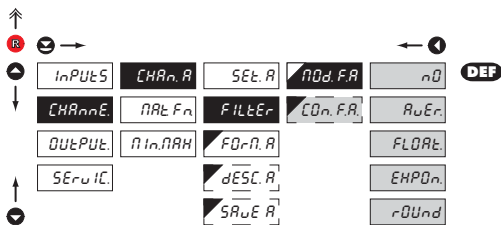

NOd.F.A. Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

nD Filters are off

RuEr Measured data average

- arithmetic average from given number („CON.F.A.“) of measured values
- range 2...100

FLOORt Selection of floating filter

- floating arithmetic average from given number („CON.F.A.“) of measured data and updates with each measured value
- range 2...30

EHPDn Selection of exponential filter

- integration filter of first prvnho grade with time constant („CON.F.A.“) measurement
- range 2...100

rDUnd Measured value rounding


- is entered by any number, which determines the projection step (e.g: „CON.F.A.“=2,5 > display 0, 2.5, 5,...)

CO.n.F.A. Setting constants

- this menu item is always displayed after selection of particular type of filter

- **DEF** = 2

6.2.1d Projection format - positioning of decimal point

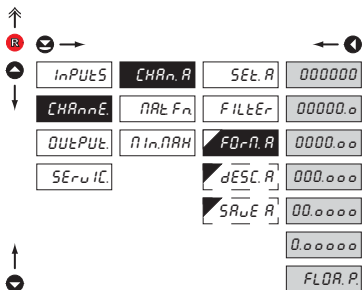

FD-n.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOAT.P.“

000000. Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

- **DEF** > **RTD** **T/C**

0000.00 Setting DP - XXXX.xx

- **DEF** > **DC** **PM** **DU** **OHM**


000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLDR.P Floating DP

6.2.1e Projection of description - the measuring units

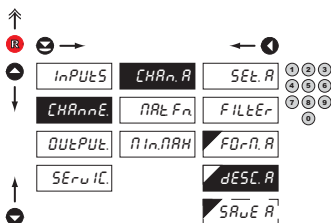


dESC.A Setting projection of description for "Channel A"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- **RTD** **T/C** **DEF** = °C
- **DC** **PM** **DU** **OHM** **DEF** = none

!
Table of signs on page 83

6.2.1f Selection of storing data into instrument memory

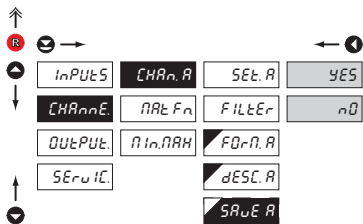

SAvE R Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

YES	Measured data are stored in the memory
nD	Measured data are not stored

6.2.2b Mathematic functions - decimal point

↑	⊖	→		←	⊕
⊕	INPUTS	CHAR.A	MATH.F	000000	
⊖	CHAR.E	MAT.FN	CON.A	00000.0	
	OUTPUT	IN.MATH	CON.b	0000.00	
	SEruiC.		CON.c	000.000	
			CON.d	00.0000	
			CON.e	0.00000	
			CON.F	FLOA.P	DEF
			F00r.N.		
			dESC.N.		
			Srue.N.		
↑					⊖

F00r.N. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000. Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

0000.00 Setting DP - XXXX.xx

000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.000000 Setting DP - X.xxxxx

FLOA.P. Floating DP

DEF

6.2.2c Mathematic functions - measuring units

↑	⊖	→		←	⊕
⊕	INPUTS	CHAR.A	MATH.F	000000	
⊖	CHAR.E	MAT.FN	CON.A	00000.0	
	OUTPUT	IN.MATH	CON.b	0000.00	
	SEruiC.		CON.c	000.000	
			CON.d	00.0000	
			CON.e	0.00000	
			CON.F	FLOA.P	
			F00r.N.		
			dESC.N.		
			Srue.N.		
↑					⊖

dESC.N. Setting projection of description for "MAT.FN"


- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description

- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95

- description is cancelled by code 00


DEF = no description

! Table of signs on page 83

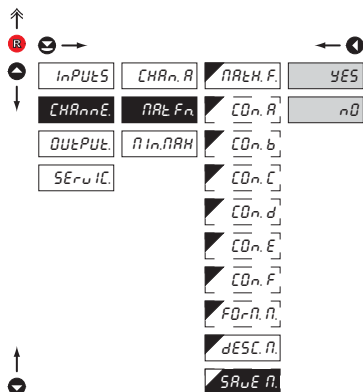6.2.2d **Mathematic functions - selection of storing data into instrument memory**

SRUE n. **Selection of storing data into instrument memory**

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

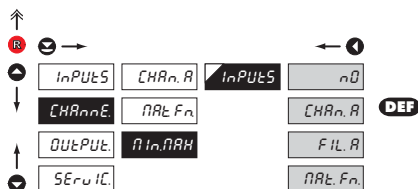
YES	Measured data are stored in the memory
nD	Measured data are not stored

6.2.3 **Selection of evaluation of min/max value**

InPUtS **Selection of evaluation of min/max value**

- selection of value from which the min/max value will be calculated

nD	Evaluation of min/max value is off
CHAn.A	From "Channel A"
FiL.A	From "Channel A" after digital filters processing
nARt.Fn.	From "Mathematic functions"

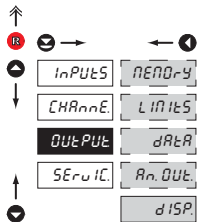
6.3 Setting „PROFI“ - OUTPUTS



In this menu it is possible to set parameters of the instrument output signals

- MEMORY** Setting data logging into memory
- LIMITS** Setting type and parameters of limits
- DATA** Setting type and parameters of data output
- ANALOG** Setting type and parameters of analog output
- DISP** Setting display projection and brightness

6.3.1 a Selection of mode of data logging into instrument memory

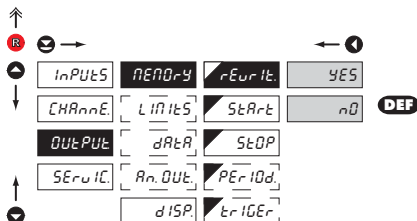


rEWRITE Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

- nD** Rewriting values prohibited
- YES** Rewriting values permitted, the oldest get rewritten by the latest

6.3.1b Setting data logging into instrument memory - RTC

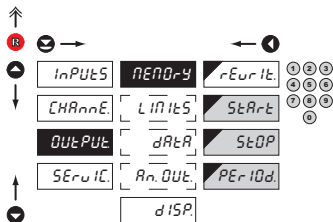

StArT Start of data logging into instrument memory

- time format HH.MM.SS

StOP Stop data logging into instrument memory

- time format HH.MM.SS

PErIOD Period of data logging into instrument memory


- determines the period in which values will be logged in an interval delimited by the time set under items START and STOP

- time format HH.MM.SS

- records are made on a daily basis in selected interval and period

- item not displayed if "STORE" is selected in menu (Input > EXT. IN.)

6.3.1c Setting data logging into instrument memory - FAST

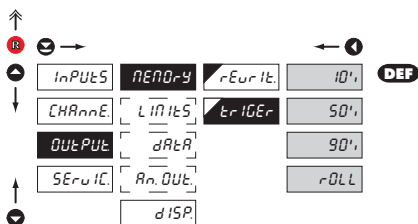

tRIGER Setting logging data into inst. memory

- logging data into inst. memory is governed by the following selection, which determines how many percent of the memory is reserved for data logging prior to initiation of trigger impulse

- initiation is on ext. input or control key


ID% Reser. of 10 % memory prior init. of data logging

50% Reser. of 50 % memory prior init. of data logging

90% Reser. of 90 % memory prior init. of data logging

rOLL After initiation of data logging the memory is cyclically transcribed

6.3.2c Selection of type of output

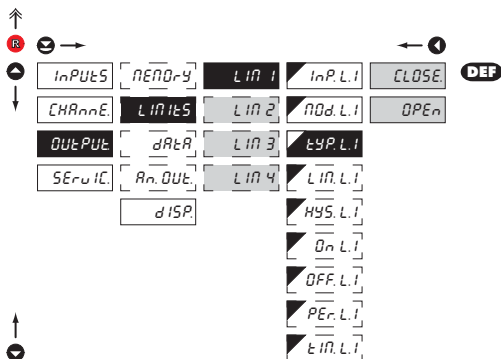


tYP.L.i Selection of type of output

CLoSE Output switches on when condition is met

oPEn Output switches off when condition is met

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.2d Setting values for limits evaluation

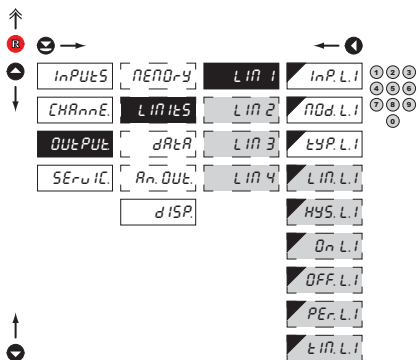

LIm.L.i Setting limit for switch-on

- for type "HYSTER"

HYS.L.i Setting hysteresis

- for type "HYSTER"
- indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)

On.L.i Setting the outset of the interval of limit switch-on

- for type "FROM"

OFF.L.i Setting the end of the interval of limit switch-on

- for type "FROM"

PEr.L.i Setting the period of limit switch-on

- for type "DOSE"

tIm.L.i Setting the time switch-on of the limit

- for type "HYSTER" and "DOSE"

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.3a Selection of data output baud rate

Menu Item	Value
bAud	600
	1200
	2400
	4800
DEF	9600
	19200
	38400
	57600
	115200
	230400

bAud Selection of data output baud rate

600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud

6.3.3b Setting instrument address

Menu Item	Value
Addr	0
	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	11
	12
	13
	14
	15
	16
	17
	18
	19
	20
	21
	22
	23
	24
	25
	26
	27
	28
	29
	30
	31


Addr Setting instrument address

- setting in range 0...31
- **DEF** = 00

Addr Setting instrument address - MODBUS

- setting in range 1...247
- **DEF** = 1

6.3.3c Selection of data output protocol

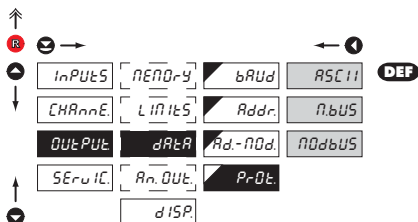


PrOt Selection of the type of analog output

- ASCI11** Data protocol ASCII
- n.bUS** Data protocol DIN MessBus
- nOdbUS** Data protocol MODBUS-RTU

- option is available only for RS 485

6.3.4a Selection of input for analog output

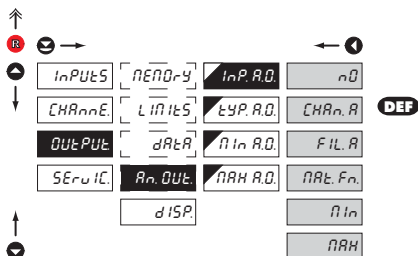


InP.RD Selection evaluation analog output

- selection of value from which the analog output will be evaluated

- nO** AO evaluation is off
- CHARn.R** AO evaluation from "Channel A"
- FiL.R** AO evaluation from "Channel A" after digital filters processing
- nRt.Fn** AO evaluation from "Math.functions"
- nIn** AO evaluation from "Min.value"
- nRH** AO evaluation from "Max.value"

6.3.4b Selection of the type of analog output

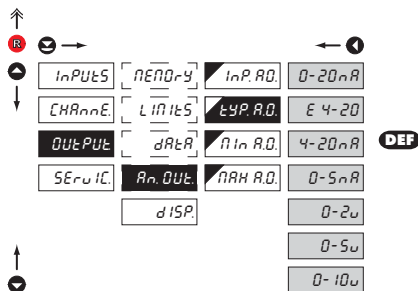

тыр. АО. Selection of the type of analog output

0-20mA Type - 0...20 mA

ε 4-20 Type - 4...20 mA

- with indication of error statement (< 3,0 mA)

4-20mA Type - 4...20 mA


0-5mA Type - 0...5 mA

0-2V Type - 0...2 V

0-5V Type - 0...5 V

0-10V Type - 0...10 V

6.3.4c Setting the analog output range

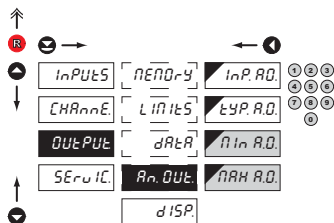

Ан. ОУТ. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

Ан. АО. Assigning the display value to the beginning of the AO range

- range of the setting is -99999...99999


- **DEF** = 0

Ан. АО. Assigning the display value to the end of the AO range

- range of the setting is -99999...99999

- **DEF** = 100

6.3.5a Selection of input for display projection

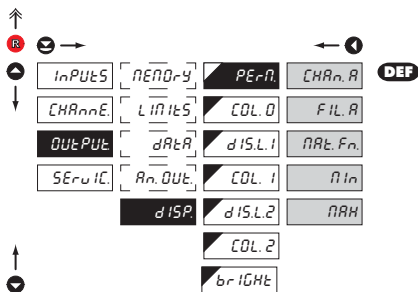


PErN Selection display projection

- selection of value which will be shown on the instrument display

- CHAn.A** Projection of values from "Channel A"
- FIL.A** Projection of values from "Channel A" after digital filters processing
- MATH.Fn** Projection of values from "Math.functions"
- Min** Projection of values from "Min.value"
- MAX** Projection of values from "Max.value"

6.3.5b Selection of display color

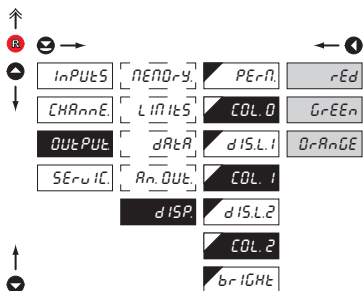


COL. Selection of display color

- the color selection is governed by setting under items "DIS.L1." and "DIS.L2."

- rEd** Red color
- GrEEEn** Green color
- OrAnGE** Orange color

- "COL 0." **DEF** = Green
- "COL 1." **DEF** = Orange
- "COL 2." **DEF** = Red


6.3.5c Selection of display color change

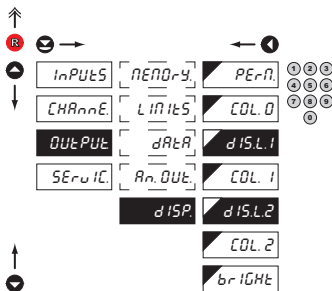**d15L.1** Selection of display color change

- under items "DIS.L.1" and "DIS.L.2" the limit is set for the time when the display color shall change

- "DIS.L.1." **DEF** = 9999
- "DIS.L.2." **DEF** = 9999


6.3.5d Selection of display brightness

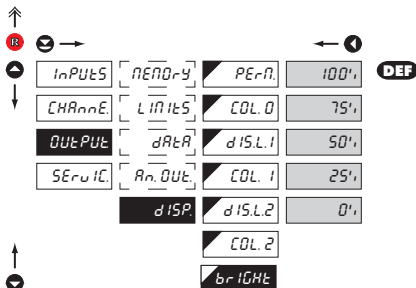**brIGHt** Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- Display is off
- after keystroke display turns on for 10 s
- Display brightness - 25%
- Display brightness - 50%
- Display brightness - 75%
- Display brightness - 100%


6.4 Setting "PROFI" - SERVICE

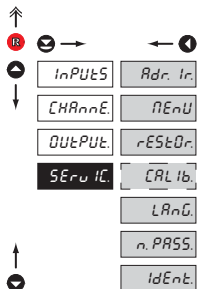

The instrument service functions are set in this menu

Adr. Ir.	Nastavení adresy IR ovládání
nEnŮ	Selection of menu type LIGHT/PROFI
rEStOr	Restore instrument manufacture setting and calibration
[CAL Ib]	Input range calibration for „DU“ version
LAnĚ	Language version of instrument menu
n.PASS	Setting new access password
IdEnt	Instrument identification


6.4.1 Setting the address of IR remote control

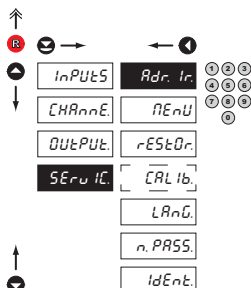

Adr. Ir. Setting the address of IR remote control

- setting the remote control address is inevitable only in case there are other large displays OMD 201 within the reach of IR remote control
- range of the setting is 0..99
- **DEF** = 0

6.4.2 Selection of type of programming menu

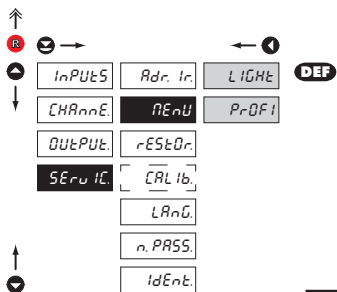

!
Change of setting is valid upon next access into menu

nEnU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills


L IGHt Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another

PrOFI Active PROF I menu

- complete programming menu for expert users
- tree menu

6.4.3 Restoration of manufacture setting

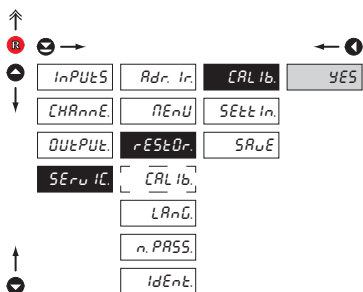

rEStOr. Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored

CAL Ib. Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm you selection „YES“


SEtIn. Restoration of instrument manufacture setting

tyPE Restoration of instrument manufacture setting

- generating the instrument setting for currently selected type of instrument (items marked DEF)

USEr Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

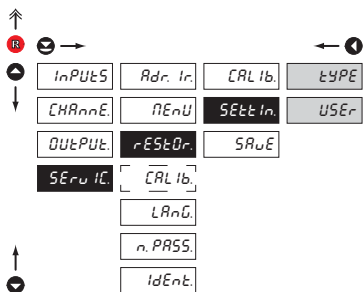

Jobs performed	Restore	
	Calibration	Setting
cancel USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancel or linearization tables	✓	✓
clears tare	✓	✓
clears conduct resistances	✓	✓
restore manufacture calibration	✓	✗
restore manufacture setting	✗	✓

SRU E


Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed

!
After restoration the instrument switches off for couple seconds

6.4.4 Calibration - Input range


DU

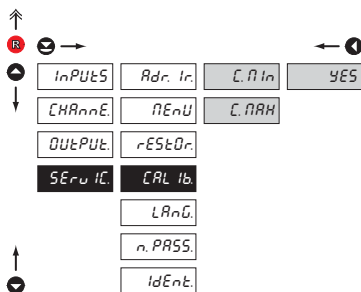

CAL Ib. Input range calibration

- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MAX" is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by „YES"

6.4.5 Selection of instrument menu language version

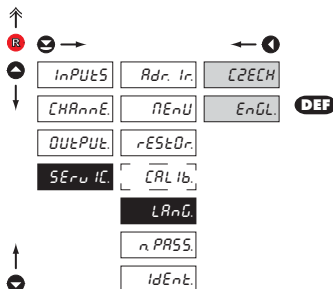

LANG.

Selection of instrument menu language version


CZECH

Instrument menu is in Czech

EnGL

Instrument menu is in English


6.4.6 Setting new access password

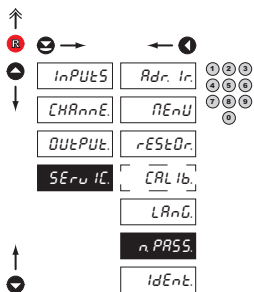

n.PASS. Setting new password for access to LIGHT and PROFi menu

- this selection enables changing number code that blocks the access into LIGHT and PROFi Menu.
- range of the number code is 0...9999
- universal password in the event of loss is „8177“


6.4.7 Instrument identification

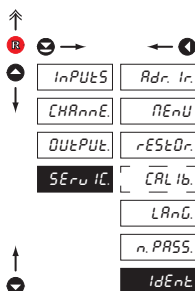

IdEnt. Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

7.0 Setting items into "USER" menu

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  item
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

Setting

flashing legend - current setting is displayed



n0

item will not be displayed in USER menu

YES

item will be displayed in USER menu with editing option

SHD U

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu



Example:

Into USER menu were selected these items


(keys ①) > CL. TAR., LIM 1, LIM 2, LIM 3, for which we have preset this sequence (keys ②):

CL. TAR.	5
LIM 1	0 (sequence not determined)
LIM 2	2
LIM 3	1

Upon entering USER menu

(key ③) items will be projected in the following sequence: LIM 3 > LIM 2 > CL.TAR. > LIM 1

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

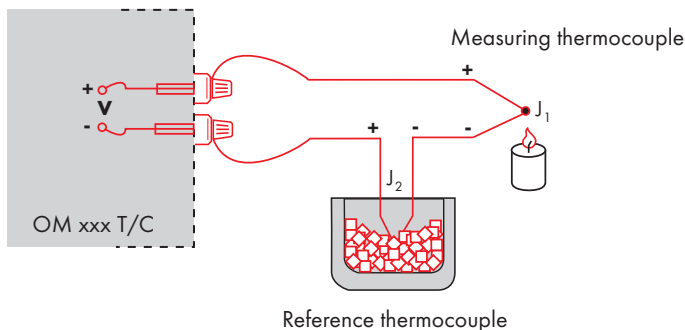

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set C0nECC in the instrument menu to InEzEC or EHtZtC
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu CJtEN its temperature (applies for setting C0nECC to EHtZtC)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu C0nECC to InEzEC . Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set C0nECC in the instrument menu to InEtEC or EHtEtC
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting C0nECC to EHtEtC)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Event	Type	Protocol	Transmitted data																	
Data solicitation (PC)	232	ASCII	#	A	A	<CR>														
		MessBus	No - data is transmitted permanently																	
	485	ASCII	#	A	A	<CR>														
		MessBus	<SADR>	<ENQ>																
Data transmission (instrument)	232	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>				
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
	485	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>				
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE>	1																
Confirmation of data acceptance (PC) - Bad			<NAK>																	
Sending address (PC) prior command			<EADR>	<ENQ>																
Confirmation of address (instrument)			<SADR>	<ENQ>																
Command transmission (PC)	232	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>					
		MessBus	<STX>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>					
	485	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>					
		MessBus	<SADR>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>					
Command confirmation (instrument)	232	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		MessBus	No - data is transmitted permanently																	
	485	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		MessBus	OK	<DLE>	1															
			Bad	<NAK>																
Command confirmation (inst.) - OK	485	MessBus	!	A	A	<CR>														
?			A	A	<CR>															
Instrument identification			#	A	A	1Y	<CR>													
HW identification			#	A	A	1Z	<CR>													
One-time transmission			#	A	A	7X	<CR>													
Repeated transmission			#	A	A	8X	<CR>													

LEGEND

#	35	23 _H	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal
<CR>	13	0D _H	Carriage return
<SP>	32	20 _H	Space
N, P			Number and command - command code
D			Data - usually characters "0"... "9", "-", ".", ";"; (D) - dp. and (-) may prolong data
R	30 _H ...3F _H		Relay and tare status
!	33	21 _H	Positive confirmation of command (ok)
?	63	3F _H	Negative confirmation of command (point)
>	62	3E _H	Beginning of transmitted data
<STX>	2	02 _H	Beginning of text
<ETX>	3	03 _H	End of text
<SADR>	address +60 _H		Prompt to send from address
<EADR>	address +40 _H		Prompt to accept command at address
<ENQ>	5	05 _H	Terminate address
<DLE>	16 49	10 _H 31 _H	Confirm correct statement
<NAK>	21	15 _H	Confirm error statement
<BCC>			Check sum -XOR

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00_H...FF_H. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

ERROR	CAUSE	ELIMINATION
<i>E. d. U_n</i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>E. d. O_n</i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>E. t. U_n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. t. O_n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. i. U_n</i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>E. i. O_n</i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. H_n</i>	A part of the instrument does not work properly	send the instrument for repair
<i>E. EE</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. dRtR</i>	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. CLr.</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7
0		!	"	#	\$	%	&	'	0	!	"	#	\$	%	&	'	
8	[]	H	+	,	-	.	/	8	()	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	:	;	<	=	>	?	24	8	9	:	;	<	=	>	?
32	J	A	B	C	D	E	F	G	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[\]	^	_	56	X	Y	Z	[\]	^	_
64	`	a	b	c	d	e	f	g	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w	80	p	q	r	s	t	u	v	w
88	H	Y	Z	{		}	~		88	x	y	z	{		}	~	

INPUT

range is adjustable

±60 mV	>100 MOhm
±150 mV	>100 MOhm
±300 mV	>100 MOhm
±1200 mV	>100 MOhm

DC

Input U
Input U
Input U
Input UVoltage of lin. pot. 2,5 VDC/6 mA
min. potentiometer resistance is 500 Ohm

DU

range is adjustable

±0,1 A	< 300 mV
±0,25 A	< 300 mV
±0,5 A	< 300 mV
±1 A	< 30 mV
±5 A	< 150 mV
±100 V	20 MOhm
±250 V	20 MOhm
±500 V	20 MOhm

DC - option "A"

Input I
Input I
Input I
Input I
Input I
Input U
Input U
Input U

range is adjustable

0/4...20 mA	< 400 mV
±2 V	1 MOhm
±5 V	1 MOhm
±10 V	1 MOhm
±40 V	1 MOhm

PM

Input I
Input U
Input U
Input U
Input U

range is adjustable

0...100 Ohm
0...1 kOhm
0...10 kOhm
0...100 kOhm
Autorange

OHM

Connection:

2, 3 or 4 wire

Pt xxxx

-200°...850°C

Pt xxxx/3910 ppm

-200°...1 100°C

Ni xxxx

-50°...250°C

Cu/4260 ppm

-50°...200°C

Cu/4280 ppm

-200°...200°C

Type Pt:

EU > 100/500/1 000 Ohm, with 3 850 ppm/°C

US > 100 Ohm, with 3 920 ppm/°C

RU > 50/100 Ohm, with 3 910 ppm/°C

Type Ni:

Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C

Type Cu:

Cu 50/Cu 100 with 4 260/4 280 ppm/°C

Connection:

2, 3 or 4 wire

RTD

range is adjustable in configuration menu

Type:

J (Fe-CuNi)	-200°...900°C
K (NiCr-Ni)	-200°...1 300°C
T (Cu-CuNi)	-200°...400°C
E (NiCr-CuNi)	-200°...690°C
B (PtRh30-PtRh6)	300°...1 820°C
S (PtRh10-Pt)	-50°...1 760°C
R (Pt13Rh-Pt)	-50°...1 740°C
N (Omegalloy)	-200°...1 300°C

T/C

PROJECTION

Display: 999999, intensive red/green/orange
7 segment LED, digit height 57 or 100 or 125 mm
Projection: ±9999 (-99999...999999)
Decimal point: adjustable - in menu
Brightness: adjustable - in menu

INSTRUMENT ACCURACY

TC: 100 ppm/°C
Accuracy: ±0,1 % of range + 1 digit
±0,15 % of range + 1 digit RTD, T/C
±0,3 % of range + 1 digit PWR

Above accuracies apply for projection 9999

Resolution: 0,01°/0,1°/1° RTD

Rate: 0,1...40 measurements/s**

Overload capacity: 10x (t < 100 ms) not for 400 V and 5 A,
2x (long-term)Linearisation: by linear interpolation in 50 points
- solely via OM LinkDigital filters: Averaging, Floating overage, Exponential filter, Rounding
Comp. of conduct: max. 40 Ohm/100 Ohm RTD
Comp. of cold junct.: adjustable T/C

0°...99°C or automatic

Functions: Tare - display resetting
Hold - stop measuring (at contact)
Lock - control key locking
MM - min/max value
Mathematic functionsOM Link: company communication interface for setting, operation
and update of instrument SW

Watch-dog: reset after 400 ms

Calibration: at 25°C and 40 % of r.h.

COMPARATOR

Type: digital, adjustable in menu
Mode: Hysteresis, From, Dosing
Limita: -99999...999999
Hysteresis: 0...999999
Delay: 0...99,9 s
Outputs: 4x relays with switch-off contact (Form C)
(230 VAC/50 VDC, 3 A)*
Relay: 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

* values apply for resistance load

DATA OUTPUTS

Protocols: ASCII, DIN MessBus, MODBUS-RTU, PROBUS
 Data format: 8 bit + no parity + 1 stop bit (ASCII)
 7 bit + even parity + 1 stop bit (MessBus)
 Rate: 600...230 400 Baud
 RS 232: isolated, two-way communication
 RS 485: isolated, two-way communication,
 addressing (max. 31 instruments)
 PROFIBUS Data protocol SIEMENS

ANALOGO OUTPUTS

Type: isolated, programmable with resolution of max.10 000 points, analog output corresponds with displayed data, type and range are adjustable
 Non-linearity: 0,2% of range
 TC: 100 ppm/°C
 Rate: response to change of value < 150 ms
 Voltage: 0...2 V/5 V/10 V
 Current: 0...5/20 mA/4...20 mA
 - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

MEASURED DATA RECORD

Type RTC: time-controlled logging of measured data into instrument memory, allows to log up to 250 000 values
 Type FAST: fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s
 Transmission: via data output RS 232/485 or via OM Link

EXCITABLE

Adjustable: 5...24 VDC/max. 1,2 W, isolated

POWER SUPPLY

Options: 10...30 V AC/DC, 15 VA, isolated,
 - fuse inside (T 4000 mA)
 80...250 V AC/DC, 15 VA, isolated
 - fuse inside (T 630 mA)

MECHANIC PROPERTIES

Material: anodized aluminum, black
 Dimensions: see chapter 13
 Panel cut-out: see chapter 13

OPERATING CONDITIONS

Connection: through cable bushings to terminal boards inside the instrument, conductor section up to <1,5 mm² /<2,5 mm²
 Stabilisation period: within 15 minutes after switch-on
 Working temp.: 0°...60°C
 Storage temp.: -10°...85°C
 Cover: IP64
 Construction: safety class I
 Overvoltage category: EN 61010-1, A2
 Insulation resistance: for pollution degree II, measurement category III
 instrum.power supply > 670 V (PI), 300 V (DI)
 Input/output > 300 V (PI), 150 (DI)
 EN 61000-3-2+A12; EN 61000-4-2, 3, 4, 5, 8, 11;
 EN 550222, A1, A2


**Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02


Front view



Side view



Panel cut-out

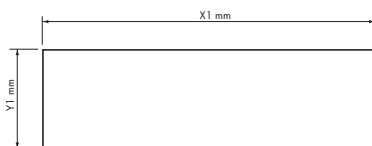


Height	X	Y	X1	Y1
57	372	116	364	108
100-4	465	181	457	173
100-6*	677	181	669	173
100-6	647	181	639	173
125-4	539	237	531	228
125-6	754	237	746	228

Tolerance: ± 1 mm

Panel thickness: 0,5 ... 50 mm

Wall mounting

As a standard, large displays are designed for panel installation. Upon request we may also supply a holder for wall mounting, see picture.

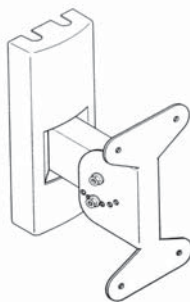

Product **OMD 201UNI A B**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Y E A R S

Stamp, signature

DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its full responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the type listed hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant statutory orders.

Product: 4/6-digit programmable large display

Type: **OMD 201**

Version: UNI, PWR, UQC, RS

Conformity is assessed pursuant to the following standards:

El. safety:	EN 61010-1
EMC:	EN 50131-1, chapter 14 and chapter 15
	EN 50130-4, chapter 7
	EN 50130-4, chapter 8
	EN 50130-4, chapter 9
	EN 50130-4, chapter 10
	EN 50130-4, chapter 11
	EN 50130-4, chapter 12
	EN 50130-4, chapter 13
	EN 50130-5, chapter 20
	prEN 50131-2-1, par. 9.3.1
	EN 61000-4-8
	EN 61000-4-9
	EN 61000-3-2 ed. 2:2001
	EN 61000-3-3: 1997, Cor. 1:1998, Z1:2002
	EN 55022, chapter 5 and chapter 6

and Ordinance on:

El. safety:	No. 168/1997 Coll.
EMC:	No. 169/1997 Coll.

The evidence are the protocols of authorized and accredited organizations:

VTÚE Praha, experimental laboratory No. 1158, accredited by ČIA
VTÚPV Vyškov, experimental laboratory No. 1103, accredited by ČIA

Place and date of issue: Prague, 12. Juni 2001

Miroslav Hackl v.r.
Company representative

Mode of asses. of conformity §12, par. 4 b, d Act No. 22/1997 Coll.