

# USER MANUAL

## OMD 202UNI

---

4/6 DIGIT PROGRAMMABLE  
LARGE DISPLAY

DC VOLTMETER/AMMETER

PROCESS MONITOR

OHMMETER

THERMOMETER FOR PT 100/500/1 000

THERMOMETER FOR NI 1 000

THERMOMETER FOR THERMOCOUPLES

DISPLAYS FOR LIN. POTENTIOMETERS



*Outstanding Measurement Value*

## SAFETY INSTRUCTIONS

Please read and observe the enclosed safety instructions carefully!

Installation, all operations, maintenance and service must be carried out by qualified personnel only and in accordance with the enclosed information and safety regulations.

The manufacturer is not responsible for any damage caused by improper installation, configuration, maintenance and service of the device.

The device must be installed correctly according to the actual application. Improper installation may cause malfunction, which may result in damage to the unit or an accident.

The device uses dangerous voltage that can cause a fatal accident. The unit must be disconnected from the power supply before starting troubleshooting (in case of malfunction) or before dismantling the unit. For safety information, EN 61 010-1 + A2 must be observed.

When removing or inserting an electronics card, observe the safety instructions and follow the recommended procedures. Disconnect the unit from power supply before inserting / extracting any electronics cards.

Do not attempt to repair or modify the device yourself. In case of malfunction the device must be dismantled and submitted to the manufacturer for repair.

These devices should be protected by either individual or shared fuses (circuit breakers)!



The device is not intended for installation in explosive areas. Use the device only outside the explosive areas.

## TECHNICAL SPECIFICATIONS

Instruments of the OMD 202 series comply with the EU 2014/30/EU a 2014/35/EU directive and meet the following European standards:

EN 61010-1	Electrical safety
EN 61326-1	Electrical measuring, control and laboratory equipment - EMC requirements "Industrial Area"
IEC 980: 1993, c. 6	Seismic resistance

The device is suitable for unlimited use in agricultural and industrial areas.

 <b>DANGER</b> 	 <b>WARNING</b> 	 <b>ATTENTION</b>
<b>RISK OF ELECTRIC SHOCK</b> - Disconnect all power supply and live wires before servicing.  Failure to follow this instruction will result in death or serious injury.	<b>RISKS ASSOCIATED WITH USE</b> - Do not use this product in a safety critical system. - Do not disassemble, repair or modify the product. - Do not use the product outside the recommended operating conditions.  Failure to follow these instructions may result in death, serious injury, or damage to the equipment	<b>RISKS ASSOCIATED WITH USE</b> - Install a 100 mA fuse  Failure to observe this precaution could result in personal injury or equipment damage.

This electrical equipment may be installed, operated and maintained only by qualified personnel. ORBIT MERRET assumes no responsibility for any consequences arising from the use of this equipment.

<b>1. CONTENTS</b> .....	<b>3</b>
<b>2. INSTRUMENT DESCRIPTION</b> .....	<b>4</b>
<b>3. INSTRUMENT CONNECTION</b> .....	<b>6</b>
Measuring ranges.....	6
Termination of RS 485 communication line.....	6
Instrument connection.....	7
Recommended connection of sensors .....	8
<b>4. INSTRUMENT SETTING</b> .....	<b>10</b>
Symbols used in the instructions.....	12
Setting the DP and the (-) sign .....	12
Control keys function.....	13
Setting/permitting items into "USER" menu.....	13
<b>5. SETTING "LIGHT" MENU</b> .....	<b>14</b>
5.0 Description "LIGHT" menu .....	15
Setting input - Type "DC" .....	18
Setting input - Type "PM" .....	20
Setting input - Type "OHM".....	22
Setting input - Type "RTD - Pt".....	24
Setting input - Type "RTD - Ni".....	26
Setting input - Type "T/C" .....	28
Setting input - Type "DU" .....	20
Setting input - Type "RTD - Cu" .....	32
Setting Limits.....	34
Setting analog output .....	36
Setting display colors.....	38
Setting the address of IR remote control .....	40
Selection of programming menu „LIGHT"/„PROFI".....	40
Restoration of manufacture setting .....	40
Calibration - input range (DU).....	41
Selection of instrument menu language version.....	42
Setting new access password .....	43
Instrument identification .....	43
<b>6. SETTING "PROFI" MENU</b> .....	<b>44</b>
6.0 Description of "PROFI" menu.....	44
6.1 "PROFI" menu - INPUT.....	44
6.1.1 Resetting internal values .....	48
6.1.2 Setting measuring type, range, mode, rate, ...	49
6.1.3 Setting the Real Time.....	53
6.1.4 External input function selection .....	53
6.1.5 Optional accessory functions of the keys... ..	54
6.2 "PROFI" menu - CHANNEL.....	54
6.2.1 Setting measuring parameters (projection, filters, decimal point, description) .....	58
6.2.2 Setting mathematic functions .....	61
6.2.3 Selection of evaluation of min/max. value .....	63
6.3 "PROFI" menu - OUTPUT.....	63
6.3.1 Selection of excitation .....	65
6.3.2 Setting Limits.....	65
6.3.3 Setting data output.....	69
6.3.4 Setting analog output.....	69
6.3.5 Selection of display projection .....	71
6.4 "PROFI" menu - SERVICE.....	74
6.4.1 Setting the address of IR remote control .....	74
6.4.2 Selection of programming menu „LIGHT"/„PROFI".....	75
6.4.3 Restoration manufacture setting .....	76
6.4.4 Calibration - input range (DU).....	77
6.4.5 Selection of instr. menu language version .....	77
6.4.6 Setting new access password .....	78
6.4.7 Instrument identification .....	78
<b>7. SETTING ITEMS INTO "USER" MENU</b> .....	<b>80</b>
<b>8. METHOD OF MEASURING OF THE COLD JUNCTION</b> .....	<b>82</b>
<b>9. DATA PROTOCOL</b> .....	<b>83</b>
<b>10.ERROR STATEMENTS</b> .....	<b>85</b>
<b>11.TABLE OF SYMBOLS</b> .....	<b>86</b>
<b>12.INSTRUMENT DIMENSIONS AND INSTALATION</b> .....	<b>87</b>
<b>13.TECHNICAL DATA</b> .....	<b>88</b>
<b>14.CERTIFICATE OF GUARANTEE</b> .....	<b>90</b>
<b>DECLARATION OF CONFORMITY</b> .....	<b>91</b>



## 2. INSTRUMENT DESCRIPTION

### 2.1 DESCRIPTION

The OMD 202 model series are 4/6 digit large panel programmable displays designed for maximum efficiency and user comfort while maintaining their favourable price. It comes either with a 3-colour LED display (red/green/orange) or with High Brightness LEDs (red or green with brightness of 1 300 mcd).

Type OMD 202UNI is a multifunction instrument with the option of configuration for <sup>8</sup> various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to <sup>4</sup> (applies for PM).

The instrument is based on an <sup>8</sup>-bit microcontroller with a multichannel <sup>24</sup>-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

### THE OMD 202 IS A MULTIFUNCTION INSTRUMENT AVAILABLE IN FOLLOWING TYPES AND RANGES

<b>UNI</b>	DC: $\pm 60/\pm 150/\pm 300/\pm 1200$ mV PM: 0...5 mA/0...20 mA/4...20 mA/ $\pm 2$ V/ $\pm 5$ V/ $\pm 10$ V/ $\pm 40$ V OHM: 0...100 $\Omega$ /0...1 k $\Omega$ /0...100 k $\Omega$ RTD-Pt: Pt 50/100/Pt 500/Pt 1 000 RTD-Cu: Cu 50/Cu 100 RTD-Ni: Ni 1 000/Ni 10 000 T/C: J/K/T/E/B/S/R/N/L DU: Linear potentiometer (min. 500 $\Omega$ )
<b>UNI - A</b>	DC: $\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A/ $\pm 2$ A/ $\pm 5$ A/ $\pm 100$ V/ $\pm 250$ V/ $\pm 500$ V
<b>UNI - B</b>	PM: 3x 0...5 mA/0...20 mA/4...20 mA/ $\pm 2$ V/ $\pm 5$ V/ $\pm 10$ V/ $\pm 40$ V

### PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
Projection:	-9999...9999 (-99999...999999)

### COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

### LINEARIZATION

Linearization:\* by linear interpolation in 50 points (solely via OM Link)

### DIGITAL FILTERS

Floating average:	from 2...30 measurements
Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

### MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

\* only for types DC, PM, DU

**EXTERNAL CONTROL**

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value

**2.2 OPERATION**

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

<b>LIGHT</b>	<b>Simple programming menu</b> - contains solely items necessary for instrument setting and is protected by optional number code
<b>PROFI</b>	<b>Complete programming menu</b> - contains complete instrument menu and is protected by optional number code
<b>USER</b>	<b>User programming menu</b> - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

**OMLINK** The operation program is freely accessible ([www.orbit.merret.cz](http://www.orbit.merret.cz)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

**2.3 OPTIONS**

**Excitation** is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

### 3. INSTRUMENT CONECTION

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

#### MEASURING RANGES

TYPE	INPUT I	INPUT U
DC		0..60/150/300/1 200 mV
PM	0...5/20 mA/4...20 mA	±2/±5/±10/±40 V
OHM	0...100 Ω/1 kΩ/10 kΩ/100 kΩ/Auto	
RTD-Pt	Pt 50/100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N/L	
DU	Linear potentiometer (min. 500 Ω)	

#### OPTION "A"

TYPE	INPUT I	INPUT U
DC	±0,1 A/±0,25 A/±0,5 A proti GND (C) ±2 A/±5 A proti GND (B)	±100 V/±250 V/±500 V proti GND (C)

#### OPTION "B"


TYPR	INPUTS 2, 3, 4/I	INPUTS 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	±2/±5/±10/±40 V


#### Termination of RS 485 communication line

##### X3 - Termination of communication line RS 485

Full	Significance	Default	Recommendation
1-2	connect L+ to (+) source	terminalconnected	connect at the end of line do not disconnect
3-4	termination of line 120 Ohm	disconnected	
5-6	connect L- to (-) source	terminalconnected	

RS 485 line should have a linear structure - wires (ideally shielded and twisted) should lead from one device to another.

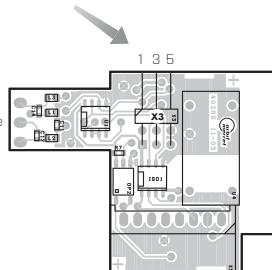


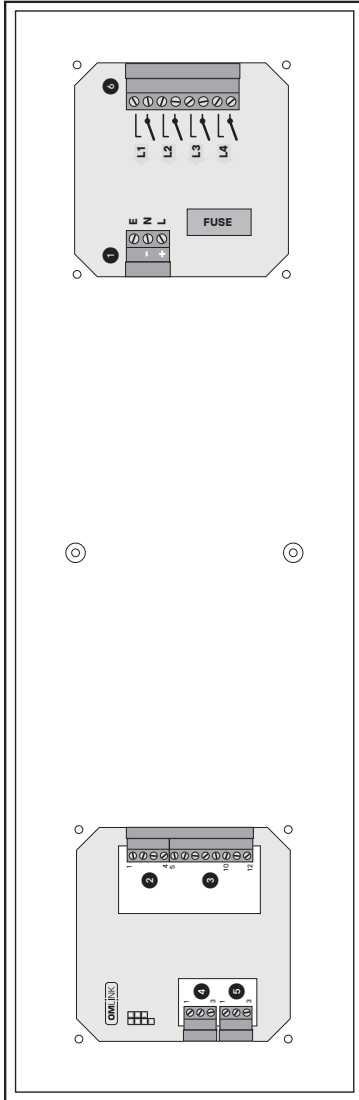

- 1** Power supply
- 2** External inputs
- 3** Relays\*



- 4** Analog output\*
- 5** Input
- 6** Data output\*

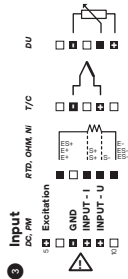

- 3** Input

- 6** Data output\*



Maximum of 250 mA may be connected to "INPUT - I" (bracket no. 8) , i.e. 10-times range overload.

Mind the correct connection/mistaking of current - voltage input.


Destruction of measuring resistance in current input (15R) may occur.

\*Option




### 3. INSTRUMENT CONECTION

Example connection of a 2-wire sensor with current signal output powered by instrument's excitation

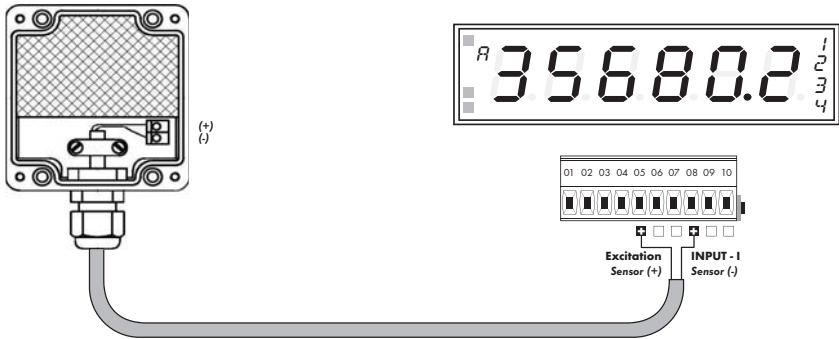


Example connection of a 3-wire sensor with current signal output powered by instrument's excitation

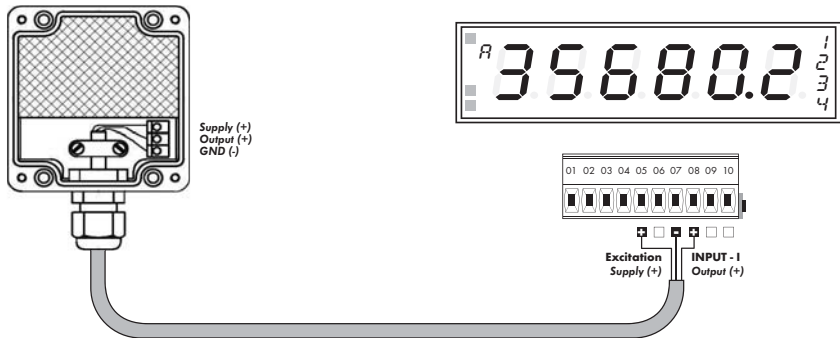




Example connection of 3-wire sensor with voltage signal output powered by instrument's excitation

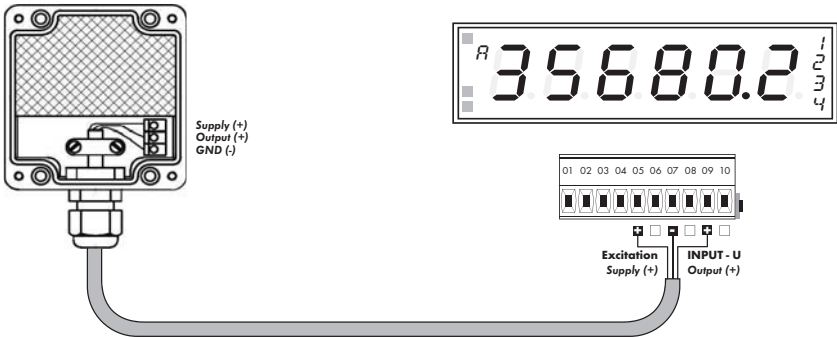

Example connection of resistance measurement using 4 wires

By connecting resistor R\* we eliminate error message E. I.O.V. (input overflow) when the measured resistance is disconnected

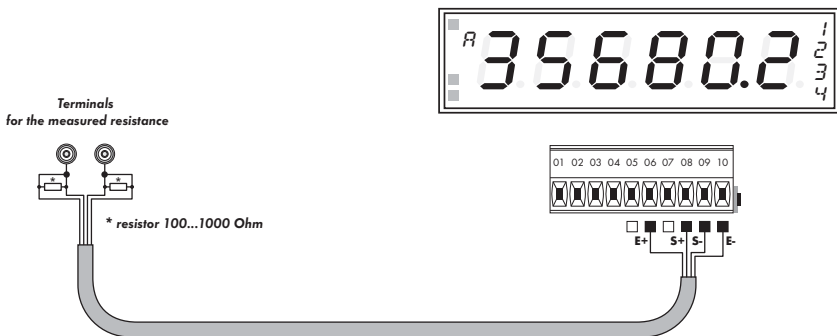



## SETTING PROFI

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

## SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

## SETTING USER

For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

## 4.1 SETTING


The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT**      **Simple programming menu**
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI**      **Complete programming menu**
- contains complete instrument menu and is protected by optional number code
- USER**      **User programming menu**
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
  - acces without password

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible ([www.orbit.merret.cz](http://www.orbit.merret.cz)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

## Scheme of processing the measured signal

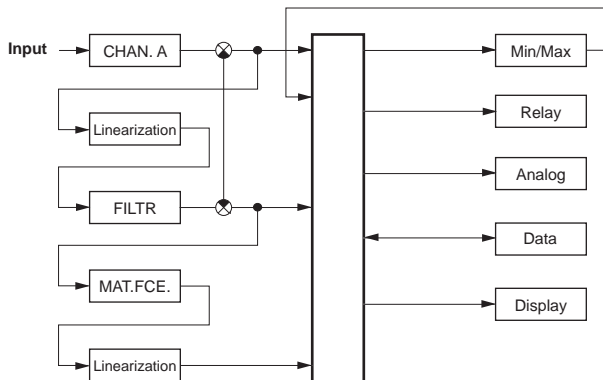

## 4. INSTRUMENT SETTING

Setting and controlling the instrument is performed by means of the Remote control. With the aid of the Remote control it is possible to browse through the operation menu and to select and set the required values.

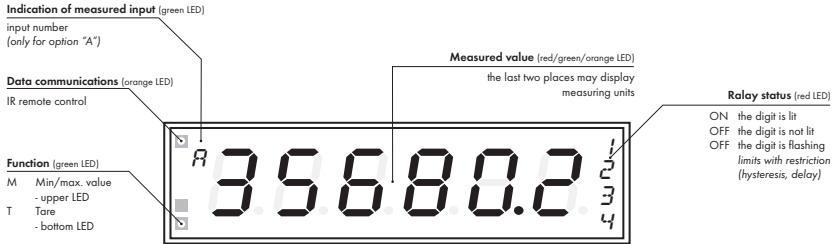

### Symbols used in the instructions

**DC PM**

**DU OHM RTD T/C** Indicates the setting for given type of instrument

**DEF** values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

30 continues on page 30

### Setting the decimal point and the minus sign











#### DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by .

#### THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

KEY	MEASUREMENT	MENU	SETTING NUMBERS/SELECTION
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade*
	programmable key function	move to previous item	move down*
	programmable key function	move to next item	move up*
	programmable key function	confirm selection	confirm setting/selection
	access into LIGHT/PROFI menu		
>3 s 	direct access into PROFI menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	
	cancellation of address instrument/remote controller		

\* alternatively, the setting may be done from the numeric keys of the remote control by selecting directly the number required


Setting items into „USER“ menu

- in **LIGHT** or **PROFI** menu
- no items permitted in **USER** menu from manufacture
- on items marked by inverted triangle


# USER

legend is flashing - current setting is displayed



 item will not be displayed in USER menu

 item will be displayed in USER menu with the option of setting

 item will be solely displayed in USER menu

## 5. SETTING LIGHT

# SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

### Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	<b>DEF</b>

Access password

1420 PASS 0

Type of instruments: TYPE PN Measuring range: NOdE 4-20mA

**RTD OHM**  
 COncEC 2-wire F0-n.A 00000.0

**T/C**  
 COncEC 6Ht. ItC C.d.tEEn 23 F0-n.A 00000.0

**DC PM OHM DU**  
 nIn.A 0 nAh.A 100 F0-n.A 0000.00

Selecting projection and connection

LIn.L1 20 LIn.L2 40 LIn.L3 60 LIn.L4 80  
 Option - comparator

tYP.A.O. 4-20mA nIn.A.O. 0 nAh.A.O. 100  
 Option - Analog output

Primary color: COL.0 GrEEEn First color limit: d15.L1 33.33 Color beyond first limit: COL.1 0-rAnGE Second color limit: d15.L2 66.67

Color beyond second limit: COL.2 red Remote controller address: Adr.in 0

Menu type: nEU LIGHT Return to manuf. calibration: rE.CAL YES Return to manufacture setting: rE.SEt TYPE


**DU** Calibration - only for "DU"  
 C.nIn YES C.nAh YES

Language selection: LAnG ENGL New password: PAS.L1 0 Identification: IdEnt YES Type instrument: YES SW version: 0Ad 202Un1 78-001 Input: PN

Return to measuring mode 1420

! Upon delay exceeding 60s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

# 5. SETTING LIGHT

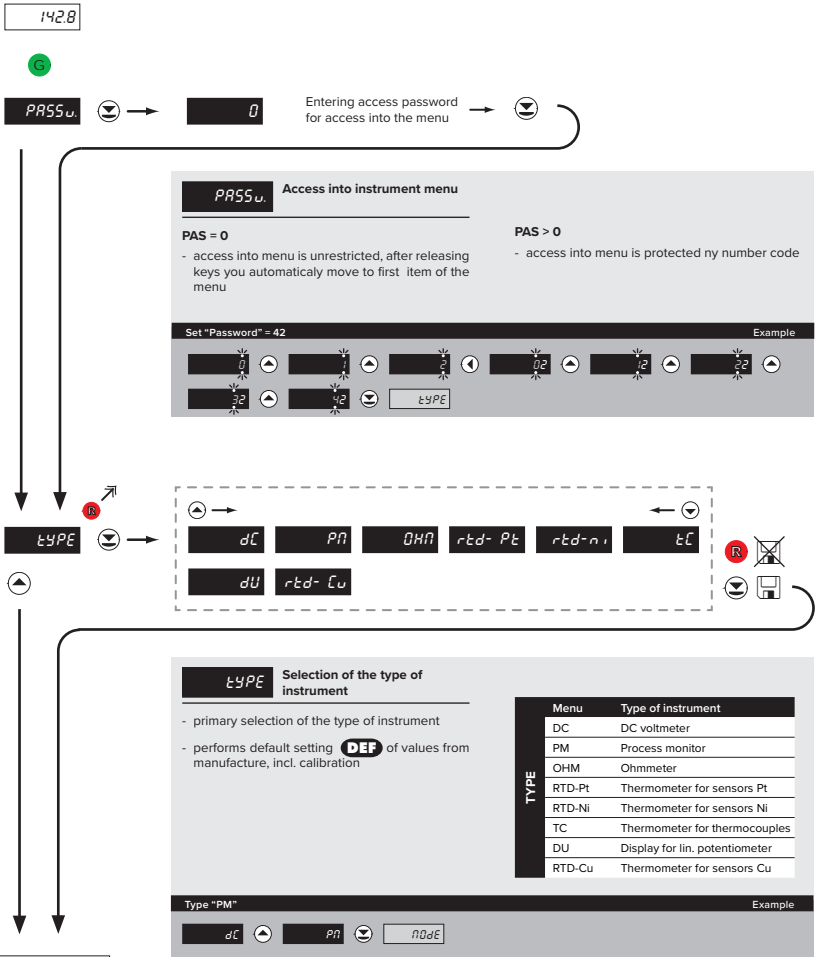

Type „DC“	18
Type "PM"	20
Type "OHM"	22
Type "RTD-Pt"	24
Type "RTD-Ni"	26
Type "T/C"	28
Type "DU"	30
Type "RTD-Cu"	32





## 5. SETTING LIGHT

MEASURING MODE > DC

Type "DC"



**n0dE** Selection of the instrument measuring range

**DEF** = 60 mV

**DEF** = 500 V\*

\* only for option "A"

Menu	Measuring range
60 mV	±60 mV
150 mV	±150 mV
300 mV	±300 mV
1200mV	±1,2 V
100 V	±100 V
250 V	±250 V
500 V	±500 V
0.10 A	±0,1 A
0.25 A	±0,25 A
0.50 A	±0,5 A
1.00 A	±1 A
5.00 A	±5 A

Range ±150 mV Example

60 nV   150 nV   n1nR



**n1nR** Setting display projection for minimum value of input signal


- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mV > MINA = 0 Example

n1nR

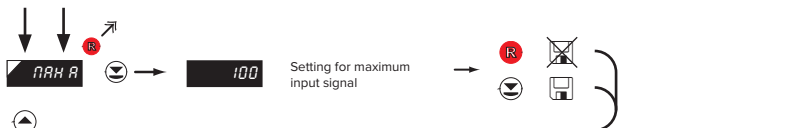


**n.n.n.n** **Setting display projection for maximum value of input signal** **DEF = 100**

- the DP is automatically shifted after the value is confirmed
- range of the setting is -99999...999999
- position of the DP does not affect display projection

Projection for 150 mV > MAX A = 3500 Example

100	100	100	200	300	400
500	0500	1500	2500	3500	F0.n.n

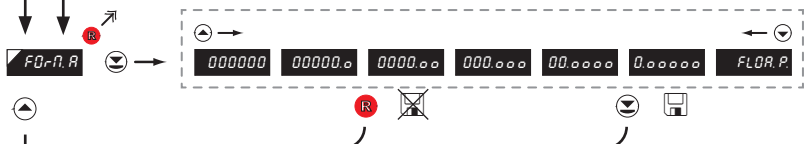

**F0.n.n** **Setting projection of the decimal point** **DEF = 0000.00**

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00	00000.0	COL.0
---------	---------	-------

\*subsequent item on the menu depends on instrument equipment

# 5. SETTING LIGHT



MEASURING MODE > PM



**n0dE Selection of the instrument measuring range**

**DEF** = 4 - 20 mA

Menu	Range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0-2 V	±2 V
0-5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V
Er:4-20	4...20 mA, with error statement of „underflow“ upon signal smaller than 3.36 mA

Range 0...20 mA Example

4-20 nA | 0-20 nA | nIn A



**nIn A Setting display projection for minimum value of input signal**

- range of the setting is -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for 0 mA > MIN A = -25 Example

0 | 0.5 | 1 | 5 | 10 | 50 | 100 | 1000 | 10000 | 100000 | 1000000 | 10000000 | 100000000 | 1000000000

0.5 | -5 | -0.5 | -5 | -2.5 | 1000000000 | nIn A

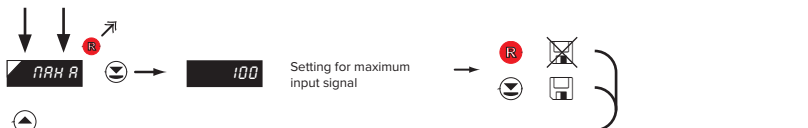

**MAX A** Setting display projection for maximum value of input signal

- the DP is automatically shifted after the value is confirmed
- range of the setting is -99999...999999
- position of the DP does not affect display projection

**DEF** = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	200	300	400
500	500	500	2500	FO-A.R	



**FO-A.R** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

**DEF** = 0000.00


Projection of DP on display > 00000.0 Example


0000.00	00000.0	COL D	
---------	---------	-------	--

\*subsequent item on the menu depends on instrument equipment

# 5. SETTING LIGHT

MEASURING MODE > OHM

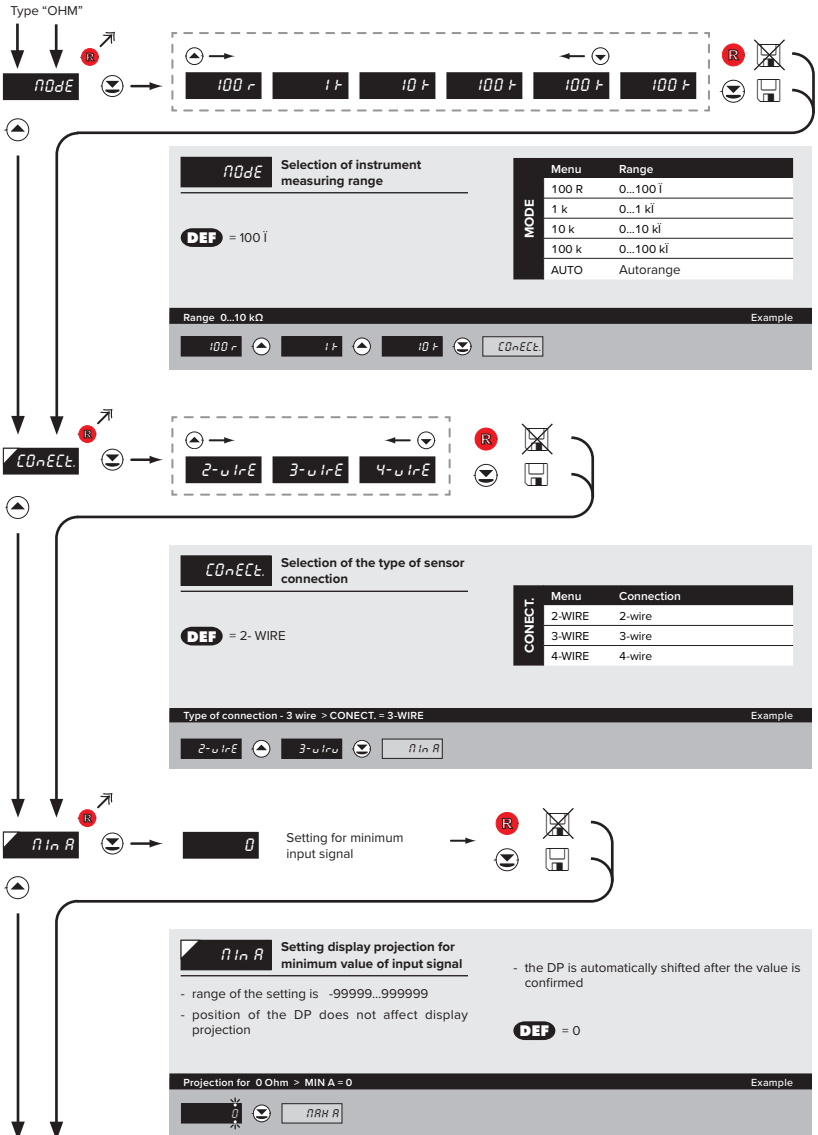

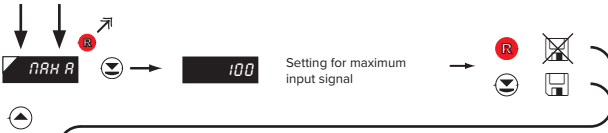


**nA.H.R.** Setting display projection for maximum value of input signal

- the DP is automatically shifted after the value is confirmed
- range of the setting is -99999...999999
- position of the DP does not affect display projection

**DEF** = 100

Projection for 10 kOhm > MAX A = 10000 Example

100	100	100	000	0000	00000
10000	FD-n.R				

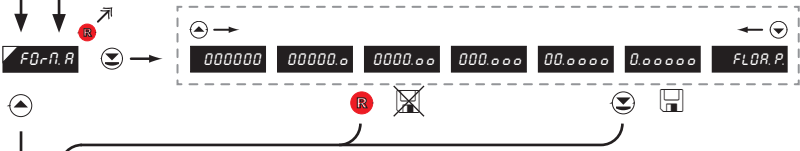

**FD-n.R.** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

**DEF** = 0000.00

Projection of DP on display > 00000.0 Example

0000.00	00000.0	COL.0
---------	---------	-------

\*subsequent item on the menu depends on instrument equipment

## 5. SETTING LIGHT



MEASURING MODE > RTD-Pt

Type "RTD-Pt"

RTD

EU-100 EU-500 EU-1k0 US-100 US-100 US-100

RTD

RTD

RTD Selection of instrument measuring range

DEF = Pt 100

Menu	Range
EU-100	Pt 100 (3 850 ppm/°C)
EU-500	Pt 500 (3 850 ppm/°C)
EU-1k0	Pt 1000 (3 850 ppm/°C)
US-100	Pt 100 (3 920 ppm/°C)
RU-50	Pt 50 (3 910 ppm/°C)
RU-100	Pt 100 (3 910 ppm/°C)

Range - Pt 1 000 > MODE = EU-1k0 Example

EU-100 EU-500 EU-1k0 CONECT

CONECT

2-wire 3-wire 4-wire

RTD

CONECT Selection of the type of sensor connection

DEF = 2- WIRE

Menu	Connection
2-WIRE	2-wire
3-WIRE	3-wire
4-WIRE	4-wire

Type of connection - 3 wire > CONNEC = 3-WIRE Example

2-wire 3-wire F0-R-R





**F0-r.R** Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

---

Projection of DP on display > 000000 Example

00000.0    000000    00.0


\*subsequent item on the menu depends on instrument equipment

34

# 5. SETTING LIGHT



MEASURING MODE > RTD-Ni

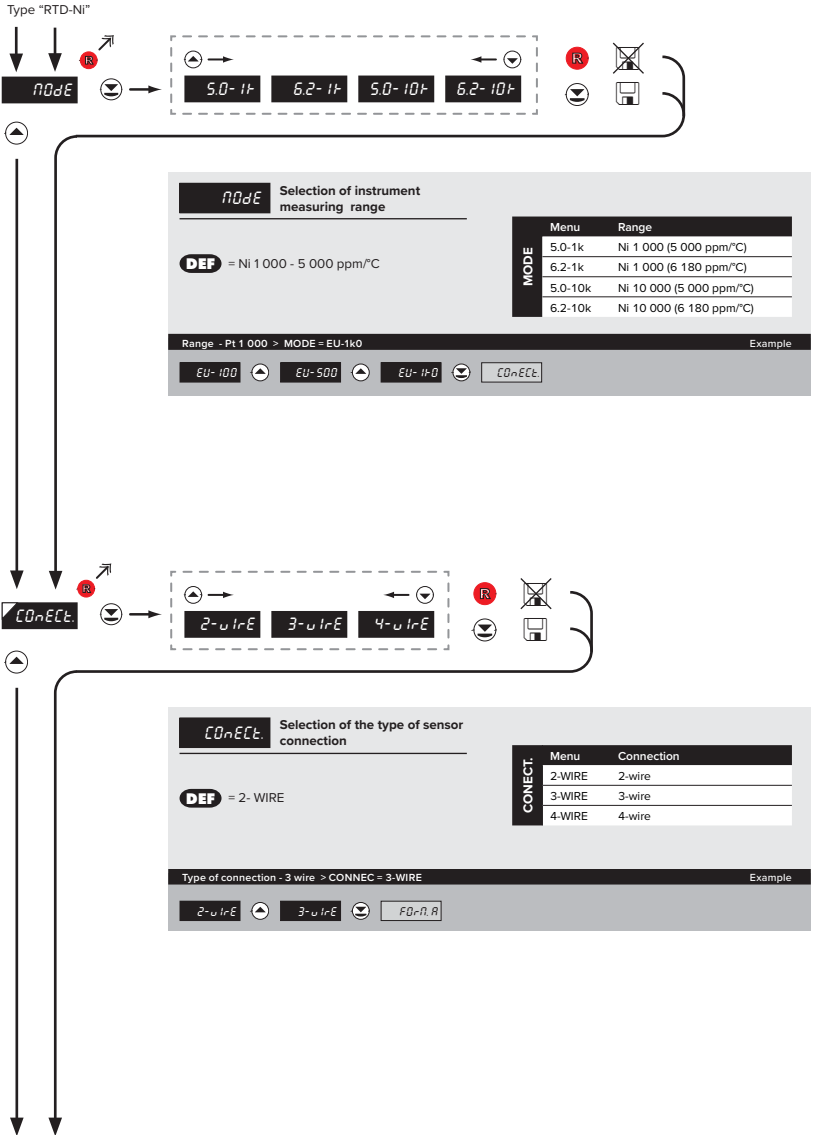



**FO-R.R** Setting projection of the decimal point

**DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

---


Projection of DP on display > 000000 Example


00000.0    000000    COLD

\*subsequent item on the menu depends on instrument equipment

# 5. SETTING LIGHT

MEASURING MODE > T/C

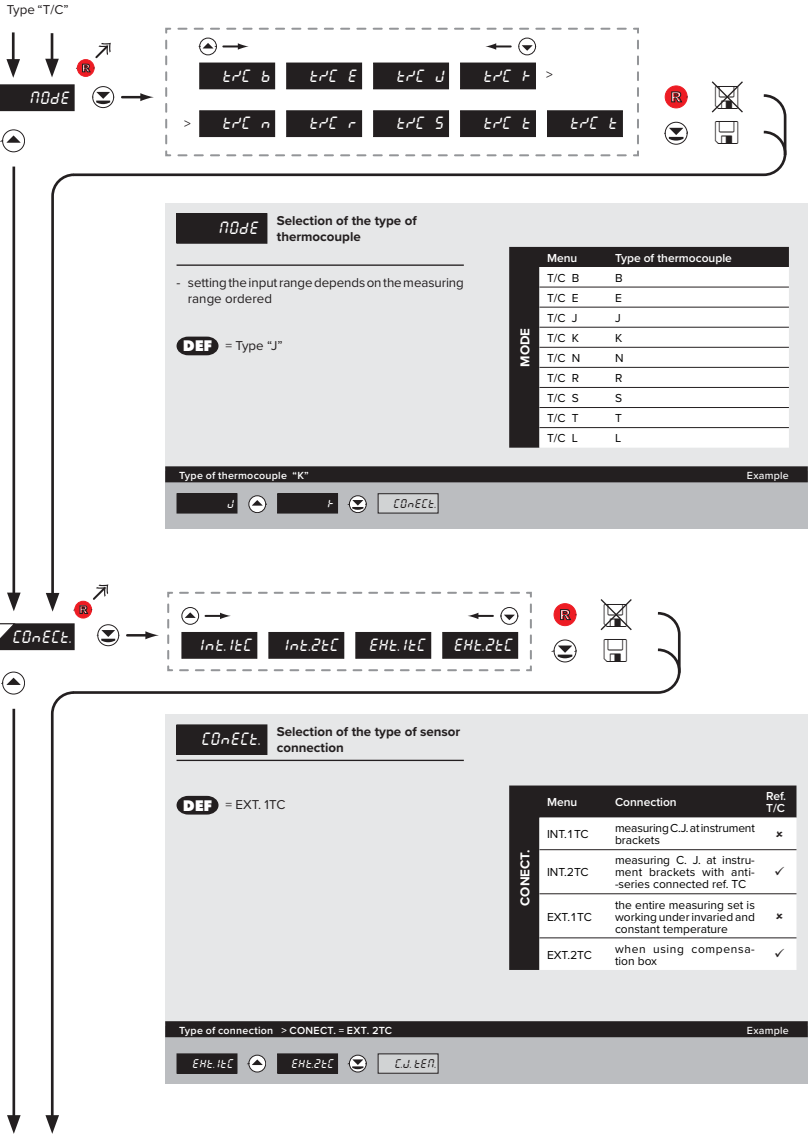

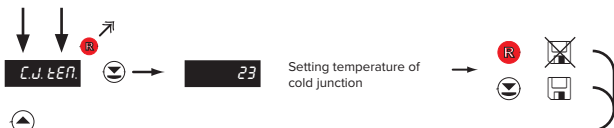

**C.J. TEM.** Setting temperature of cold junction

- range 0...99°C with compensation box

**DEF** = 23

Setting temperature of cold junction > C.J. TEM. = 35 Example

23 24 25 25 35 F0-n.R



**F0-n.R.** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

**DEF** = 00000.0

Projection of DP on display > 000000 Example

00000.0 000000 COL.0 \*subsequent item on the menu depends on instrument equipment


! For thermocouple type "B" the items CONECT. and C.J. TEM. are not available

! Method and procedure of setting the cold junctions is described in separate chapter on page 80



# 5. SETTING LIGHT

MEASURING MODE > DU

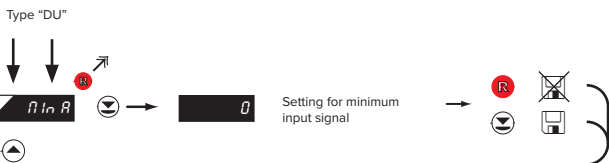


**n.n.R** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 0

Projection for the beginning > MIN A = 0 Example

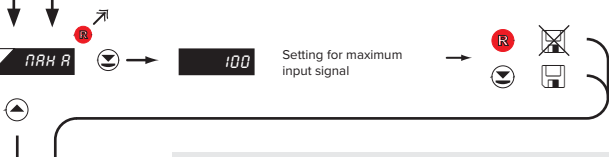


**n.n.R** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

**DEF** = 100

Projection for the end > MAX A = 5000 Example

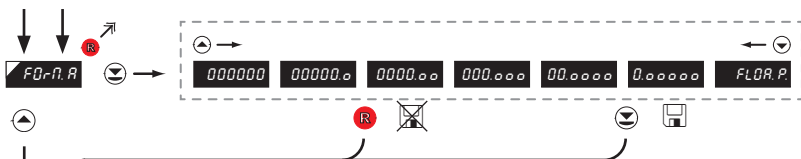

**F0-r-n.R** Setting projection of the decimal point **DEF** = 0000.00

- positioning of the DP is set here in the measuring mode

Projection of DP on display = 0000.00 Example

**0000.00**  \*subsequent item on the menu depends on instrument equipment


34

Calibration of the beginning and the end of range of linear potentiometer is on page 41



## 5. SETTING LIGHT

MEASURING MODE > RTD-Cu

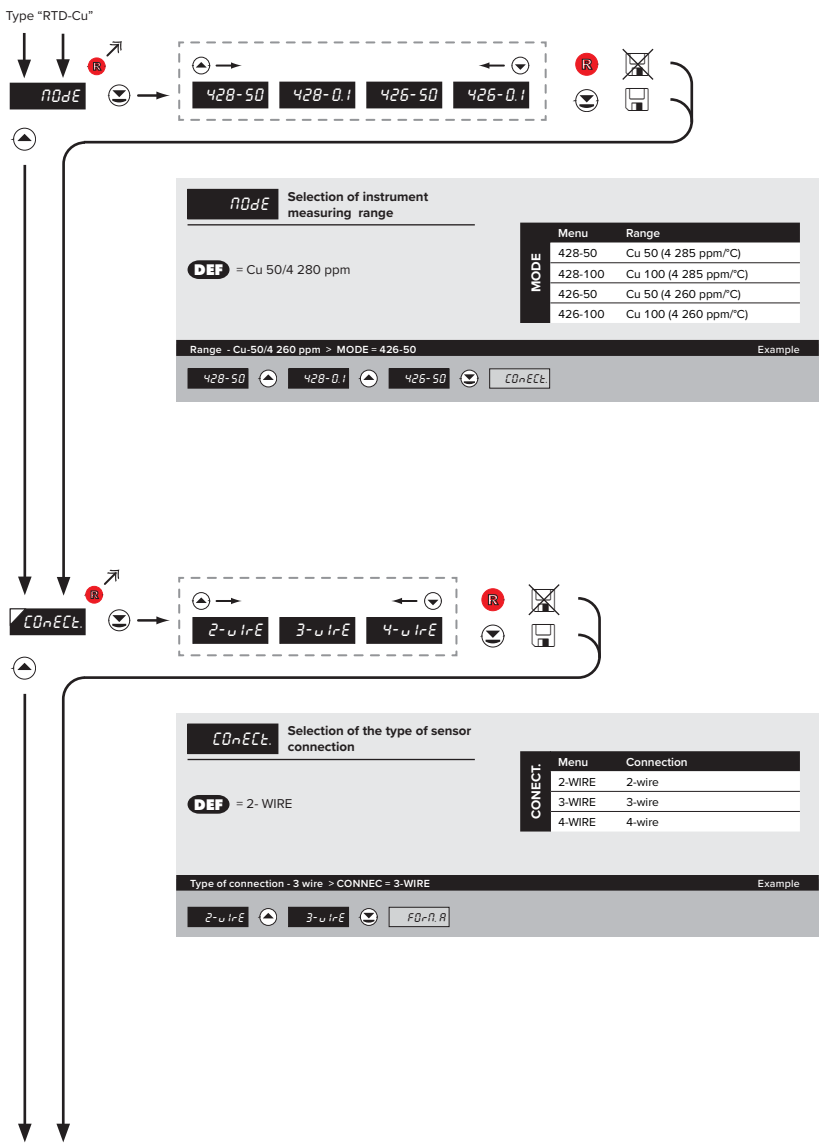





**F0-r.n.R** Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

---


Projection of DP on display > 000000 Example

00000.0	000000	CCLD
---------	--------	------

\*subsequent item on the menu depends on instrument equipment

## 5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > COMPARATORS

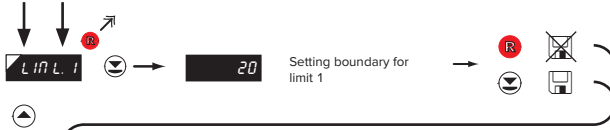

**LIM L.1** Setting boundary for limit 1


- range of the setting is -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 20  
**DEF** „Hysteresis“=0, „Delay“=0

---

Setting limit 1 > L 1 = 32 Example

20 21 22 23 24 25 COL 0

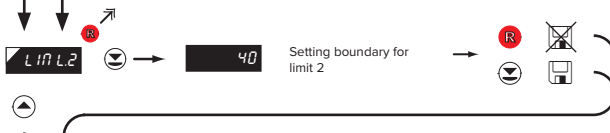

**LIM L.2** Setting boundary for limit 2

- range of the setting is -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 40  
**DEF** „Hysteresis“=0, „Delay“=0

---

Setting limit 2 > L 2 = 53.1 Example

40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 000531 000532 000533 COL 0

\* subsequent item on the menu depends on instrument equipment

**!**  
Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



**LIM L3** Setting boundary for limit 3

- range of the setting is -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 60  
**DEF** „Hysteresis“=0, „Delay“=0

Setting limit 3 > L3 = 85 Example

60	61	62	63	64	65
65	75	85	COL 0	* subsequent item on the menu depends in instrument equipment	



**LIM L4** Setting boundary for limit 4

- range of the setting is -99999...999999
- contingent modification of hysteresis or delay may be performed in "PROFI" menu

**DEF** = 80  
**DEF** „Hysteresis“=0, „Delay“=0

Setting limit 4 > L4 = 103 Example

80	81	82	83	83	93
03	003	103	COL 0	* subsequent item on the menu depends on instrument equipment	

## 5. SETTING LIGHT



DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT

↑ ↓ ↻

**TYP.A.O.**

0-20 mA   Er.4-T   4-20 T   ...   0-5 u   0-10 u   4-10 u

↻

↑ ↓ ↻

**Min.A.O.**

0

Assigning the display value to the beginning of the AO range

↻

↑ ↓ ↻

**Min.A.O.**

**Min.A.O.** Assigning the display value to the beginning of the AO range

- range of the setting is -99999...999999

**DEF** = 0

Display value for the beginning of the AO range > MIN A.O. = 0

0 Min.A.O.

↻

↑ ↓ ↻

**TYP.A.O.**

**Setting the type of analog output**

Menu	Range	Description
0-20mA	0...20 mA	
Er.4-T	4...20 mA	signaling interrupted current loop and displaying an error message (<3,6 mA)
4-20T	4...20 mA	signaling broken current loop (<3,6 mA)
Er.4-20mA	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0-5mA	0...5 mA	
0-2 V	0...2 V	
0-5 V	0...5 V	
0-10 V	0...10 V	
+10 V	±10 V	

**DEF** = 4...20 mA

Type of analog output - 0...10 V > TYP. A.O. = 0-10 V Example

4-20 mA   0-5 mA   0-2 u   0-5 u   0-10 u   Min.A.O.

↻

**!**

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



**MAX A.O.** Assigning the display value to the end of the AO range

- range of the setting is -99999...999999

**DEF** = 100

Display value for the end of the AO range > MAX A.O. = 120 Example


100 100 110 120 COL.D


DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT




## 5. SETTING LIGHT

APPLICABLE ONLY TO 3-COLOUR DISPLAY

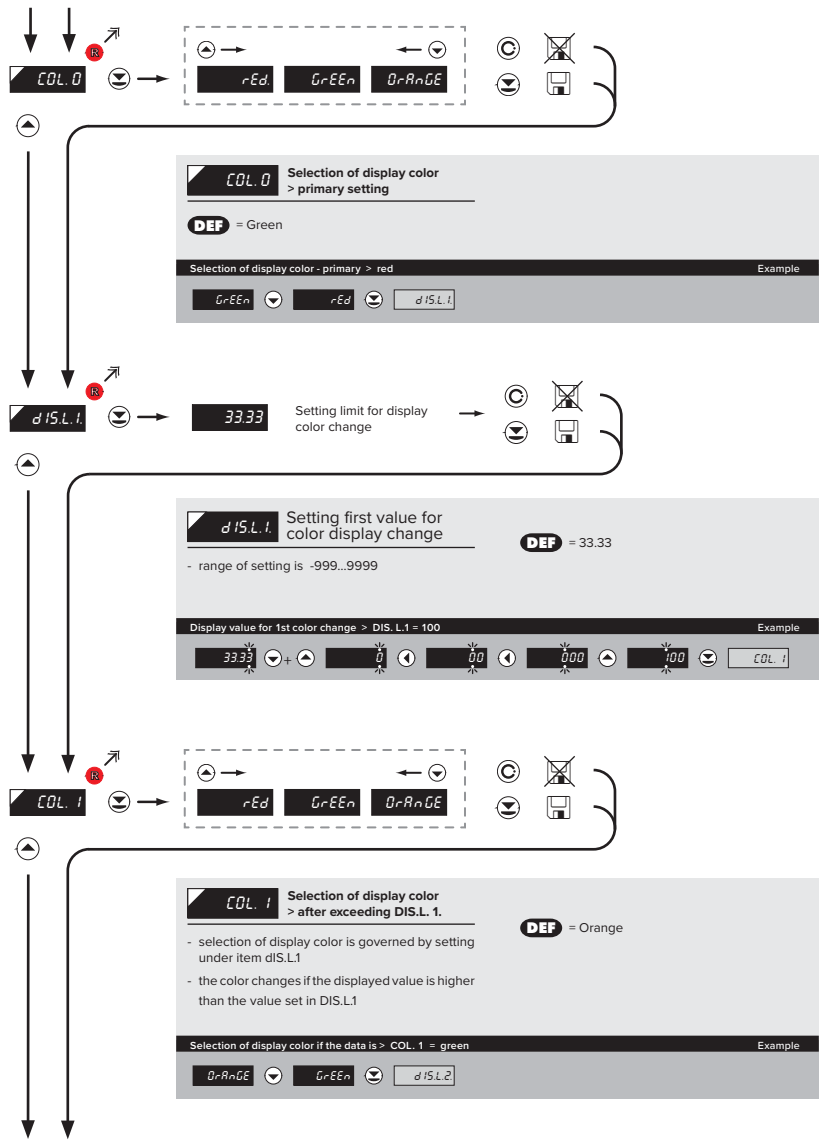


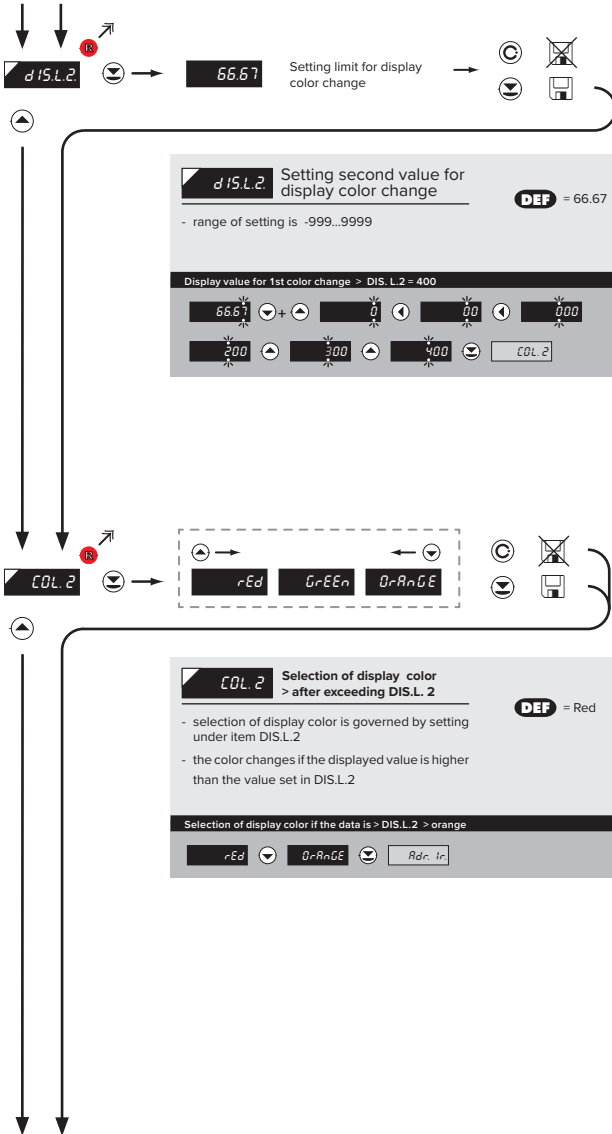

## 5. SETTING LIGHT

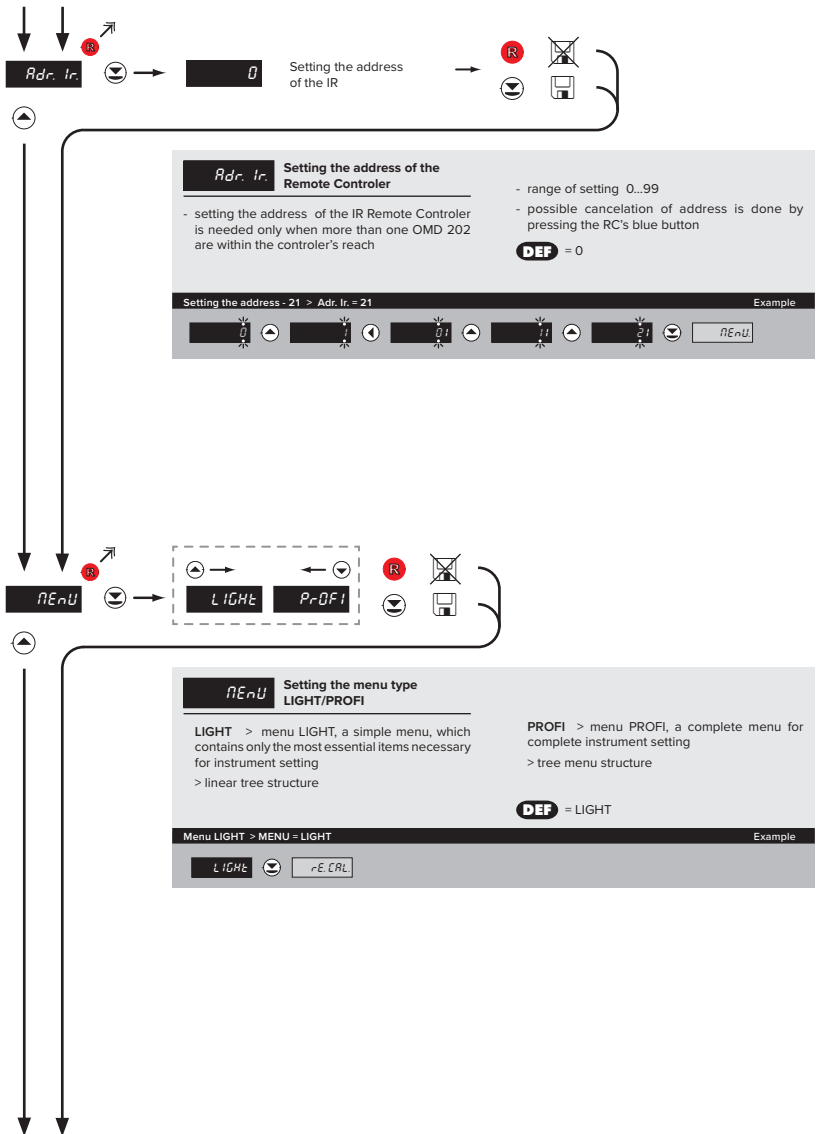



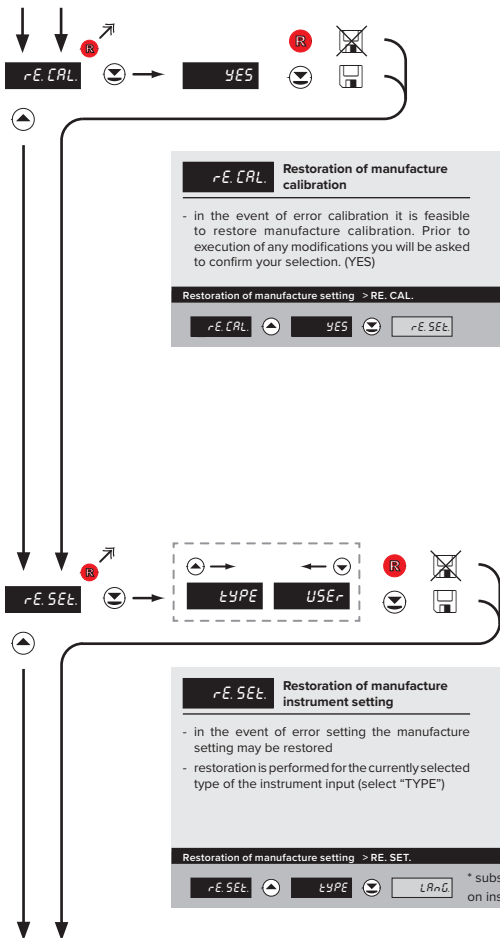

**rE.CAL.** **Restoration of manufacture calibration**

- in the event of error calibration it is feasible to restore manufacture calibration. Prior to execution of any modifications you will be asked to confirm your selection. (YES)

Restoration of manufacture setting > RE. CAL. Example

rE.CAL. **YES** rE.SET.

**rE.SET.** **Restoration of manufacture instrument setting**

- in the event of error setting the manufacture setting may be restored

- restoration is performed for the currently selected type of the instrument input (select "TYPE")

- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")

- loading manufacture calibration and primary setting of items on the menu (DEF)

Restoration of manufacture setting > RE. SET. Example


rE.SET. **TYPE** LANG

\* subsequent item on the menu depends on instrument type, for "DU" > "C. MIN"

Type „DC“		43
Type "PM"		43
Type "OHM"		43
Type "RTD-Pt"		43
Type "RTD-Ni"		43
Type "T/C"		43
Type "DU"		42
Type "RTD-Cu"		43

## 5. SETTING LIGHT

MEASURING MODE > DU

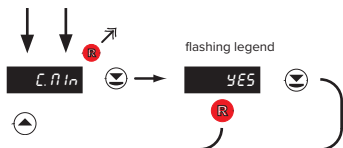

flashing legend

**C. MIN** Calibration of input range -  
the potentiometer traveller in  
initial position


Only for type "DU"

- prior confirming the flashing "YES" sign the  
potentiometer traveller has to be in given idle  
position

Calibration of the beginning of the range > C. MIN

Example

YES C. MAX

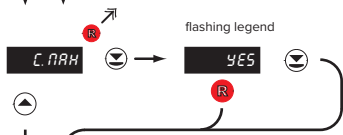

flashing legend

**C. MAX** Calibration of input range -  
the potentiometer traveller in  
end position


Only for type "DU"

- prior confirming the flashing "YES" sign the  
potentiometer traveller has to be in given idle  
position

Calibration of the end of the range > C. MAX

Example

YES L. MIN

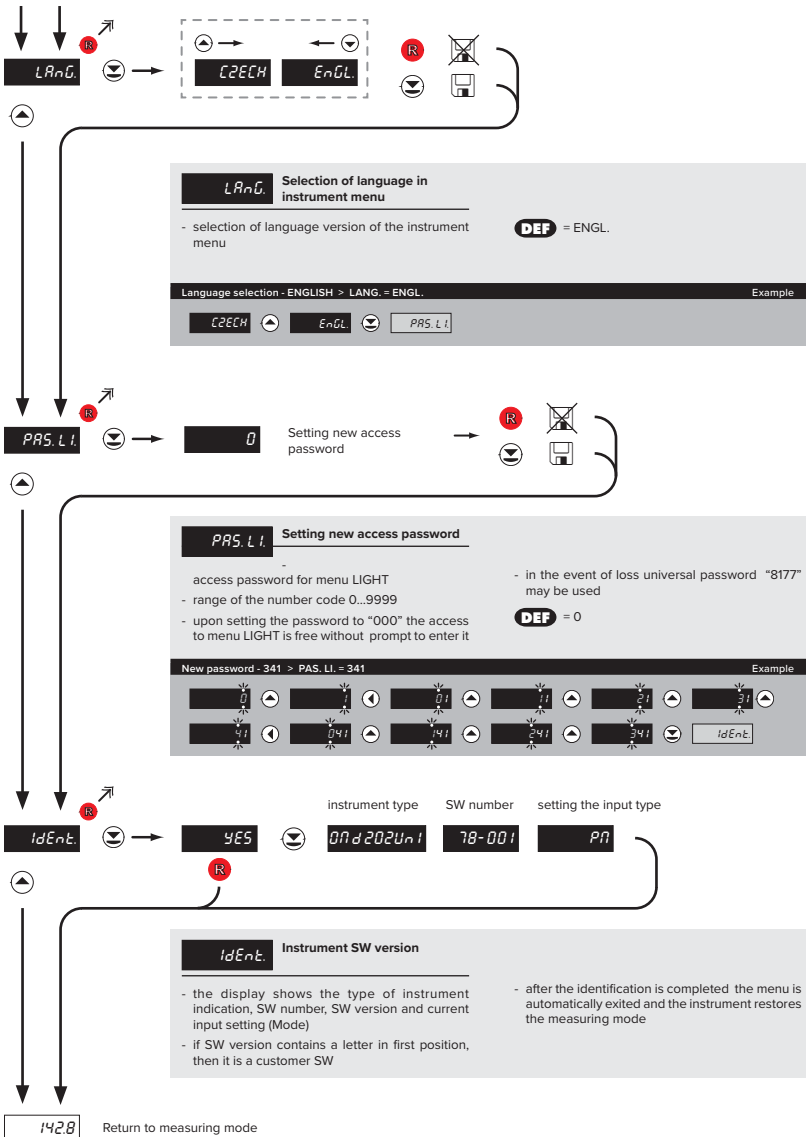

# SETTING PROFI

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

6.0

SETTING "PROFI"

**PROFI**

**Complete programming menu**

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

Switching over to "PROFI" menu

>3 s



- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item SERVIC. > MENU
- password protected access (unless set as follows under the item SERVIC. > N. PASS. > **PROFI** =0)




- access to menu selected under item SERVIC. > MENU > LIGHT/PROFI
- password protected access (unless set as follows under the item SERVIC. > N. PASS. > **LIGHT** =0)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used




# 6. SETTING PROFI

Programming schem

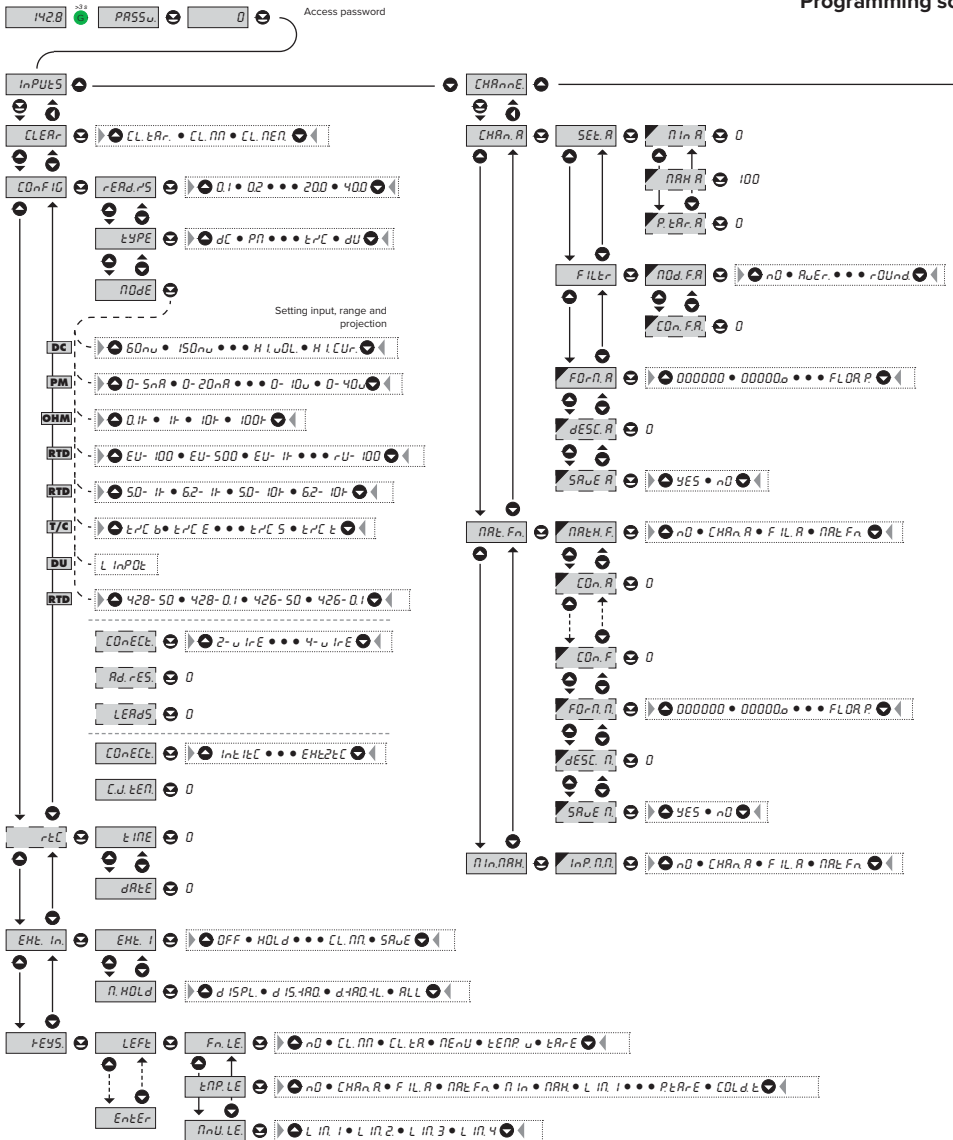


Scheme PROFIL MENU

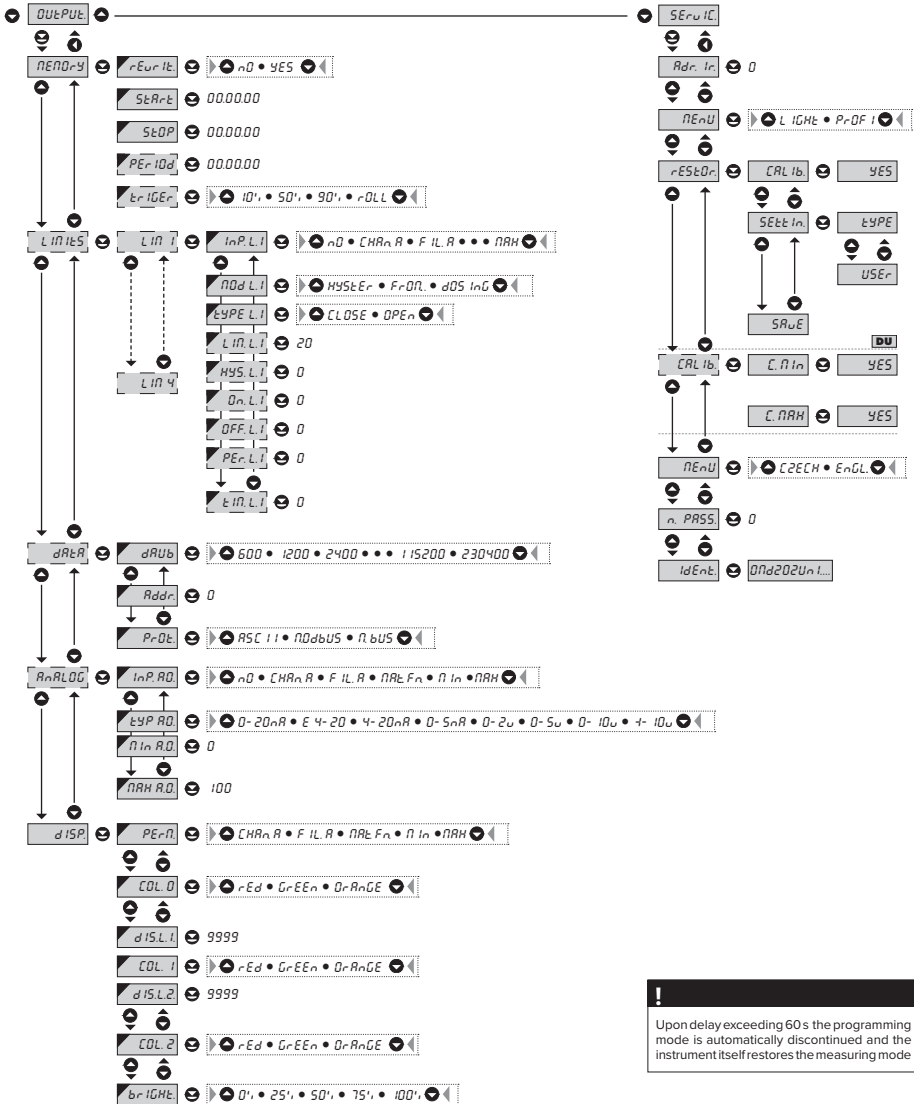

**!** Upon delay exceeding 60s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

## 6. SETTING PROFI


### 6.1 SETTING "PROFI" - INPUT

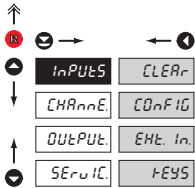

The primary instrument parameters are set in this menu

CLEAR	Resetting internal values
COnFIG.	Selection of measuring range and parameters
EHt. In	Setting external inputs functions
tEYS	Assigning further functions to keys on the instrument

### 6.1.1 RESETTING INTERNAL VALUES

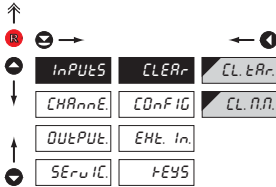

CLEAR Resetting internal values

CL.tAr. Tare resetting

CL.nA. Resetting min/max value

- resetting memory for the storage of minimum and maximum value achieved during measurement



## 6.1.2a SELECTION OF MEASURING RATE

↑	⊖	→		←	⊕		
⊕	⊖		<b>INPUTS</b>	CLEAR	rERd.rS	40.0	
⊖			CHAnnE	COnF.ID	tYPE	20.0	
			OUTPULt	EHt. In	AdDE	10.0	
			SEruIL	tEYS	COncEt	5.0	<b>DEF</b>
					C.J.tEEn	2.0	
					Ad.rES	1.0	
					LEAdS	0.5	
						0.2	
						0.1	
↑	⊖						

**rERd.rS** Selection of measuring rate

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s

## 6.1.2b SELECTION OF „INSTRUMENT“ TYPE

↑	⊖	→		←	⊕		
⊕	⊖		<b>INPUTS</b>	CLEAR	rERd.rS	dC	
⊖			CHAnnE	COnF.ID	tYPE	Pn	<b>DEF</b>
			OUTPULt	EHt. In	AdDE	OhM	
			SEruIL	tEYS	COncEt	rtd-Pt	
					C.J.tEEn	rtd-n	
					Ad.rES	tC	
					LEAdS	dU	
						rtd-Cu	
↑	⊖						

**tYPE** Selection of „instrument“ type

- selection of particular type of "instrument" is bound to relevant dynamic items

dC	DC voltmeter
Pn	Process monitor
OhM	Ohmmeter
rtd-Pt	Thermometer for Pt xxx
rtd-n	Thermometer for Ni xxxx
tC	Thermometer for thermocouples
dU	Display for linear potentiometers
rtd-Cu	Thermometer for Cu xxx

# 6. SETTING PROFI

## 6.1.2c SELECTION OF MEASURING RANGE

↑

⊖

⊕

DC

OHM

←

⊖

⊕

INPUTS	CLEAR	READRS	60nV	100r	DEF
CHANNE	CONFID	TYPE	150nV	1t	
OUTPUT	EXT. In	MODE	300nV	10t	
SERUI	TEYS	COEFFE	1200nV	100t	
		CJ. tEN		AUTO	
		Ad. rES			
		LEAdS			

	DC - A	PM
	100u	0-5nA
	250u	0-20nA
DEF	500u	4-20nA
	0.10 A	0-2 u
	0.25 A	0-5 u
	0.50 A	0-10 u
	1.00 A	0-40 u
	5.00 A	Er:4-20

	RTD-Pt	RTD-Cu
DEF	EU-100	428-50
	EU-500	428-0.1
	EU-1t0	426-50
	US-100	426-0.1
	rU-50	
	rU-100	

	T/C
	tPc b
DEF	RTD-Ni
	tPc E
	5.0-1t
	tPc J
	6.2-1t
	tPc t
	5.0-10t
	tPc n
	6.2-10t
	tPc r
	tPc S
DEF	DU
	LIn.PDE
	tPc t

**!**

Switching in the mode AUTO - "OHM"

0.1 > 1 k	0.101 k
1 k > 10 k	1.010 k
10 k > 100 k	10.10 k
100 > 10 k	9.900 k
10 k > 1 k	0.990 k
1 k > 0.1 k	0.099 k

When selecting the "AUTO" range, the items "MIN", "MAX", "P. TAR, A" will not be displayed in the "CHAN. A" setting



node		Selection of instrument measuring range	
DC	Menu	Measuring range	
	60 mV	±60 mV	
	150 mV	±150 mV	
	300 mV	±300 mV	
	1200mV	±1.2 V	
DC - A	Menu	Measuring range	
	100 V	±100 V	
	250 V	±250 V	
	500 V	±500 V	
	0.10 A	±0.1 A	
	0.25 A	±0.25 A	
	0.50 A	±0.5 A	
	1.00 A	±1 A	
	5.00 A	±5 A	
PM	Menu	Measuring range	
	0-5mA	0..5 mA	
	0-20mA	0..20 mA	
	4-20mA	4..20 mA	
	0-2 V	±2 V	
	0-5 V	±5 V	
	0-10 V	±10 V	
	0-40 V	±40 V	
	Er:4-20	4..20 mA, with error statement of "underflow" upon signal smaller than 3.36 mA	
OHM	Menu	Measuring range	
	100 R	0..100 Ω	
	1k	0..1 kΩ	
	10 k	0..10 kΩ	
	100 k	0..100 kΩ	
	AUTO	Autorange	
RTD-PT	Menu	Measuring range	
	EU-100	Pt 100 (3 850 ppm/°C)	
	EU-500	Pt 500 (3 850 ppm/°C)	
	EU-1k0	Pt 1000 (3 850 ppm/°C)	
	US-100	Pt 100 (3 920 ppm/°C)	
	RU-50	Pt 50 (3 910 ppm/°C)	
	RU-100	Pt 100 (3 910 ppm/°C)	
RTD-NI	Menu	Measuring range	
	5.0-1k	Ni 1 000 (5 000 ppm/°C)	
	6.2-1k	Ni 1 000 (6 180 ppm/°C)	
	5.0-10k	Ni 10 000 (5 000 ppm/°C)	
	6.2-10k	Ni 10 000 (6 180 ppm/°C)	
RTD-CU	Menu	Measuring range	
	428-50	Cu 50 (4 280 ppm/°C)	
	428-0.1	Cu 100 (4 280 ppm/°C)	
	426-50	Cu 50 (4 260 ppm/°C)	
	426-0.1	Cu 100 (4 260 ppm/°C)	
T/C	Menu	Type of thermocouple	
	T/C B	B	
	T/C E	E	
	T/C J	J	
	T/C K	K	
	T/C N	N	
	T/C R	R	
	T/C S	S	
	T/C T	T	
	T/C L	L	

6.1.2d SELECTION OF TYPE OF SENSOR CONNECTION

RTD OHM T/C

Navigation icons: ↑, ↓, ←, →, [RE], [DEF]

INPUTS	CLEAR	rERd.rS	2-wIrE	DEF
CHARnE	COnt.FiG.	tYPE	3-wIrE	
OUt.PUt.	EHt. In.	NOdE	4-wIrE	
SEruiL.	tEYS	COntECT.		
		Ad.rES.		
		LEAdS		

Navigation icons: ↑, ↓, ←, →, [RE], [DEF]

INPUTS	CLEAR	rERd.rS	InE.1tC	DEF
CHARnE	COnt.FiG.	tYPE	InE.2tC	
OUt.PUt.	EHt. In.	NOdE	EHt.1tC	
SEruiL.	tEYS	COntECT.	EHt.2tC	
		C.J.tEEn.		

COntECT. Selection of type of sensor connection

RTD OHM

2-w IrE 2-wire connection

3-w IrE 3-wire connection

4-w IrE 4-wire connection

T/C

InE.1tC Measurement without reference thermocouple

- measuring cold junction at instrument brackets

InE.2tC Measurement with reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

EHt.1tC Measurement without reference thermocouple

- the entire measuring set is working under invaried and constant temperature

EHt.2tC Measurement with reference thermocouple

- when using compensation box

! Method and procedure of setting the cold junctions is described in separate chapter on page 80


! For thermocouple type "B" the items CONECT. and C.J. TEM. are not available



## 6. SETTING PROFI

### 6.1.2e SETTING TEMPERATURE OF COLD JUNCTION

T/C

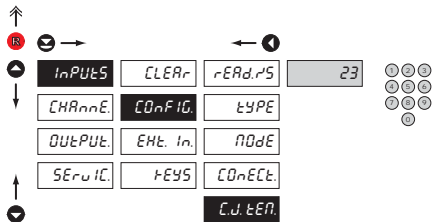


**C.J.tEN** Setting temperature of cold junction

- range 0...99°C with compensation box

- **DEF** = 23°C

### 6.1.2f COMPENSATION OF 2-WIRE CONDUCT

RTD OHM

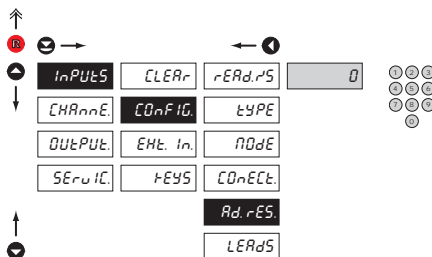

**Ad.rES** Offset of the beginning of the measuring range


- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head

- entered directly in Ohm (0...9999)

- **DEF** = 0

### 6.1.2g COMPENSATION OF 2-WIRE CONDUCT

RTD OHM

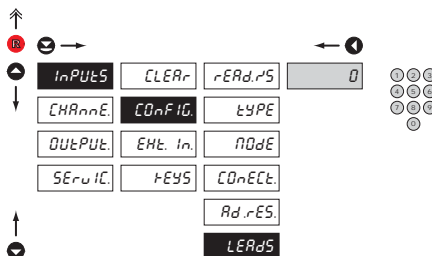


**LEAdS** Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection

- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit

- **DEF** = 0


6.1.3a EXTERNAL INPUT FUNCTION SELECTION

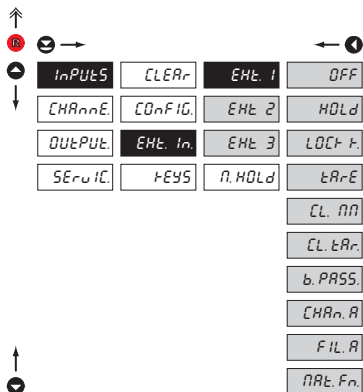

EXT. In External input function selection	
OFF	Input is off
HOLD	Activation of HOLD
LOCK F.	Locking keys on the instrument
TARE	Tare activation
CL AN	Resetting min/max value
CL TAR	Tare resetting
b PASS	Activation of locking access into programming menu
LIGHT/PROFI	
CHAN, A	Displaying value of "Channel A"
FIL, A	Displaying value of "Channel A" after being processed by digital filters
MATH, FN	Displaying value of "Mathematical function"
<ul style="list-style-type: none"> <li>- <b>DEF</b> EXT.1 &gt; HOLD</li> <li>- <b>DEF</b> EXT.2 &gt; LOCK K.</li> <li>- <b>DEF</b> EXT.3 &gt; TARE</li> </ul>	
<p><b>*</b></p> <p>Setting procedure is identical for EXT. 2 and EXT. 3</p>	

## 6. SETTING PROFI


### 6.1.3b SELECTION OF FUNCTION "HOLD"

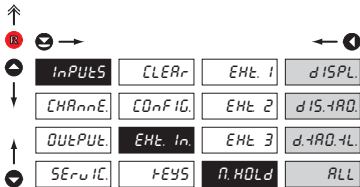

#### **HOLD** Selection of function "HOLD"

DISPL	"HOLD" locks only the value displayed
DIS.ARD.	"HOLD" locks the value displayed and on AO
d.ARD.dL	"HOLD" locks the value displayed, on AO and limit evaluation
ALL	"HOLD" locks the entire instrument

### 6.1.4a OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS

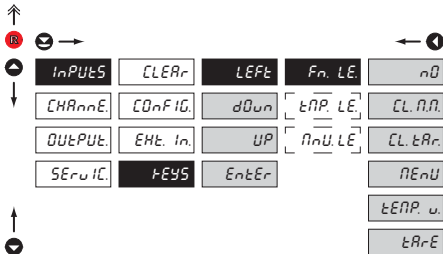

#### **Fn. LE** Assigning further functions to instrument keys

- „FN. LE.“ > executive functions
- „TMP. LE.“ > temporary projection of selected values
- „MNU. LE.“ > direct access into menu on selected item


nD	Key has no further function
CL.N.N.	Resetting min/max value
CL.tAR.	Tare resetting
NEU	Direct access into menu on selected item
TEMP. v.	Temporary projection of selected values
ARE	Tare function activation

#### ! Preset values of the control keys **DEF**

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o functione

! Setting is identical for LEFT, DOWN, UP and ENTER

## 6.1.4b OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - TEMPORARY PROJECTION

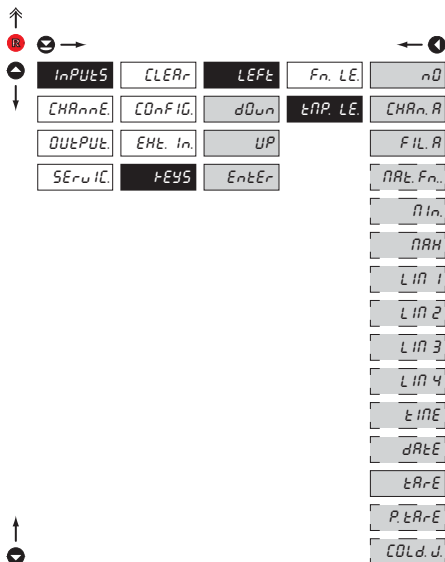
**TEMP. PROJ.** Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **RE** + "Selected key", this holds until the stroke of any key

nD	Temporary projection is off
CHARnA	Temporary projection of "Channel A" value
FIL A	Temporary projection of "Channel A" value after processing digital filters
ARE Fn	Temporary projection of "Mathematic functions" value
Min	Temporary projection of "Min. value"
MAX	Temporary projection of "Max. value"
LIM 1	Temporary projection of "Limit 1" value
LIM 2	Temporary projection of "Limit 2" value
LIM 3	Temporary projection of "Limit 3" value
LIM 4	Temporary projection of "Limit 4" value
TIME	Temporary projection of "TIME" value
DATE	Temporary projection of "DATE" value
TARE	Temporary projection of "TARE" value
P. TARE	Temporary projection of "P. TARE" value
COLd J	Temporary projection of "CJC" value




Setting is identical for LEFT, DOWN, UP and ENTER

## 6. SETTING PROFI

6.1.5c

OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - DIRECT ACCESS TO ITEM

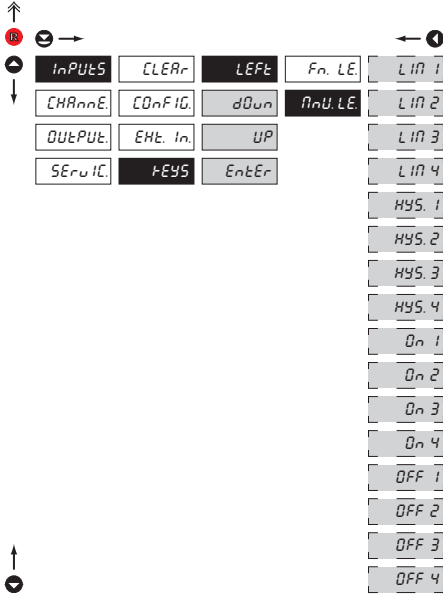

**Profi. L.E.** Assigning access to selected menu item

LIM 1 Direct access to item "LIM 1"

LIM 2 Direct access to item "LIM 2"

LIM 3 Direct access to item "LIM 3"

item "LIM 3"

LIM 4 Direct access to item "LIM 4"

HYS. 1 Direct access to item "HYS. 1"

item "HYS. 1"

HYS. 2 Direct access to item "HYS. 2"

HYS. 3 Direct access to item "HYS. 3"

HYS. 4 Direct access to item "HYS. 4"

ON 1 Direct access to item "ON 1"

ON 2 Direct access to item "ON 2"

ON 3 Direct access to item "ON 3"

ON 4 Direct access to item "ON 4"

OFF 1 Direct access to item "OFF 1"

OFF 2 Direct access to item "OFF 2"

item "OFF 2"

OFF 3 Direct access to item "OFF 3"

OFF 4 Direct access to item "OFF 4"


**!** Setting is identical for LEFT, DOWN, UP and ENTER





## 6. SETTING PROFI

### 6.2 SETTING "PROFI" - CHANNELS

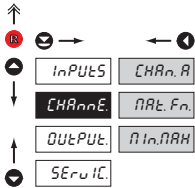


The primary instrument parameters are set in this menu

- CHAN. R** Setting parameters of measuring "Channel"
- PAR. Fn** Setting parameters of mathematic functions
- MIN. MAX** Selection of access and evaluation of Min/max value

#### 6.2.1a DISPLAY PROJECTION

**DC PM DU OHM**

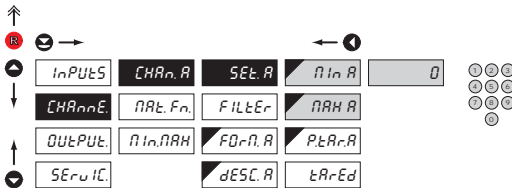

#### **SEt. A** Setting display projection

**MIN. R** Setting display projection for minimum value of input signal

- range of the setting is -99999...999999


- **DEF** = 0

**MAX. R** Setting display projection for maximum value of input signal

- range of the setting is -99999...999999

- **DEF** = 100

#### 6.2.1b SETTING FIXED TARE

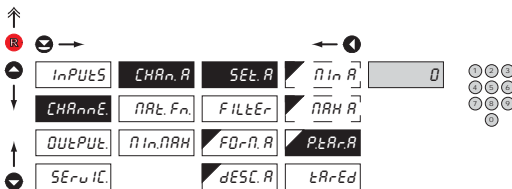

#### **P.tAr. R** Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size

- when setting (P. TAR. A ≠ 0) is in effect, display does not show the "T" symbol

- range of the setting is: -99999...999999

- **DEF** = 0


6.2.1b SETTING FIXED TARE



**tAR-Ed** Selecting the position of tare

- CHAn.R** The value will be tared before linearisation and digital filter
- FIl.R** The value will be tared after linearisation and digital filter

6.2.1c DIGITAL FILTERS

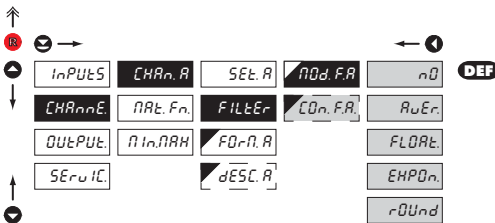

**nOd.F.A** Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

- nD** Filters are off
- RuEr.** Measured data average

- arithmetic average from given number („CON.F. A.“) of measured values  
- range 2...100

**FLOAt.** Selection of floating filter

- floating arithmetic average from given number („CON.F. A.“) of measured data and updates with each measured value  
- range 2...30

**EHPOn.** Selection of exponential filter

- integration filter of first prvniho grade with time constant („CON.F. A.“) measurement  
- range 2...100


**rOUnd** Measured value rounding

- is entered by any number, which determines the projection step (e.g. "CON. F.A."=2,5 > display 0, 2,5, 5,...)

**CO.n.F.A.** Setting constants


- this menu item is always displayed after selection of particular type of filter

- **DEF** = 2

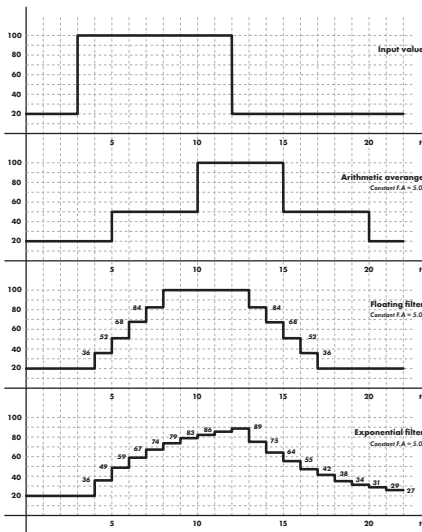

## 6. SETTING PROFI

### 6.2.1d PROJECTION FORMAT - POSITIONING OF DECIMAL POINT

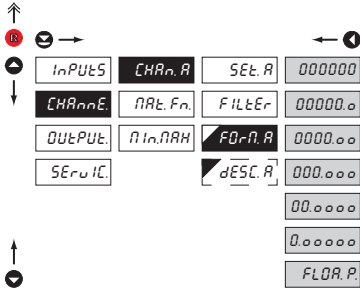

**F0-R.A** Selection of decimal point

-

the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000. Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

- **DEF** > **RTD** **T/C**

0000.00 Setting DP - XXXX.xx

- **DEF** > **DC** **PM** **DU** **OHM**


000.0000 Setting DP - XXX.xxx

00.00000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOA.P. Floating DP

### 6.2.1e PROJECTION OF DESCRIPTION - THE MEASURING UNITS

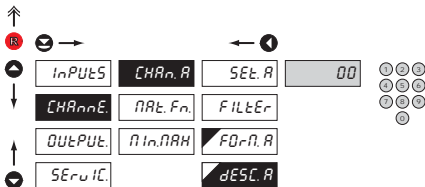

**dESC.A** Setting projection of descrpt. for "Channel A"


- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0..95
- description is cancelled by code 00
- **RTD** **T/C** **DEF** = °C
- **DC** **PM** **DU** **OHM** **DEF** =none

**!**

Table of signs on page 83

6.2.2a

MATHEMATIC FUNCTIONS

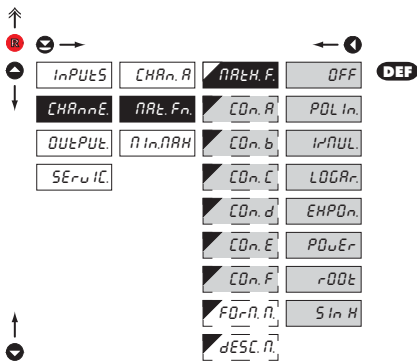

**MATH.F.** Selection of mathematic functions

OFF Mathematic functions are off

POL In Polynome

$Ax^5 \square Bx^4 \square Cx^3 \square Dx^2 \square Ex \square F$

IPNUL  $1/x$

$\frac{A}{x^3} \square \frac{B}{x^4} \square \frac{C}{x^3} \square \frac{D}{x^2} \square \frac{E}{x} \square F$

LOGAR. Logarithm

$A \square \ln \frac{Bx \square C}{Dx \square E} \square F$

EHPOn. Exponential

$A \square e^{\frac{Bx \square C}{Dx \square E}} \square F$

POWEr Power

$A \square Bx \square C^{\square Dx \square E} \square F$

rOEt Root

$A \square \sqrt{\frac{Bx \square C}{Dx \square E}} \square F$


SIn H Sin x

$A \sin^5 x \square B \sin^4 x \square C \sin^3 x \square D \sin^2 x$   
 E sin x  F

CON.- Setting constants for calculation of mat.functions  
 - this menu is displayed only after selection of given mathematic function

## 6. SETTING PROFI

### 6.2.2b MATHEMATIC FUNCTIONS - DECIMAL POINT

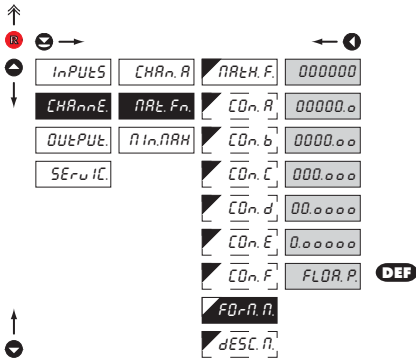


#### F0-r.n. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA. P.“

000000.	Setting DP - XXXXXX.
000000.o	Setting DP - XXXXXX.x
000000.oo	Setting DP - XXXX.xx
0000.ooo	Setting DP - XXX.xxx
00.ooooo	Setting DP - XX.xxx
0.oooooo	Setting DP - X.xxxx
FLOA.P.	Floating DP

### 6.2.2c MATHEMATIC FUNCTIONS - MEASURING UNITS

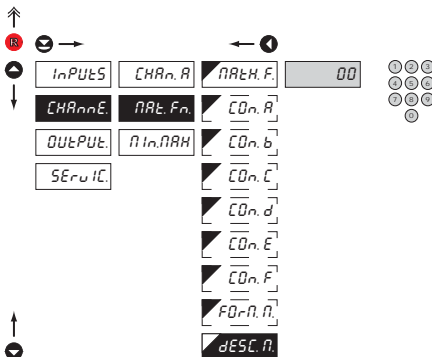


#### dESC.n. Setting projection of description for "MAT.FN"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- **DEP** = no description



Table of signs on page 83

6.2.3 SELECTION OF EVALUATION OF MIN/MAX VALUE

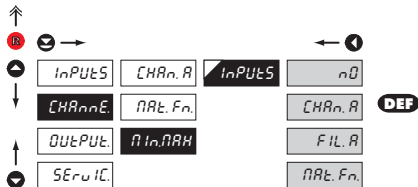


**INPUTS** Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated

- nD Evaluation of min/max value is off
- CHAN.A From "Channel A"
- FIL.A From "Channel A" after digital filters processing
- MATH.Fn From "Mathematic functions"

## 6. SETTING PROFI


### 6.3 SETTING „PROFI“ - OUTPUTS

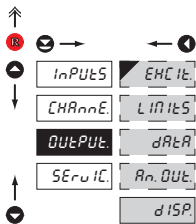

In this menu it is possible to set parameters of the instrument output signals

<b>EHC It.</b>	Volba výstupního napětí pomocného zdroje
<b>LIMITS</b>	Setting type and parameters of limits
<b>dAER</b>	Setting type and parameters of data output
<b>An. OUT.</b>	Setting type and parameters of analog output
<b>dISP.</b>	Setting display projection and brightness


#### 6.3.1 SELECTION OF SENSOR EXCITATION VOLTAGE

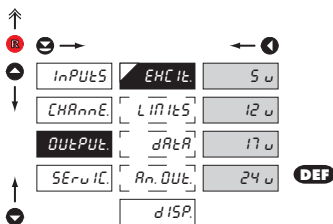

**EHC It.** Selection of sensor excitation voltage (aux. power supply)

<b>5 u</b>	5 VDC, max. 2,5 W
<b>12 u</b>	12 VDC, max. 2,5 W
<b>17 u</b>	17 VDC, max. 2,5 W
<b>24 u</b>	24 VDC, max. 2,5 W

#### 6.3.2a SELECTION OF INPUT FOR LIMITS EVALUATION

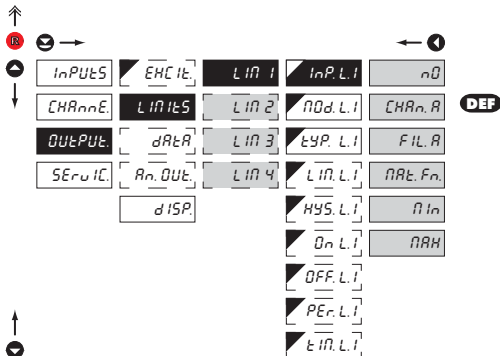


**InP.L.1** Selection evaluation of limits

- selection of value from which the limit will be evaluated

<b>nD</b>	Limit evaluation is off
<b>CHAn.A</b>	Limit evaluation from "Channel A"
<b>FIL.A</b>	Limit evaluation from "Channel A" after digital filters processing
<b>PARt.Fn</b>	Limit evaluation from "Mathematic functions"
<b>nIn</b>	Limit evaluation from "Min. value"
<b>MAH</b>	Limit evaluation from "Max. value"

Setting is identical for LIM 2, LIM 3 and LIM 4



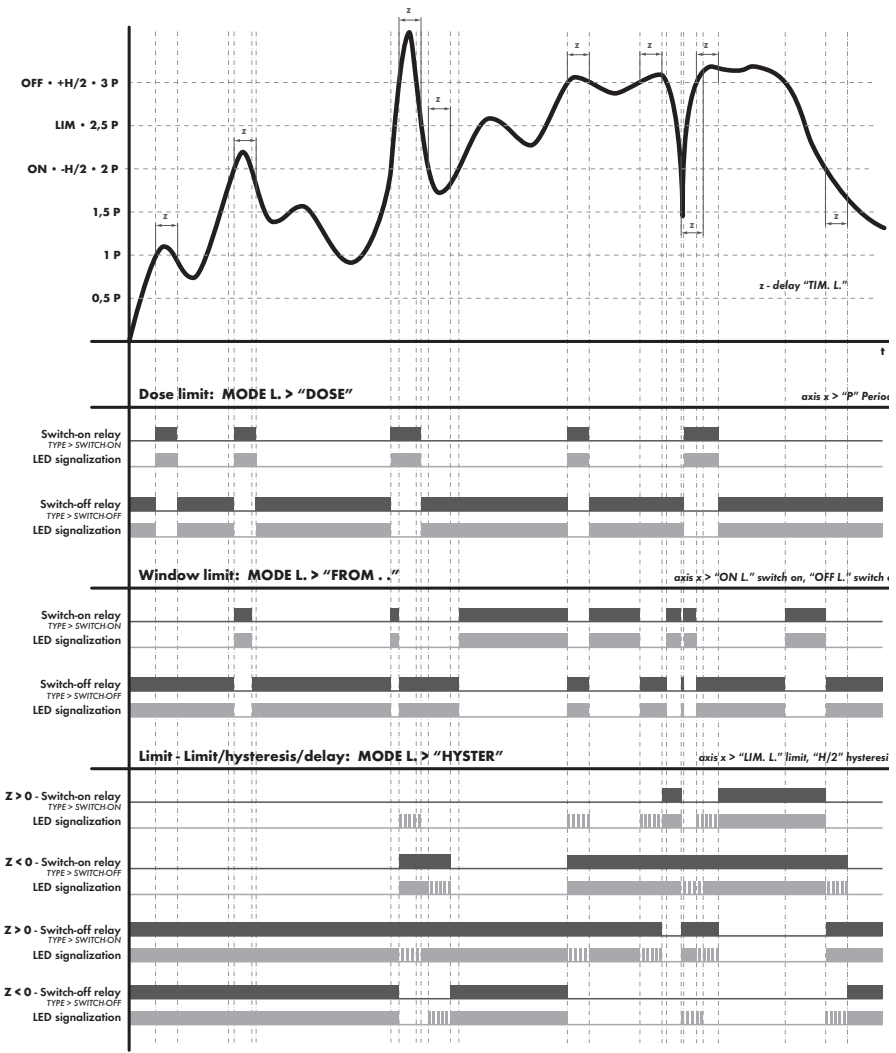

Z > 0 - Switch-on relay  
TYPE > SWITCH ON  
LED signalization

Z < 0 - Switch-on relay  
TYPE > SWITCH OFF  
LED signalization

Z > 0 - Switch-off relay  
TYPE > SWITCH ON  
LED signalization

Z < 0 - Switch-off relay  
TYPE > SWITCH OFF  
LED signalization

## 6. SETTING PROFI

### 6.3.2b SELECTION OF TYPE OF LIMIT

inPUtS	EHC It.	LIM 1	inP.L.1	HYS tEr	DEF
CHAnnE.	LIM ItS	LIM 2	ADd.L.1	FrOn.	
OUtPUt.	dARt	LIM 3	tYP.L.1	dOS InG	
SERuIt.	An.OUt.	LIM 4	LIM.L.1		
	dISP.		HYS.L.1		
			On.L.1		
			OFF.L.1		
			PER.L.1		
			tIM.L.1		

#### ADd.L.1 Selection the type of limit

**HYS tEr** Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "LIM. L." are set, at which the limit will shall react, "HYS. L." the hysteresis range around the limit (LIM ±1/2 HYS) and time "TIM. L." determining the delay of relay switch-on

**FrOn.** Frame limit

- for this mode the parameters are set for interval "ON. L." the relay switch-on and "OFF. L." the relay switch-off

**dOS InG** Dose limit (periodic)

- for this mode the parameters are set for "PER. L." determining the limit value as well as its multiples at which the output is active and "TIM. L." indicating the time during which is the output active



Setting is identical for LIM 2, LIM 3 and LIM 4

### 6.3.2c SELECTION OF TYPE OF OUTPUT

inPUtS	EHC It.	LIM 1	inP.L.1	CLOSE	DEF
CHAnnE.	LIM ItS	LIM 2	ADd.L.1	OPEn	
OUtPUt.	dARt	LIM 3	tYP.L.1		
SERuIt.	An.OUt.	LIM 4	LIM.L.1		
	dISP.		HYS.L.1		
			On.L.1		
			OFF.L.1		
			PER.L.1		
			tIM.L.1		

#### tYP.L.1 Selection of type of output


**CLOSE** Output switches on when condition is met

**OPEn** Output switches off when condition is met



Setting is identical for LIM 2, LIM 3 and LIM 4

## 6.3.2d SETTING VALUES FOR LIMITS EVALUATION

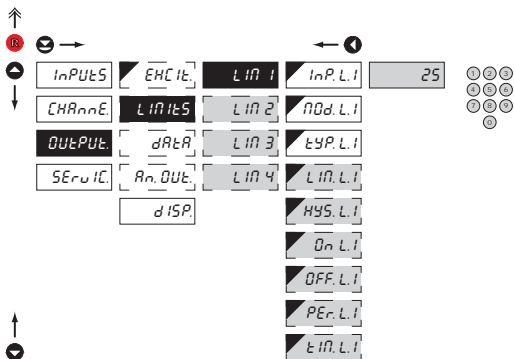

**LIM.L.i**

Setting limit for switch-on

- for type "HYSTER."

**HYS.L.i**

Setting hysteresis

- for type "HYSTER."

- indicates the range around the limit (in both directions, LIM. ±1/2 HYS.)

**On.L.i**

Setting the outset of the interval of limit switch-on

- for type "FROM.."

**OFF.L.i**

Setting the end of the interval of limit switch-on

- for type "FROM.."

**PEr.L.i**

Setting the period of limit switch-on

- for type "DOSING"

**tIN.L.i**

Setting the time switch-on of the limit

- for type "HYSTER." and "DOSING"

- setting within the range: ±99,9 s

- positive time > relay switches on after crossing the limit (LIM.L.i) and the set time (TIM.L.i)

- negative time > relay switches off after crossing the limit (LIM.L.i) and the set negative time (TIM.L.i)



Setting is identical for LIM 2, LIM 3 and LIM 4

## 6. SETTING PROFI

### 6.3.3a SELECTION OF DATA OUTPUT BAUD RATE

Navigation icons: Up, Down, Left, Right, Home, Back, Forward, Exit.

INPUTS	EHC It.	bAUD	600
CHARACT.	LIMITS	Addr.	1200
OUTPUTS	dARtR	Ad-NOd.	2400
SERuIL	An. OUT.	Pr.Ob.	4800
	dISP.		9600 <b>DEF</b>
			19200
			38400
			57600
			115200
			230400

#### bAUD Selection of data output baud rate

600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud

### 6.3.3b SETTING INSTRUMENT ADDRESS

Navigation icons: Up, Down, Left, Right, Home, Back, Forward, Exit.

INPUTS	EHC It.	bAUD	0
CHARACT.	LIMITS	Addr.	
OUTPUTS	dARtR	Ad-NOd.	
SERuIL	An. OUT.	Adr. Pb.	
	dISP.	Pr.Ob.	

Address selection icons: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F.

#### Addr. Setting instrument address

- setting in range 0...31
- **DEF** = 00

---

#### Addr. Setting instrument address - MODBUS


- setting in range 1...247
- **DEF** = 1

---

#### Adr. Pb. Setting instrument address - PROFIBUS

- setting in range 1...127
- **DEF** = 19

6.3.3c SELECTION OF DATA OUTPUT PROTOCOL

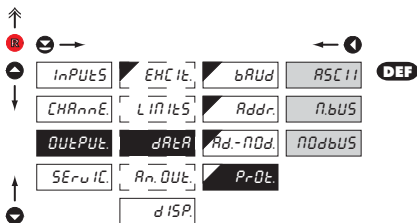


**PrOt.** Selection of the type of analog output

- ASCII** Data protocol ASCII
- n.bUS** Data protocol DIN MessBus
- nOdbUS** Data protocol MODBUS-RTU

- option is available only for RS 485

6.3.4a SELECTION OF INPUT FOR ANALOG OUTPUT

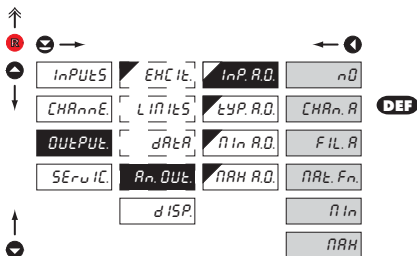


**InP.R.O.** Selection evaluation analog output

- selection of value from which the analog output will be evaluated

- nO** AO evaluation is off
- CHAnn.R** AO evaluation from "Channel A"
- FIl.R** AO evaluation from "Channel A" after digital filters processing
- nARt.Fn.** AO evaluation from "Math.functions"
- nIn** AO evaluation from "Min.value"
- nARH** AO evaluation from "Max.value"

## 6. SETTING PROFI


### 6.3.4b SELECTION OF THE TYPE OF ANALOG OUTPUT

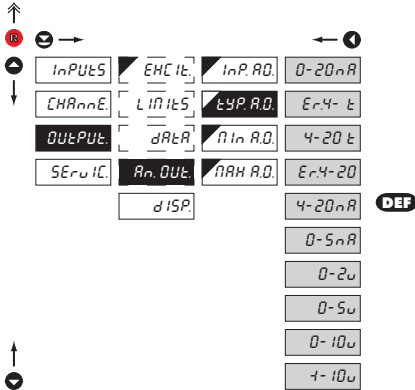

#### tYP AO Selection of the type of analog output

0-20mA	Type: 0...20 mA
Er.4- t	Type: 4...20 mA, with broken loop detection and indication of error statement (< 3.0 mA)
4-20 t	Type: 4...20 mA, with broken loop detection (< 3.0 mA)
Er.4-20	Type: 4...20 mA, with indic. of error statement (< 3.0 mA)
4-20mA	Type: 4...20 mA
0-5mA	Type: 0...5 mA
0-2V	Type: 0...2 V
0-5V	Type: 0...5 V
0-10V	Type: 0...10 V
±10V	Type: ±10 V

### 6.3.4c SETTING THE ANALOG OUTPUT RANGE

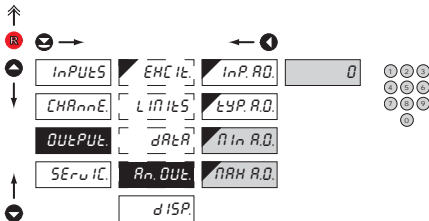

#### An OUt Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

**n In AO.** Assigning the display value to the beginning of the AO range

- range of the setting is -99999...999999


- **DEF** = 0

**nAn AO.** Assigning the display value to the end of the AO range

- range of the setting is -99999...999999

- **DEF** = 100

6.3.5a SELECTION OF INPUT FOR DISPLAY PROJECTION

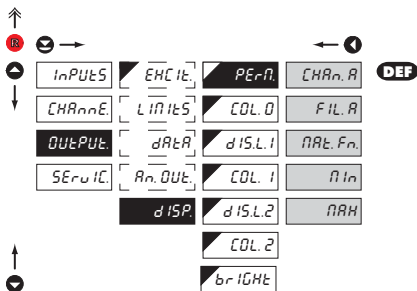


**PERF.** Selection display projection

selection of value which will be shown on the instrument display

- CHAR.A** Projection of values from "Channel A"
- FIL.A** Projection of values from "Channel A" after digital filters processing
- MAT.Fn.** Projection of values from "Math.functions"
- Min.** Projection of values from "Min.value"
- MAX** Projection of values from "Max.value"

6.3.5b SELECTION OF DISPLAY COLOR

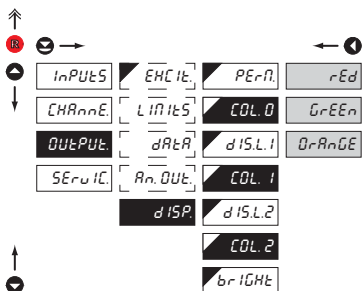

**COL.** Selection of display color

- the color selection is governed by setting under items "DIS. L1" and "DIS. L2"

- rEd** Red color
- GrEEEn** Green color
- OrAnGE** Orange color


- "COL. 0." **DEF** = Green
- "COL. 1." **DEF** = Orange
- "COL. 2." **DEF** = Red

**!**

If the instrument is in the Hi Brightness LEDs execution, this menu item is not accessible

## 6. SETTING PROFI

### 6.3.5c SELECTION OF DISPLAY COLOR CHANGE

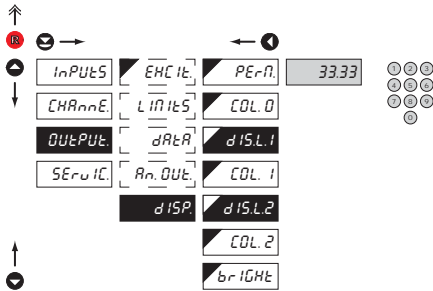

#### d15L.- Selection of display color change

- under items "DIS. L1" and "DIS. L2" the limit is set for the time when the display color shall change


- "DIS. L1" **DEF** = 9999

- "DIS. L2" **DEF** = 9999



If the instrument is in the Hi Brightness LEDs execution, this menu item is not accessible

### 6.3.5d SELECTION OF DISPLAY BRIGHTNESS

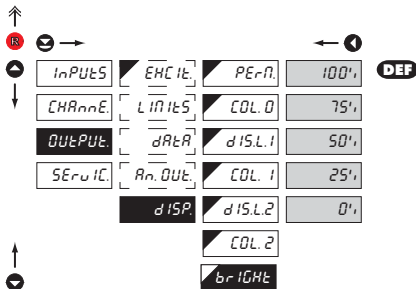

#### brIGHt Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

0% Display is off

- after keystroke display turns on for 10 s

25% Display brightness - 25%

50% Display brightness - 50%

75% Display brightness - 75%

100% Display brightness - 100%








## 6. SETTING PROFI


### 6.4 SETTING "PROFI" - SERVICE

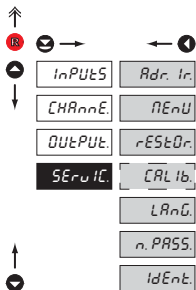

The instrument service functions are set in this menu

<b>Adr. Ir.</b>	Nastavení adresy IR ovládání
<b>nEnU</b>	Selection of menu type
LIGHT/PROFI	
<b>rEStOr</b>	Restore instrument manufacture setting and calibration
<b>CALib</b>	Input range calibration for „DU“ version
<b>LAnG</b>	Language version of instrument menu
<b>n.PASS</b>	Setting new access password
<b>idEnt</b>	Instrument identification

#### 6.4.1 SETTING THE ADDRESS OF IR REMOTE CONTROL

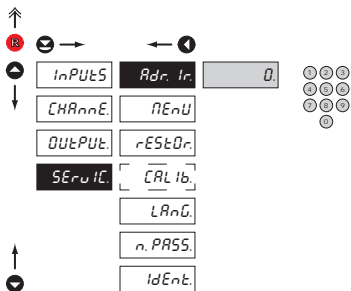


**Adr. Ir.** Setting the address of IR remote control

- setting the remote control address is inevitable only in case there are other large displays OMD 202 within the reach of IR remote control
- range of the setting is 0...99
- **DEF** = 0



## 6. SETTING PROFI

### 6.4.3 RESTORATION OF MANUFACTURE SETTING

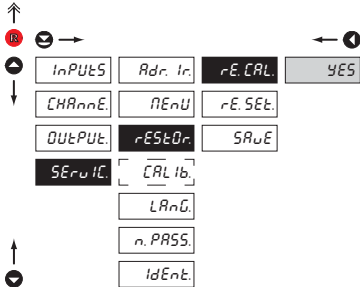


#### **rESTOR.** Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored

#### **rE.CAL.** Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm you selection „YES“

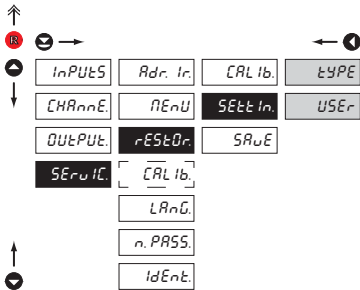

#### **rE.SEt.** Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

#### **USER** Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

#### **SAuE** Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed




After restoration the instrument switches off for couple seconds

JOBS PERFORMED	RESTORE	
	CALIBRATION	SETTING
cancel USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancel or linearization tables	✓	✓
clears tare	✓	✓
restore manufacture calibration	✓	x
restore manufacture setting	x	✓


## 6.4.4 CALIBRATION - INPUT RANGE

DU

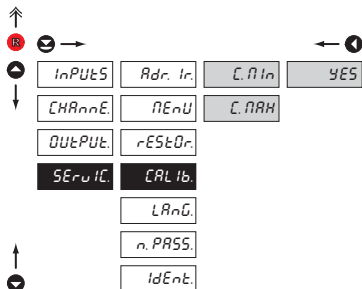**CAL Ib.** Input range calibration

- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by „YES“
- when "C. MAX" is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by „YES“


## 6.4.5 SELECTION OF INSTRUMENT MENU LANGUAGE VERSION

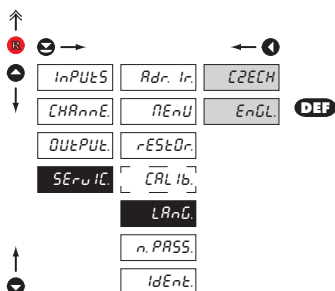**LAnG.** Selection of instrument menu language version

- CZECH** Instrument menu is in Czech
- EnGL** Instrument menu is in English

## 6. SETTING PROFI


### 6.4.6 SETTING NEW ACCESS PASSWORD

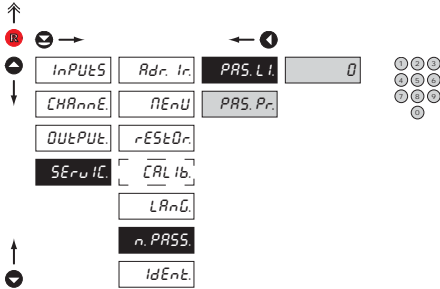

**n.PASS.** Setting new password for access to LIGHT and PROFI menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFI Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss: LIGHT Menu > „8177“ PROFI Menu > „7915“

### 6.4.7 INSTRUMENT IDENTIFICATION

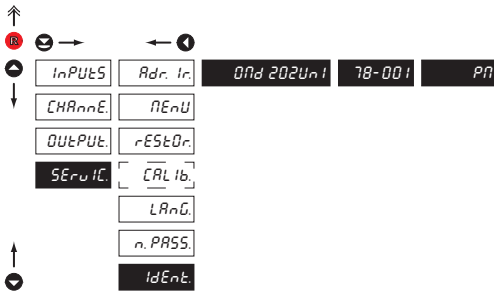

**IdEnt.** Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

IDENT.	Blok	Description
1.	Instrument	
2.	no. of SW version	
3.	type/input mode	



## 7. SETTING USER

# SETTING USER


For user operation

Menu items are set by the user (Profi/Light) as per request


Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

### 7.0 SETTING ITEMS INTO "USER" MENU

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L !
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure

### Setting

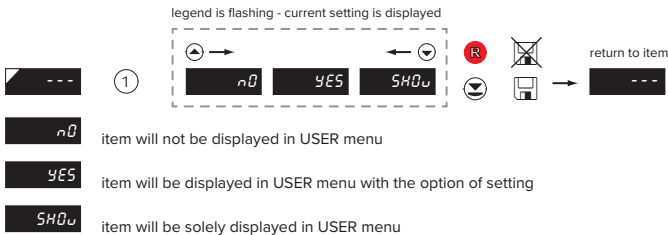



## Setting items into „USER“ menu


When setting up the USER menu out of active LIGHT menu it is possible to rank the menu items (max. 10) in the order we want them to appear in the menu.

Setting up the ranking order



## Example of setting up menu items into „USER“ menu


As an example we are going to use a direct access into menu items Limit1 and Limit2 (the given example is for Light menu but can be applied also in Profi menu).

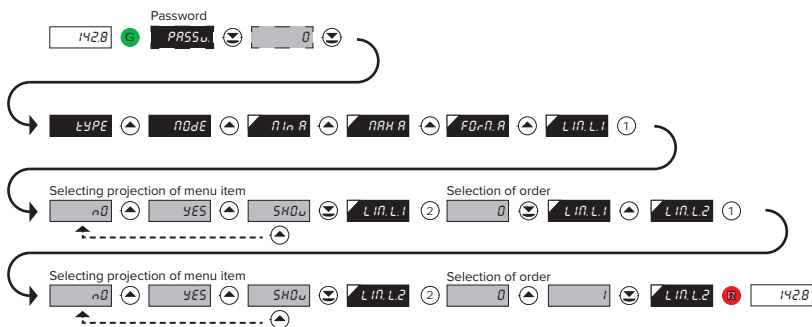

The resulting setting is as follows: After pressing button **(R)** „LIM L.1“ is projected. By pressing **(M)** you confirm this and you set the desired limit value, alternatively by pressing button **(L)** you can go over to setting of „LIM. L.2“ where you repeat the procedure. You can finish the setting up by pressing the **(M)** button, by which you save the latest setting and by pressing the **(R)** you return to the operating mode.

## 8. METHOD OF MEASURING THE CJC

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

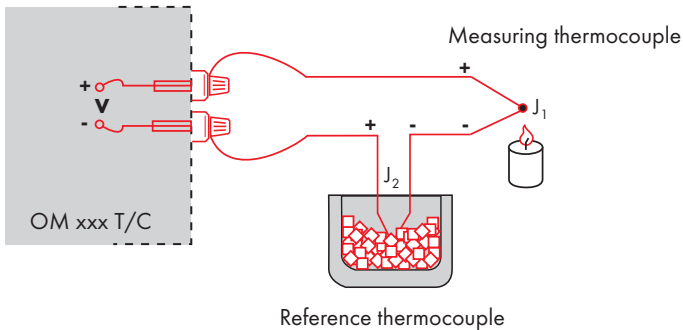

### WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set  $\text{C0nECC}$  in the instrument menu to  $\text{InE2tC}$  or  $\text{EHt2tC}$
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu  $\text{CJtEtE}$ , its temperature (applies for setting  $\text{C0nECC}$  to  $\text{EHt2tC}$ )
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu  $\text{C0nECC}$  to  $\text{InE2tC}$ . Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

### WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set  $\text{C0nECC}$  in the instrument menu to  $\text{InE1tC}$  or  $\text{EHt1tC}$
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting  $\text{C0nECC}$  to  $\text{EHt1tC}$ )

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit  
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

**DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE**

EVENT	TYPE	PROTOCOL	TRANSMITTED DATA
Data solicitation (PC)	232	ASCII	# A A <CR>
		MessBus	No - data is transmitted permanently
	485	ASCII	# A A <CR>
		MessBus	<SADR> <ENQ>
Data transmission (instrument)	232	ASCII	> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
	485	ASCII	> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> D (D) (D) (D) (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
Confirmation of data acceptance (PC) OK	485	MessBus	<DLE> 1
Confirmation of data acceptance (PC) Bad			<NAK>
Sending address (PC) prior command			<EADR> <ENQ>
Confirmation of address (instrument)			<SADR> <ENQ>
Command transmission (PC)	232	ASCII	# A A N P (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> \$ N P (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
	485	ASCII	# A A N P (D) (D) (D) (D) (D) (D) (D) <CR>
		MessBus	<STX> \$ N P (D) (D) (D) (D) (D) (D) (D) <ETX> <BCC>
Command confirmation (instrument)	232	ASCII	OK ! A A <CR>
		Bad	? A A <CR>
		Messbus	No - data is transmitted permanently
	485	ASCII	OK ! A A <CR>
		Bad	? A A <CR>
		Mess-Bus	OK <DLE> 1
Bad	<NAK>		
Instrument identification			# A A 1 Y <CR>
HW identification			# A A 1 Z <CR>
One-time transmission			# A A 7 X <CR>
Repeated transmission			# A A 8 X <CR>

## 9. DATA PROTOCOL

### LEGEND

SIGN	RANGE	DESCRIPTION
#	35 23 <sub>H</sub>	Command beginning
A	A 0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal)
<CR>	13 0D <sub>H</sub>	Carriage return
<SP>	32 20 <sub>H</sub>	Space
N, P		Number and command - command code
D		Data - usually characters "0".."9", "-", ".", ":", "(D)-dp, and (-) may prolong data
R	30 <sub>H</sub> ..3F <sub>H</sub>	Relay and tare status
!	33 21 <sub>H</sub>	Positive confirmation of command (ok)
?	63 3F <sub>H</sub>	Negative confirmation of command (point)
>	62 3E <sub>H</sub>	Beginning of transmitted data
<STX>	2 02 <sub>H</sub>	Beginning of text
<ETX>	3 03 <sub>H</sub>	End of text
<SADR>	adresa +60 <sub>H</sub>	Prompt to send from address
<EADR>	adresa +40 <sub>H</sub>	Prompt to accept command at address
<ENQ>	5 05 <sub>H</sub>	Terminate address
<DLE>1	16 49 10 <sub>H</sub> 31 <sub>H</sub>	Confirm correct statement
<NAK>	21 15 <sub>H</sub>	Confirm error statement
<BCC>		Check sum -XOR

### RELAYS, TARE

SIGN	RELAY 1	RELAY 2	TARE	CHANGE RELAY 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>. The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00H...FFH. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

ERROR	CAUSE	ELIMINATION
<i>E. d. U<sub>n</sub></i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>E. d. D<sub>w</sub></i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>E. t. U<sub>n</sub></i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. t. D<sub>w</sub></i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. i. U<sub>n</sub></i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. i. D<sub>w</sub></i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. H<sub>w</sub></i>	A part of the instrument does not work properly	send the instrument for repair
<i>E. EE</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. SEE</i>	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. CLR.</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration
<i>E. OUT</i>	Analogue output current loop disconnected	check wire connection

# 11. TABLE OF SIGNS



The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.


Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7
0		Q	"	#	\$	%	&	'	0	!	"	#	\$	%	&	'	
8	:	;	*	+	,	-	.	/	8	(	)	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	VA	Vr	<	=	>	?	24	8	9	VA	Vr	<	=	>	?
32	@	A	B	C	D	E	F	G	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[	\	]	^	_	56	X	Y	Z	[	\	]	^	_
64	`	a	b	c	d	e	f	g	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w	80	p	q	r	s	t	u	v	w
88	x	y	z	{		}	~		88	x	y	z	{		}	~	


**Front view**



**Side view**



**Panel cutout**

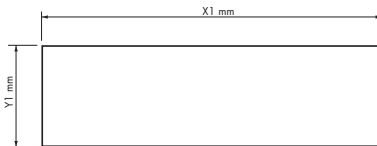


Panel thickness: 0,5 ... 50 mm

Height	X	Y	X1	Y1
<b>57-6</b>	375	119	367	111
<b>100-4</b>	465	181	457	173
<b>100-6</b>	651	181	643	173
<b>125-4</b>	539	237	531	228
<b>125-6</b>	754	237	746	228

### Wall mounting

Our large displays are supplied along with a wall mount holder as shown in the the drawing.

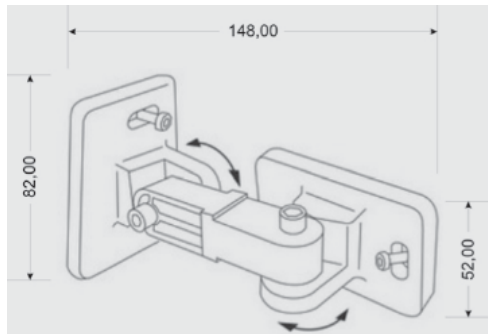

# 13. TECHNICAL DATA

## INPUT

range is adjustable

±60 mV	>100 MΩ	Input U	DC
±150 mV	>100 MΩ	Input U	
±300 mV	>100 MΩ	Input U	
±1200 mV	>100 MΩ	Input U	

range is adjustable

±0,1 A	< 300 mV	Input I	<b>DC - option "A"</b>
±0,25 A	< 300 mV	Input I	
±0,5 A	< 300 mV	Input I	
±1 A	< 30 mV	Input I	
±5 A	< 150 mV	Input I	
±100 V	20 MΩ	Input U	
±250 V	20 MΩ	Input U	
±500 V	20 MΩ	Input U	

range is adjustable

0/4...20 mA	< 400 mV	Input I	<b>PM</b>
±2 V	1 MΩ	Input U	
±5 V	1 MΩ	Input U	
±10 V	1 MΩ	Input U	
±40 V	1 MΩ	Input U	

range is adjustable

0...100 Ω			<b>OHM</b>
0...1 kΩ			
0...10 kΩ			
0...100 kΩ			
Autorange			

Connection: 2, 3 or 4 wire

Pt xxxx	-200°...850°C	<b>RTD</b>
Pt xxxx/3910 ppm	-200°...1 100°C	
Ni xxxx	-50°...250°C	
Cu/4260 ppm	-50°...200°C	
Cu/4280 ppm	-200°...200°C	
Type Pt:	EU > 100/500/1 000 Ω, with 3 850 ppm/°C US > 100 Ω, with 3 920 ppm/°C RU > 50/100 Ω, with 3 910 ppm/°C	
Type Ni:	Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C	
Type Cu:	Cu 50/Cu 100 with 4 260/4 280 ppm/°C	
Connection:	2, 3 or 4 wire	

range is adjustable in configuration menu

Type:	J (Fe-CuNi) -200°...900°C	<b>T/C</b>
	K (NiCr-Ni) -200°...1 300°C	
	T (Cu-CuNi) -200°...400°C	
	E (NiCr-CuNi) -200°...690°C	
	B (PtRh30-PtRh6) 300°...1 820°C	
	S (PtRh10-Pt) -50°...1 760°C	
	R (Pt13Rh-Pt) -50°...1 740°C	
	N (Omegaalloy) -200°...1 300°C	
	L (Fe-CuNi) -200°...900°C	

Voltage of lin. pot. 2,5 VDC/6 mA  
min. potentiometer resistance is 500 Ω

## PROJECTION

Display:	999999, 4 (100/125 mm) or 6 digit (57/100/125 mm) Three-color 7 segment LED - red/green/orange High bright singles LED - red or green (1300 mcd)
Projection:	-999...9999 or -99999...999999
Decimal point:	adjustable - in menu
Brightness:	adjustable - in menu

## INSTRUMENT ACCURACY

TC:	50 ppm/°C	
Accuracy:	±0,1% of range + 1 digit	<b>RTD, T/C</b>
	±0,15% of range + 1 digit	
	±0,3% of range + 1 digit	
	Above accuracies apply for projection 9999	
Resolution:	0,01°/0,1°/1°	<b>RTD</b>
Rate:	0,1...40 measurements/s**	
Overload capacity:	10x (t < 100 ms) not for 500 V and 5 A, 2x (long-term)	
Linearisation:	by linear interpolation in 50 points - solely via OM Link	
Digital filters:	Averaging, Floating average, Exponential filter, Rounding	
Comp. of conduct:	max. 40 Ω/100 Ω	<b>RTD</b>
Comp. of cold junct.:	adjustable	<b>T/C</b>
	0°...99°C or automatic	
Functions:	Tare - display resetting Hold - stop measuring (at contact) Lock - control key locking MM - min/max value Mathematic functions	
OM Link:	company communication interface for setting, operation and update of instrument SW	
Watch-dog:	reset after 400 ms	
Calibration:	at 25°C and 40% of r.h.	

## COMPARATOR

Type:	digital, adjustable in menu
Mode:	Hysteresis, From, Dosing
Limita:	-99999...999999
Hysteresis:	0...999999
Delay:	0...99,9 s
Outputs:	4x relays with switch-on contact (Form A) (230 VAC/30 VDC, 3 A)* 4x open collectors (30 VDC/100 mA) 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300
Relay:	

\* values apply for resistance load



**DATA OUTPUTS**

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS  
 Data format: 8 bit + no parity + 1 stop bit (ASCII)  
 7 bit + even parity + 1 stop bit (MessBus)  
 Rate: 600...230 400 Baud  
 9 600 Baud...12 Mbaud (PROFIBUS)  
 RS 232: isolated, two-way communication  
 RS 485: isolated, two-way communication,  
 addressing (max. 31 instruments)  
 PROFIBUS Data protocol SIEMENS

**ANALOG OUTPUT**

Type: isolated, programmable with 12 bits D/A conver-  
 tor, analog output corresponds with displayed  
 data, type and range are adjustable  
 Non-linearity: 0,1 % of range  
 TC: 15 ppm/°C  
 Rate: response to change of value < 1 ms  
 Voltage: 0...2 V/5 V/10 V/±10 V  
 Current: 0...5/20 mA/4...20 mA  
 - compensation of conduct to 500 Ω /12 V  
 or 1 000 Ω/24 V

**EXCITATION**

Adjustable: 5...24 VDC/max. 1,2 W, isolated

**POWER SUPPLY**

Options: 10...30 V AC/DC, max. 27 VA, isolated  
 PF ≥ 0,4, I<sub>sp</sub> > 75 A/2 ms  
 fuse inside (T 4A)  
 80...250 V AC/DC, max. 27 VA, isolated  
 PF ≥ 0,4, I<sub>sp</sub> > 475 A/2 ms  
 fuse inside (T 4A)

**MECHANIC PROPERTIES**

Material: anodized aluminum, black  
 Dimensions: see chapter 13  
 Panel cut-out: see chapter 13

**OPERATING CONDITIONS**

Connection: through cable bushings to terminal boards inside  
 the instrument, conductore section up to  
 < 1,5 mm<sup>2</sup> / < 2,5 mm<sup>2</sup>  
 Stabilisation period: within 15 minutes after switch-on  
 Working temp.: -20°...60°C  
 Storage temp.: -20°...85°C  
 Cover: IP64  
 Construction: safety class I  
 Overvoltage cat.: EN 61010-1, A2  
 Dielectric strength: 4 kVAC after 1 min between supply and input  
 4 kVAC after 1 min between supply and analog  
 output  
 4 kVAC after 1 min between supply and relay  
 output  
 2,5 kVAC after 1 min between supply and analog  
 output  
 Insulation resist: for pollution degree II, measurement category  
 III  
 instrum.power supply > 670 V (PI), 300 V (DI)  
 Input/output > 300 V (PI), 150 (DI)  
 EMC: EN 61326-1

\*\*Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No.of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No.of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No.of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No.of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No.of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No.of channels: 2	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No.of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No.of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02

PI - Primary insulation, DI - Double insulation

**14.** CERTIFICATE  
OF GUARANTEE



Product                    **OMD 202UNI**                    **A B**  
Type                    .....  
Manufacturing No.    .....  
Date of sale            .....

**WARRANTY**  
**5**  
**YEARS**

A guarantee period of 60 months from the date of sale to the user applies to this instrument.  
Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.  
For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

- The guarantee shall not apply to defects caused by:
- mechanic damage
  - transportation
  - intervention of unqualified person incl. the user
  - unavoidable event
  - other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Stamp, signature

**Company** ORBIT MERRET, spol. s r.o.  
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo.: 00551309

**Manufactured** ORBIT MERRET, spol. s r.o.  
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

**Product** 4/6-digit programmable large display

**Type** OMD 202

**Version** UNI, PWR, UQC, RS

**That has been designed and manufactured in line with requirements of**

Low-voltage electrical equipment (directive no. 2014/35/EU)  
Electromagnetic compatibility (directive no. 2014/30/EU)

**The product qualities are in conformity with harmonized standard**

El. safety: EN 61010-1

EMC: EN 61326-1

Electronic measuring, control and laboratory devices – Requirements for EMC "Industrial use"

EN 50131-1, cap. 14 and cap. 15, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-8, EN 61000-4-11, EN 61000-3-2, EN 61000-3-3, EN 55022, cap. 5 and cap. 6

The product is furnished with CE label issued in 2001.

**As documentation serve the protocols of authorized and accredited organizations**

EMC VTÚE Praha, experimental laboratory No. 1158, protocol No. 08-041/2001 of 24/11/2001  
VTÚPV Vyškov, experimental laboratory No. 1103, protocol No. 730-325/2001 of 02/05/2001  
VTÚPV Vyškov, experimental laboratory No. 1103, protocol No. 730-350/2001 of 07/05/2001  
VTÚPV Vyškov, experimental laboratory No. 1103, protocol No. 730-372/2001 of 02/05/2001  
VTÚPV Vyškov, experimental laboratory No. 1103, protocol No. 730-934/2001 of 20/11/2001

Place and date of issue: Prague, 19. Juli 2009

Miroslav Hackl  
Company representative



**ORBIT MERRET, spol. s r. o.**  
Vodňanská 675/30  
198 00 Praha 9  
Czech Republic

tel.: +420 281 040 200  
fax.: +420 281 040 299  
orbit@merret.eu  
[www.orbit.merret.eu](http://www.orbit.merret.eu)

